


Cruise Control/Speed Limiter

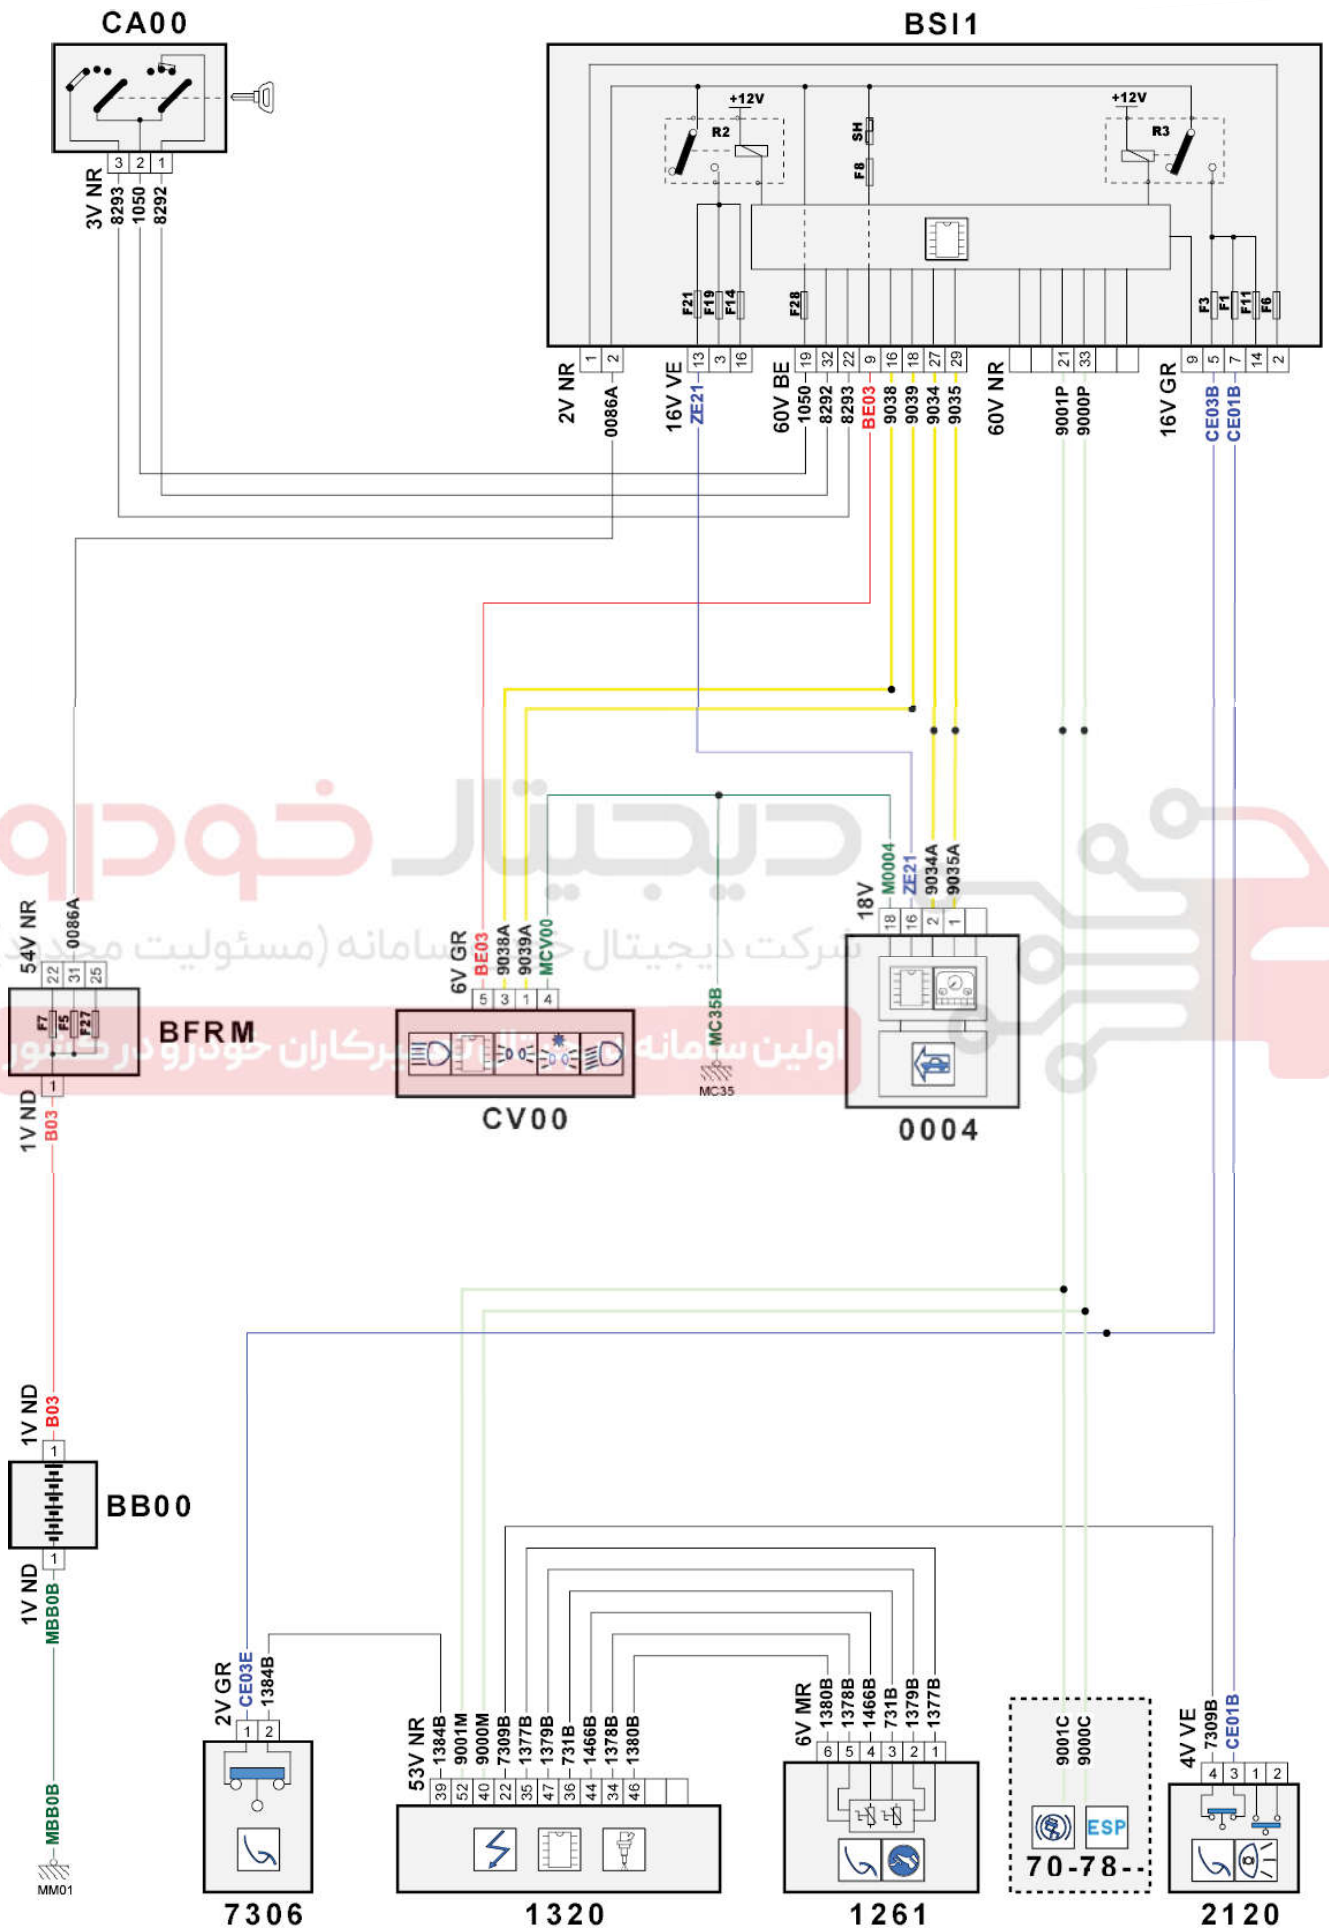

Cruise Control/Speed Limiter

| item code | description | information |
|-----------|-------------|---|
| 0004 | null | / instrument panel |
| 1261 | null | accelerator pedal position sensor / |
| 1320 | null | engine ECU / |
| 2120 | null | dual function brake switch / |
| 7306 | null | cruise control safety switch (clutch) |
| 7800 | null | calculateur controle de stabilite |
| BB00 | null | ancillaries battery |
| BFRM | null | engine fuse and relay box |
| BSI1 | null | built-in systems interface |
| CA00 | null | ignition switch |
| CV00 | null | control under the steering wheel |
| E900A | null | crimp one information (or equipotential 276A) wire |
| E900B | null | crimp one information (or equipotential 900B) wire |
| E901A | null | crimp one information (or equipotential 901A) wire |
| E901B | null | crimp one information (or equipotential 901B) wire |
| E934 | null | crimp one information (or equipotential 934) wire |
| E935 | null | crimp one information (or equipotential 935) wire |
| E938 | null | crimp one information (or equipotential 938) wire |
| E939 | null | crimp one information (or equipotential 939) wire |
| EC03A | null | splice of an "ignition +" protected by fuse no. 03A |
| EM35B | null | crimp earth (earth point number 35B) |
| MC35 | null | body earth point number 35 |
| MM01 | null | engine earth point number 01 |

دیجیال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در کشور

