


Circuit diagram

Starting system

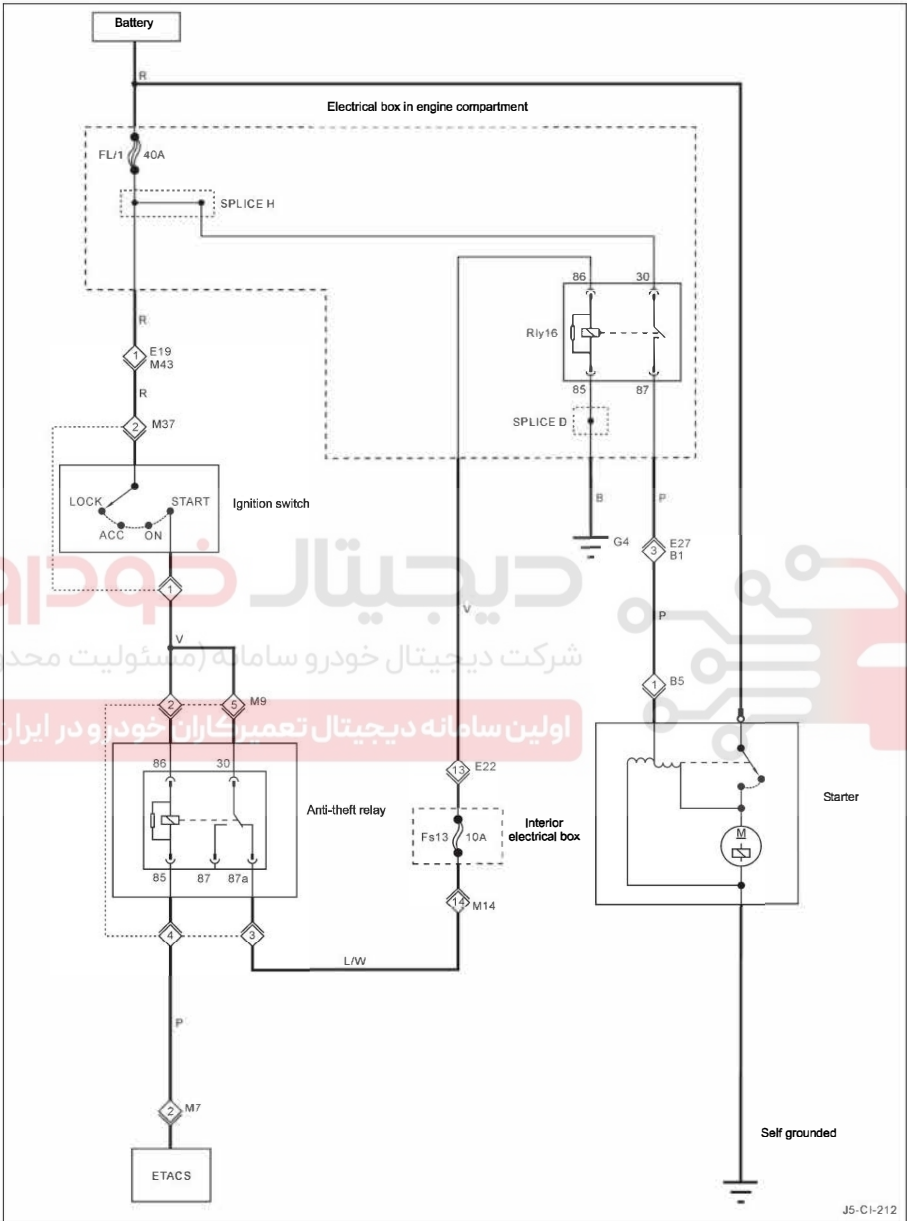

Circuit diagram

◇ harness plug

No.	No.	Description of harness plug
B1	E27	Power harness – engine harness (below the battery in the engine compartment)
E19	M43	Engine harness – main harness (below and on the left of dashboard)

□: switch and electrical device

No.	Description	Position
B5	To starter	Power harness
E22	To interior electrical box (I/P-D)	Engine harness
M7	To ETACS	Main harness
M9	To anti-theft relay	Main harness
M14	To interior electrical box (I/P-H)	Main harness
M37	To ignition switch	Main harness

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

