


Air Conditioning System

Manual A/C System

Circuit Diagram (Page 1 of 4)

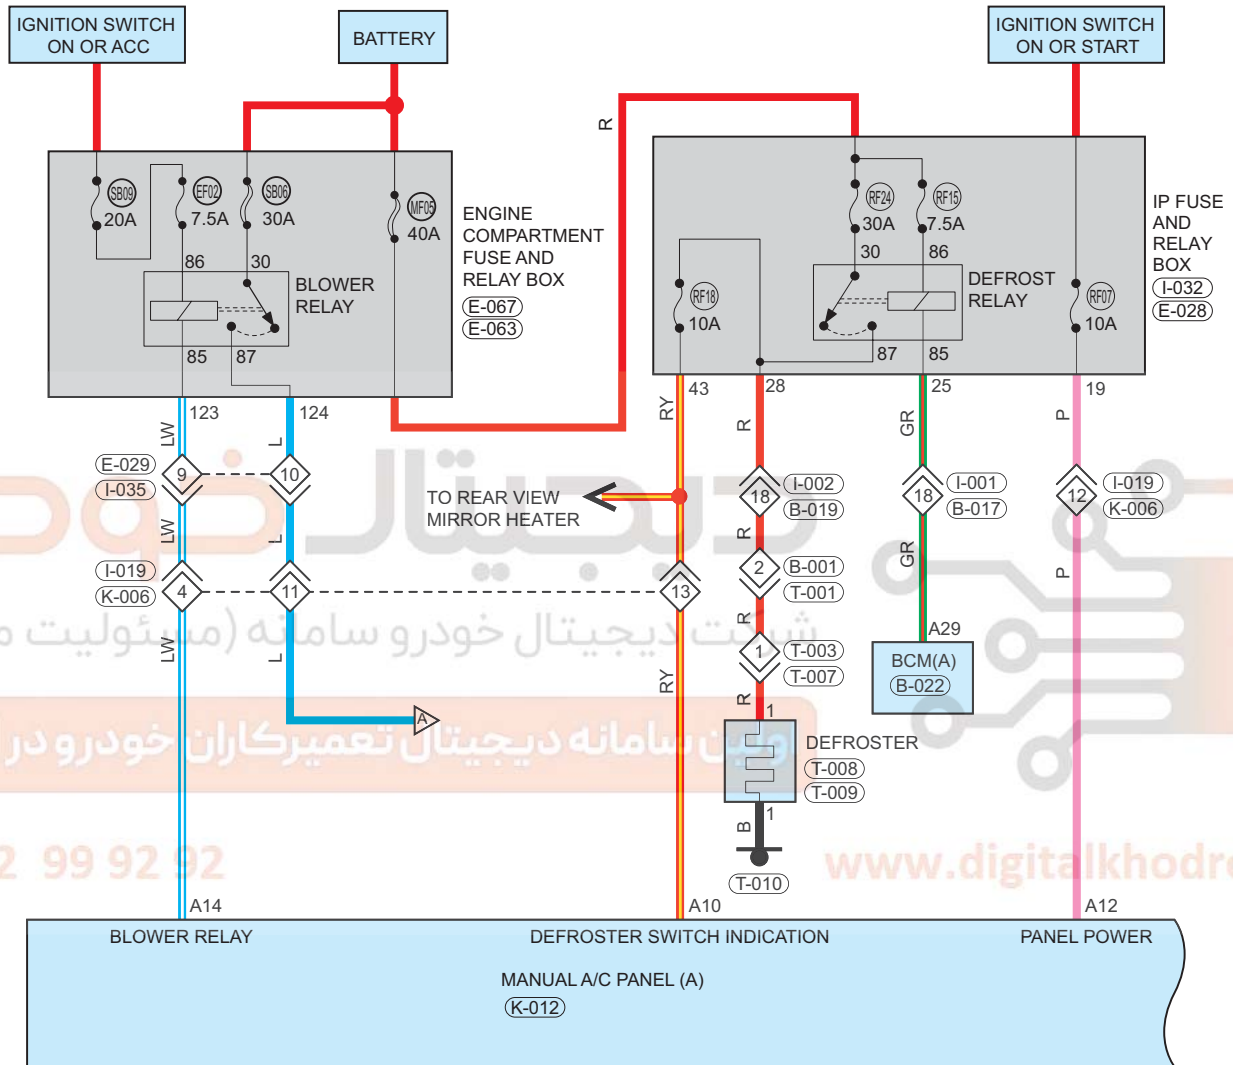

02 09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	08-5 (MT) 08-7 (AT)	E-063	08-5 (MT) 08-7 (AT)	I-032	08-10
E-028	08-5 (MT) 08-7 (AT)	B-022	08-12	T-008	08-18
T-009	08-18	T-010	08-18	K-012	08-20

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF02	06-2	Engine Compartment Fuse and Relay Box
SB06	06-2	Engine Compartment Fuse and Relay Box
SB09	06-2	Engine Compartment Fuse and Relay Box
MF05	06-2	Engine Compartment Fuse and Relay Box
RF07	06-10	IP Fuse and Relay Box
RF15	06-10	IP Fuse and Relay Box
RF18	06-10	IP Fuse and Relay Box
RF24	06-10	IP Fuse and Relay Box
Defrost Relay	06-10	IP Fuse and Relay Box
Blower Relay	06-2	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-029, I-035	08-5, 08-10 (MT) 08-7, 08-10 (AT)	I-019, K-006	08-10, 08-20	I-002, B-019	08-10, 08-12
B-001, T-001	08-12, 08-18	T-003, T-007	08-18, 08-18	I-001, B-017	08-10, 08-12

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	12-6	E-063	12-5	I-032	12-9
E-028	12-3	B-022	12-11	T-008	12-15
T-009	12-15	T-010	12-15	K-012	12-17
E-029, I-035	12-3	I-019, K-006	12-8	I-002, B-019	12-7
B-001, T-001	12-10	T-003, T-007	12-15	I-001, B-017	12-7

Circuit Diagram (Page 2 of 4)

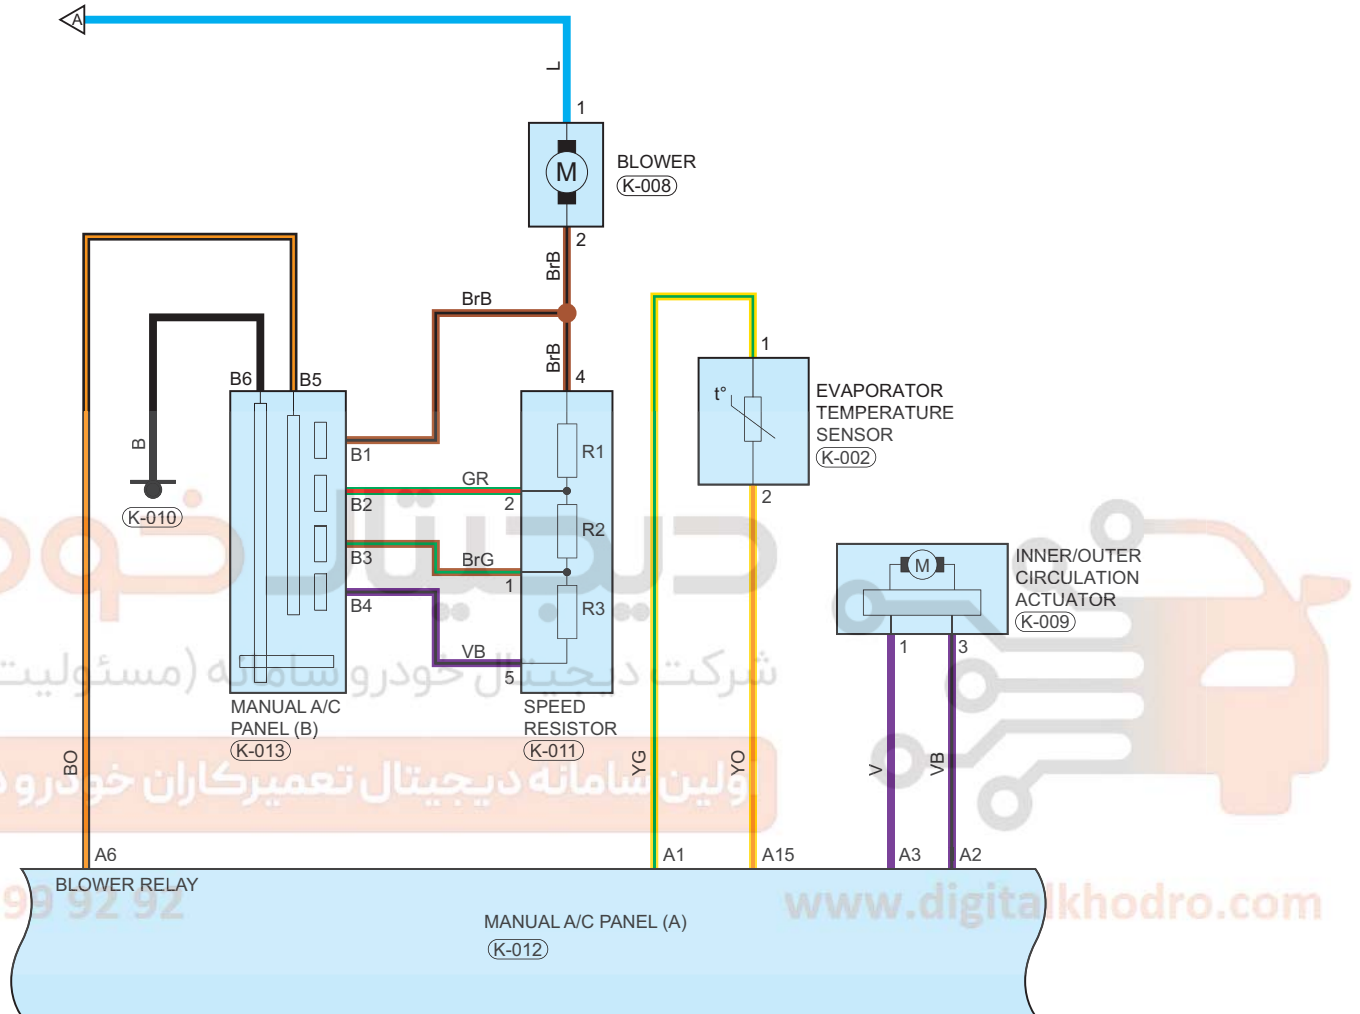

EA13T090290

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
K-002	08-20	K-009	08-20	K-012	08-20
K-010	08-20	K-013	08-20	K-011	08-20
K-008	08-20				


Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
K-002	12-17	K-009	12-17	K-012	12-17
K-010	12-17	K-013	12-17	K-011	12-17
K-008	12-17				

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

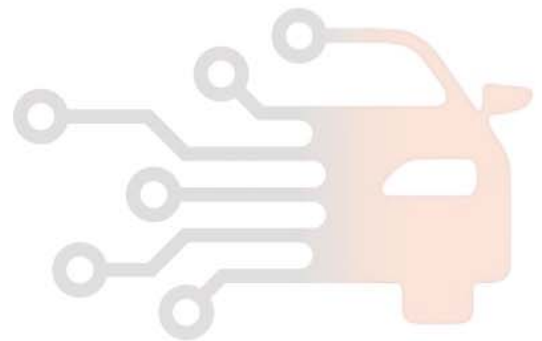

021 62 99 92 92

www.digitalkhodro.com 09

Circuit Diagram (Page 3 of 4)

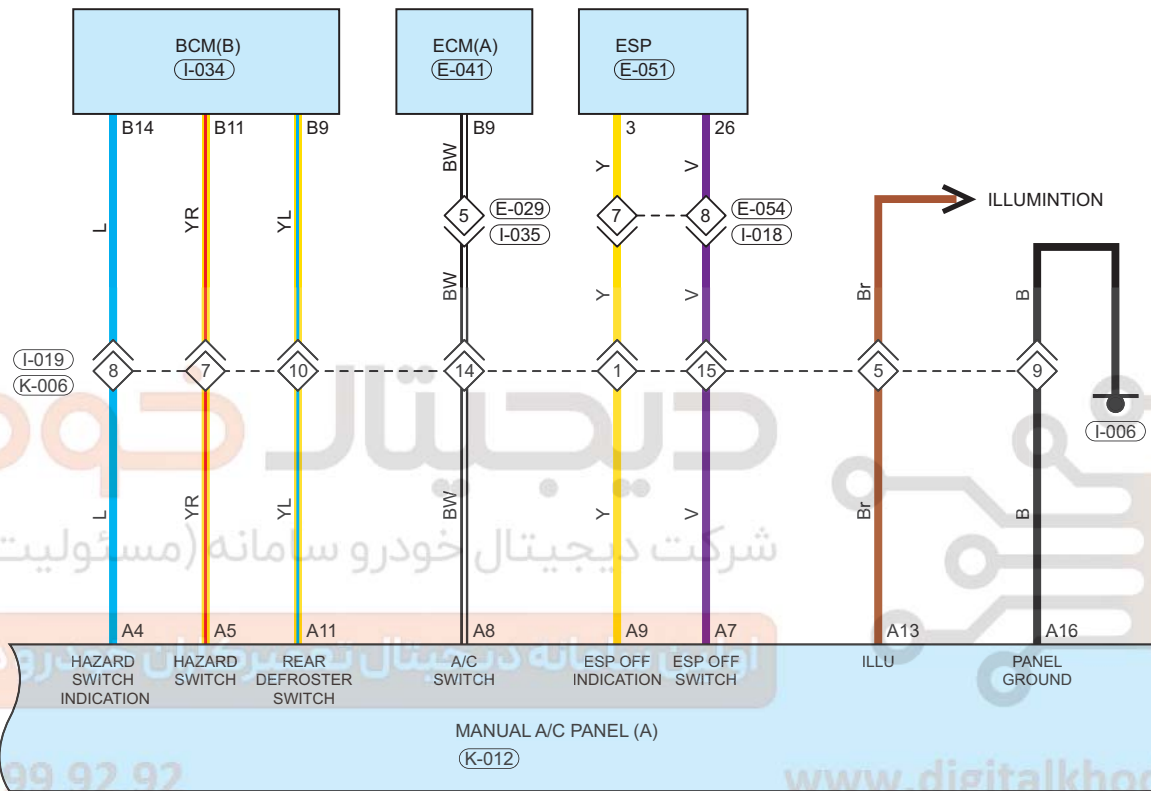

02 09

www.digitalkhodro.com

EA13T090300

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-006	08-10	E-051	08-5 (MT) 08-7 (AT)	E-041	08-5 (MT) 08-7 (AT)
I-034	08-10	K-012	08-20		

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-054, I-018	08-5, 08-10 (MT) 08-7, 08-10 (AT)	E-029, I-035	08-5, 08-10 (MT) 08-7, 08-10 (AT)	I-019, K-006	08-10, 08-20

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-006	12-7	E-051	12-5	E-041	12-4
I-034	12-9	K-012	12-17	E-054, I-018	12-5
E-029, I-035	12-3	I-019, K-006	12-8		


شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

021 62 99 92 92

www.digitalkhodro.com 09

Circuit Diagram (Page 4 of 4)

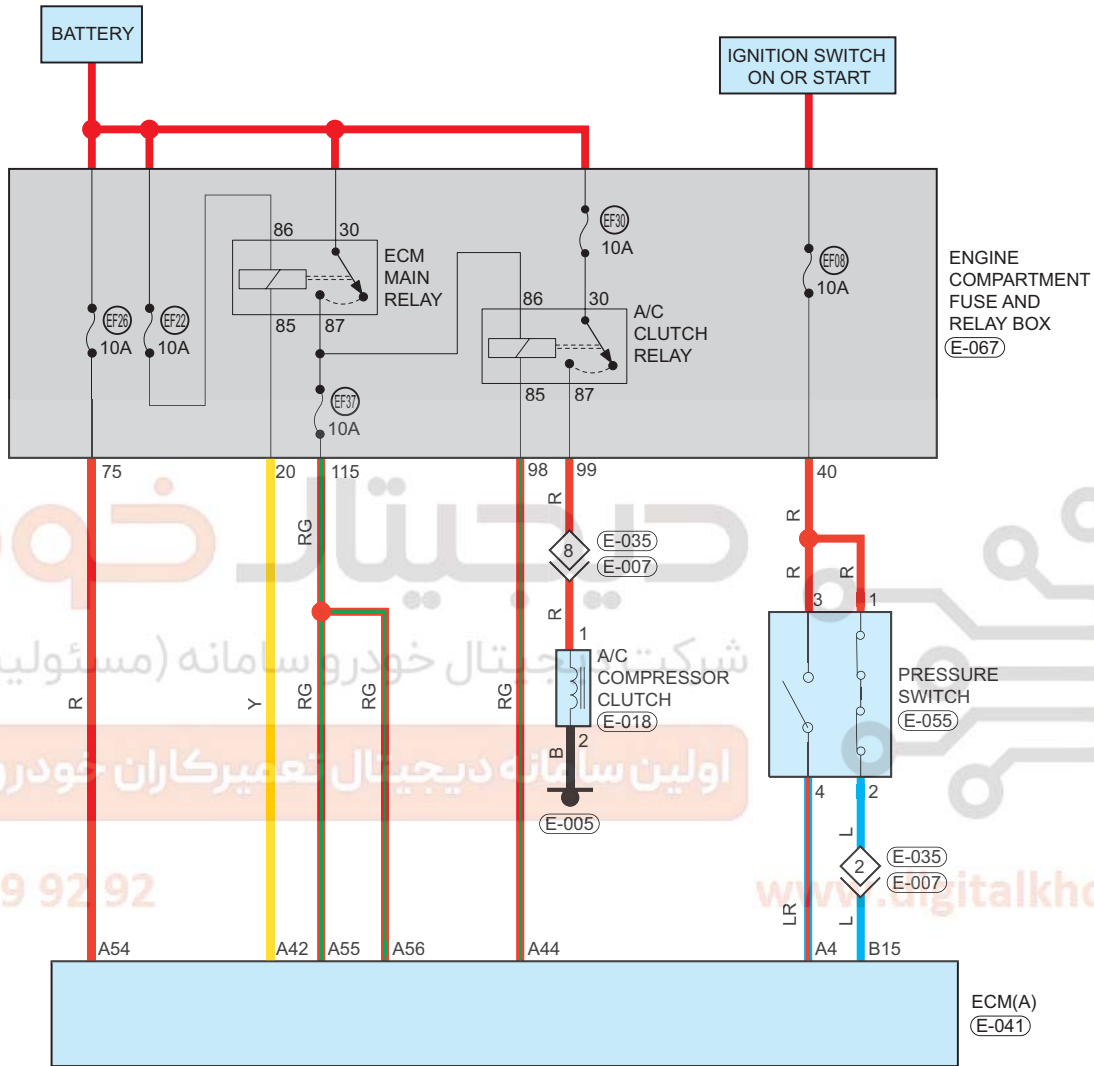

دیجیتال خودرو
 شرکت دیجیتال خودروسامانه (مسئولیت محدود)
 اولین سامانه دیجیتال تعمیرکاران خودرو در ایران
 02 09 52 99 92 92
 www.digitalkhodro.com

02 09

EA13T090310

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	08-5 (MT) 08-7 (AT)	E-055	08-5 (MT) 08-7 (AT)	E-041	08-5 (MT) 08-7 (AT)
E-018	08-3	E-005	08-3		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF08	06-2	Engine Compartment Fuse and Relay Box
EF22	06-2	Engine Compartment Fuse and Relay Box
EF26	06-2	Engine Compartment Fuse and Relay Box
EF30	06-2	Engine Compartment Fuse and Relay Box
EF37	06-2	Engine Compartment Fuse and Relay Box
ECM Main Relay	06-2	Engine Compartment Fuse and Relay Box
A/C Clutch Relay	06-2	Engine Compartment Fuse and Relay Box

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-035, E-007	08-5, 08-3 (MT) 08-7, 08-3 (AT)				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	12-6	E-055	12-5	E-041	12-4
E-018	12-3	E-005	12-2	E-035, E-007	12-4