


Step light and rear compartment lamp

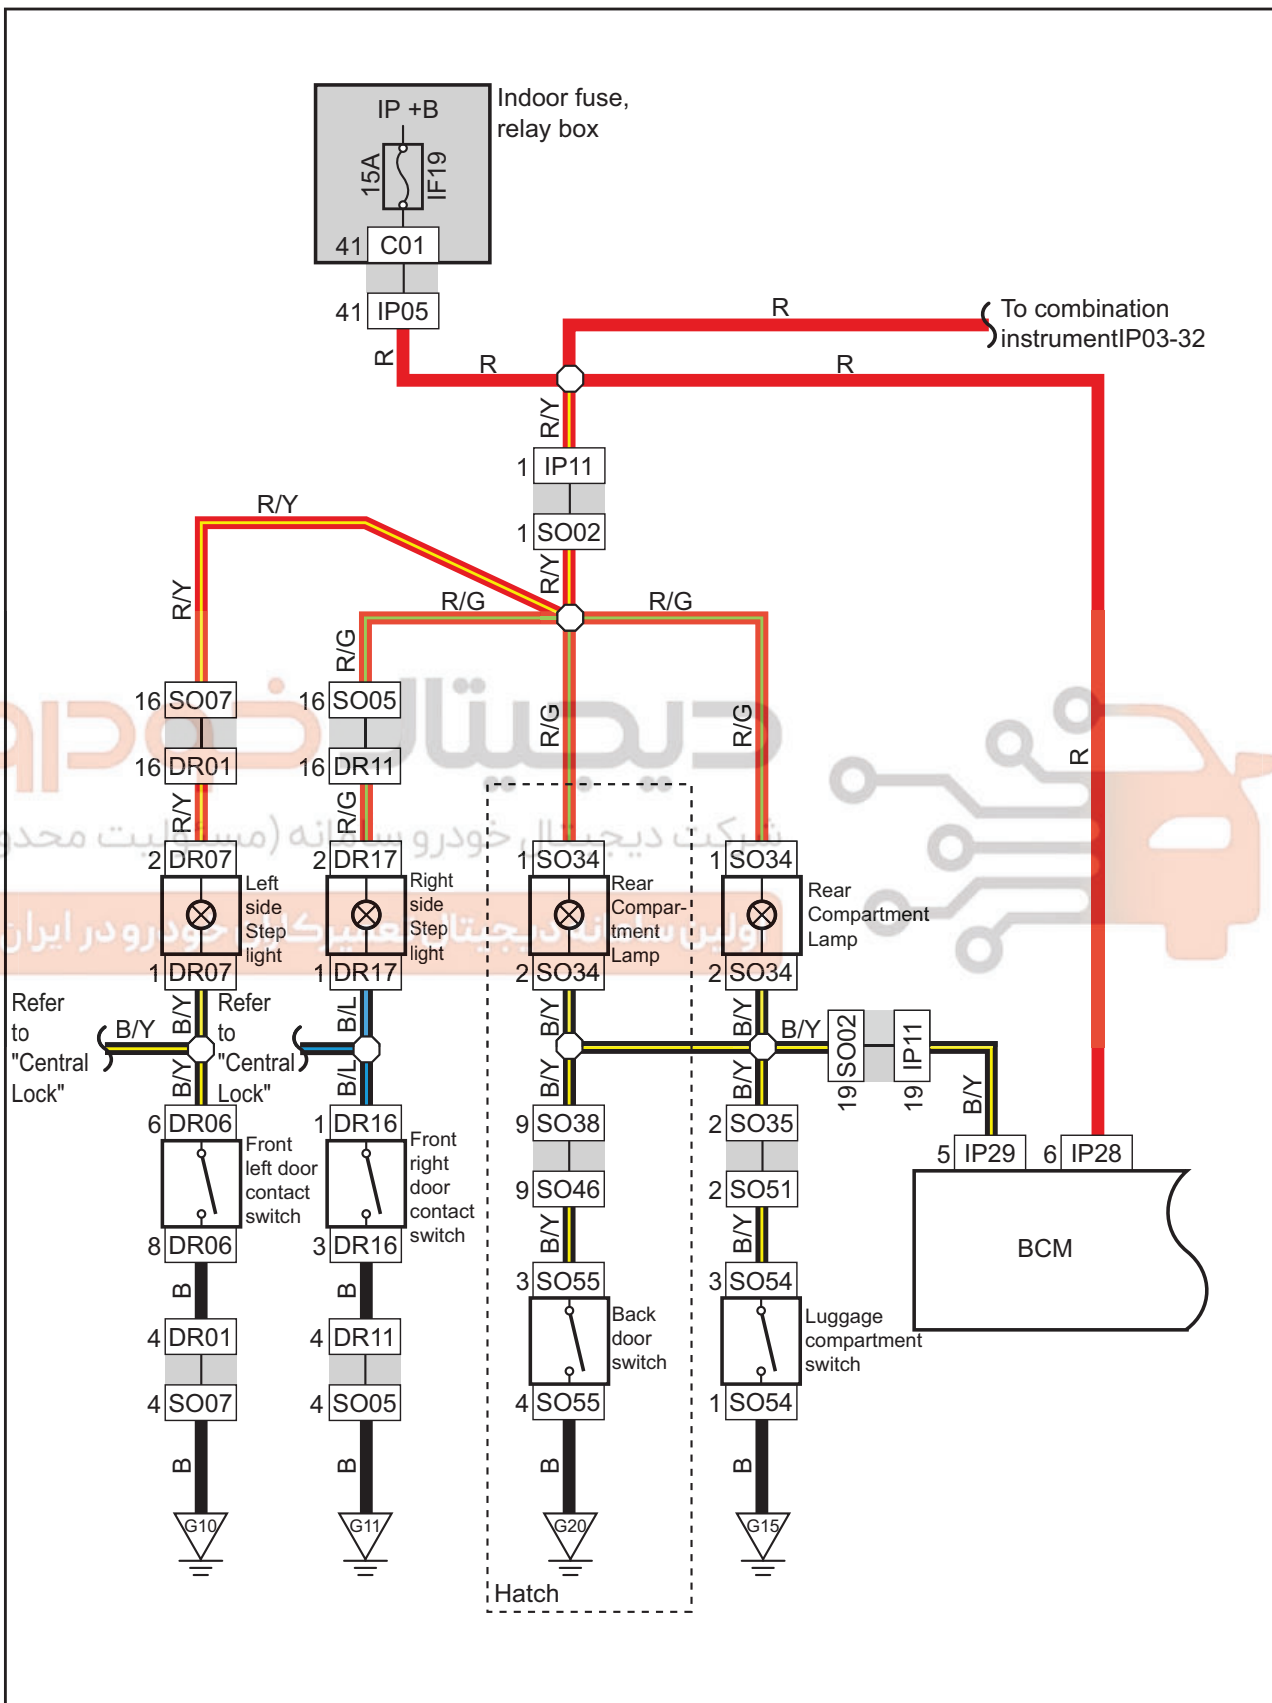

Harness connector	Name	Pages
C01	Rear Connector of Indoor Fuse Box	17
DR01	Front left door connected to body harness connector	114
DR06	Harness connector of front left door lock motor	114
DR07	Harness connector of left door step light	114
DR11	Front right door connected to body harness connector	114
DR16	Front right door lock harness connector	114
DR17	Right door step light connector	114
IP05	To harness connector of indoor fuse & relay box	80
IP11	To body harness connector	80
IP28	Harness connector of body control module 2	80
IP29	Harness connector of body control module 1	80
SO02	To instrument harness connector	97/106
SO05	To front right door harness connector	97/106
SO07	To front left door harness connector	97/106
SO34	Harness connector of luggage compartment lamp	97/106
SO35 (Sedan)	To luggage compartment harness connector	97
SO38 (Hatch)	To harness connector of tail door	106
SO46 (Hatch)	To body harness connector	107
SO51 (Sedan)	To body harness connector	97
SO54 (Sedan)	Harness connector of luggage compartment lock	97
SO55 (Hatch)	Trunk lock harness connector	107
G10	Body harness grounding	126/127/128
G11	Body harness grounding	126/127/128
G15	Body harness grounding	126/127/128
G20 (Hatch)	Backdoor grounding	129

Connection point	Descriptions	Pages
IP11-1	To combination instrument IP03-32	522/524
DR16-1	Refer to "Central Lock".	439
DR06-6	Refer to "Central Lock".	439