



1) CONNECTOR

Connector Number (Pin Number/Color)	Connecting Wiring Harness	Connector Position	Remark
C205	W/H IP (Main) - IP Fuse & Relay BOX	Back Side of IP Fuse & Relay Box	
C207	W/H Eng Room - IP Fuse & Relay BOX	Front Side of IP Fuse & Relay Box	
C208	W/H Eng Room - IP Fuse & Relay BOX	Front Side of IP Fuse & Relay Box	
C214	W/H Eng Room - W/H Floor	Inside of Driver Cowl Side	
C351	W/H Floor - W/H Driver DR	Under Driver Door Hinge	
C361	W/H Floor- W/H Passenger DR	Under Front Passenger Door Hinge	
C401	W/H Floor - W/H Tail Gate	Behind Micro Pole Antenna	

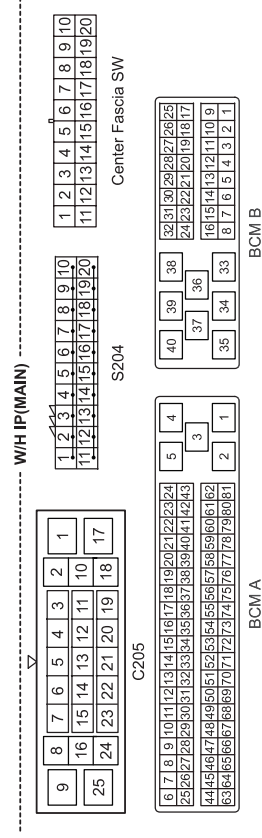

2) GROUND



Connector Number	Connecting Wiring Harness	Connecting Position	Remark
G202	W/H IP (Main)	Rear LH of Cluster (IP Panel Frame)	S202, S204, IP Fuse
G301	W/H Floor	Inside of Driver Door Scuff	Driver door/seat, IP fuse box
G303	W/H Floor	Inside of Passenger Door Scuff	Rear RH door, front passenger door/door switch, front passenger seat

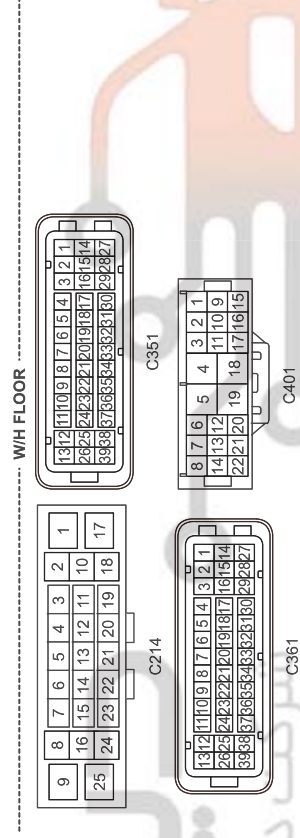

3) SPLICE PACK

Connector Number (Pin Number)	Connecting Wiring Harness	Connector Position	Remark
S204	W/H IP (Main)	Rear Center of Front Passenger Air Bag	Ground

4) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

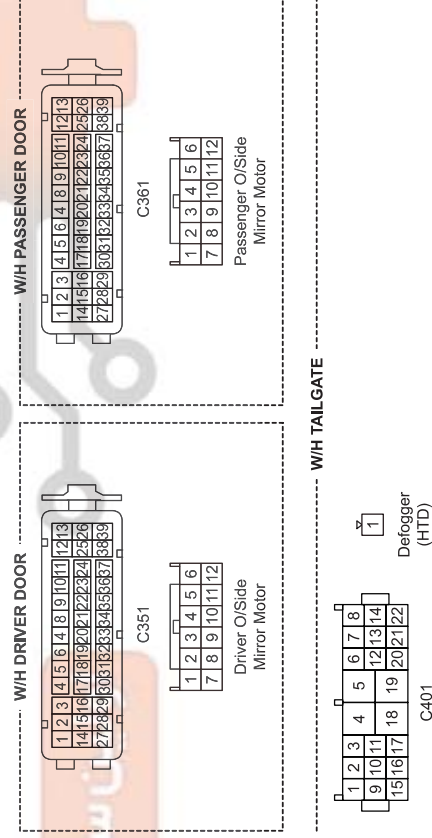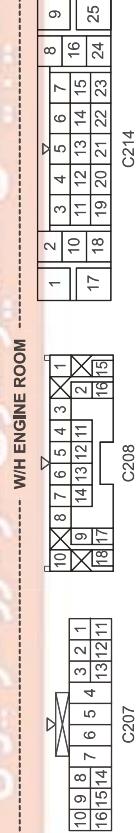

Modification basis	
Application basis	
Affected VIN	