


Reversing lamp

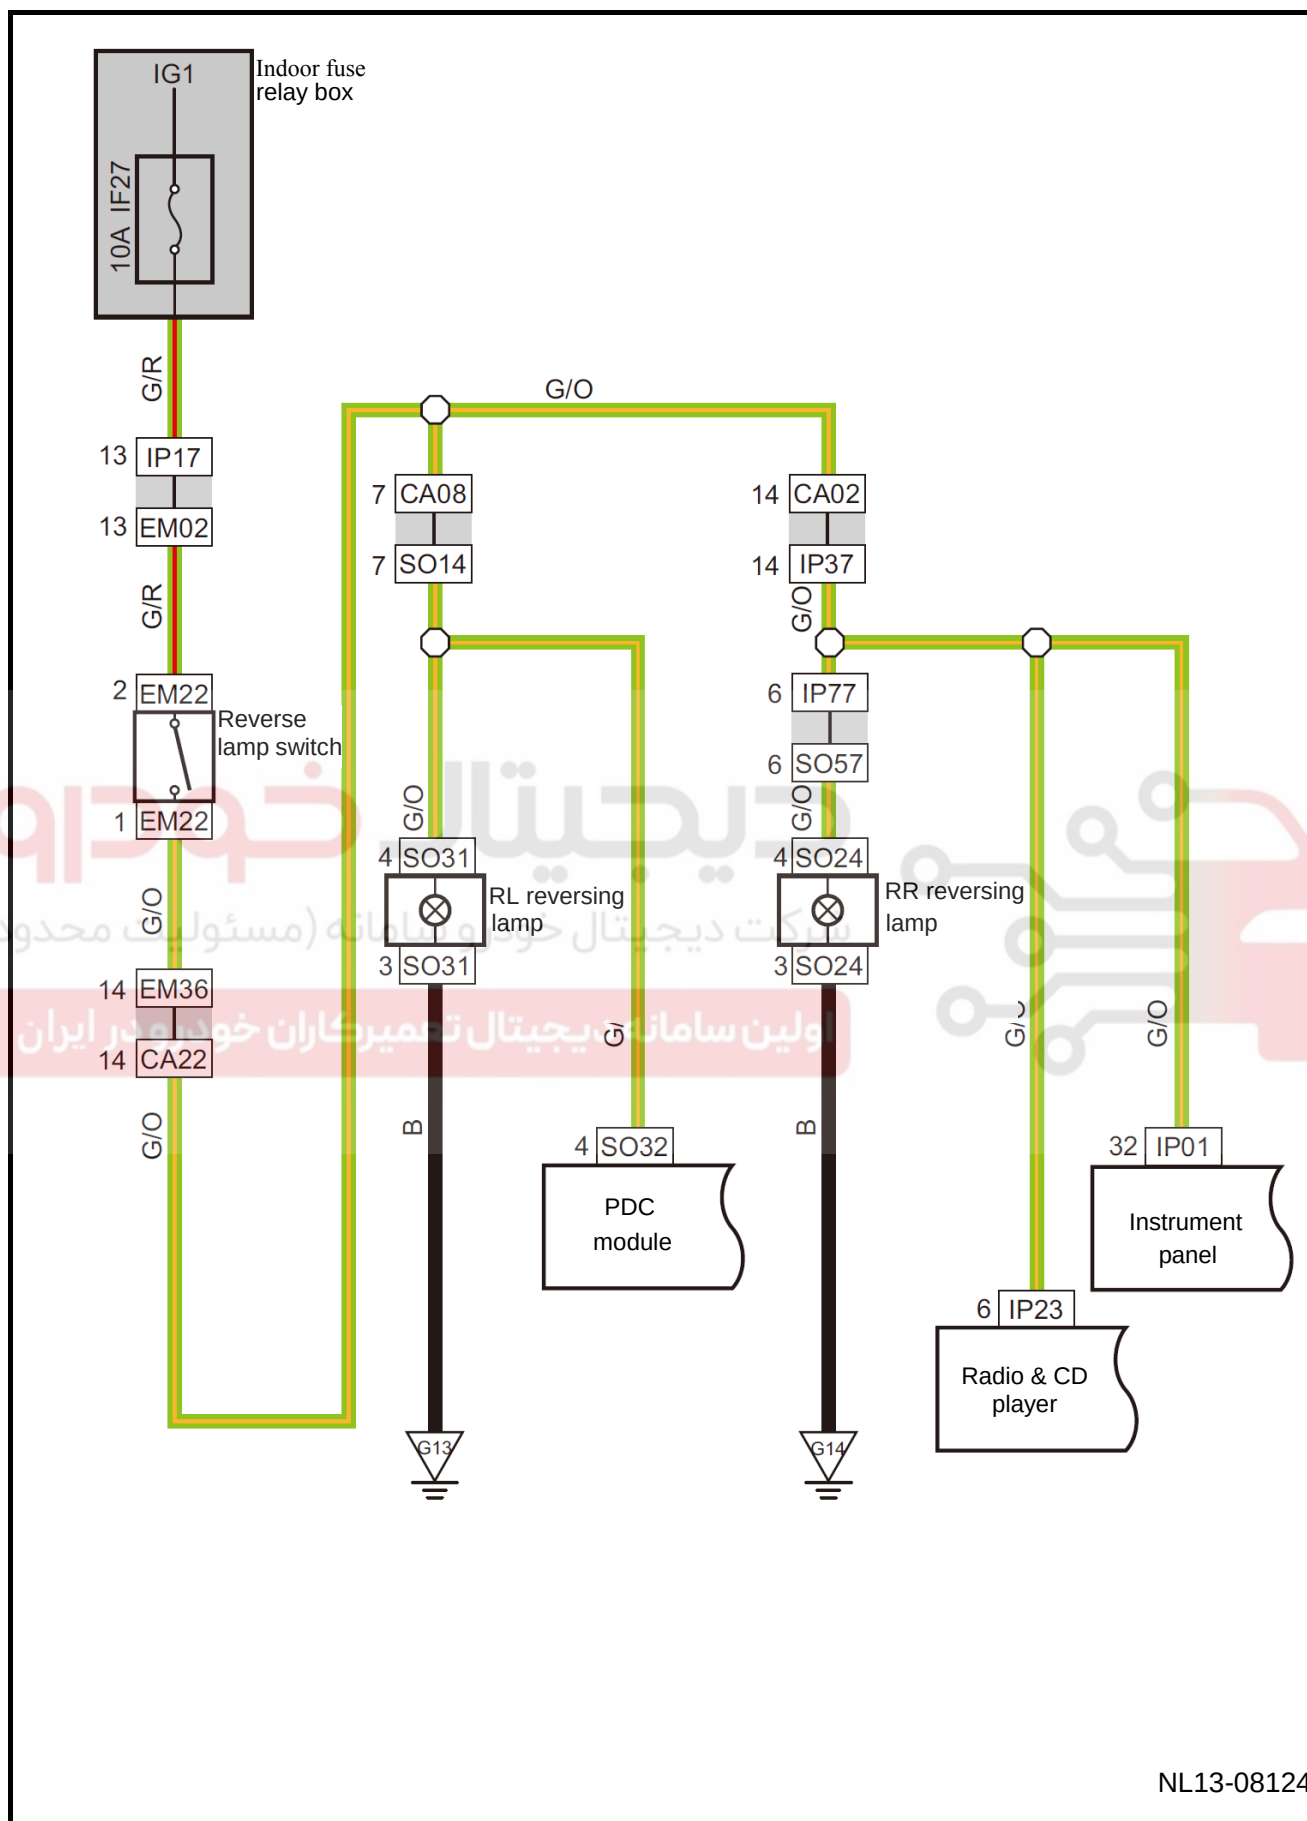



Harness connector	Description	Pages
CA08	To body harness connector	29
CA22	To engine harness connector	28
EM02	To instrument harness connector	35
EM22	Harness connector of reverse gear switch	34
EM36	To harness connector of engine compartment distribution box	34
EM41	Harness connector of transmission gear position	34
IP17	To engine harness connector	40
SO14	To engine compartment harness connector	50
SO24	Harness connector of RR combination lamp	50
SO30	To back door harness connector	50
SO31	Harness connector of RL combination lamp	50
SO32	Harness connector of PDC module	50
SO45	To body harness connector	51
G13	Body harness grounding	71
G14	Body harness grounding	71

