
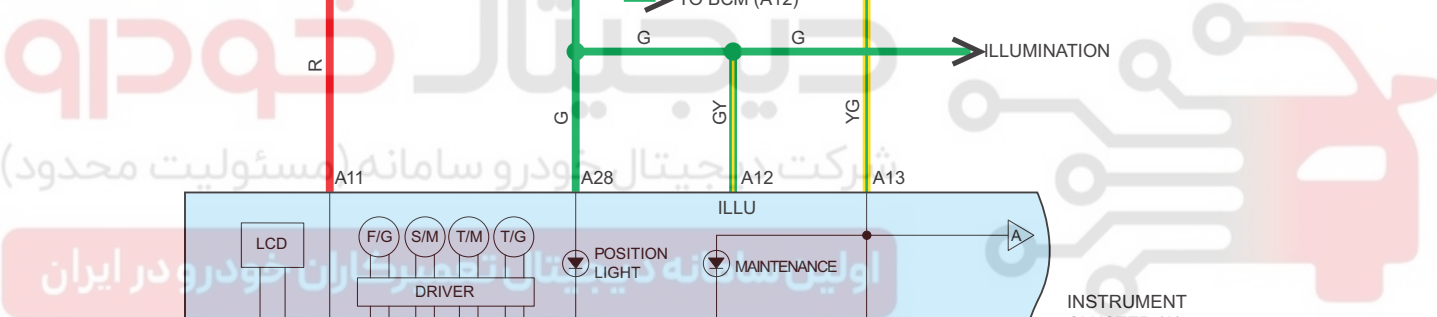


# Instrument Cluster

Circuit Diagram (Page 1 of 5)

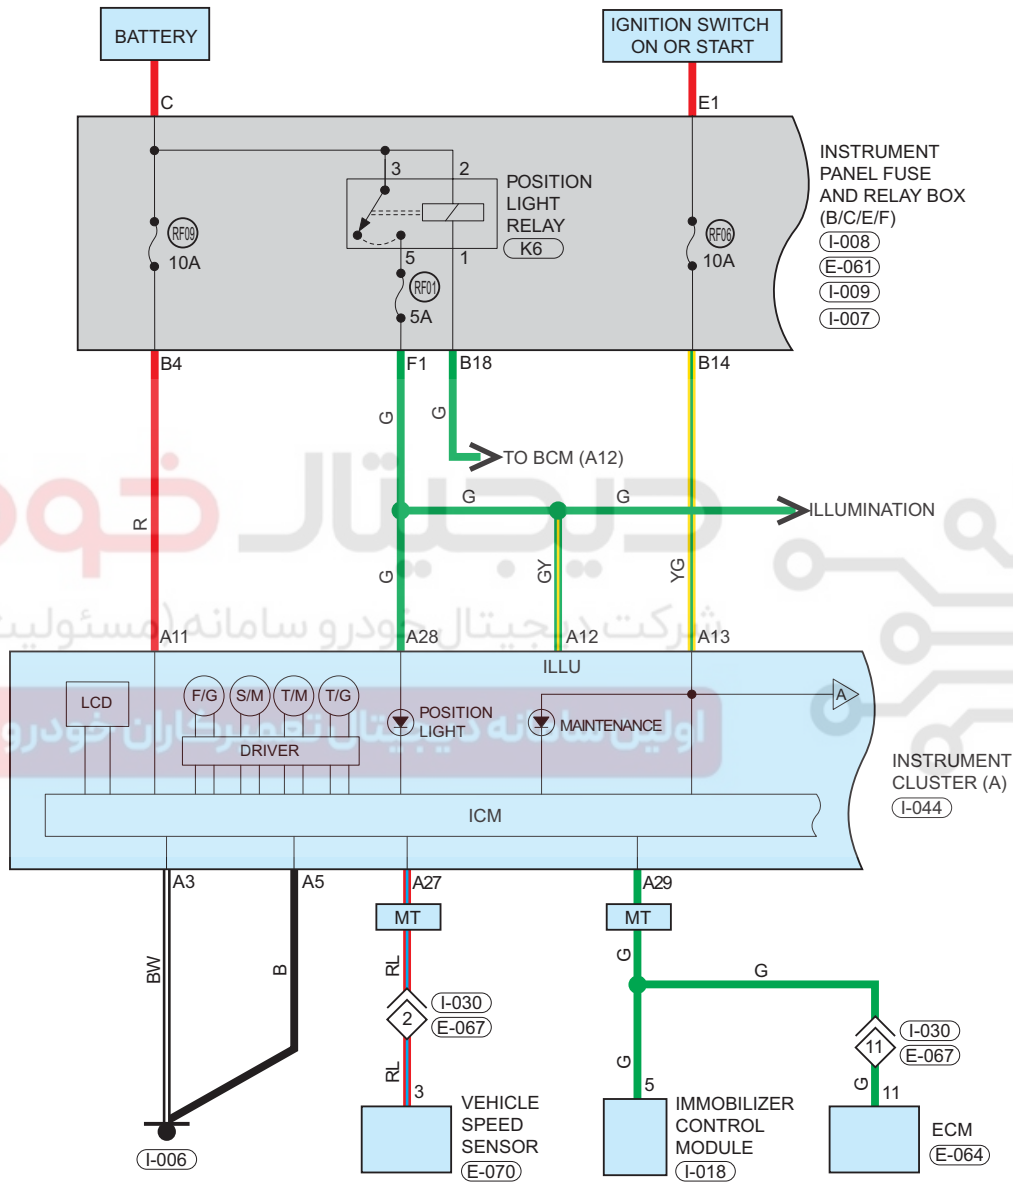

09

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-008	08-12	I-018	08-12	I-009	08-12
I-007	08-12	I-044	08-12	I-006	08-12
E-070	08-4	E-061	08-4 (MT)	E-064	08-4 (MT)
			08-7 (CVT)		08-7 (CVT)

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF01	06-12	Instrument Panel Fuse and Relay Box
RF06	06-12	Instrument Panel Fuse and Relay Box
RF09	06-12	Instrument Panel Fuse and Relay Box
Position Light Relay	06-12	Instrument Panel Fuse and Relay Box


## Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-030, E-067	08-12, 08-4 (MT)				
	08-12, 08-7 (CVT)				

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-008	12-8	E-061	12-4	I-009	12-8
I-007	12-8	I-044	12-10	I-006	12-8
E-070	12-5	I-018	12-9	E-064	12-5
I-030, E-067	12-9				

Circuit Diagram (Page 2 of 5)

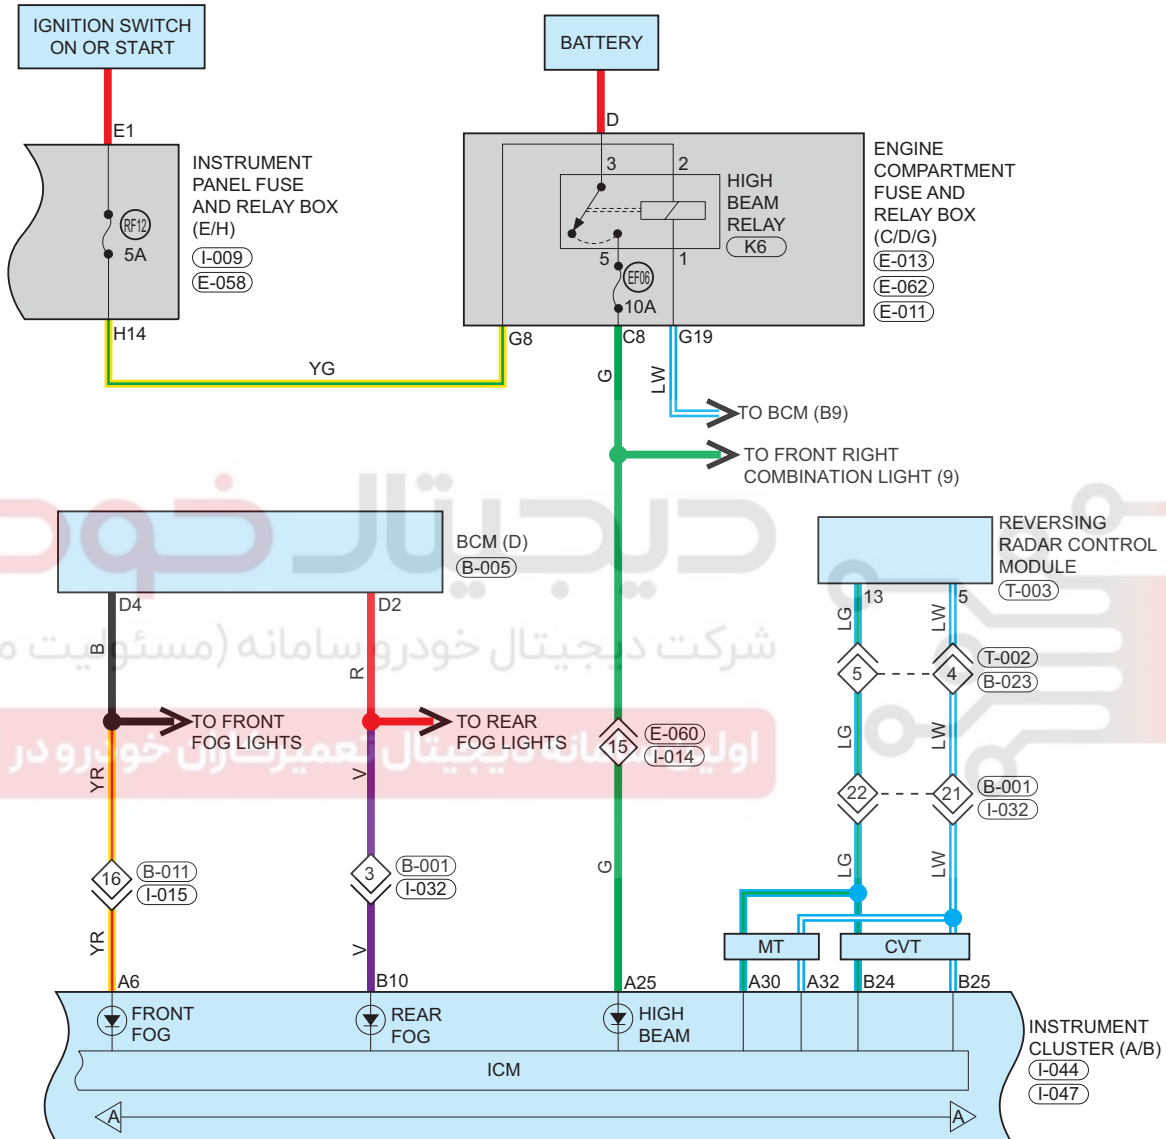

09

ET11090630

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-011	08-4 (MT)	E-058	08-4 (MT)	E-013	08-4 (MT)
	08-7 (CVT)		08-7 (CVT)		08-7 (CVT)
E-062	08-4 (MT)	I-009	08-12	B-005	08-17
	08-7 (CVT)				
T-003	08-23	I-044	08-12	I-047	08-12

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF12	06-12	Instrument Panel Fuse and Relay Box
EF06	06-5	Engine Compartment Fuse and Relay Box
High Beam Relay	06-5	Engine Compartment Fuse and Relay Box


## Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-011, I-015	08-17, 08-12	B-001, I-032	08-17, 08-12	T-002, B-023	08-23, 08-17
E-060, I-014	08-4, 08-12 (MT)				
	08-7, 08-12 (CVT)				

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-009	12-8	E-058	12-4	E-013	12-2
E-062	12-4	E-011	12-2	B-005	12-12
T-003	12-19	I-044	12-10	I-047	12-11
B-011, I-015	12-13	B-001, I-032	12-12	E-060, I-014	12-4
T-002, B-023	12-19				

Circuit Diagram (Page 3 of 5)

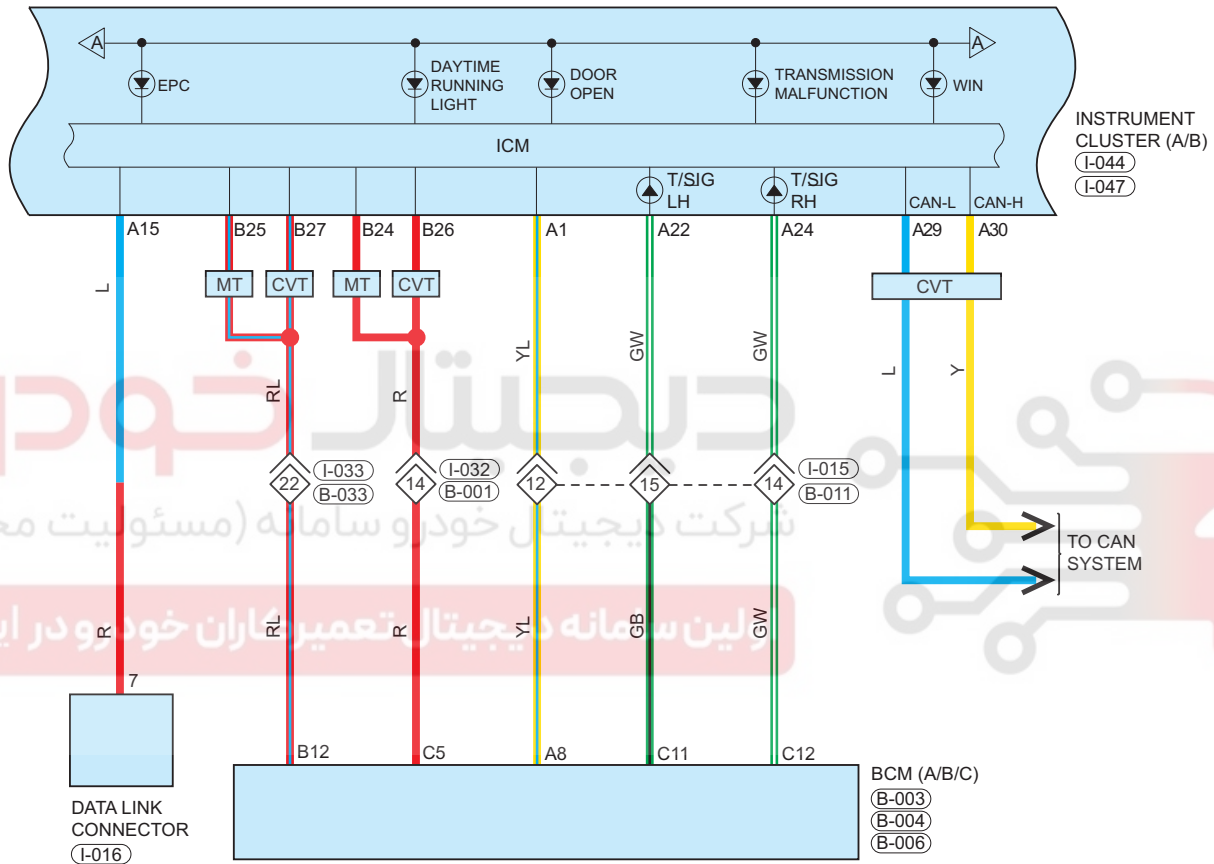

دیجیتال خودرو  
 شرکت دیجیتال خودرو سامانه (مسئولیت محدود)  
 آدرس: تهران، خیابان ولیعصر، پلاک ۱۰۰، طبقه ۱۰  
 آدرس: تهران، خیابان ولیعصر، پلاک ۱۰۰، طبقه ۱۰  
 آدرس: تهران، خیابان ولیعصر، پلاک ۱۰۰، طبقه ۱۰

09

ET11090640

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-044	08-12	I-047	08-12	I-016	08-12
B-003	08-17	B-004	08-17	B-006	08-17

## Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-033, B-033	08-12, 08-17	I-032, B-001	08-12, 08-17	I-015, B-011	08-12, 08-17

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-044	12-10	I-047	12-11	I-016	12-9
B-003	12-12	B-004	12-12	B-006	12-12
I-033, B-033	12-10	I-032, B-001	12-10	I-015, B-011	12-9


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 4 of 5)

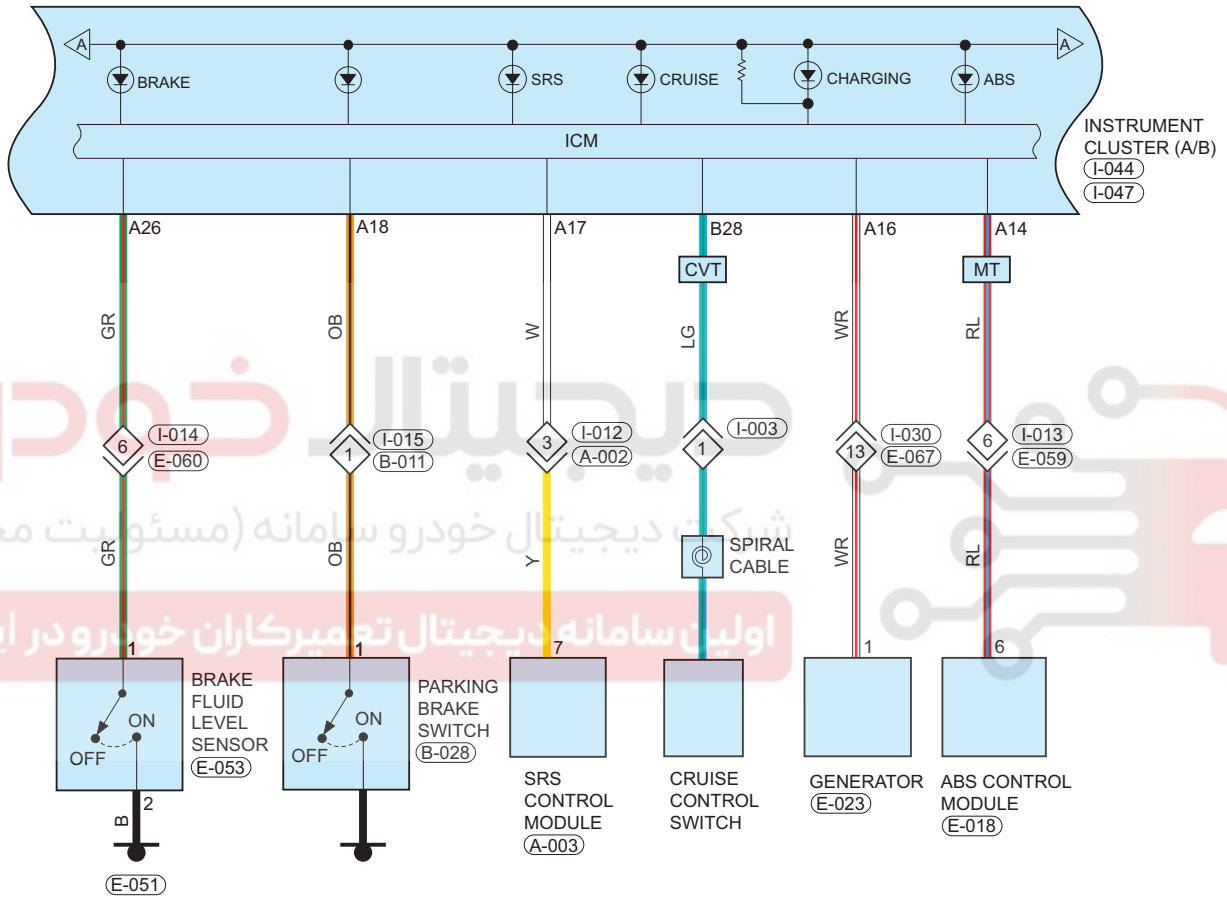

09

ET11090650

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-018	08-4 (MT)	E-023	08-4 (MT)	E-053	08-4 (MT)
	08-7 (CVT)		08-7 (CVT)		08-7 (CVT)
E-051	08-4 (MT)	B-028	08-17	A-003	08-26
	08-7 (CVT)				
I-003	08-12	I-047	08-12	I-044	08-12

## Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-014, E-060	08-12, 08-4 (MT)	I-030, E-067	08-12, 08-4 (MT)	I-013, E-059	08-12, 08-4 (MT)
	08-12, 08-7 (CVT)		08-12, 08-7 (CVT)		08-12, 08-7 (CVT)
I-015, B-011	08-12, 08-17	I-012, A-002	08-12, 08-26		

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-044	12-10	I-047	12-11	E-053	12-4
E-051	12-4	B-028	12-14	A-003	12-20
I-003	12-8	E-023	12-3	E-018	12-2
I-014, E-060	12-8	I-015, B-011	12-9	I-012, A-002	12-8
I-030, E-067	12-9	I-013, E-059	12-8		



Circuit Diagram (Page 5 of 5)

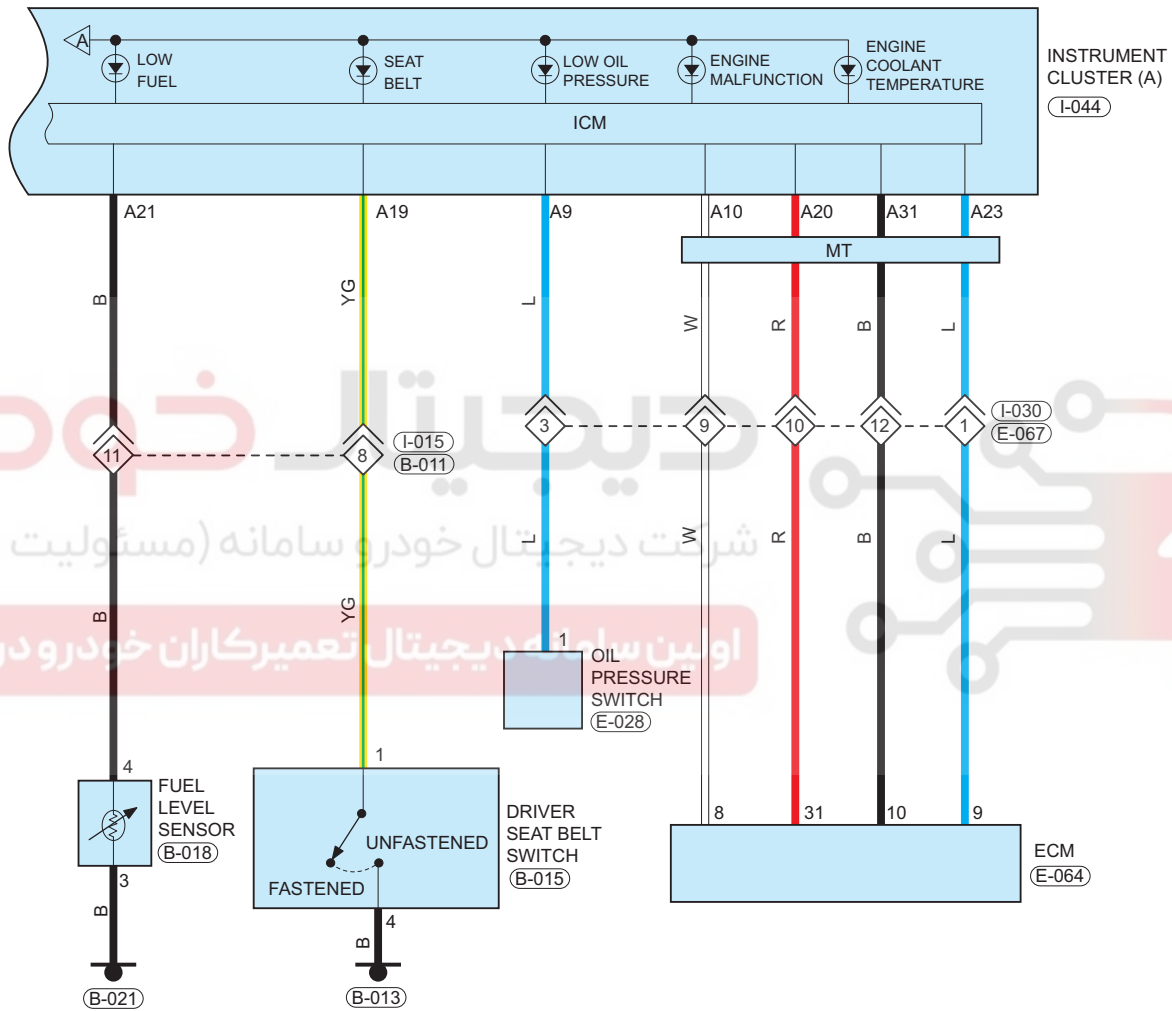

09

ET11090660