



Position Light

Circuit Diagram (Page 1 of 2)

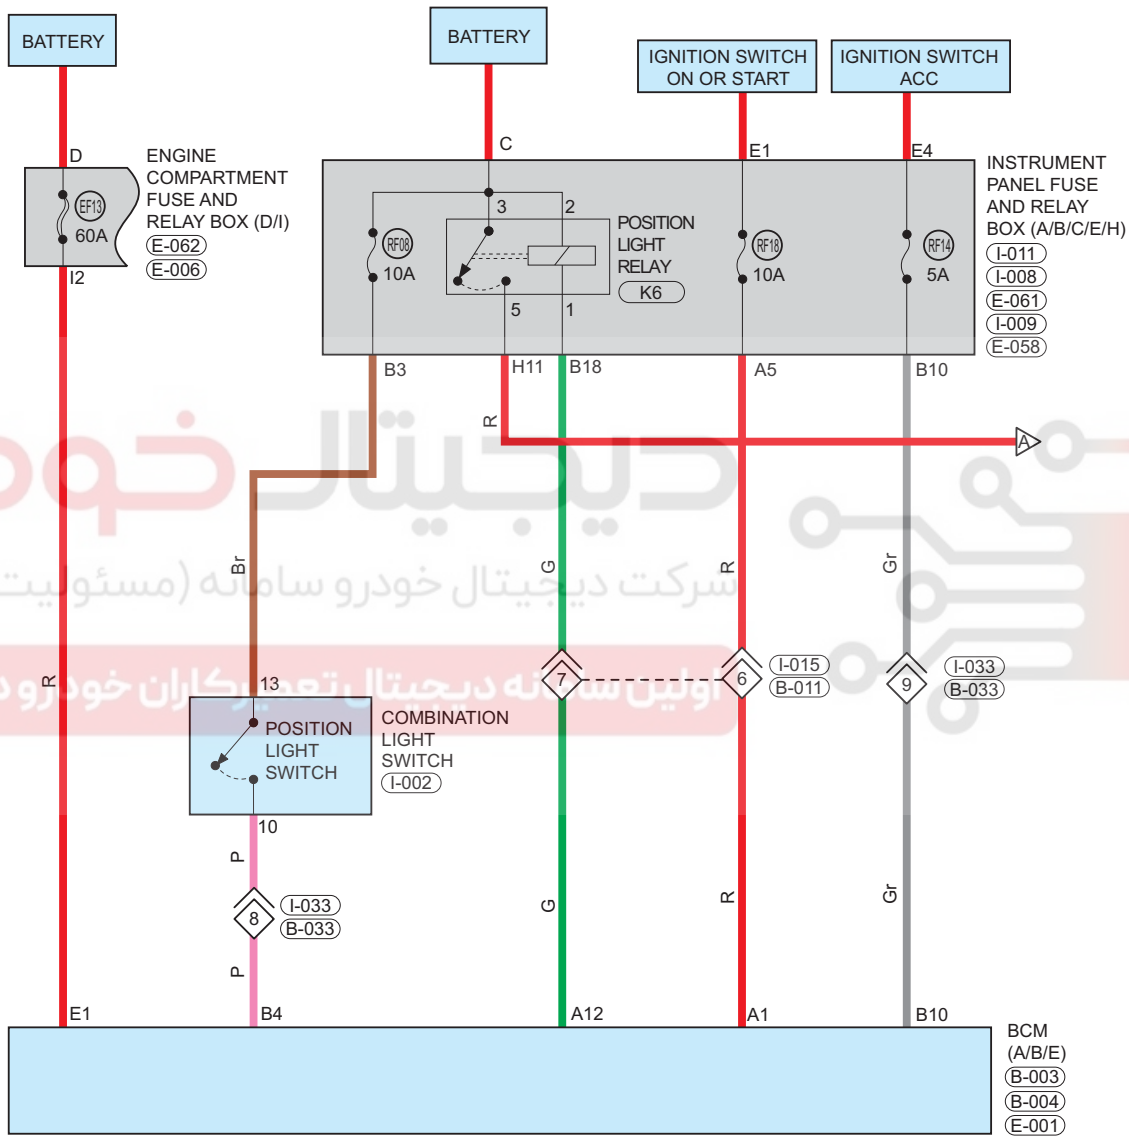

09

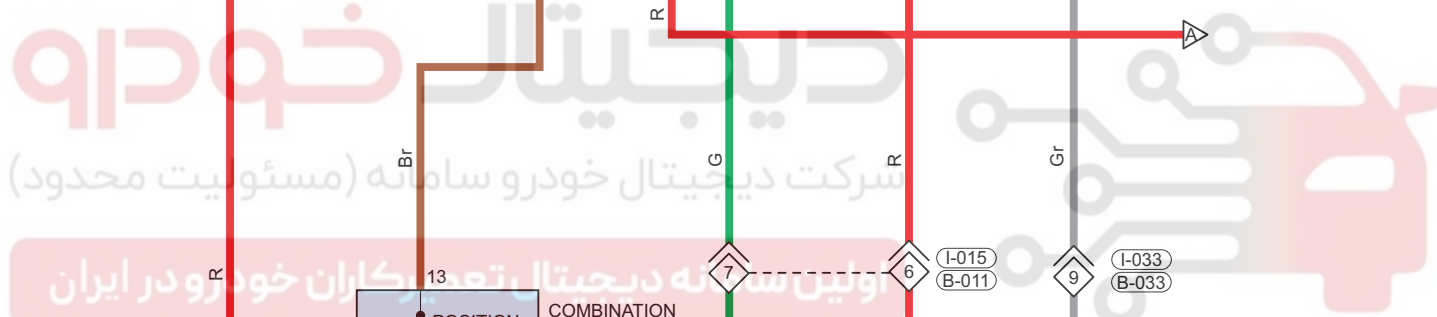

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-062	08-4 (MT)	E-006	08-4 (MT)	E-001	08-4 (MT)
	08-7 (CVT)		08-7 (CVT)		08-7 (CVT)
E-058	08-4 (MT)	E-061	08-4 (MT)	I-009	08-12
	08-7 (CVT)		08-7 (CVT)		
I-008	08-12	I-002	08-12	B-003	08-17
B-004	08-17	I-011	08-12		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF13	06-5	Engine Compartment Fuse and Relay Box
RF08	06-12	Instrument Panel Fuse and Relay Box
RF14	06-12	Instrument Panel Fuse and Relay Box
RF18	06-12	Instrument Panel Fuse and Relay Box
Position Light Relay	06-12	Instrument Panel Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-033, B-033	08-12, 08-17	I-015, B-011	08-12, 08-17		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-062	12-4	E-006	12-2	I-011	12-8
I-008	12-8	E-061	12-4	I-009	12-8
E-058	12-4	I-002	12-8	B-003	12-12
B-004	12-12	E-001	12-2	I-033, B-033	12-10
I-015, B-011	12-9				

Circuit Diagram (Page 2 of 2)

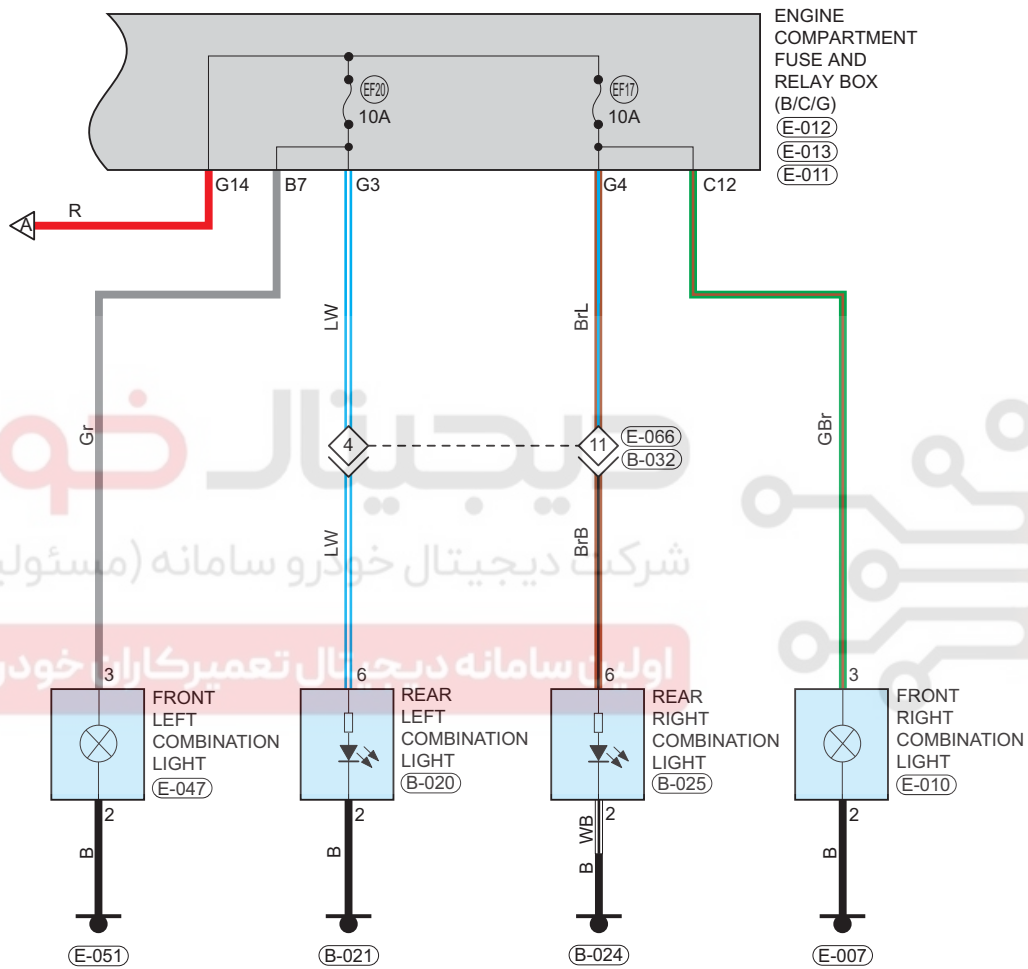

09

ET11090490