


Passive Entry & Passive Start (PEPS) System

Circuit Diagram (Page 1 of 4)

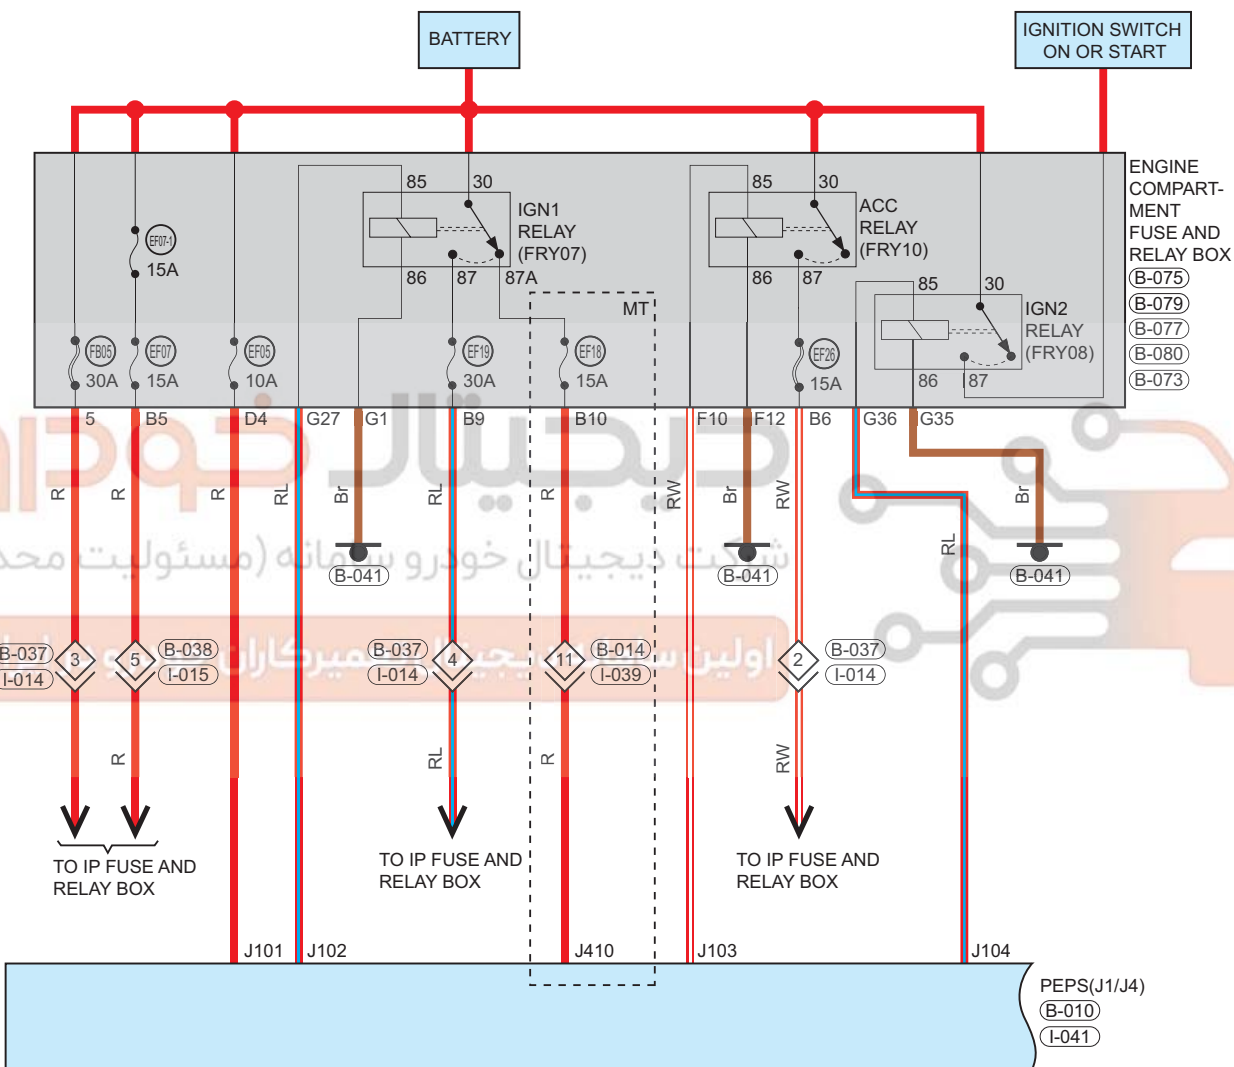

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-075	08-12	B-079	08-12	B-077	08-12
B-080	08-12	B-073	08-12	B-041	08-12
B-010	08-12	I-041	08-8		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
FB05	06-2	Engine Compartment Fuse and Relay Box
EF07-1	06-2	Engine Compartment Fuse and Relay Box
EF07	06-2	Engine Compartment Fuse and Relay Box
EF05	06-2	Engine Compartment Fuse and Relay Box
EF19	06-2	Engine Compartment Fuse and Relay Box
EF18	06-2	Engine Compartment Fuse and Relay Box
EF26	06-2	Engine Compartment Fuse and Relay Box
IGN1 Relay (FRY07)	06-2	Engine Compartment Fuse and Relay Box
IGN2 Relay (FRY08)	06-2	Engine Compartment Fuse and Relay Box
ACC Relay (FRY10)	06-2	Engine Compartment Fuse and Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-037, I-014	08-12	B-038, I-015	08-12	B-014, I-039	08-12

09

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-075	12-7	B-079	12-7	B-077	12-7
B-080	12-7	B-073	12-7	B-041	12-7
B-010	12-7	I-041	12-4	B-037, I-014	12-7
B-038, I-015	12-7	B-014, I-039	12-7		

Circuit Diagram (Page 2 of 4)

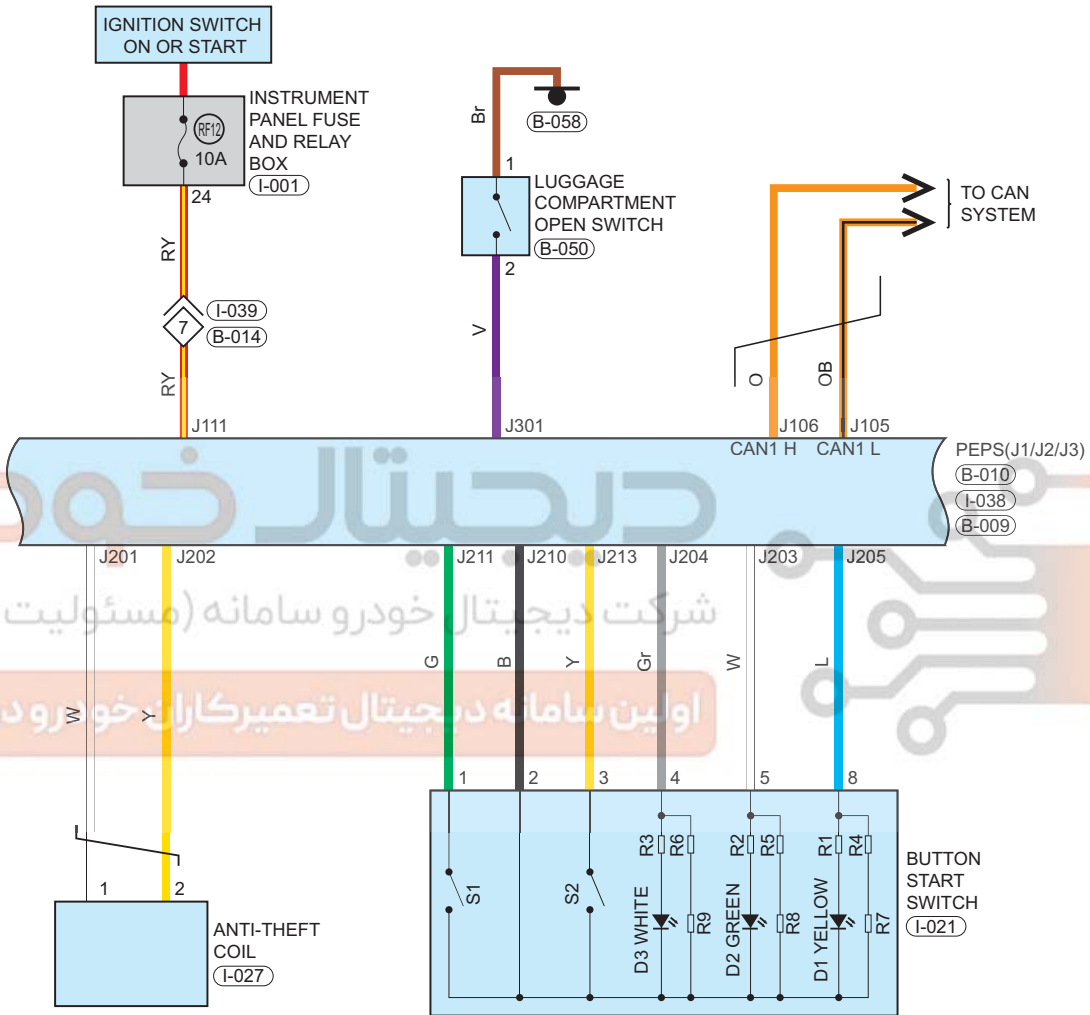

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	08-8	B-058	08-12	B-050	08-12
B-010	08-12	I-038	08-8	B-009	08-12
I-027	08-8	I-021	08-8		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF12	06-9	Instrument Panel Fuse And Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-014, I-039	08-12				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	12-4	B-058	12-7	B-050	12-7
B-010	12-7	I-038	12-4	B-009	12-7
I-027	12-4	I-021	12-4	B-014, I-039	12-7

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 3 of 4)

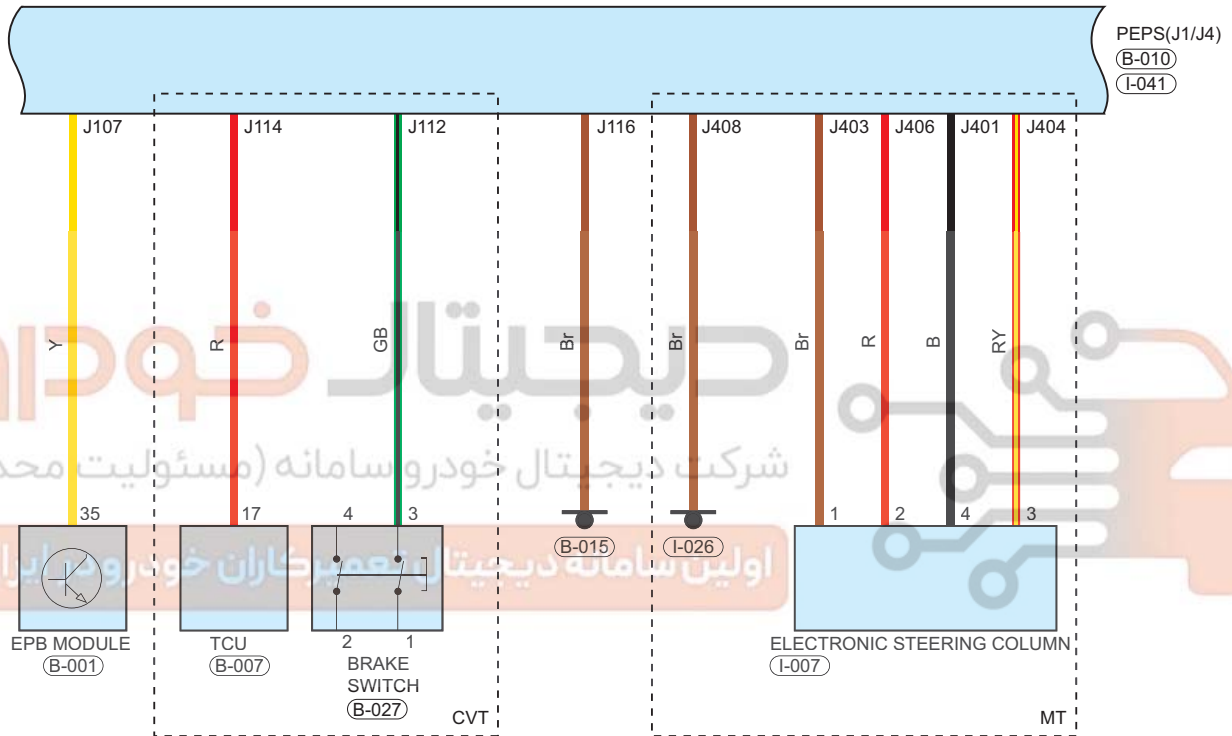

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-010	08-12	I-041	08-8	B-001	08-12
B-007	08-12	B-027	08-12	B-015	08-12
I-026	08-8	I-007	08-8		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-010	12-7	I-041	12-4	B-001	12-7
B-007	12-7	B-027	12-7	B-015	12-7
I-026	12-4	I-007	12-4		

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 4 of 4)

