


Starting System (JL4G18D)

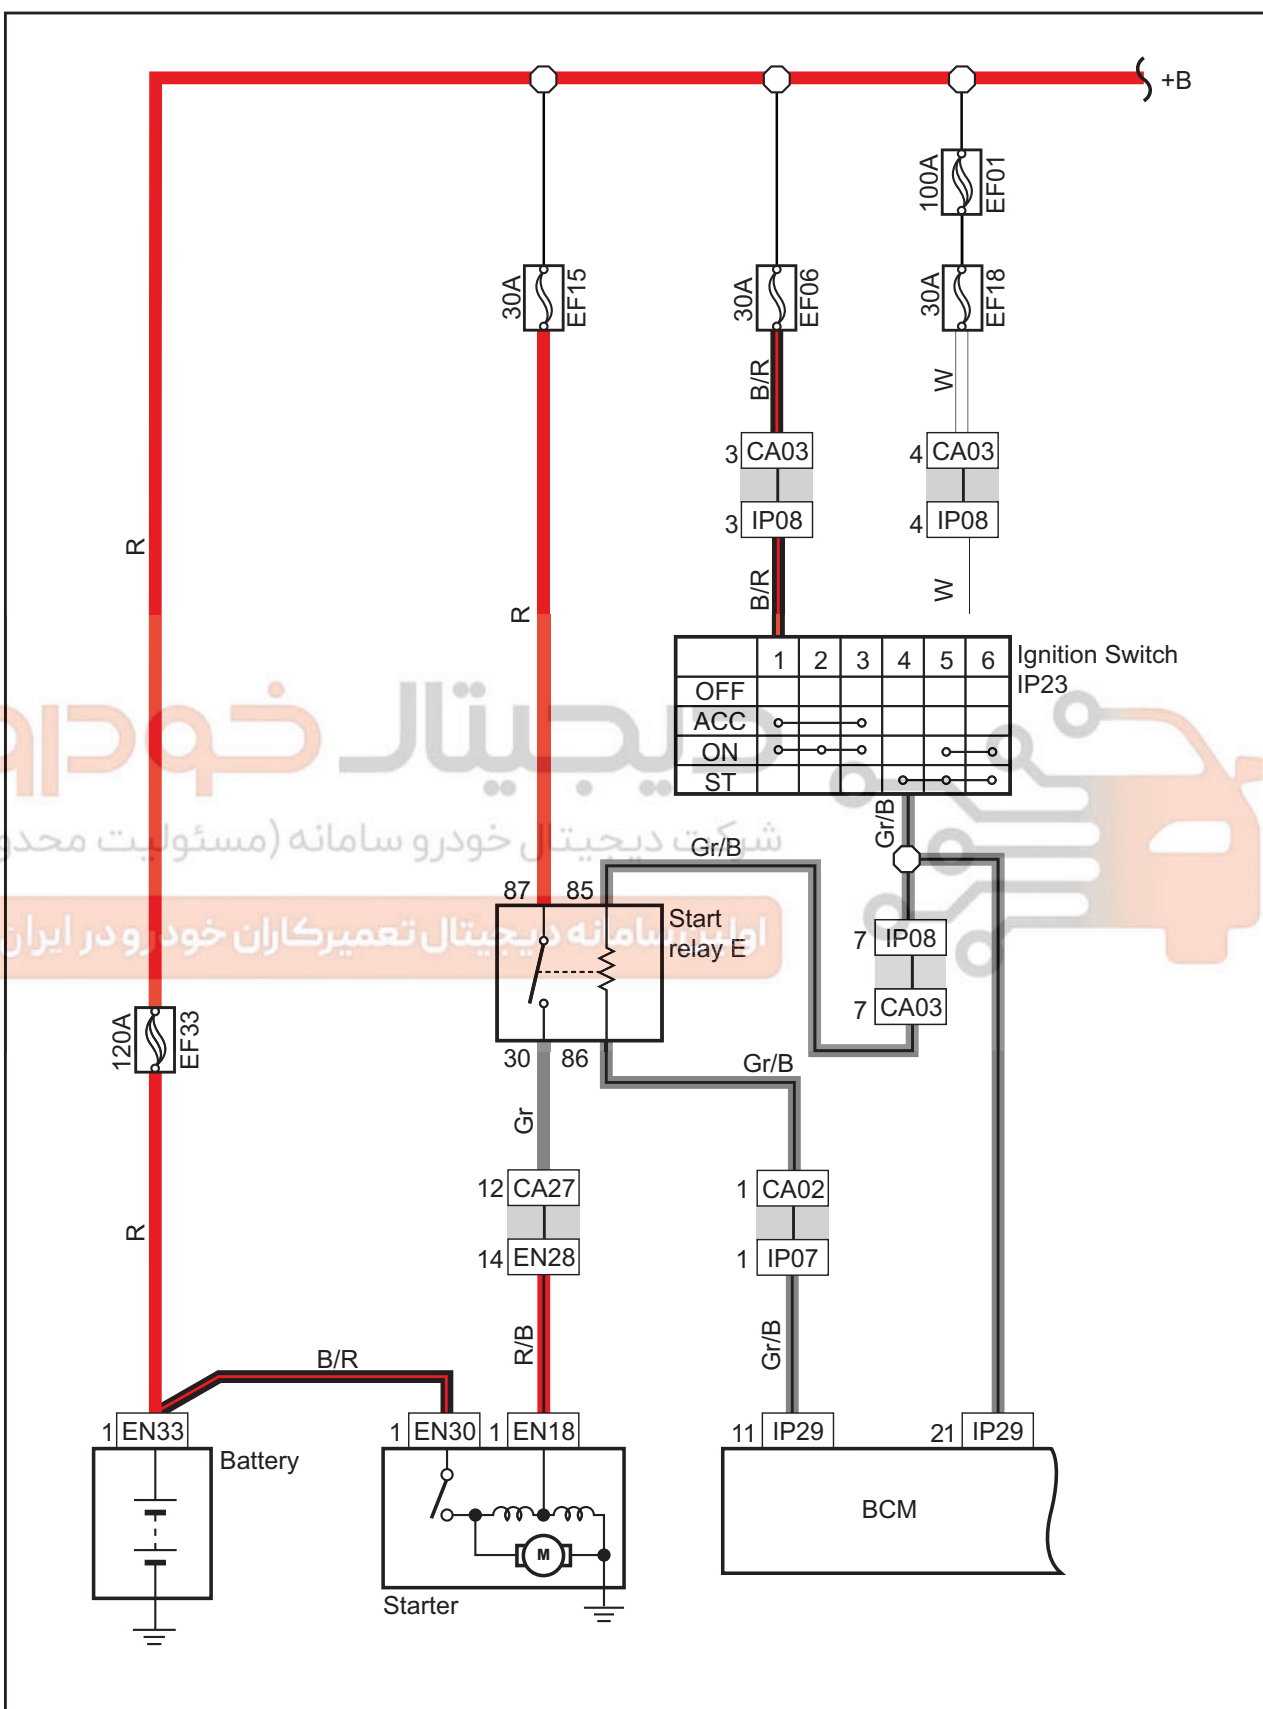

Harness connector	Name	Pages
CA02	To harness connector of instrument harness2	22
CA03	To harness connector of instrument harness3	22
CA27	To engine harness connector	23
EN18	Harness connector of starter	29
EN20	To harness connector of engine compartment distribution box	29
EN30	Starter solenoid switch	29
EN33	Battery connecting wire plate	29
IP07	To engine compartment harness connector	80
IP08	To engine compartment harness connector	80
IP29	Harness connector of body control module1	80

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

