


# Turn Signal Light

Circuit Diagram (Page 1 of 2)

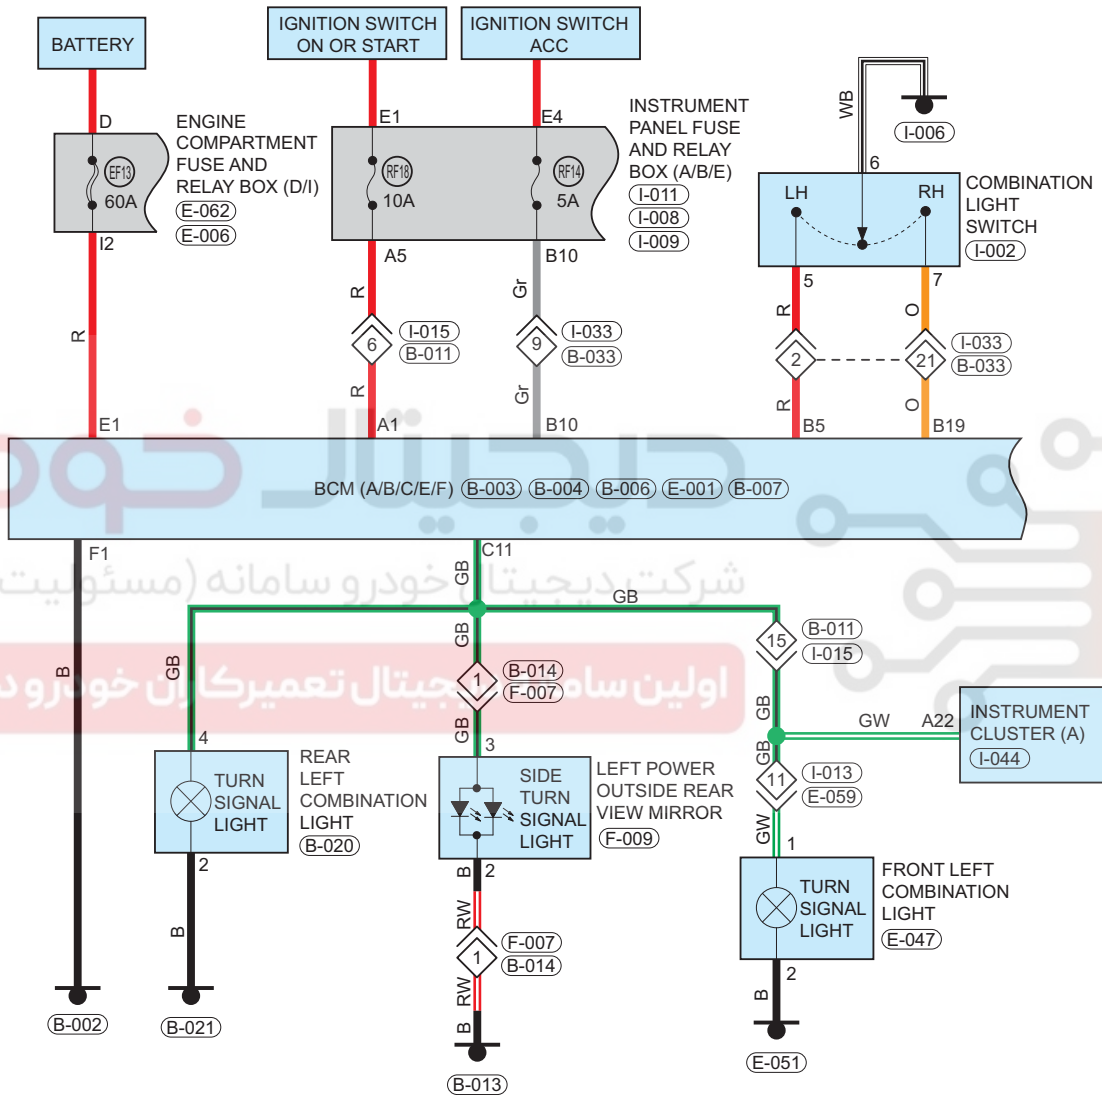

09

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-062	08-4 (MT)	E-006	08-4 (MT)	E-047	08-4 (MT)
	08-7 (CVT)		08-7 (CVT)		08-7 (CVT)
E-051	08-4 (MT)	E-001	08-4 (MT)	I-006	08-12
	08-7 (CVT)		08-7 (CVT)		
I-002	08-12	B-003	08-17	B-004	08-17
B-006	08-17	I-009	08-12	B-007	08-17
B-002	08-17	B-020	08-17	B-021	08-17
F-009	08-19	B-013	08-17	I-044	08-12
I-011	08-12	I-008	08-12		

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF13	06-5	Engine Compartment Fuse and Relay Box
RF14	06-12	Instrument Panel Fuse and Relay Box
RF18	06-12	Instrument Panel Fuse and Relay Box

## Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-015, B-011	08-12, 08-17	I-033, B-033	08-12, 08-17	B-014, F-007	08-17, 08-19
I-013, E-059	08-12, 08-4 (MT)				
	08-12, 08-7 (CVT)				

09

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-062	12-4	E-006	12-2	I-011	12-8
I-008	12-8	I-009	12-8	I-006	12-8
I-002	12-8	B-003	12-12	B-004	12-12
B-006	12-12	E-001	12-2	B-007	12-12
B-002	12-12	B-020	12-14	B-021	12-14
F-009	12-16	B-013	12-13	I-044	12-10
E-047	12-4	E-051	12-4	I-015, B-011	12-9
I-033, B-033	12-10	B-014, F-007	12-13	I-013, E-059	12-8

Circuit Diagram (Page 2 of 2)

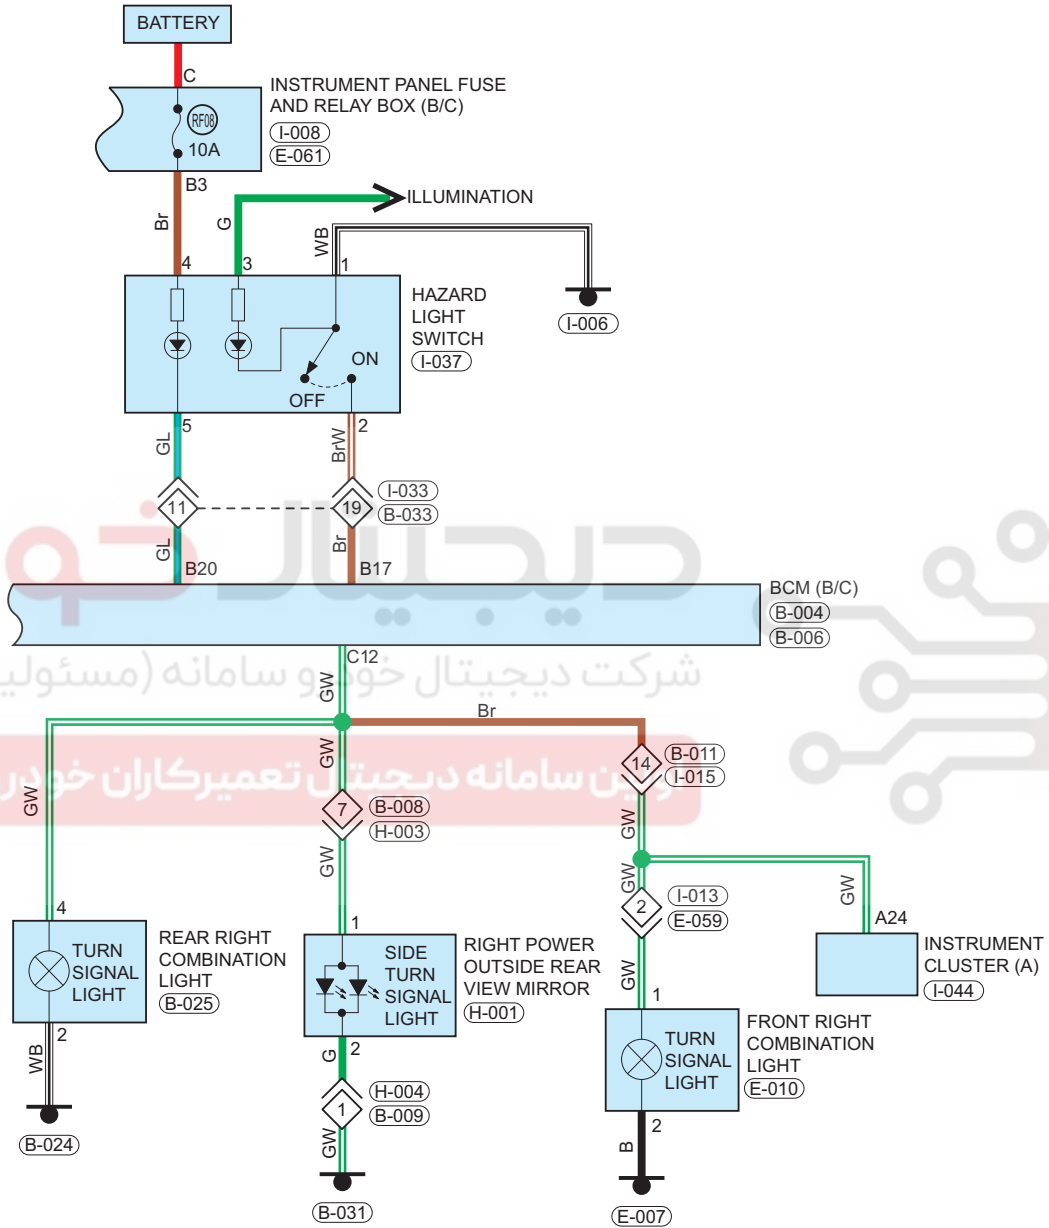

دیجیتال خودرو  
 شرکت دیجیتال خودرو و سامانه (مسئولیت محدود)  
 نمایندگی سامانه دیجیتال تعمیرکاران خودرو در ایران



09

ET11090450