


NL13-08126

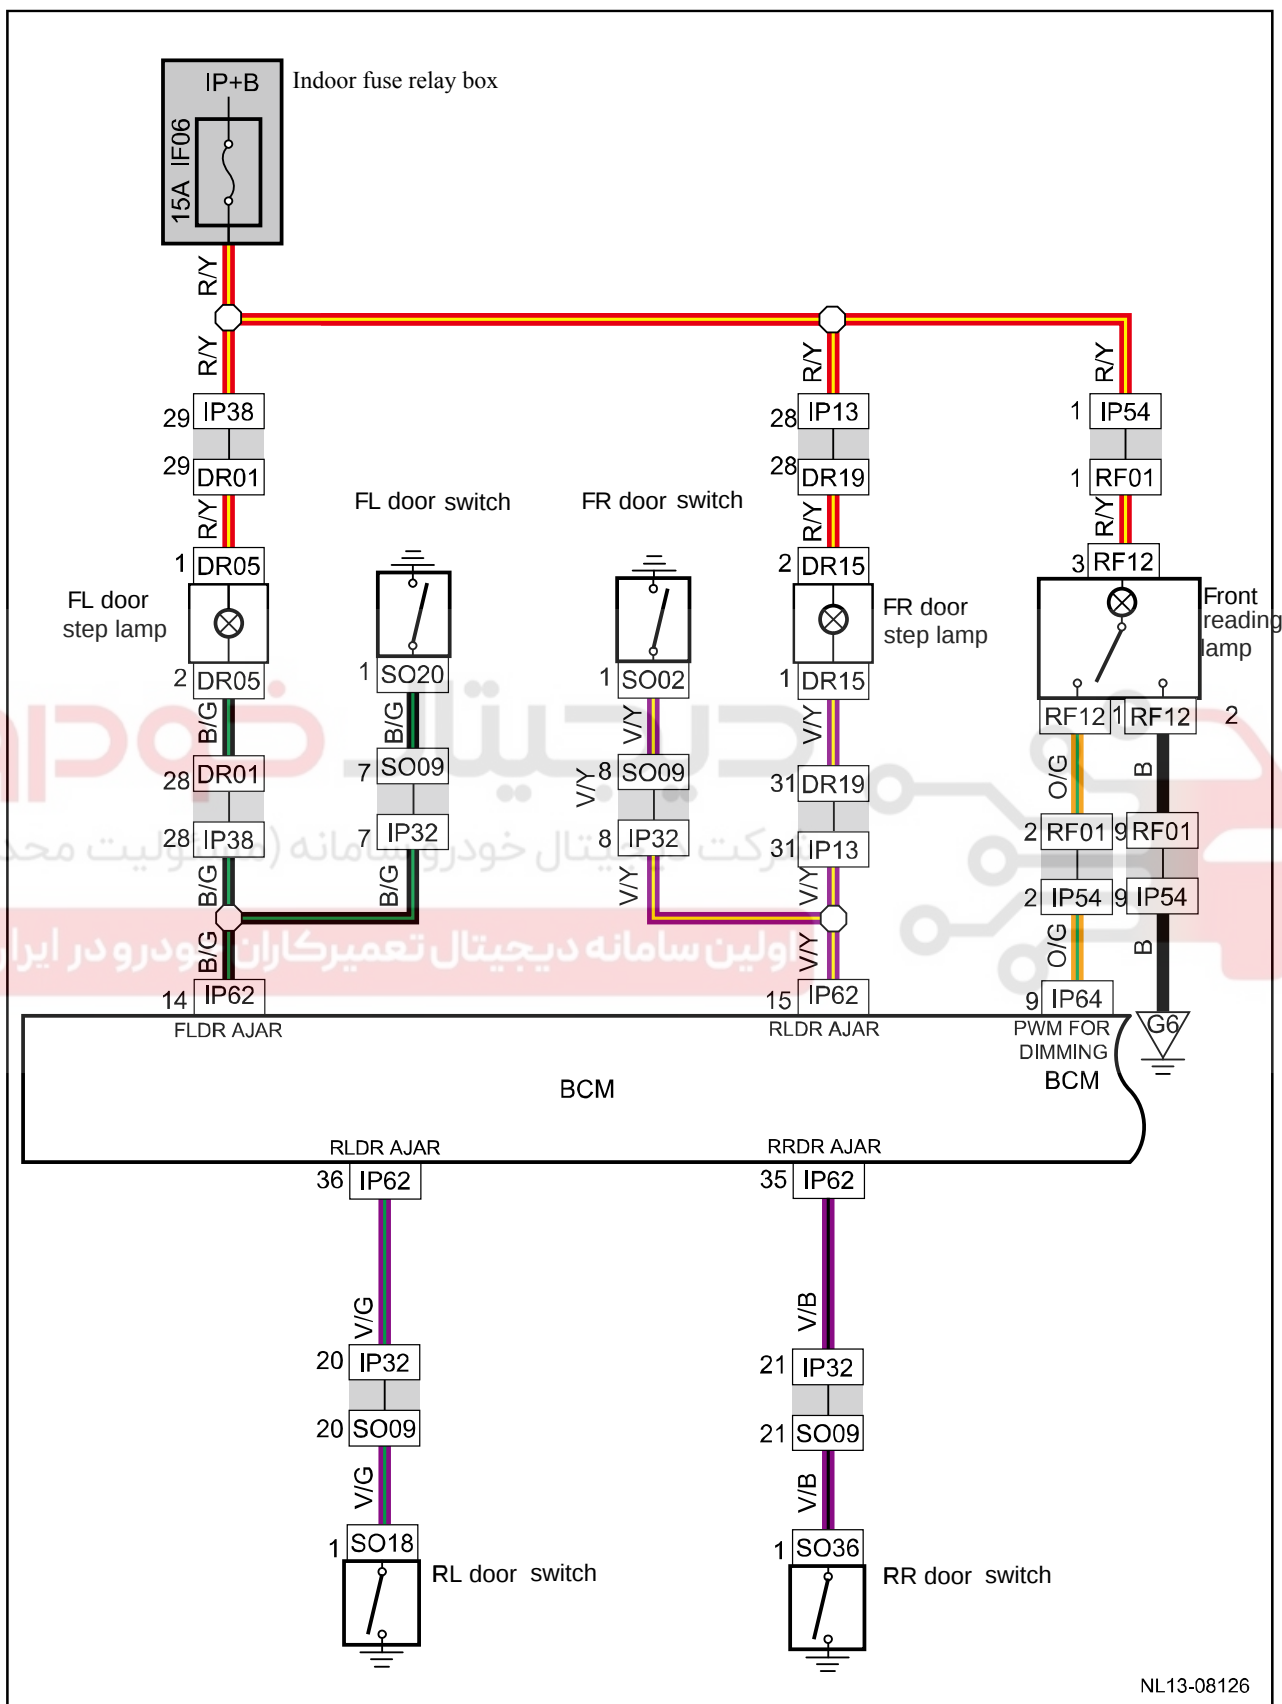

Harness connector	Description	Pages
IP13	To FR door harness connector	40
IP32	To body harness connector 1	40
IP38	To FL door harness connector	40
IP62	Body control module harness connector 2	41
IP64	Body control module harness connector 4	41
IP54	To roof harness connector 1	40
DR01	FL door connecting to instrument panel harness connector	58
DR05	FL door step lamp connector	58
DR15	FR door step lamp connector	60
DR19	FR door connecting to instrument panel harness connector	60
RF01	To instrument harness connector 1	47
RF12	Harness connector of front reading lamp	47
SO02	Harness connector of right front door control switch	50
SO09	To instrument panel harness connector 2	50
SO16	To RL door harness connector 1	50
SO18	Harness connector of RL door switch	50
SO20	Harness connector of FL door switch	50
SO36	RR door contact switch	50
G6	Instrument panel grounding	70