



| | | |
|--------------------------|--|-----|
| Reversing system-2 | | E-2 |
| Component location index | | |
| Component code | Component name | |
| F21 | Reversing radar controller | |
| F25 | Left reversing radar sensor | |
| F26 | Right reversing radar sensor | |
| F28 | Rear left reversing light | |
| F31 | Rear right reversing light | |
| A25 | Reversing light switch | |
| Connector | | |
| PEE | Harness connector E of indoor electrical box and engine | |
| PFB | Harness connector B of indoor electrical box and body | |
| EC2 | Connector 2 of engine control harness and engine harness | |
| MF1 | Connector 1 of main harness and body harness | |
| GND | | |
| F45 | | |
| F42 | | |
| F14 | | |