



Center Control Lock 1

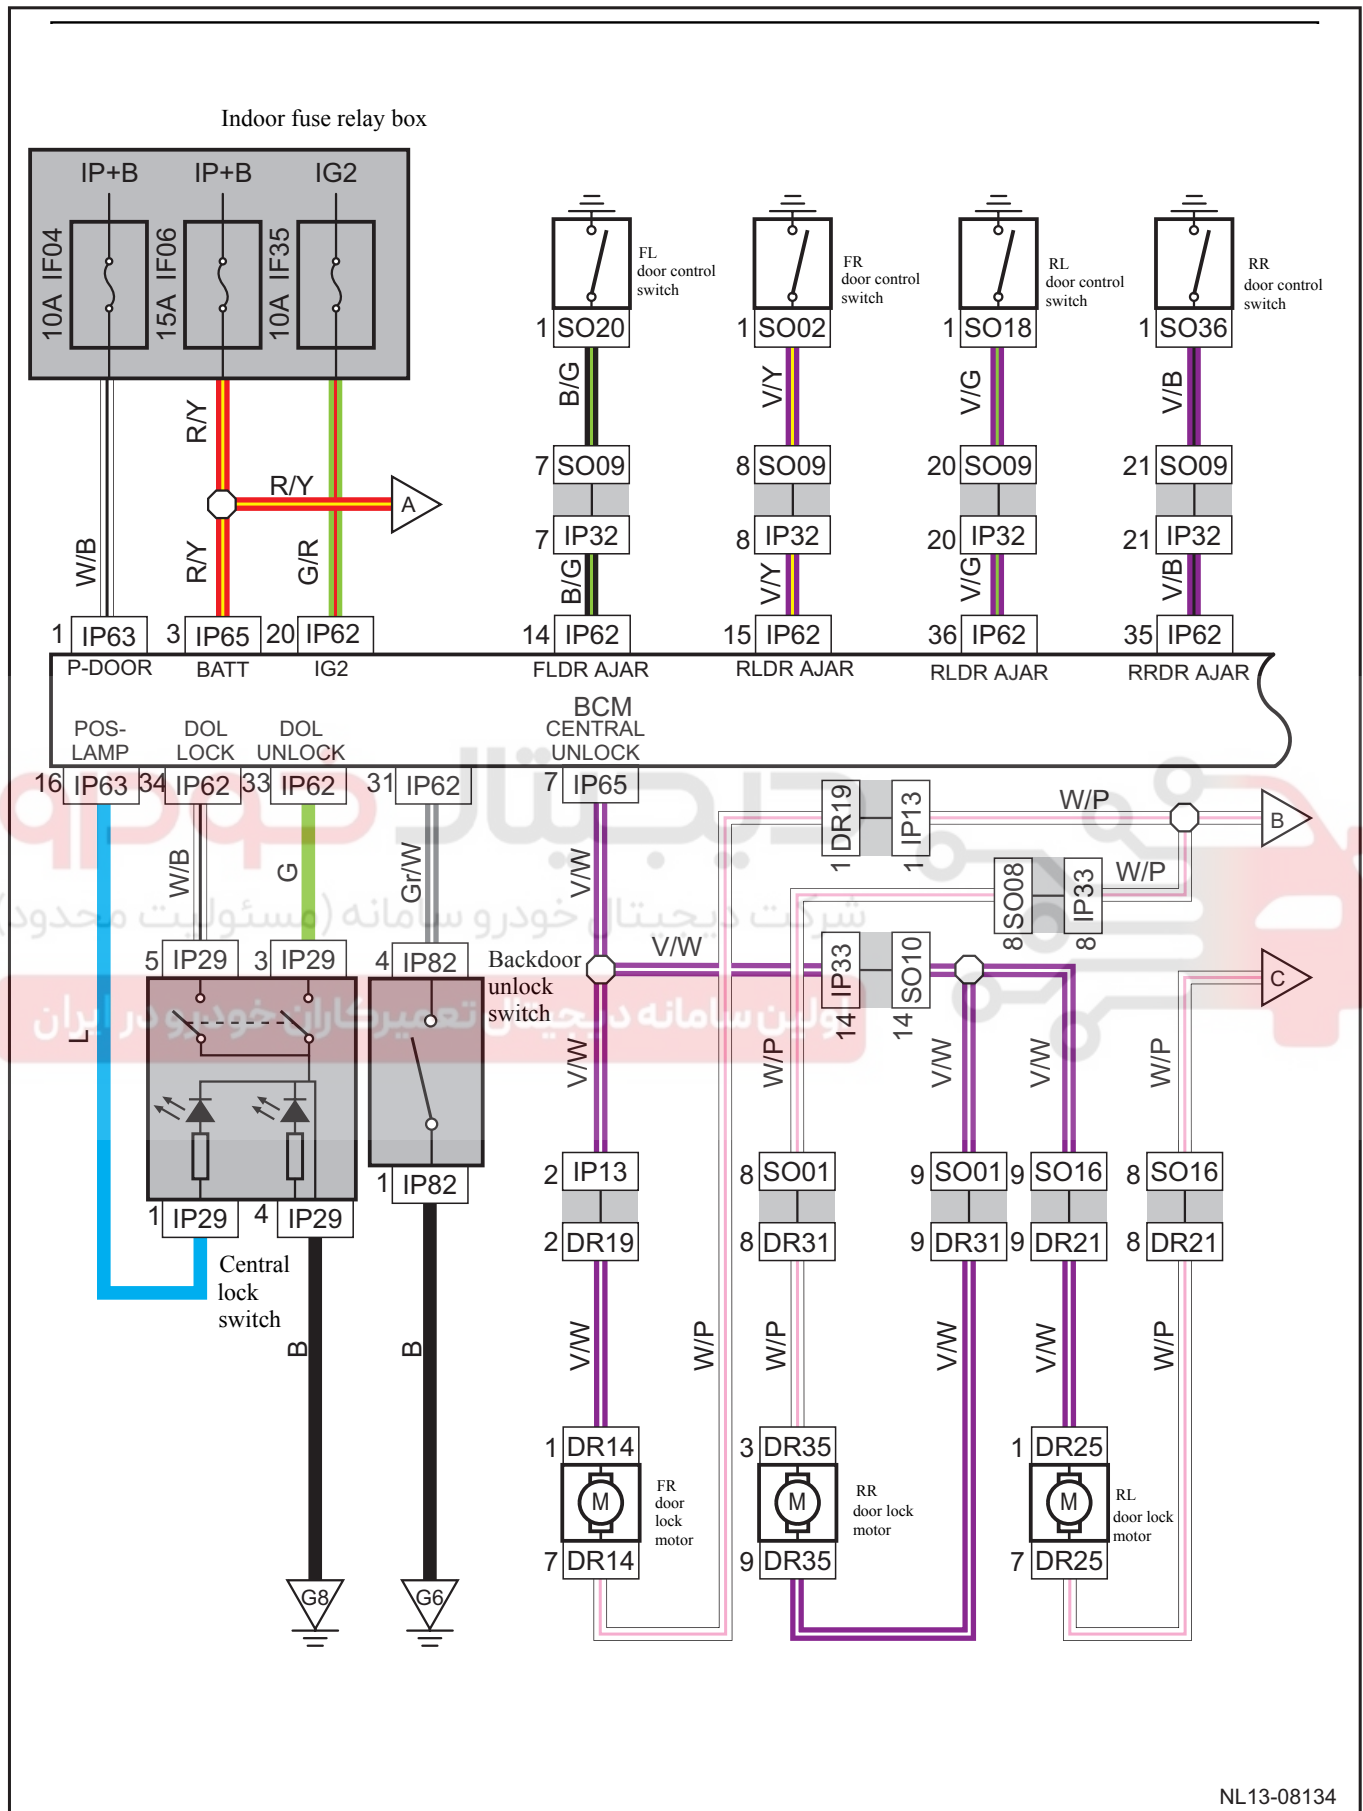

Center Control Lock 2

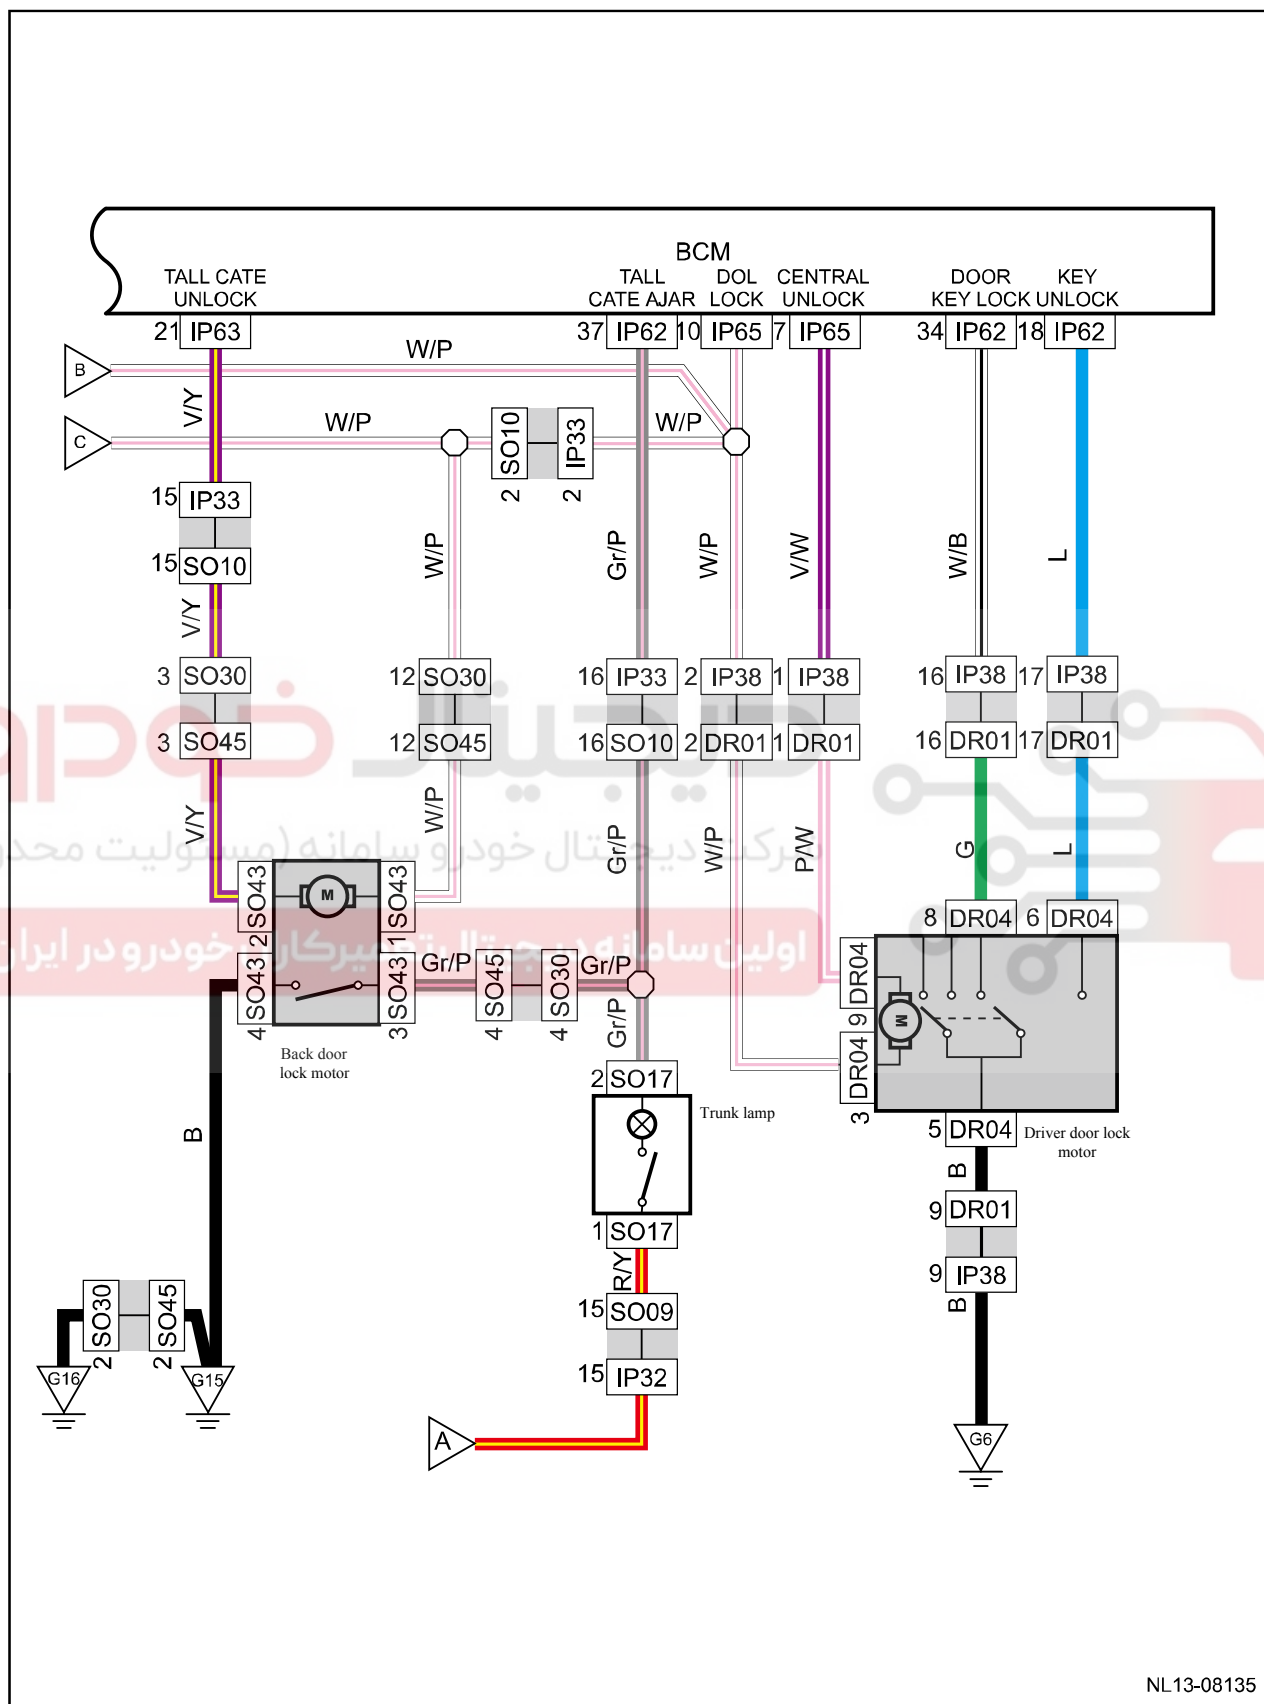

Harness connector	Description	Pages
DR01	To instrument panel harness connector	58
DR04	Harness connector of FL door lock motor	58
DR14	Harness connector of FR door lock motor	60
DR19	Right front door connecting to instrument panel harness connector	60
DR21	Left rear door connecting to body harness connector	62
DR25	Harness connector of RL door lock motor	62
DR31	Right rear door connecting to body harness connector	62
DR35	Harness connector of RR door lock motor	62
IP13	To FR door harness connector	40
IP29	Central door locking switch connector	40
IP32	To body harness connector 1	40
IP33	To body harness connector 2	40
IP38	To FL door harness connector	40
IP62	Body control module harness connector 2	41
IP63	Body control module harness connector 3	40
IP65	Body control module harness connector 5	41
SO01	To RR door harness connector 1	50
SO02	Harness connector of FR door control switch	50
SO09	To instrument panel harness connector 2	50
SO10	To instrument panel harness connector 3	50
SO17	Harness connector of trunk lamp	50
SO18	Harness connector of RL door control switch	50
SO20	Harness connector of FL door control switch	50
SO30	To back door harness connector	50
SO36	Harness connector of RR door control switch	50
SO43	Harness connector of back door lock motor	51
SO45	To body harness connector	51
G6	Instrument panel grounding	70
G8	Instrument panel grounding	70
G15	Back door harness grounding	72
G16	Body harness grounding	71