


Position Lamp

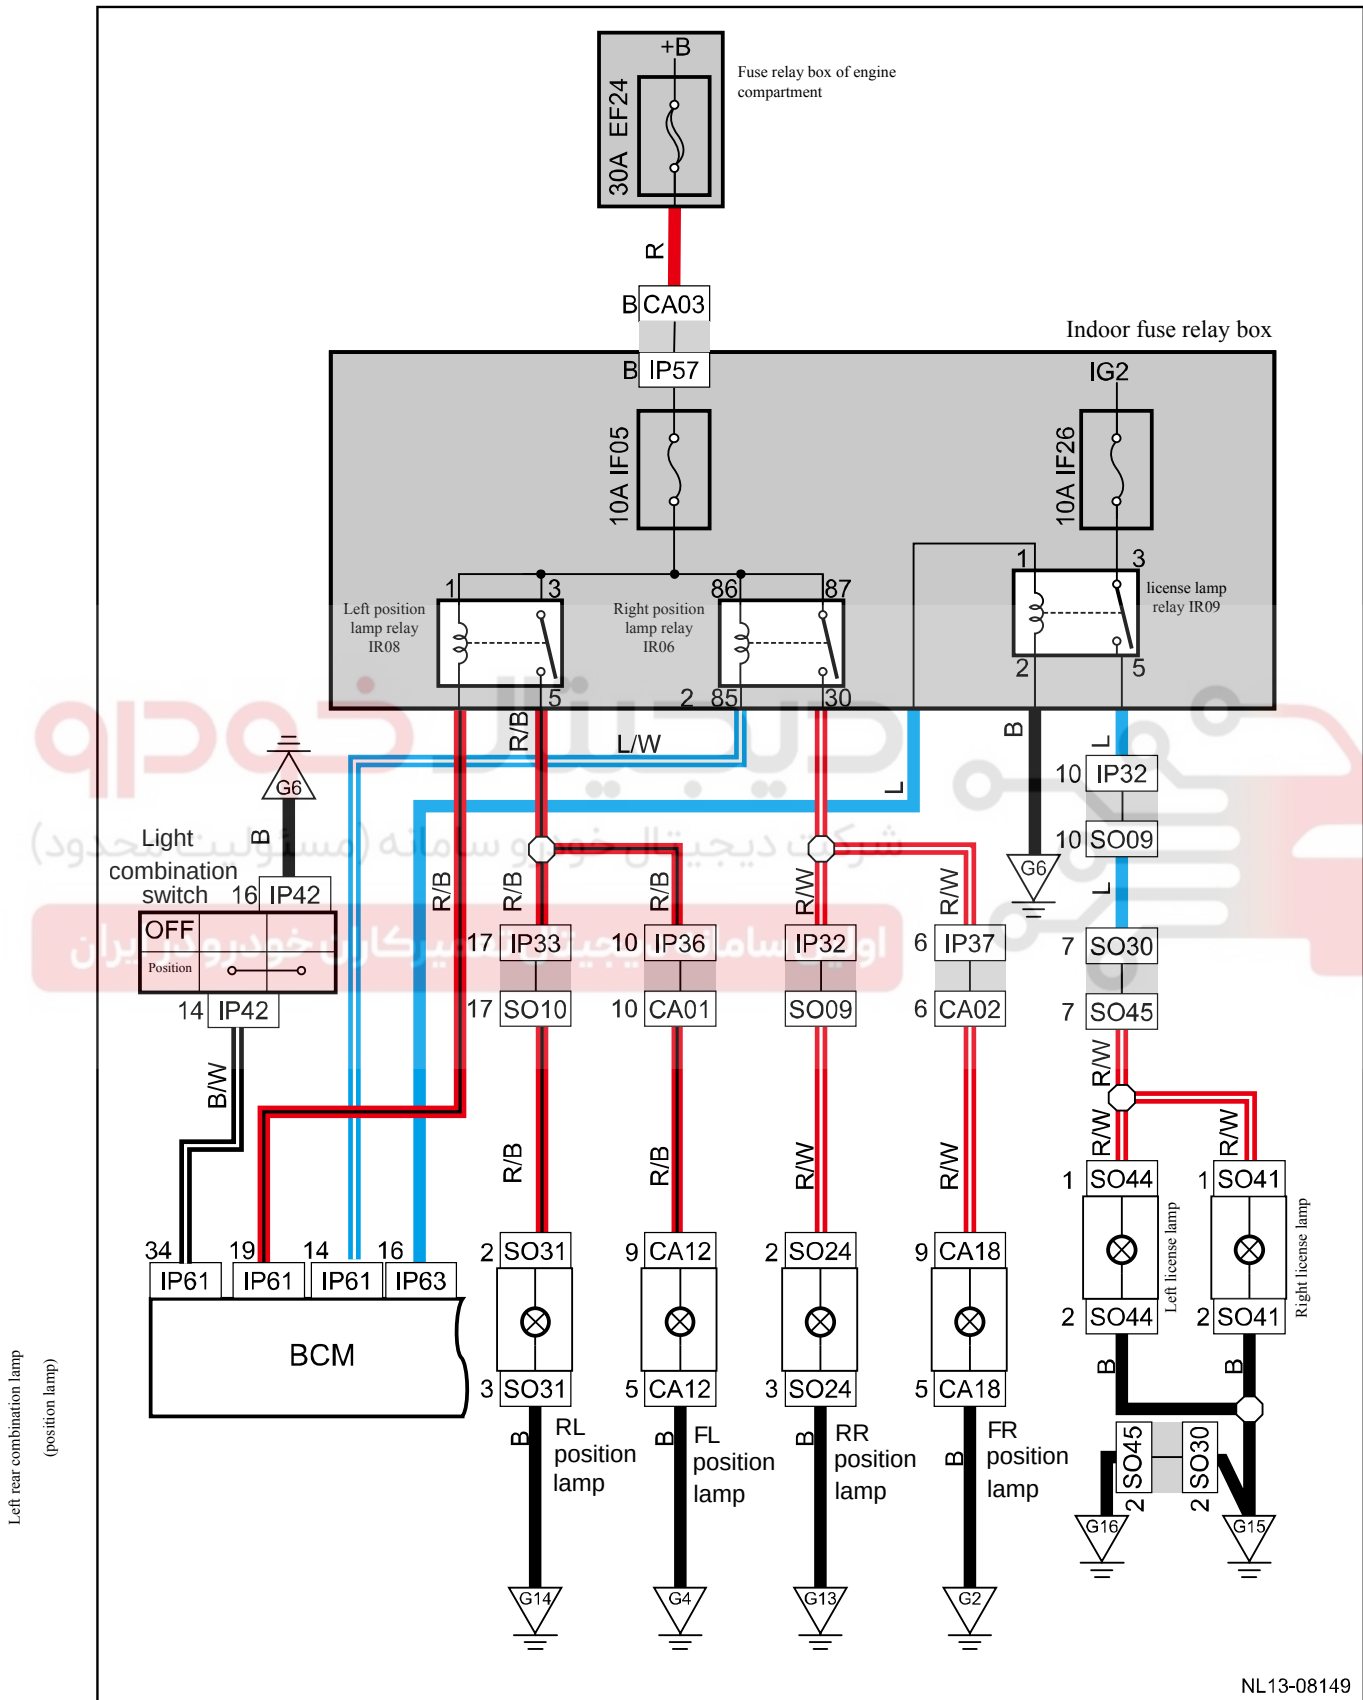

Harness connector	Description	Pages
CA01	To instrument harness connector 1	29
CA02	To instrument harness connector 2	29
CA03	To instrument harness connector 3	29
CA12	Harness connector of FL combination headlamp	28
CA18	Harness connector of FR combination headlamp	28
IP32	To body harness connector 1	40
IP33	To body harness connector 2	40
IP36	To engine compartment harness connector 2	40
IP37	To engine compartment harness connector 3	40
IP42	Harness connector of lighting combination switch	41
IP45	Harness connector of ignition switch	40
IP61	Body control module harness connector 1	41
IP63	Body control module harness connector 3	40
IP57	To engine compartment harness connector	40
SO09	To instrument panel harness connector 2	50
SO10	To instrument panel harness connector 3	50
SO24	Harness connector of RR combination lamp	50
SO31	Harness connector of RL combination lamp	50
SO41	Harness connector of right license lamp	51
SO44	Harness connector of left license lamp	51
G2	Engine compartment grounding	67
G4	Engine compartment grounding	67
G6	Instrument panel grounding	70
G13	Body harness grounding	71
G14	Body harness grounding	71
G15	Back door grounding	72
G16	Body harness grounding	71