


Passive Entry & Passive Start (PEPS) System

Circuit Diagram (Page 1 of 3)

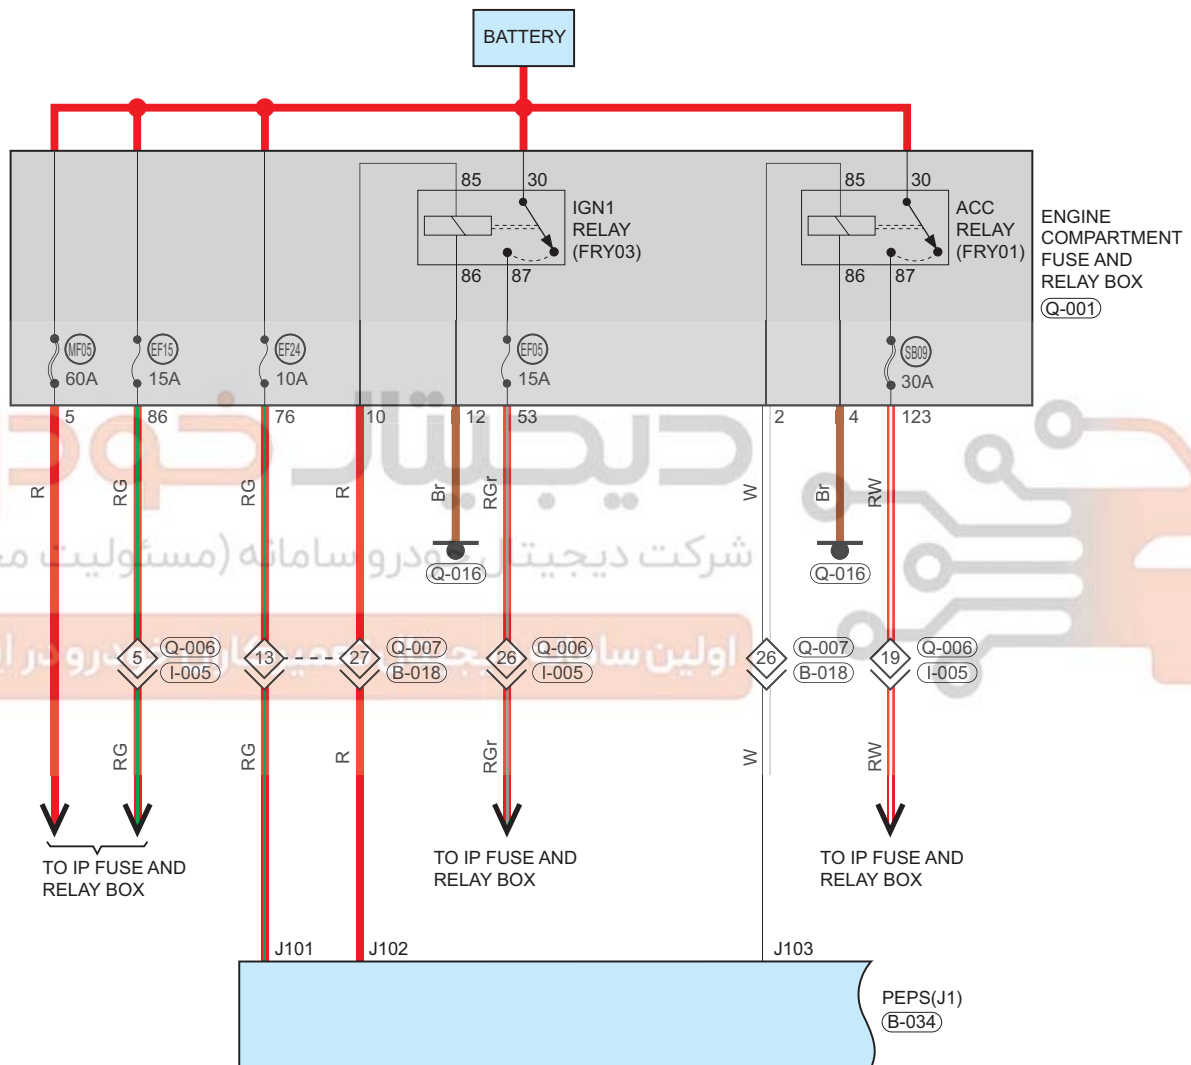

09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-6	Q-016	08-6	B-034	08-16

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
MF05	06-2	Engine Compartment Fuse and Relay Box
EF15	06-2	Engine Compartment Fuse and Relay Box
EF24	06-2	Engine Compartment Fuse and Relay Box
EF05	06-2	Engine Compartment Fuse and Relay Box
SB09	06-2	Engine Compartment Fuse and Relay Box
IGN1 Relay (FRY03)	06-2	Engine Compartment Fuse and Relay Box
ACC Relay (FRY01)	06-2	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-006, I-005	08-6	Q-007, B-018	08-6		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-16	Q-016	12-16	B-034	12-8
Q-006, I-005	12-16	Q-007, B-018	12-16		

Circuit Diagram (Page 2 of 3)

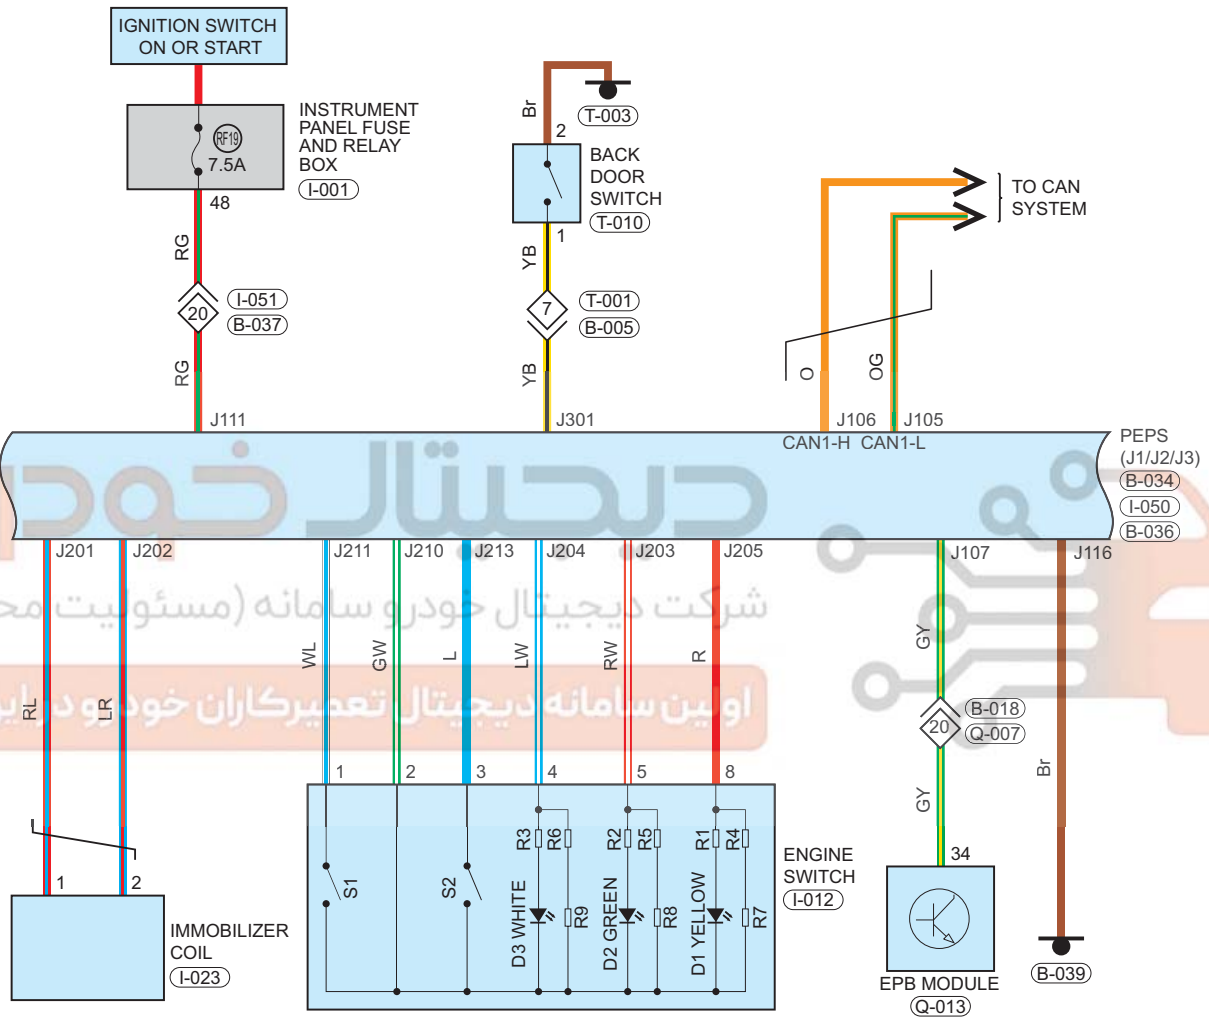

PEE002001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	08-12	I-050	08-12	I-023	08-12
I-012	08-12	B-034	08-16	B-036	08-16
B-039	08-16	Q-013	08-6	T-010	08-29
T-003	08-29				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF19	06-8	Instrument Panel Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-051, B-037	08-12	B-018, Q-007	08-16	B-005, T-001	08-16

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-001	12-4	I-050	12-4	I-023	12-4
I-012	12-4	B-034	12-8	B-036	12-8
B-039	12-8	Q-013	12-16	T-010	12-15
T-003	12-15	I-051, B-037	12-4	B-018, Q-007	12-8
B-005, T-001	12-8				

Circuit Diagram (Page 3 of 3)

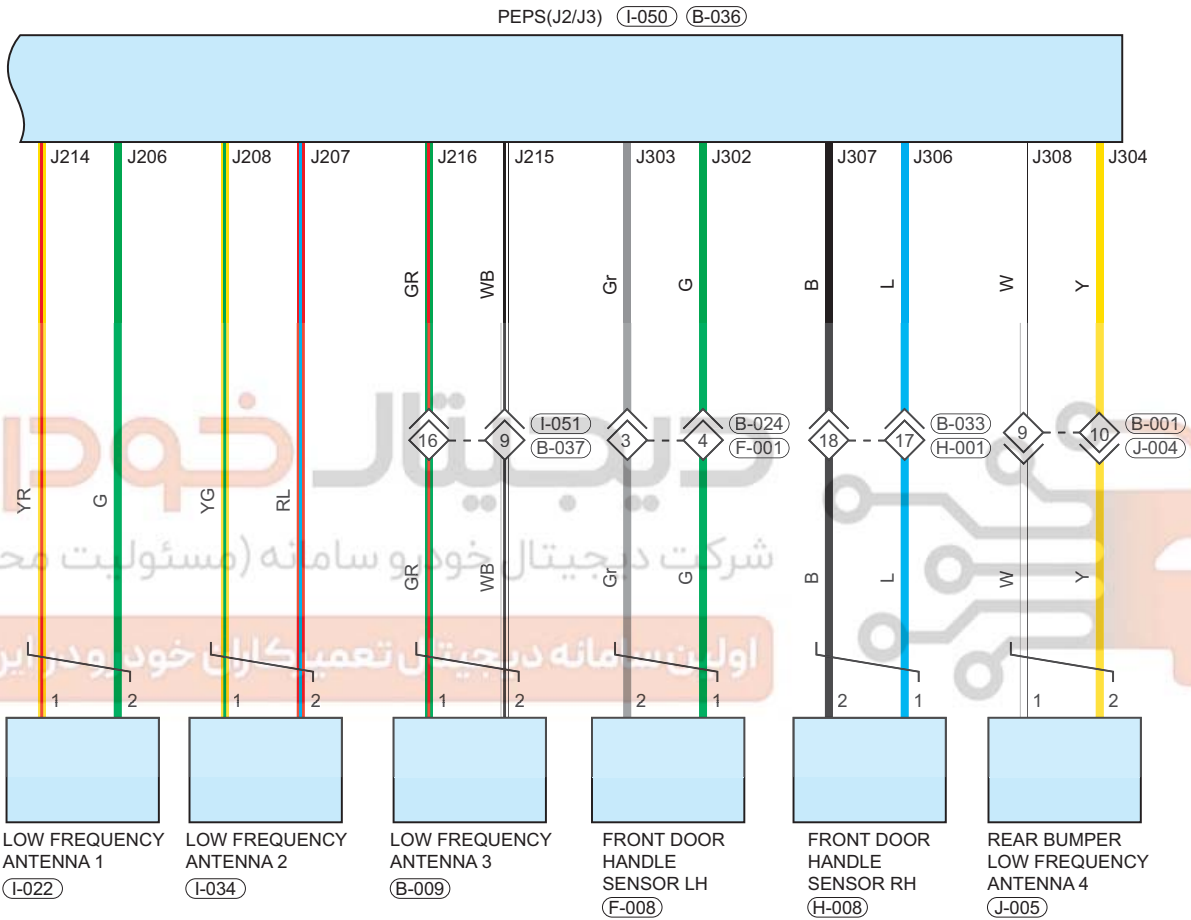

09

PEE003001