





Circuit Diagram

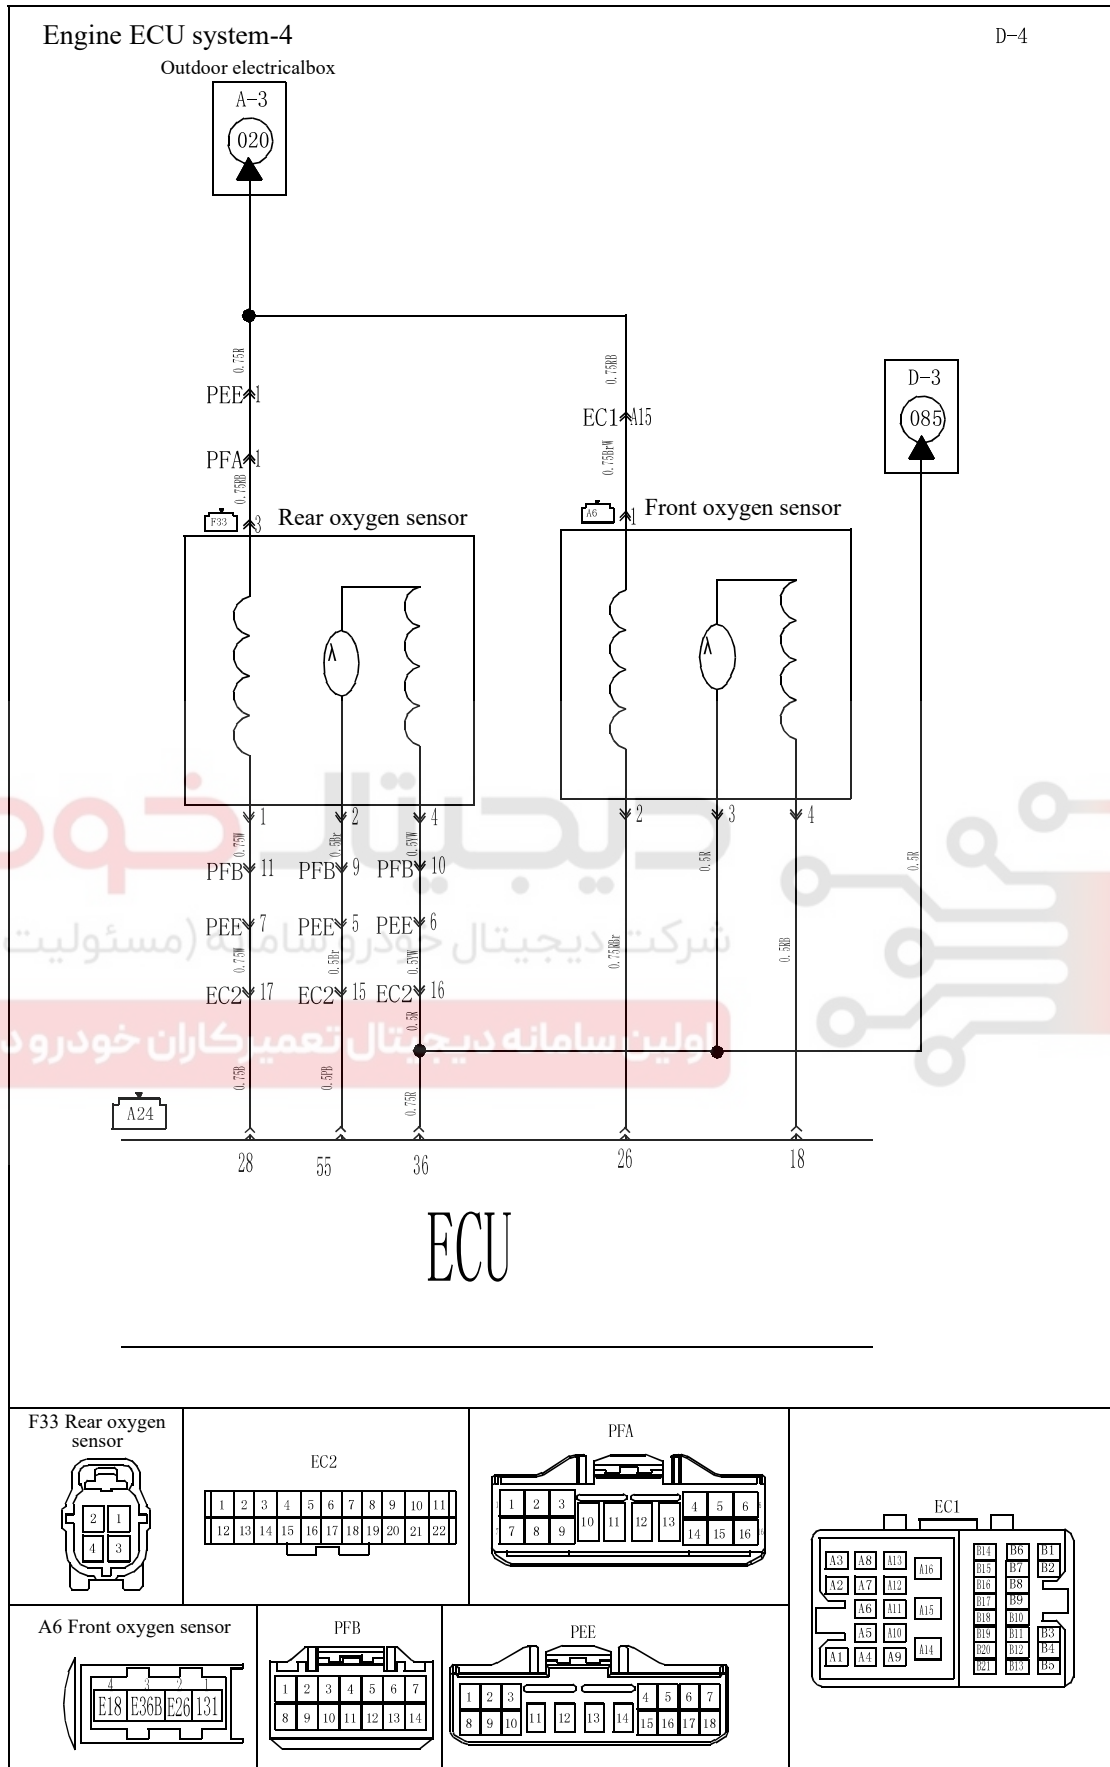



Circuit Diagram

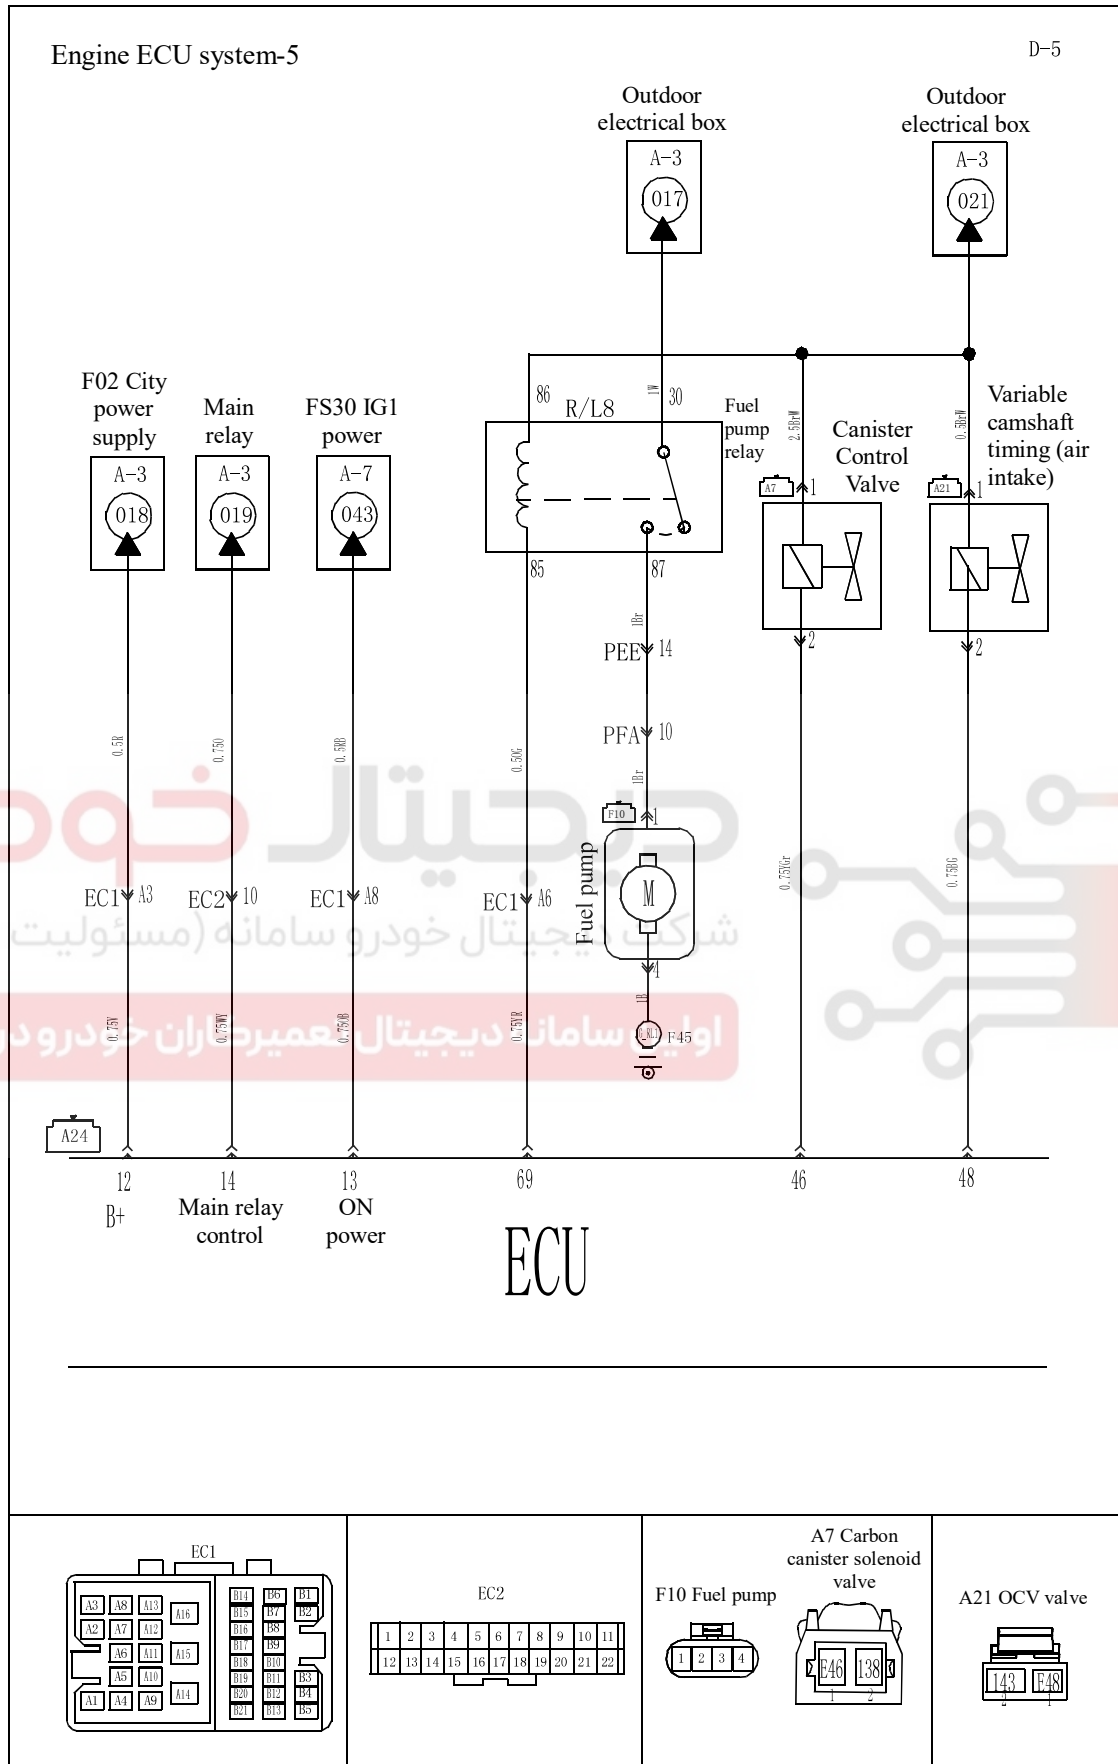

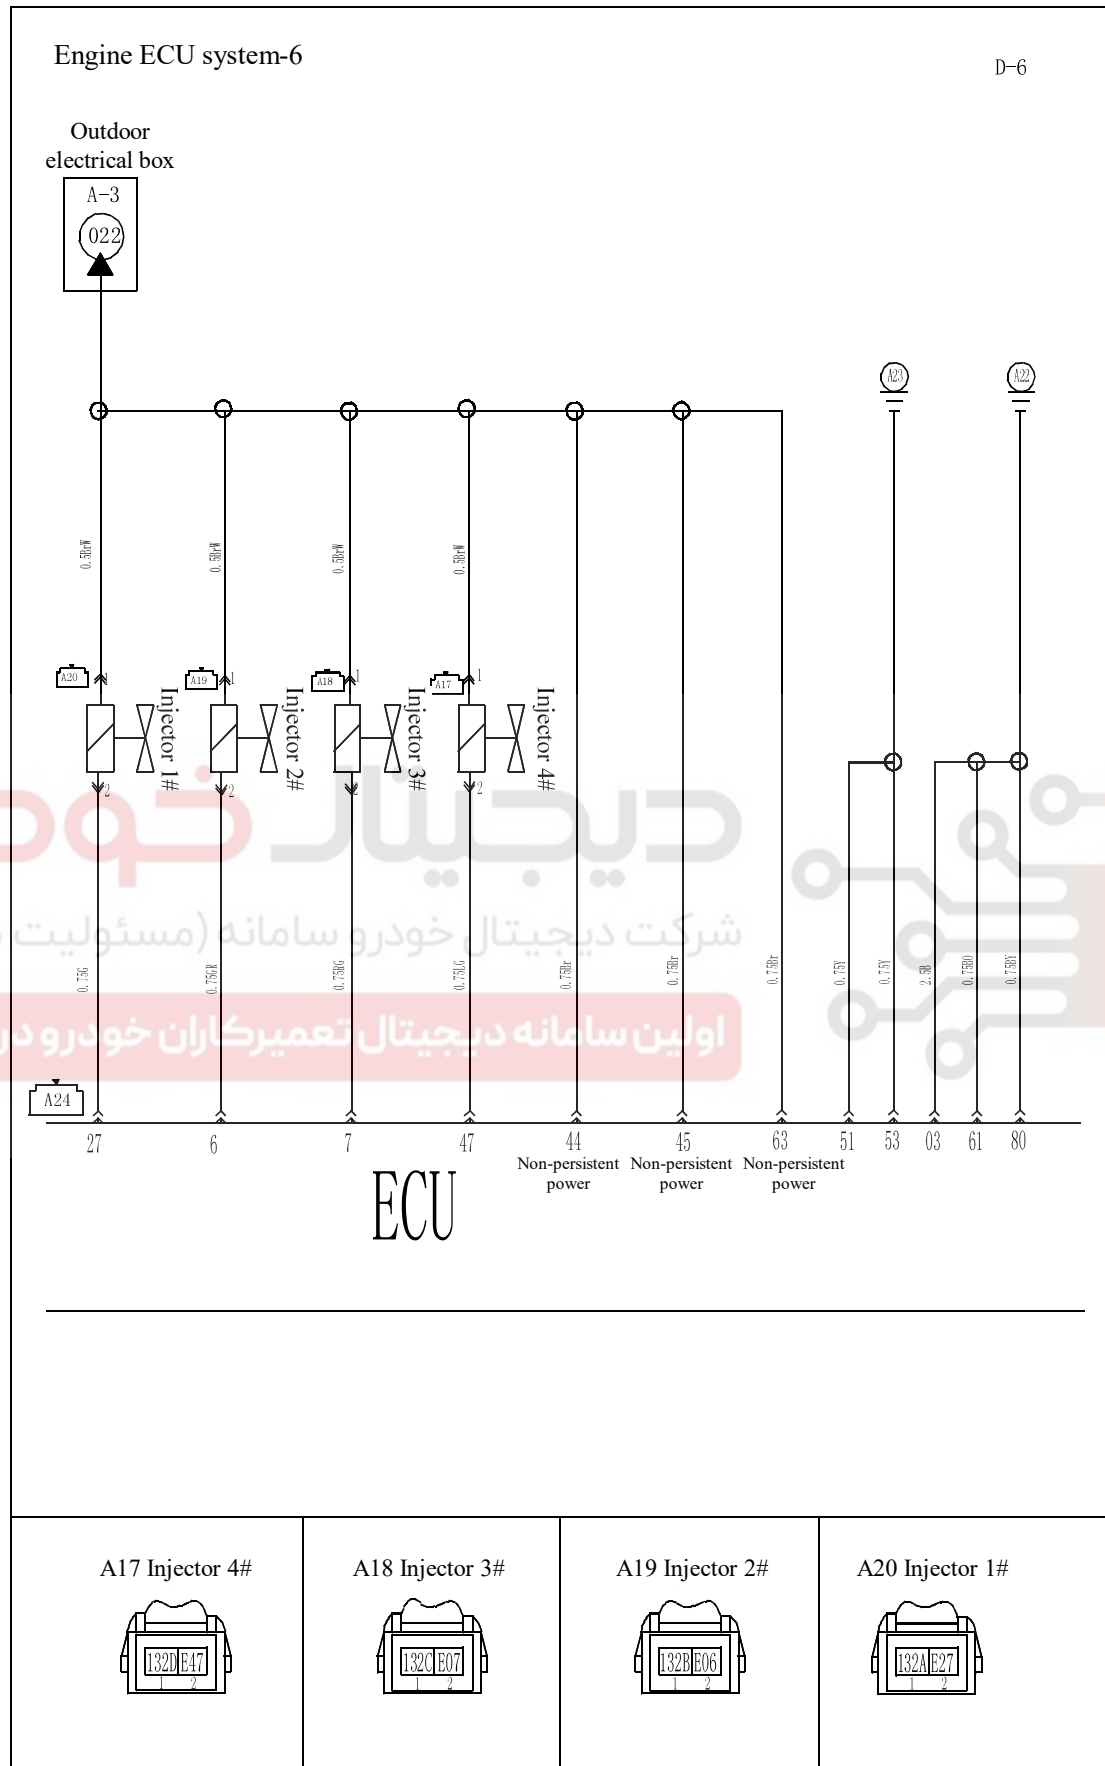


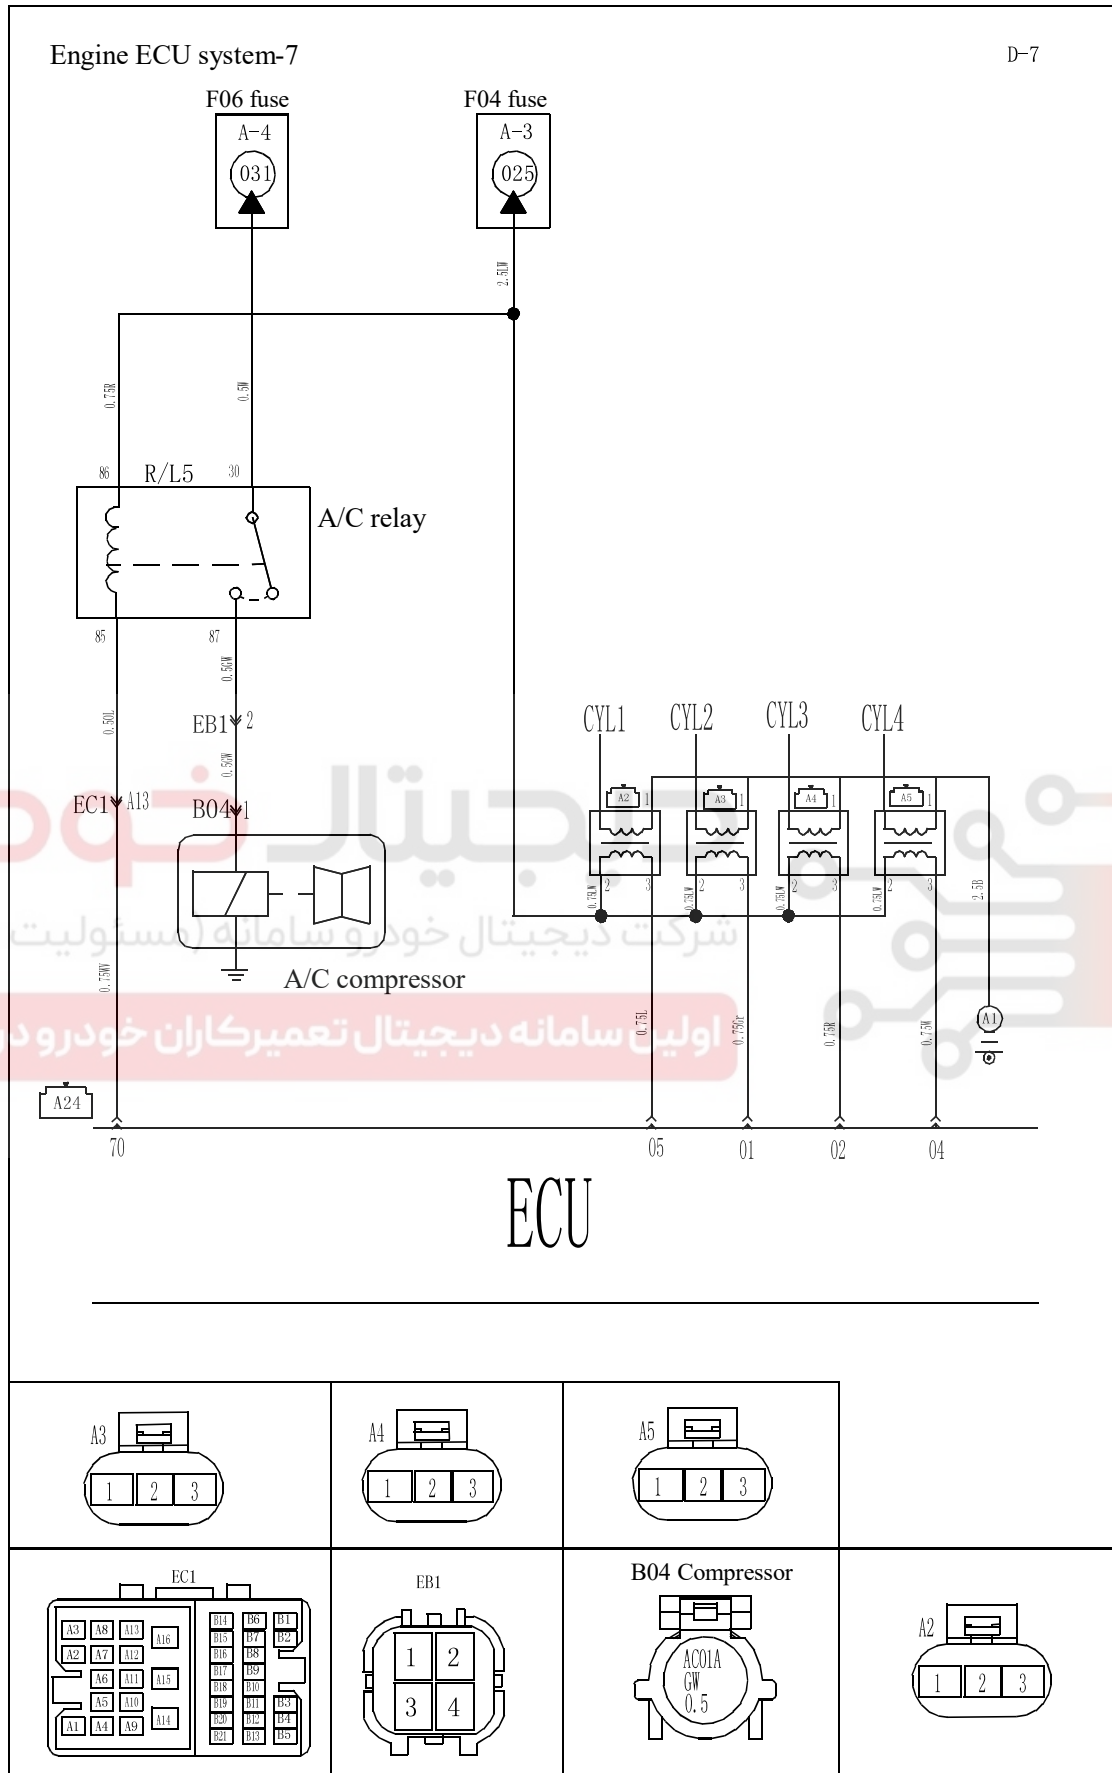

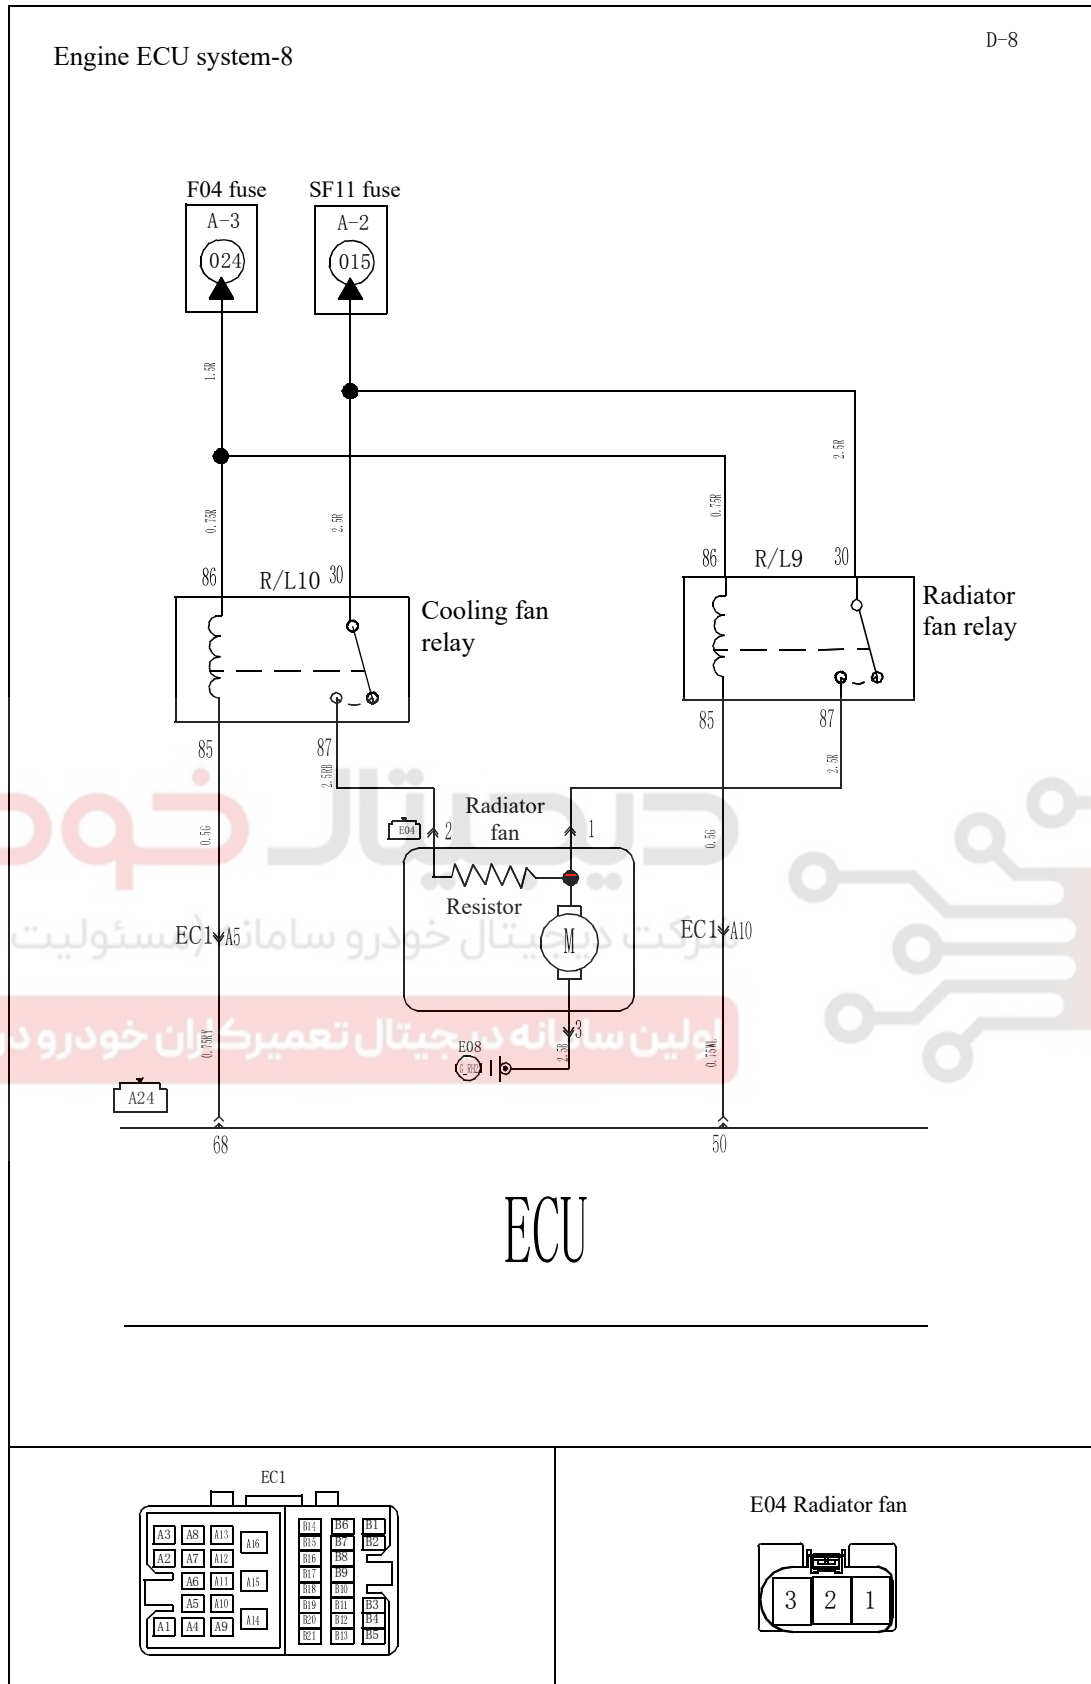

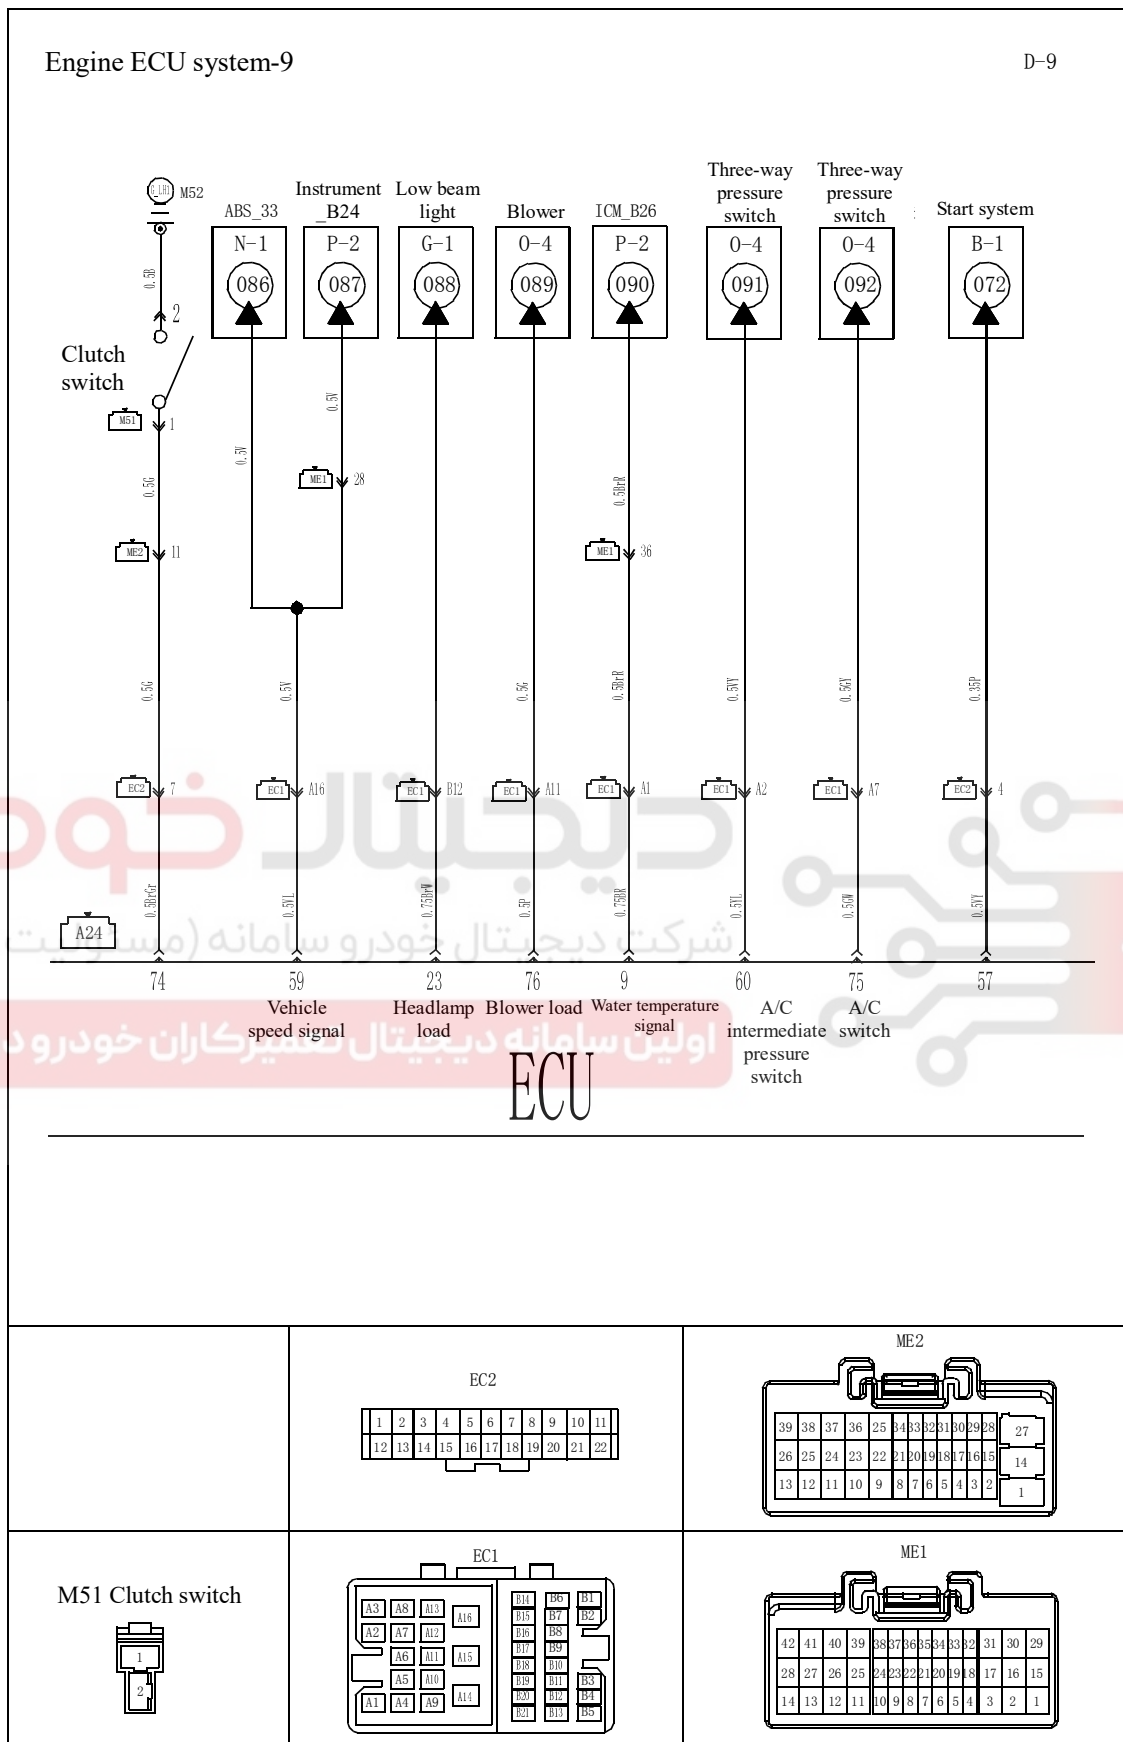

Circuit Diagram

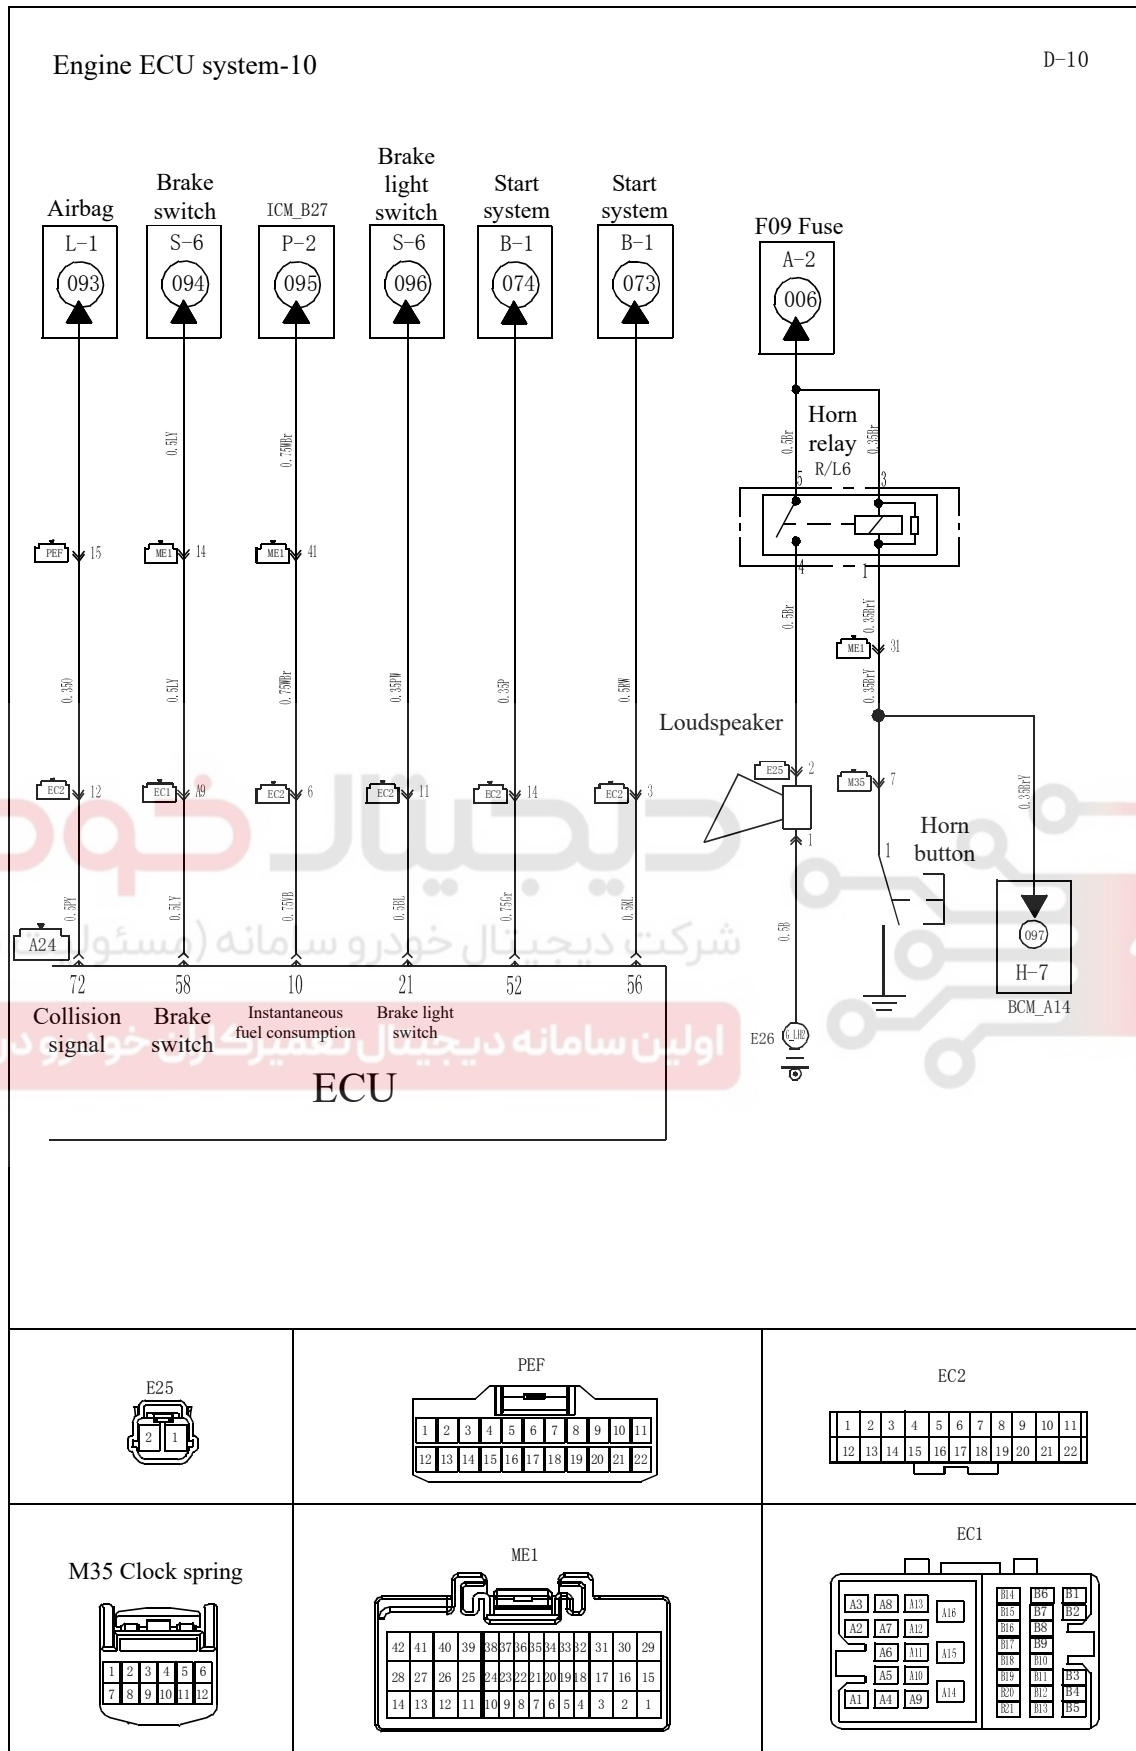

Engine ECU system-11		D-11
Component location index		
Component code	Component name	
A2	IGN coil 1	
A3	IGN coil 2	
A4	IGN coil 3	
A5	IGN coil 4	
A6	Front oxygen sensor	
A7	Carbon canister solenoid valve	
A8	Water temperature sensor	
A11	Intake air temp pressure sensor	
A13	Speed sensor	
A14	Electronic throttle valve body	
A15	Knock sensor	
A16	Phase sensor	
A17	Injector nozzle 4	
A18	Injector nozzle 3	
A19	Injector nozzle 2	
A20	Injector nozzle 1	
A21	OCV valve	
A24	Engine ECU	
M19	Accelerator pedal	
F33	Rear oxygen sensor	
M19	Accelerator pedal	
F10	Fuel pump	
E04	Radiator switch	
M51	Clutch switch	
E25	Loudspeaker	
M35	Clock spring	
B04	Compressor	
Connector		
EC1	PFB	ME1
EC2	PEE	ME2
PFA	EB1	PEF
Ground wire		
M52	A1	
F45	A22	
E08	A23	
E26		