


Instrument Panel Fuse and Relay Box A

Location of Instrument Panel Fuse and Relay Box A

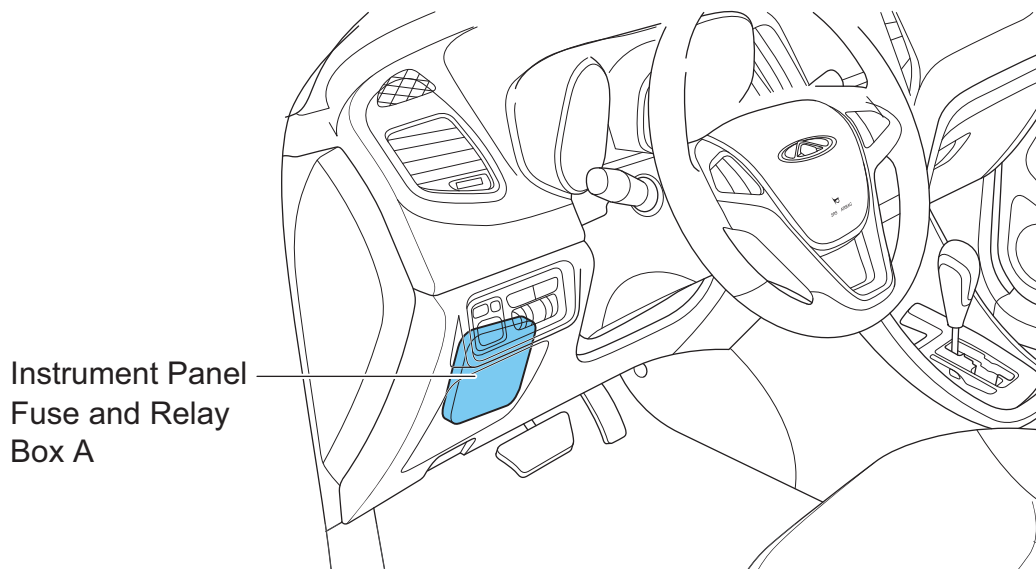


ET21060040

Fuse and Relay Layout in Instrument Panel Fuse and Relay Box A

شرکت دیجیتال خودرو (مسئولیت محدود)

خودرو در ایران

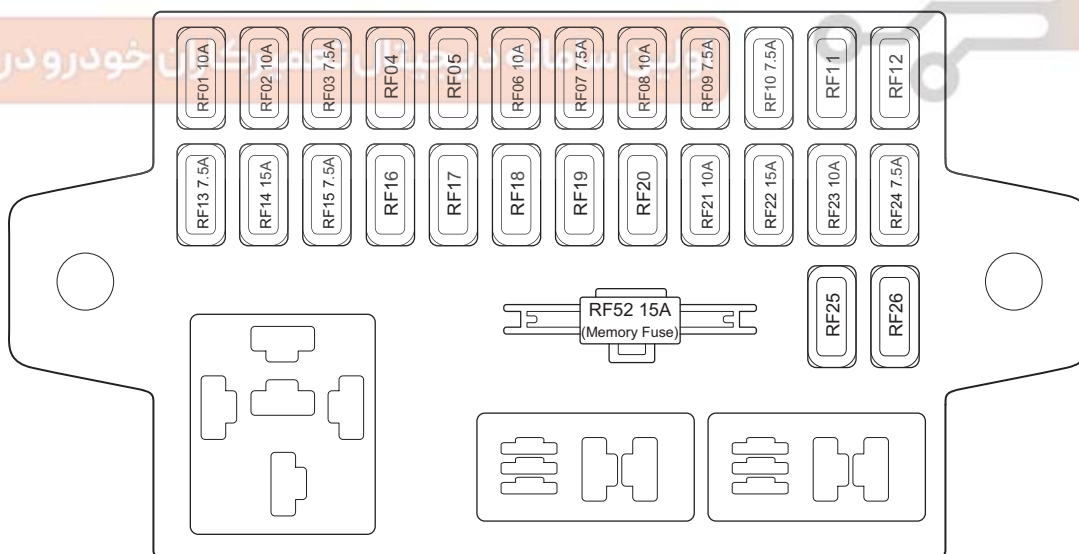

ET21060050

06 - FUSE AND RELAY


Instrument Panel Fuse Description

No.	Description	No.	Description
RF01	Reversing Radar	RF14	Cigarette Lighter
RF02	ECO Switch Backlight (for CVT Model)/ Headlight Adjustment Switch	RF15	Outside Rear View Mirror Adjustment Switch/Sunroof Switch/Seat Heater Relay Coil
RF03	Back-up Light Relay Coil (for CVT Model)	RF16	-
RF04	-	RF17	-
RF05	-	RF18	-
RF06	Steering Angle Sensor/Instrument Cluster/ Yaw Rate Sensor/Diagnostic Interface/ Engine Immobilizer/ESP Indication	RF19	-
RF07	BCM/EPS/PEPS	RF20	-
RF08	Airbag	RF21	Automatic A/C Control Panel
RF09	Brake Switch	RF22	Audio System
RF10	A/C Control Panel	RF23	Instrument Cluster/Diagnostic Interface
RF11	-	RF24	Key Switch
RF12	-	RF25	-
RF13	Rear Defroster Relay Coil/Blower Relay Coil/Audio System/BCM	RF26	-

06


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

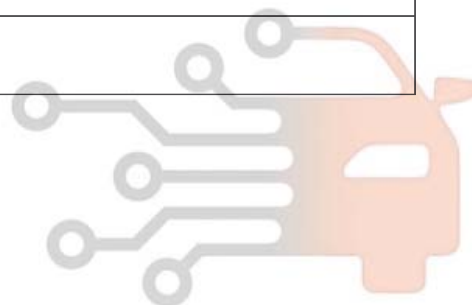

View of Instrument Panel Fuse and Relay Box A


Front View

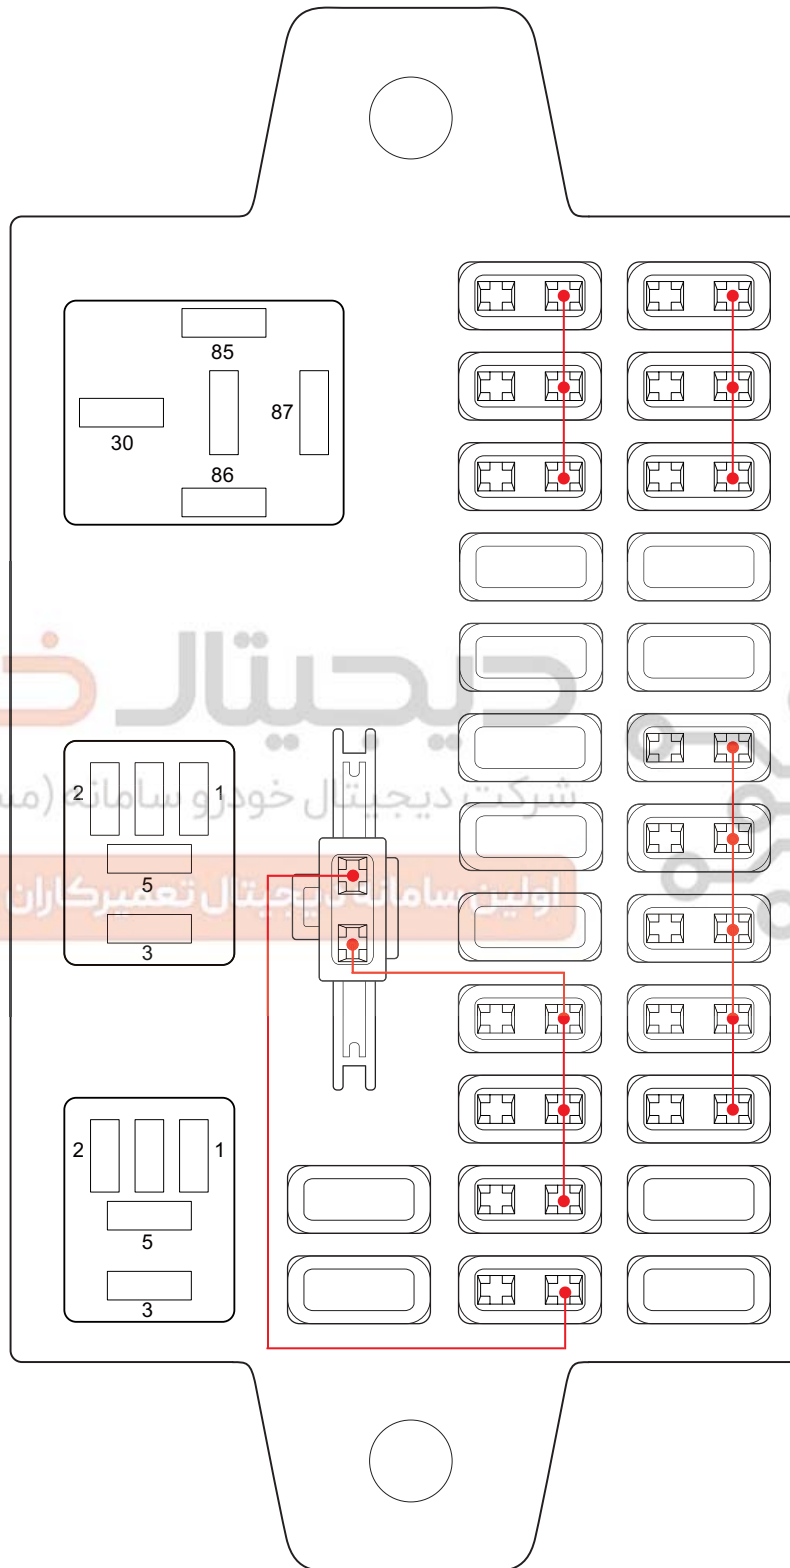

06

ET21060051

Back View

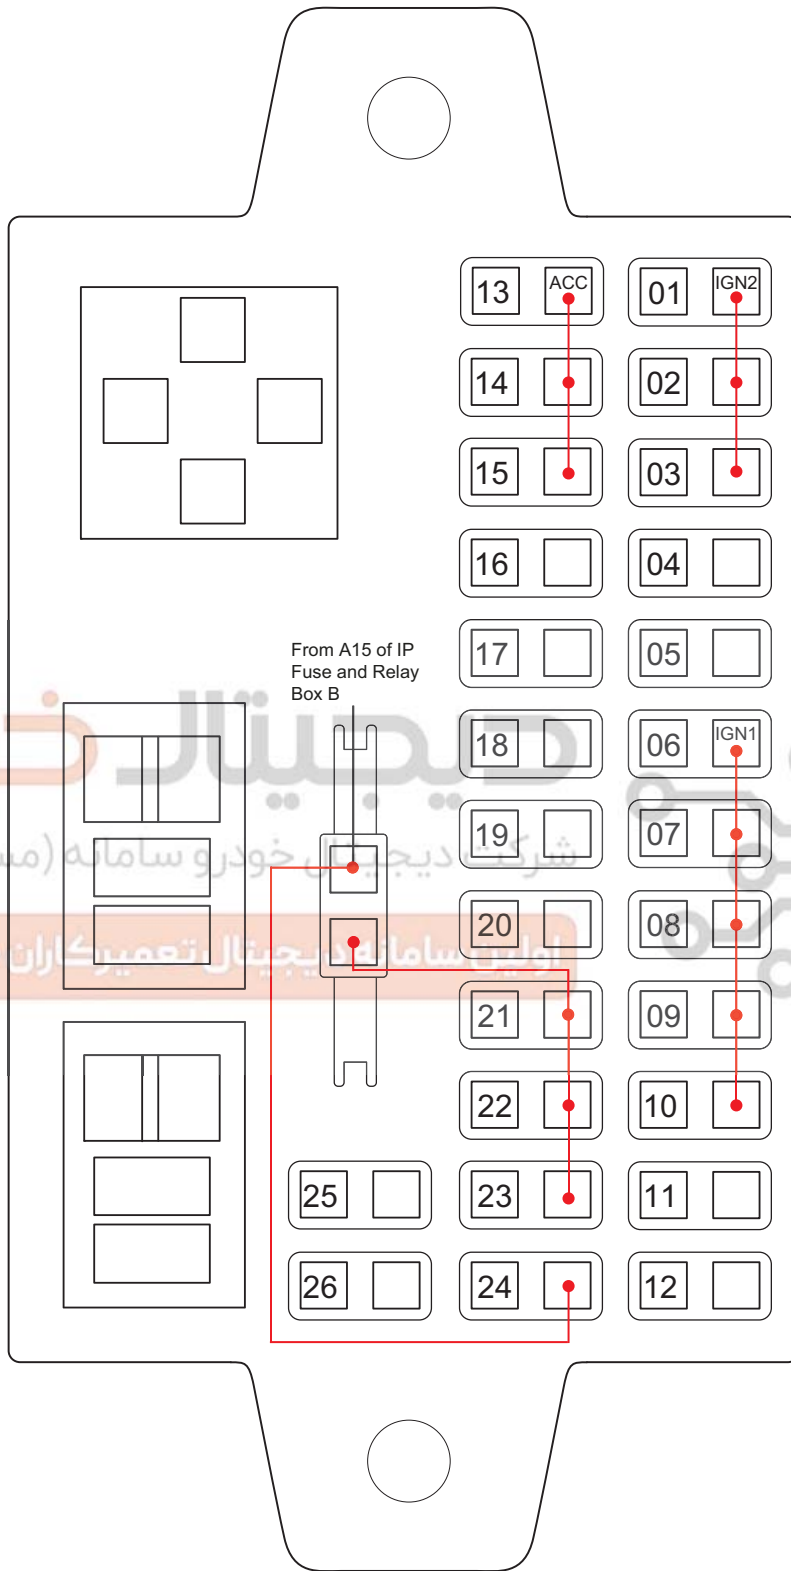


06

دیجیتال خودرو (مسئولیت محدود)
شرکت دیجیتال خودرو سامانه
تعمیرات دیجیتال خودرو در ایران

ET21060052

Instrument Panel Fuse and Relay Box A Inner Circuit

Circuit Diagram (Page 1 of 1)

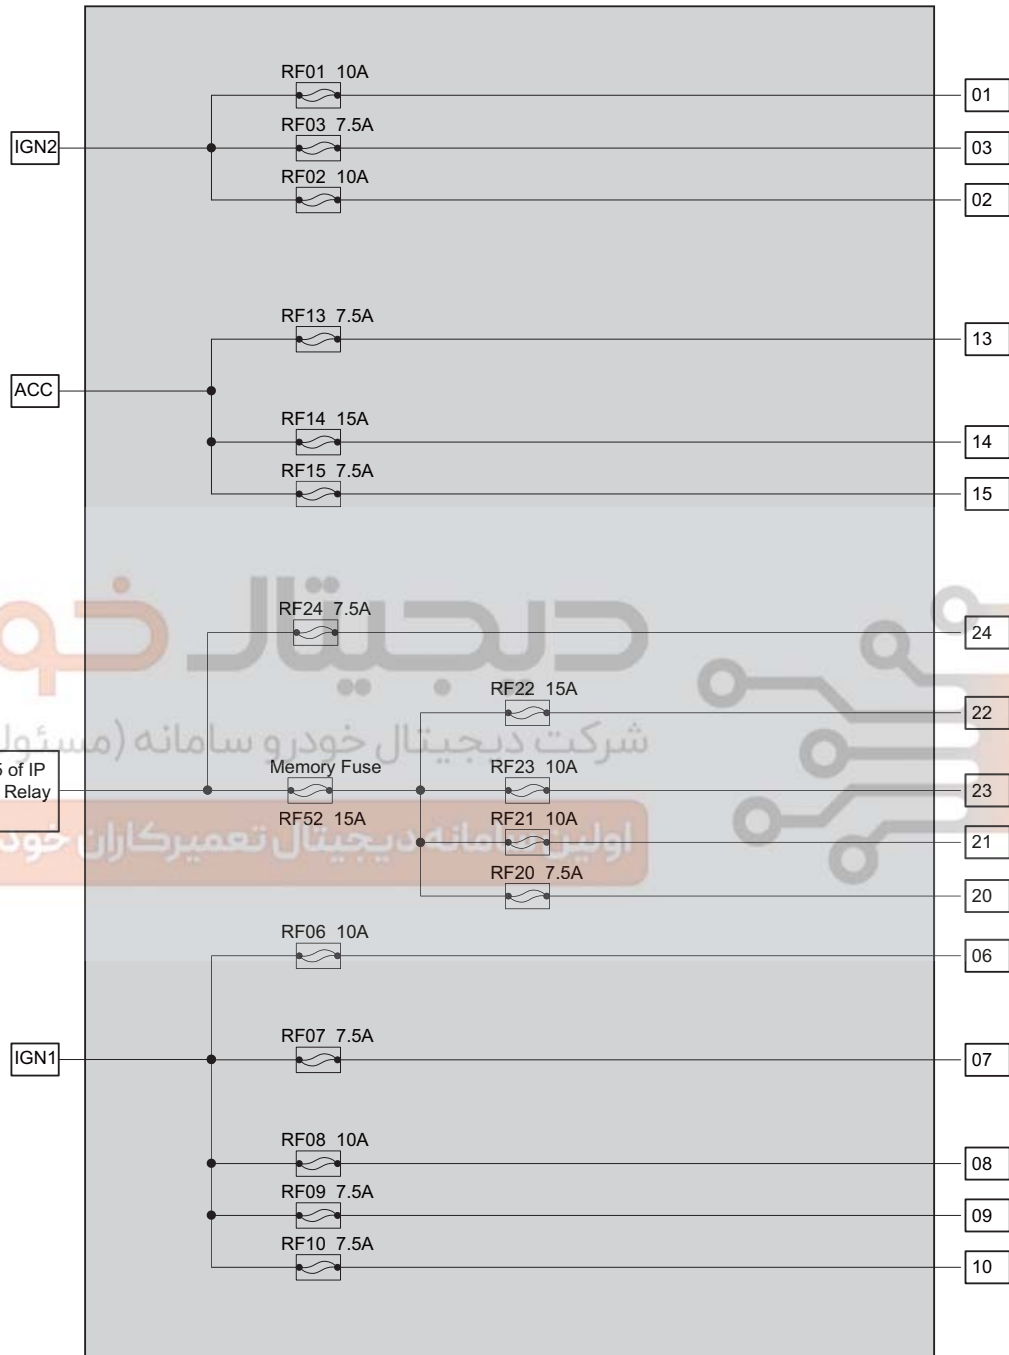


06

ET21060039

Instrument Panel Fuse and Relay Box B


Location of Instrument Panel Fuse and Relay Box B

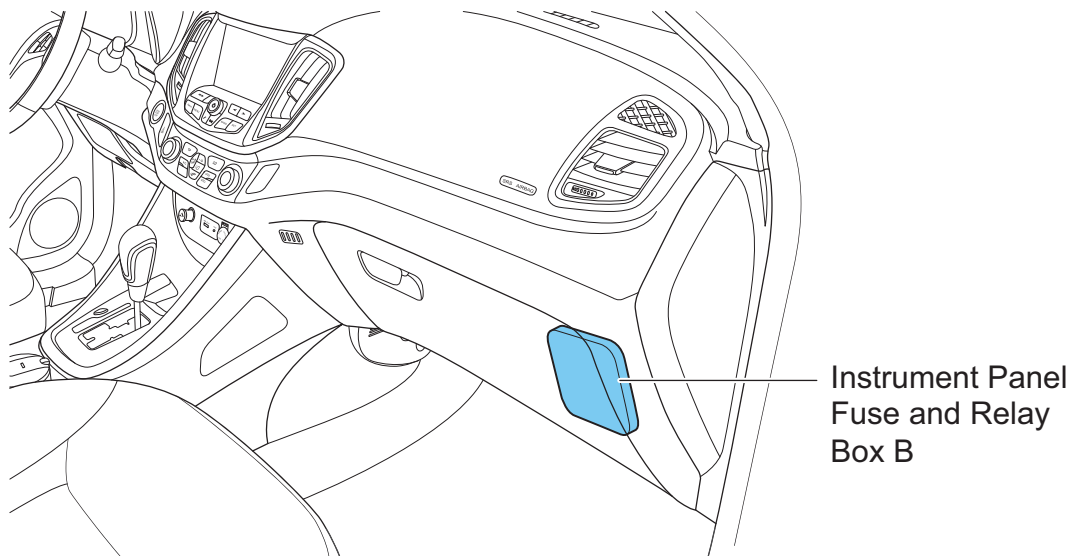

Instrument Panel Fuse and Relay Box B

ET21060060

06 Fuse and Relay Layout in Instrument Panel Fuse and Relay Box B

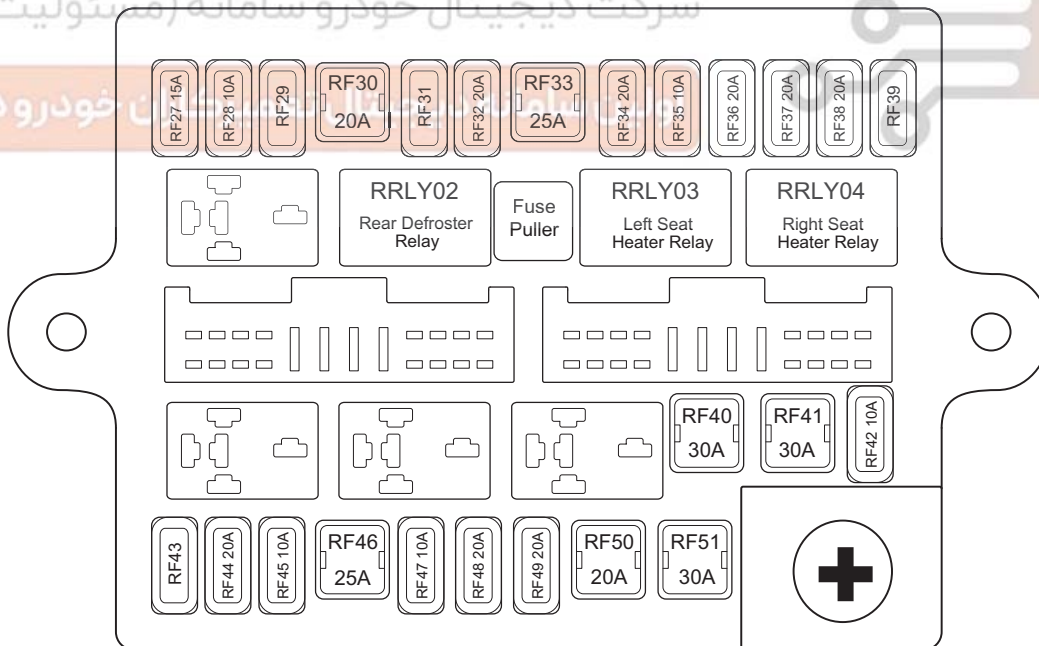

ET21060070

Instrument Panel Fuse Description

No.	Description	No.	Description
RF27	Ignition Switch	RF40	Right Window Anti-pinch Module
RF28	Back-up Light Relay	RF41	Left Window Anti-pinch Module
RF29	-	RF42	Outside Rear View Mirror Heating/ Defrosting Feedback Signal
RF30	IP Fuse and Relay Box A	RF43	-
RF31	-	RF44	IGN1 Relay
RF32	-	RF45	Backup Power Supply
RF33	Rear Defroster	RF46	Ignition Switch
RF34	Left Seat Heater	RF47	PEPS
RF35	Brake Light Switch	RF48	-
RF36	Reserve	RF49	Sunroof
RF37	Right Seat Heater	RF50	-
RF38	-	RF51	Power Seat Adjustment
RF39	-		

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




06

View of Instrument Panel Fuse and Relay Box B

Front View

06

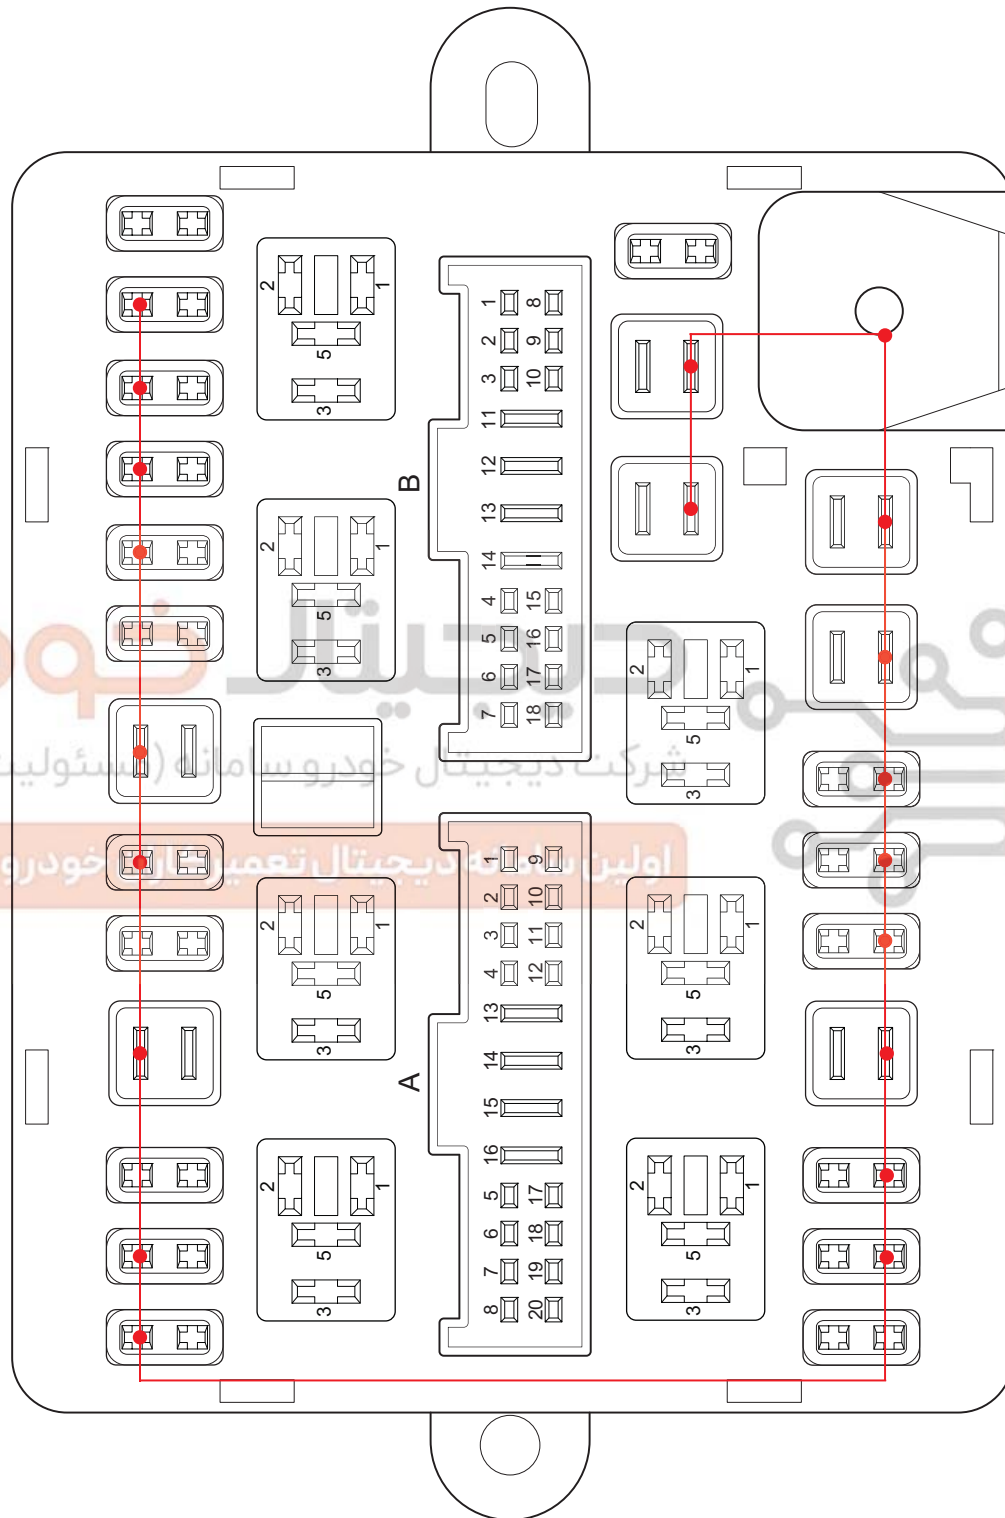

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
اولین راه دیجیتال تعمیرات خودرو در ایران

Back View




06

ET21060072

Instrument Panel Fuse and Relay Box B Inner Circuit

Circuit Diagram (Page 1 of 2)

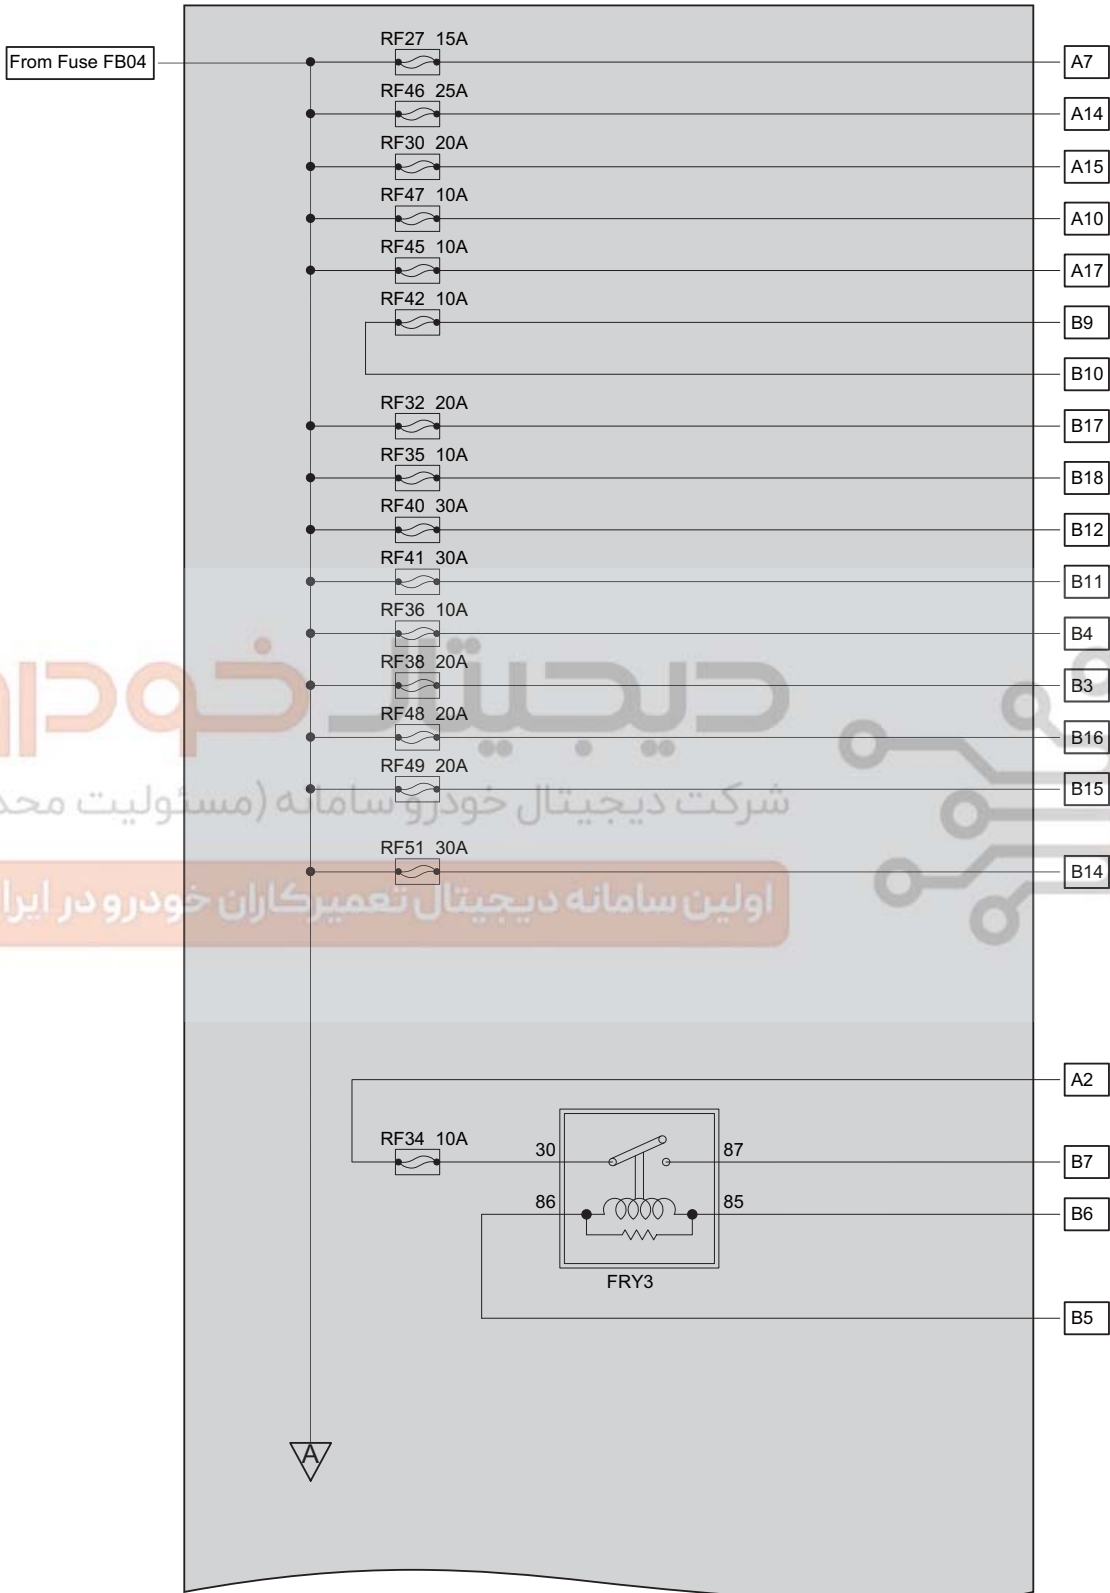


06



ET21060037

Circuit Diagram (Page 2 of 2)

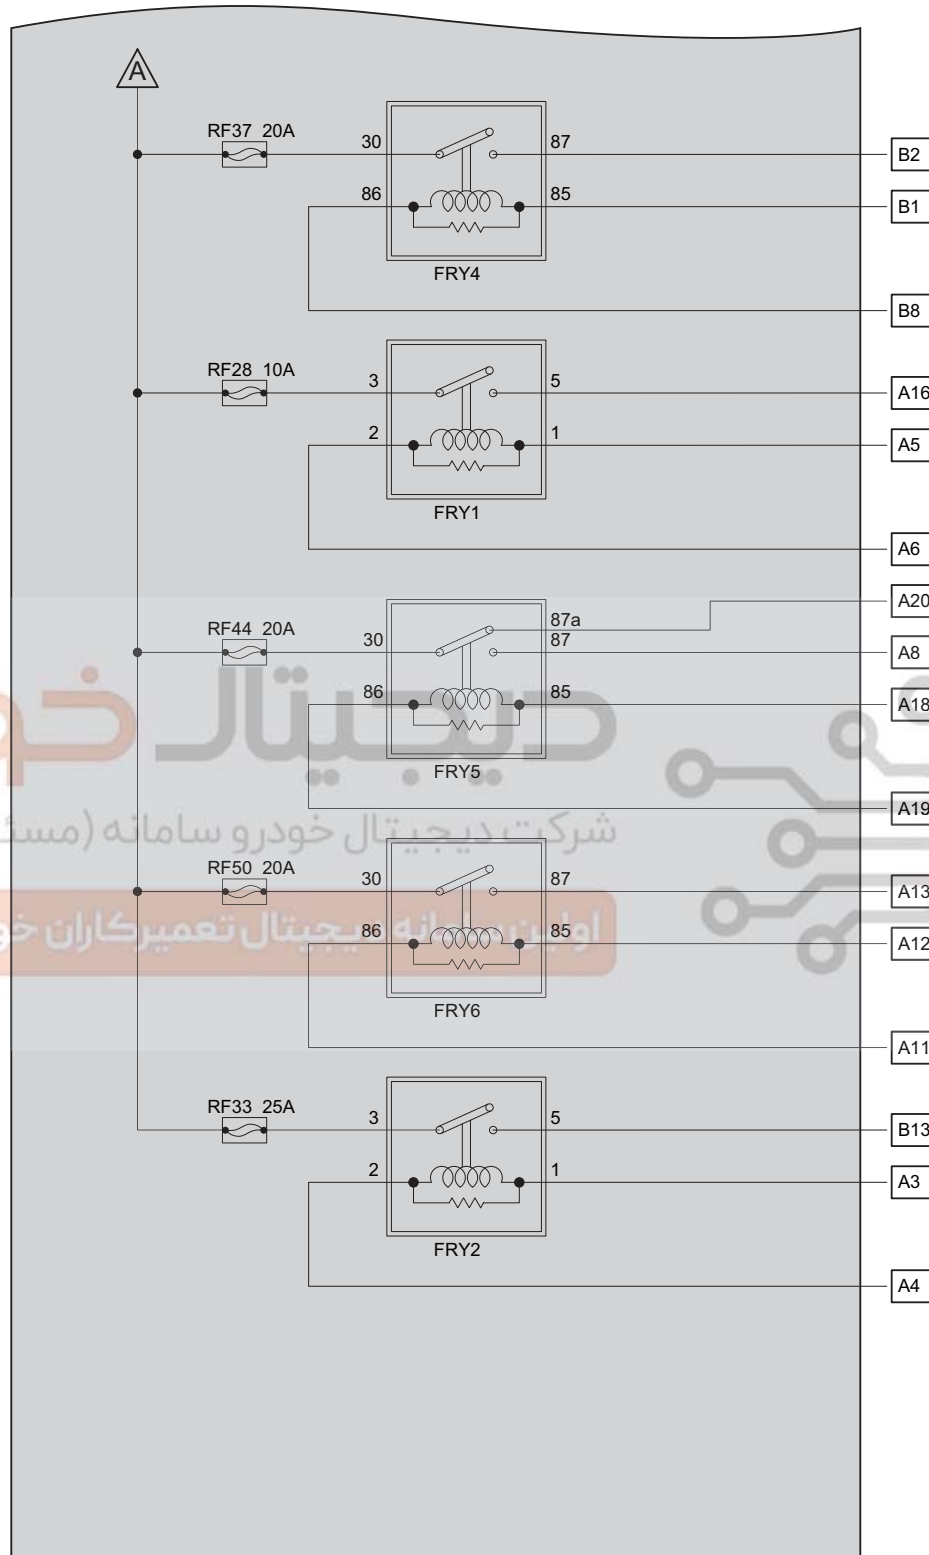

06

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
اولین پدیده یجیتال تعمیرکاران خودرو در ایران

ET21060038