

FUSE & RELAY INFORMATION

EF1DF4BB


Fuse & Relay Information (1)

SD100-1

IPM (INSTRUMENT PANEL MODULE) Layout

<FRONT>

<REAR>

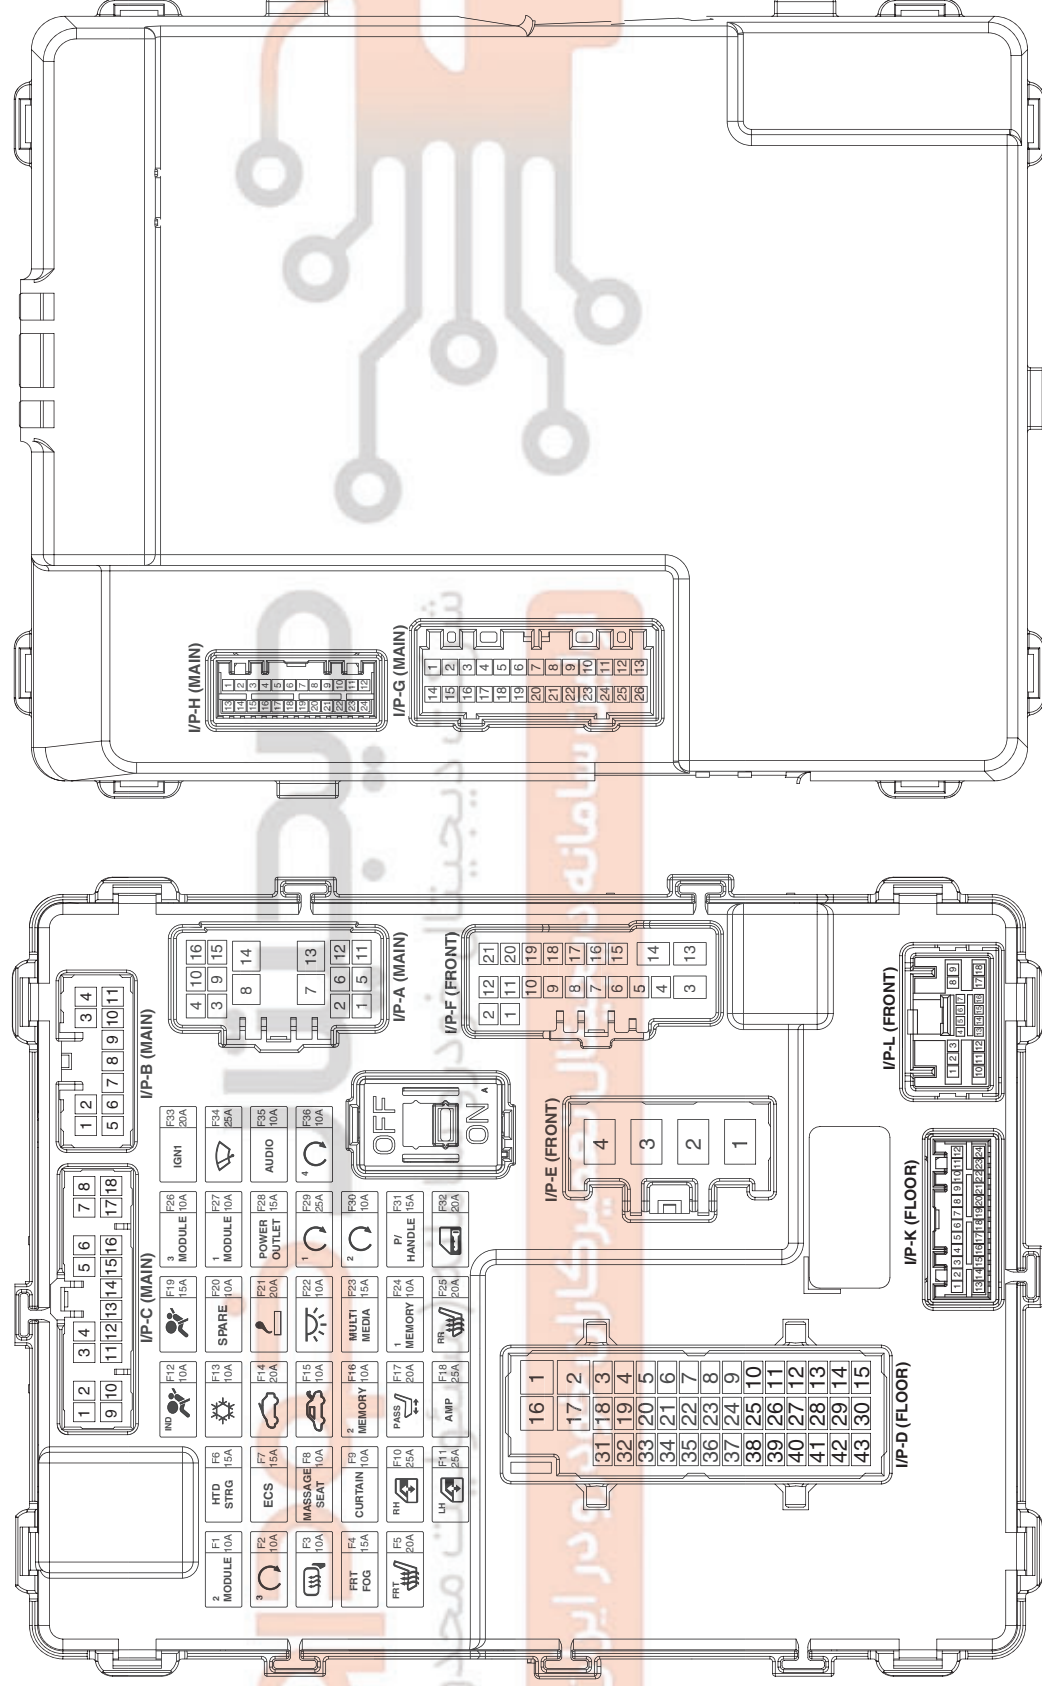

※USE THE DESIGNATED FUSE AND RELAY ONLY

FUSE & RELAY INFORMATION

Fuse & Relay Information (2)

SD100-2

Circuit

No. (A)	Symbol	Circuit Protected
F1	10A MODULE	Tilt & Telescopic Module, Instrument cluster, ATM Shift Lever Indicator, Driver/Passenger Seat Warmer Module, Rear Seat Warmer Module LH/RH, IMS Control Module, Rear Parking Assist Sensor LH/RH, Rear Parking Assist Sensor LH/RH(Center), Driver/Passenger Door Module, LDWS Camera Module, Electro Chromic Mirror, Room Lamp, MTS Module, Driver/Passenger CCS Control Module, Head Lamp Leveling Device Switch, Auto Head Lamp Leveling Device Module, Front Parking Assist Sensor LH/RH, Head Lamp Leveling Device Actuator LH/RH PDM, Smart Key Control Module
F2	10A	
F3	10A	Driver Power Outside Mirror, Passenger Power Outside Mirror, A/C Control Module
F4	15A FRT FOG	ICM Relay Box (Front Fog Lamp Relay)
F5	20A	Driver/Passenger Seat Warmer Module, Driver/Passenger CCS Control Module
F6	15A HTD STRG	Steering Wheel Heater
F7	15A ECS	ICM Relay Box (Rear Fog Lamp Relay)
F8	10A MESSAGE SEAT	Driver Active Seat Module
F9	10A CURTAIN	Rear Curtain Module, Driver/Passenger Door Module
F10	25A	Passenger Door Module, Rear Power Window Switch LH
F11	25A	Driver Safety Power Window Switch, Rear Power Window Switch LH
F12	10A	Instrument Cluster
F13	10A	Ionizer, Ionizer (IND.), A/C Control Module, E/R Fuse & Relay Box (RLY. 14)
F14	20A	Panorama Sunroof
F15	10A	Fuel Filler Door Switch, Trunk Lid Relay
F16	10A	RF Receiver
F17	20A	Passenger Manual Switch
F18	25A AMP	Amp

No. (A)	Symbol	Circuit Protected
F19	15A	SRS Control Module
F20	20A	Spare
F21	20A	Front Cigarette Lighter
F22	10A	Garnish Lamp LH/RH(Center), Room Lamp, Driver/Passenger Vanity Lamp Switch, Overhead Console Lamp Switch, Rear Door Mood Lamp LH/RH, Driver/Passenger Door Mood Lamp, Driver/Passenger Door Scuff Lamp, Driver/Passenger Door Lamp, Trunk Room Lamp
F23	15A	MTS Module, Audio, AV & Navigation Head Unit, Audio Monitor
F24	10A	Auto Light & Photo Sensor, Data Link Connector, Driver/Passenger Foot Lamp, Instrument Cluster, Digital Clock, Rear Curtain Module, A/C Control Module, Room Lamp, Driver/Passenger Door Module
F25	20A	Rear Seat Warmer Module LH/RH
F26	10A	ESP Control Module, ABS Control Module, Electric Parking Brake Module, Steering Angle Sensor, ESP Off Switch, Console Switch
F27	10A	PDM, ICM Relay Box (Head Lamp Washer Relay), Panorama Sunroof, Rear Curtain Module, Driver Active Seat Module, Rain Sensor
F28	15A	Console Power Outlet
F29	25A	Smart Key Control Module, PDM, Start Stop Button Switch, Fob Holder
F30	10A	PDM
F31	15A	Key Solenoid, Tilt & Telescopic Module, Sport Mode Switch
F32	20A	Driver Door Module
F33	20A	E/R Fuse & Relay Box (F12 15A, F11 10A, F10 10A)
F34	25A	E/R Fuse & Relay Box (RLY. 11, RLY.12), Front Wiper Motor, Multifunction Switch
F35	10A	Smart Key Control Module, Rear Audio Switch, Amp, Audio Monitor, Overhead Console Lamp Switch, PDM, MTS Module, Audio, AV & Navigation Head Unit, digital clock, Camera Control Module
F36	10A	Transaxle Range Switch, PCM

❖ USE THE DESIGNATED FUSE AND RELAY ONLY