

Instrument Panel Fuse and Relay Box

Location of Instrument Panel Fuse and Relay Box




06

EWD025001

Fuse and Relay Layout in Instrument Panel Fuse and Relay Box

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

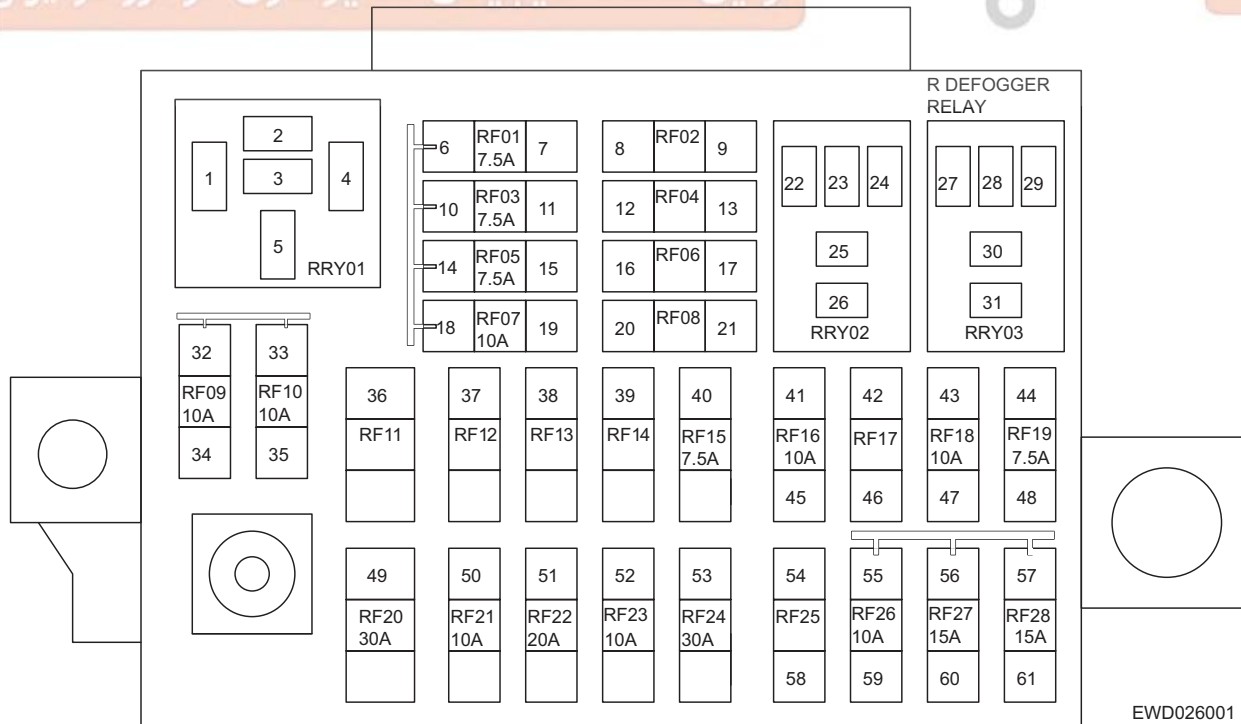

EWD026001


Instrument Panel Fuse Description

No.	Description	No.	Description
RF01	BCM	RF15	Diagnosis 1, Diagnosis 2, Vehicle Tracking Module & Key In Signal & Remote Control Mode & Defrost Rly Coil
RF02	-	RF16	Charging Module
RF03	Steering Wheel Rotation Angle Sensor, EPS	RF17	-
RF04	-	RF18	Electric Mirror Heater (L&R), Defrost Work Feedback
RF05	Airbag Module	RF19	PEPS
RF06	-	RF20	Seat Adjuster
RF07	A/C Control Panel, Radio Control Module, Head Lamps Adjust SW Power, Sunroof SW	RF21	AM2 (without PEPS)
RF08	-	RF22	AM1 (without PEPS)
RF09	Radio Control Module, A/C Control Panel	RF23	-
RF10	Instrument Control Module, Rain Sensor	RF24	Rrly03 Defrost RLY
RF11	-	RF25	-
RF12	-	RF26	Radio Control Module & L Mirror Adjust Motor & R Mirror Adjust Motor & BCM & Sunroof
RF13	-	RF27	Cigarette Lighter
RF14	-	RF28	Spare Power1

Instrument Panel Fuse and Relay Box Inner Circuit

Circuit Diagram (Page 1 of 1)

06

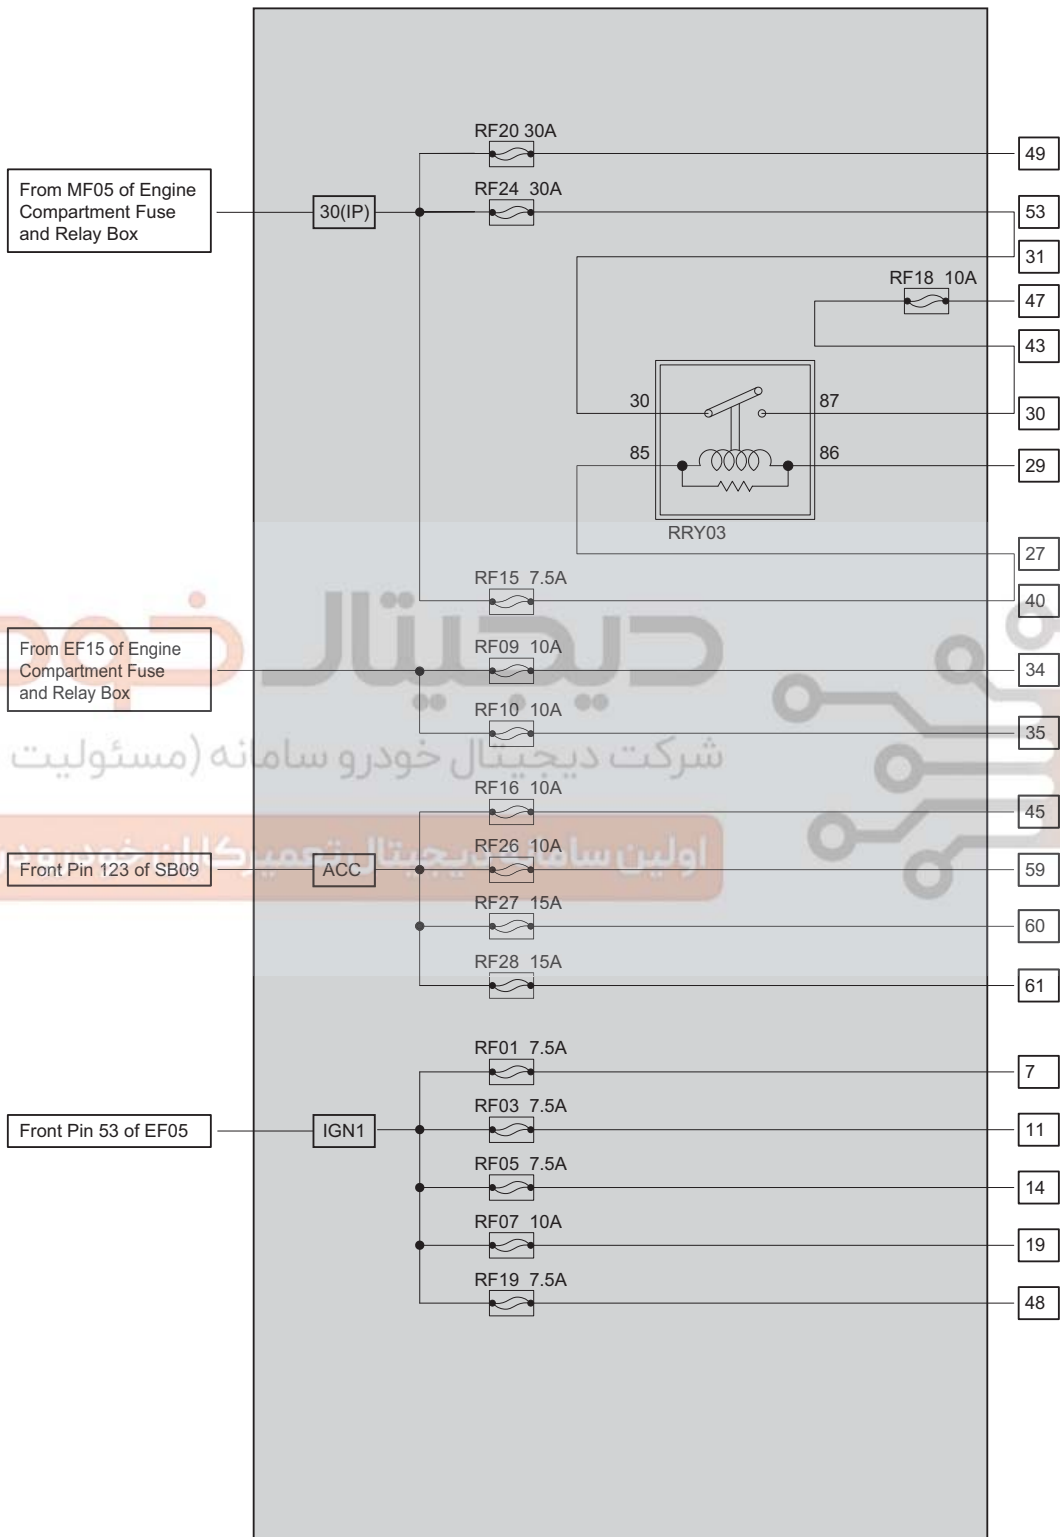

EWD027001