

Interconnector – Runna ECO MUX

Main					IC02A 10w GY	Engine				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Gas Pressure Switch	8007	4W BR	3	8055	1	8055	B23	90W BK	1320	Gas Pressure Switch
Fan Relay	RB003	10W WI	2A	1523	2	1523	A9	90W BK	1320	Fan Relay (Low)
Fan Relay	RB003	10W WI	2B	1525	3	1525	A10	90W BK	1320	Fan Relay (High)
Gas Pressure Switch	8007	4W BR	2	807	4	807	B87	90W BK	1320	Gas Pressure Switch
Gas Pressure Switch	8007	4W BR	1	C142	5	C142	B29	90W BK	1320	V IGN
Gas Pressure Switch	8007	4W BR	4							
Diagnostic Conector (Ignition)	C001	16W BK	1							
Immobilizer (Ignition)	8208	8W BK	4							
ICN (Ignition)	IC20A	9W BR	2B							
Fuse F34	BF00D	8W BK	E3							
Alternator	FCM	15W WI	9A	1070	6	1070	1	2W BK	1020A	Alternator
Compressor Clutch	FCM	15W BK	3B	8079	7	8079	1	2W YL	8020	Compressor Clutch
Fuse F33	BF00D	8W BK	E4	1086	8	1086	1	2W	1010A	Starter
Not Used					9					Not Used
Not Used					10					Not Used

  

Main					IC02B 10w BK	Engine				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Fuel Guage	4310	6W BK	6	430	1	430	B46	90W BK	1320	Fuel Guage
Fuel Guage	4310	6W BK	5	431	2	431	B82	90W BK	1320	Fuel Guage
Fuel Pump	4310	6W BK	3	121	3	121A	B3	10W BK	1304 (RLYb)	Fuel Pump Relay
Fan	1510	3W BK	1	1510	4	1510	A45	90W BK	1320	Cooling Fan Diagnosis Signal Input
Fan Resistor	1506	3W BK	1							
Fan Relay (RLY5)	RB003	10W WI	5B							
OBD Can L	C001	16W BK	14	9019C	5	9019C	B57	90W BK	1320	ECU CAN L
ABS Can L	7020	38W BK	14							
Immobilizer Can L	8208	8W BK	6							
BCM Can L	IC23C	16W BK	14							
OBD Can H	C001	16W BK	6	9020C	6	9020C	B88	90W BK	1320	ECU CAN H
ABS can H	7020	38W BK	26							
Immobilizer Can H	8208	8W BK	5							
BCM Can H	IC23C	16W BK	15							
Diagnostic Connector	C001	16W BK	7	1411A	7	1411	B56	90W BK	1320	Diagnostic Connector
Engine Oil Pressure Switch	FCM	15W BK	7A	410	8	410	2	2W GY	4110	Engine Oil Pressure Switch
Reverse Gear Switch	FCM	15W BK	6A	220	9	220	2	2W GY	2200	Reverse Gear Switch
Not Used					10					Not Used

Interconnector – Runna ECO MUX

Main					IC20A 9w GY	dashboard					
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function	
Not Used					1A					Not Used	
Not Used					2A					Not Used	
Not Used					4A					Not Used	
Not Used					5A					Not Used	
Interior Fuse Box (F36)	BF00D	8W BK	E1	BB4C	1B	BB4C	1	18W WI	ICN	ICN power	
Diagnostic Connector Power	C001	16W BK	16								
Interior Relays	IC23C	16W BK	9								
Immobilizer Power	8208	8W BK	1	A038	2B	A038	9	18W WI	ICN	ICN (Ignition)	
Gas Pressure Switch Power (Ignition)	8007	4W BR	1								
Gas Pressure Switch Power (Ignition)	8007	4W BR	4								
Diagnostic Connector (Ignition)	C001	16W BK	1								
Immobilizer (Ignition)	8208	8W BK	4								
ICN (Ignition)	IC02A	10W GY	5								
Pressostat/ECU(Ignition)	BF00D	8W BK	E3								
Immobilizer Power (Ignition)	8208	8W BK	3	146A	3B	146A	13	18W WI	ICN	Immobilizer Ignition (blinking)	
Not Used					4B					Not Used	
Not Used					5B					Not Used	
Main					IC23B 6w BK	Interior					
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function	
Bonnet Switch	8611	2W BK	1	8601	1	8601	6	40W BK	BCM	bonnet switch	
Not Used					2					Not Used	
Horn Relay	RB001	10W GY	2A	253	3	253	24	40W BK	BCM	Horn	
Not Used					4					Not Used	
Not Used					5		E513	A2	10W WI	RB00B	Heater Blower Relay Gruond
								10	16W BK	IC70	FLH Door Lock Assembly Gruond
								EC23			Gruond
								2	4W GN	3010	Roof Lamp Gruond
								4	40W BK	BCM	BCM Gruond
								B1	15W WI	BCM	BCM Gruond
								7	14W BK	IC72	RLH Door Lock Assembly Gruond
								1	2W WI	4730	Seat Belt Switch Gruond
								2	2W BR	4400	Hand Brake Switch Gruond
A4	10W GY	RB00A	Bootlid Relay Gruond								
Not Used					6					Not Used	

## Interconnector – Runna ECO MUX

Main					IC23C 16w BK	Interior				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Interior Fuse Box (F9)	BF003	8W BK	E4	B09	1	B12	S1	8W BK	BF00C	F31
							S2	8W BK	BF00C	F32
Head lamp Height Adjuster	6600	3W BK	2	V09	2	V091	A1	8W BK	6405	Mirror Switch Backlight
							A7	15W WI	BCM	LH & RH Side Lamp
							6	8W BK	8410A	Radio Backlight
LH Head Lamp	2610	10W BK	2	V09	2	V091	12	16W BK	IC23A	Panel Backlight
							1B	10W BK	8025	Air Condition Backlight
RH Head Lamp	2615	10W BK	2	V09	2	V091	3	3W BK	IC80	Plate Number Lamp
FLH Repeater Flasher	2610	10W BK	5	2332	3	2333B	6	6W BK	2635	Rear RH Side Lamp
LH Side Repeater Flasher	2340	2W WI	1	2333			6	6W BK	2630	Rear LH Side Lamp
FRH Repeater Flasher	2615	10W BK	5	2342	4	2343B	1	6W BK	2635	RH Repeater Rear Indicator
RH Side Repeater Flasher	2345	2W WI	1	2343			A9	15W WI	BCM	RH Indicator
Stop Lamp Switch	2100	4W WI	1	A21	5	A21	E1	8W BK	BF00A	Radio / ICN / BCM / FCM (F24)
							A1	10W WI	RB00B	Heater Blower Relay
							1	16W BK	IC23A	ICN & MFD
							4	8W BK	8410A	Radio
							2	40W BK	BCM	ACC Power
ACC	FCM	15W WI	6B	A22	6	9021	7	16W BK	IC23A	CAN H
CAN L	FCM	15W BK	1A	9021	6	9021	10	16W BK	IC23A	CAN L
CAN H	FCM	15W BK	2A	9022	7	9022	S4	8W WI	BF00B	F25
Interior Fuse Box (F3)	BF001	8W BK	E2	B03	8	B2	S3	8W BK	BF00C	F30
Interior Fuse Box (F36)	BF00D	8W BK	E1	B03	9	B08B	B1	10W WI	RB00B	Screen Heater Relay
Diagnostic Connector Power Supply	C001	16W BK	16	BBE4			B5	10W GY	RB00A	Wash Pump Relay
Immobilizer Power Supply	8208	8W BK	1	BBE4			B1	10W GY	RB00A	Wash Pump Relay
ICN Power Supply	IC20A	9W BR	1B	BBE4						
Stop Switch	2100	4W WI	2	210	10	211	2	2W GN	2110	Additional Stop Lamp
Stop Switch	7020	38W BK	23	2103		2110	12	40W BK	BCM	Brake Pedal Switch
Wash Pump Relay	FCM	15W WI	7A	511	11					
Front Wash Pump	5115	2W GN	1	513	12	513	B3	10W GY	RB00A	Wash Pump Relay
Diagnostic Connector (Airbag)	C001	16W BK	13	6220	13	6220	9	50W OR	6570	Airbag Diagnostic
Diagnostic Connector CAN L	C001	16W BK	14	9019	14	9019	22	40W BK	BCM	CAN L
ABS CAN L	7020	38W BK	14							
Immobilizer CAN L	8208	8W BK	6							
CAN L	IC02B	10W BK	5							
Diagnostic Connector CAN H	C001	16W BK	6	9020	15	9020	21	40W BK	BCM	CAN H
ABS CAN H	7020	38W BK	26							
Immobilizer CAN H	8208	8W BK	5							
CAN H	IC02B	10W BK	6							
Interior Fuse Box (F4)	BF001	8W BK	E1	B04	16	B1	S1	8W WI	BF00B	F28
							S2	8W WI	BF00B	F27
							S3	8W WI	BF00B	F26

Interconnector - Runna ECO MUX

Interior					IC23A 16w BK	dashboard						
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function		
F24	BF00A	8W BK	E1	B155	1	B157	14	18W WI	ICN	ICN Power		
Heater Blower Relay	RB00B	10W WI	A1									
ACC Power	IC23C	16W BK	5									
Radio ACC Power	8410A	8W BK	4									
ACC Power	BCM	40W BK	2	230	2	230	6	6W BR	2300	Hazard Switch LED		
Hazard Switch LED	BCM	40W BK	15	230A	3	230A	1	6W BR	2300	Hazard Switch		
Hazard Switch	BCM	40W BK	18	654	4	654	1	4W BK	6569	Airbag Deactivation Switch		
Air bag Deactivation Switch	6570	50W OR	12	655	5	655	3	4W BK	6569	Airbag Deactivation Switch		
Air bag Deactivation Switch	6570	50W OR	20	B157	6	B155	1	6W BK	6237	V ECO For Bootlid Switch		
V ECO	BCM	15W WI	A5									
V ECO Roof Lamp	3010	4W GN	3									
V ECO Mirror Switch	6405	8W BK	A2									
V ECO Fornt Window Lift Switch	6036P	9W BK	B3	B156	18	18W WI	ICN	V ECO For ICN				
V ECO Boot Lamp	3105	2W WI	1	9051	7	9051	7	18W WI	ICN	CAN L		
CAN L	BCM	18W WI	1	9021	8	622	6	6W WI	6220	Master Lock Switch		
CAN L	IC23C	16W BK	6	622	8	622	6	6W WI	6220	Master Lock Switch		
Master Lock Switch	BCM	40W BK	36	629A	9	629A	6	6W BK	6237	Boot Lid Switch		
Boot Lid Switch	BCM	40W BK	30	9052	10	9052	6	18W WI	ICN	CAN H		
CAN H	BCM	18W WI	2	9022	11	470	3	6W BK	6237	Bootlid Actuator Switch		
CAN H	IC23C	16W BK	7	470	11	470	3	6W BK	6237	Bootlid Actuator Switch		
Bootlid Actuator Switch	4705	3W WI	3	VV2	12	VV2	4	6W WI	6220	Master Lock Switch Backlight		
Bootlid Actuator Switch	BCM	40W BK	11									
Mirror Switch Backlight	6405	8W BK	1									
Side Lamp	BCM	15W WI	A7									
Radio Backlight	8410A	8W BK	6				4	6W BR	2300	6W BK	6237	Bootlid Switch Backlight
Side Lamp	IC23C	16W BK	2									
Air Condition Panel Backlight	8025	10W BK	1B									
Plate Number Lamp	IC80	6W BK	3									
RH Rear Side Lamp	2635	6W BK	6	13	14	6560	12	18W WI	ICN	Displaying Airbag Status On ICN		
LH Rear Side Lamp	2630	6W BK	6									
Front Window Switch Backlight	6036P	9W BK	B1									
FRH View Mirror	IC71	16W BK	6									
FRH View Mirror	IC71	16W BK	6	720	13					Not Used		
Displaying Airbag Status On ICN	6570	50W OR	7	6560	14	6560	12	18W WI	ICN	Displaying Airbag Status On ICN		
Displaying Airbag Status On ICN	6570	50W OR	8	6561	15	6561	11	18W WI	ICN	Displaying Airbag Status On ICN		
Displaying Airbag Status On ICN	6570	50W OR	8	6561	15	6561	11	18W WI	ICN	Displaying Airbag Status On ICN		
Master Look Switch LED	BCM	40W BK	17	CC63	16	CC63	1	6W WI	6220	Master Look Switch LED		

Interconnector - Runna ECO MUX

Interior					IC70 16w BK	Front Door LH				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
FLH Electric Window Motor	BCM	15W BK	B4	6011	1	6071	1	2W GY	6040	FLH Electric Window Motor
Doors Unlock	BCM	15W WI	B2	6211	2	6211	5	6W BR	6202	FLH Door Lock Assembly
FRH Door Lock Assembly	IC71	16W BK	2							
RRH Door Lock Assembly	IC72	14W BK	12							
RRH Door Lock assembly	IC73	14W BK	12							
Boot Lock Motor	6260	2W WI	1							
FLH Door Lock (Switch)	BCM	40W BK	7	6207	3	6208	4	6W BR	6202	FLH Door Lock Assembly
Screen Heater Relay	RB00B	10W WI	B5	813	4	813	2	10W BK	6410	FLH View Mirror Heater
Screen Heater Switch	IC8060	6W BK	2							
Rear Screen Heater	8120B	1W BK	1							
FRH View Mirror Heater	IC71	16W BK	4	8411	5	8431	2	2W BK	8420	FLH Door Speaker
Radio	8410B	8W WI	6							
Not Used					6	720	3	10W BK	6410	FLH View Mirror
Not Used					7	E720	4	10W BK	6410	FLH View Mirror
FLH Window Winder Command	BCM	15W BK	B5	6021	8	6061	2	2W GR	6040	FLH Window Winder Motor
Not Used					9					
Heater Blower Relay Gruond	RB00B	10W WI	A2	EC20C	10	E22A	2	6W BR	6202	FLH Door Lock Assembly Gruond
Not Used	IC23B	6W BK	5							
Gruond		EC23								
Roof Lamp Gruond	3010	4W GN	2							
BCM Ground	BCM	40W BK	4							
BCM Ground	BCM	15W WI	B1							
RLH Door Lock Assembly Ground	IC72	14W BK	7							
Seat Belt Switch Gruond	4730	2W WI	1							
Hand Brake Switch Gruond	4400	2W BR	2							
Bootlid Relay Gruond	RB00A	10W GY	A4							
Electrical Mirror Switch	6405	8W BK	B4	6401	11	6411	5	10W BK	6410	FLH View Mirror
Electrical Mirror Switch	6405	8W BK	B2	6402	12	6412	7	10W BK	6410	FLH View Mirror
Radio	8410B	8W WI	5	8410	13	8430	1	2W BK	8420	FLH Door Speaker
FLH Door Lock (Switch)	BCM	40W BK	9	6219	14	6217	1	6W BR	6202	FLH Door Lock Assembly(Switch)
Door Lock	BCM	15W WI	B3	6201	15	620	3	6W BR	6202	FLH Door Lock Assembly(Switch)
FRH Door Lock Assembly	IC71	16W BK	15							
RLH Door Lock Assembly	IC72	14W BK	5							
RRH Door lock Assembly	IC73	14W BK	5							
FLH View Mirror	IC71	16W BK	16	6400	16	6410	6	10W BK	6410	FLH View Mirror
Electrical Mirror Switch	6405	8W BK	A3							

Interconnector - Runna ECO MUX

Interior					IC71 16w BK	Front Door RH				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
FLH Electric Window Motor	BCM	15W BK	B2	6071	1	6071	1	2W GY	6045	FRH Electric Window Motor
Doors Unlock	BCM	15W WI	B2	6212	2	6211	5	6W BR	6207	FRH Door Lock Assembly
FLH Door Lock Assembly	IC70	16W BK	2							
RLH Door Lock Assembly	IC72	14W BK	12							
RLH Door Lock assembly	IC73	14W BK	12							
Boot Lock Motor	6260	2W WI	1	6208	3	6208	4	6W BR	6207	FRH Door Lock Assembly
FRH Door Lock (Switch)	BCM	40W BK	8							
Screen Heater Relay	RB00B	10W WI	B5							
Screen Heater Switch	IC8060	6W BK	2	814	4	813	2	10W BK	6415	FRH View Mirror Heater
Rear Screen Heater	8120B	1W BK	1							
FLH View Mirror Heater	IC70	16W BK	4							
Radio	8410B	8W WI	4	8431	5	8431	2	2W BK	8425	FRH Door Speaker
Not Used	IC23A	16W BK	13	720	6	720	3	10W BK	6415	FLH View Mirror
Gruond		EC22								
FRH Door Lock Assembly & View Mirror Gruond	IC71	16W BK	10	E64	7	E720	4	10W BK	6415	FRH View Mirror Ground
RRH Door Lock Assembly Ground	IC73	14W BK	7							
Radio Ground	8410A	8W BK	8							
Electric Window And Mirror Switch Ground	6036P	9W BK	A4							
Electrical Mirror Switch Ground	6405	8W BK	A4							
FRH Window Winder Motor Command	BCM	15W BK	B3	6061	8	6061	2	2W GR	6045	FRH Window Winder Motor
Not Used					9					Not Used
Gruond		EC22								
FRH View Mirror Gound	IC71	16W BK	7	E64	10	E22A	2	6W BR	6207	FLH Door Lock Assembly Gruond
RRH Door Lock Assembly Ground	IC73	14W BK	7							
Radio Ground	8410A	8W BK	8							
Electric Window And Mirror Switch Ground	6036P	9W BK	A4							
Electrical Mirror Switch Ground	6405	8W BK	A4							
Electrical Mirror Switch	6405	8W BK	B3	6411	11	6411	5	10W BK	6415	FRH View Mirror
Electrical Mirror Switch	6405	8W BK	B1	6412	12	6412	7	10W BK	6415	FRH View Mirror
Radio	8410B	8W WI	3	8430	13	8430	1	2W BK	8425	FRH Door Speaker
FLH Door Lock (Switch)	BCM	40W BK	10	6217	14	6217	1	6W BR	6207	FRH Door Lock Assembly(Switch)
Door Lock	BCM	15W WI	B3	6202	15	620	3	6W BR	6207	FRH Door Lock Assembly(Switch)
FLH Door Lock Assembly	IC70	16W BK	15							
RLH Door Lock Assembly	IC72	14W BK	5							
RRH Door lock Assembly	IC73	14W BK	5							
FRH View Mirror	IC70	16W BK	16	6410	16	6410	6	10W BK	6415	FRH View Mirror
Electrical Mirror Switch	6405	8W BK	A3							

Interconnector – Runna ECO MUX

Interior					IC72 14w BK	Rear Door LH					
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function	
Radio	8410B	8W WI	7	8450	1	8470	1	2W BK	8430	RLH Door Speaker	
Radio	8410B	8W WI	8	8451	2	8471	2	2W BK	8430	RLH Door Speaker	
Not Used					3					Not Used	
Not Used					4					Not Used	
Door Lock	BCM	15W WI	B3								
FRH Door Lock Assembly	IC71	16W BK	15	6203	5	620	5	5W BR	6212	RLH Door Lock Assembly	
FLH Door Lock Assembly	IC70	16W BK	15								
RRH Door lock Assembly	IC73	14W BK	5								
Not Used					6					Not Used	
Heater Blower Relay Gruond	RB00B	10W WI	A2								
Not Used	IC23B	6W BK	5								
Gruond		EC23									
Roof Lamp Gruond	3010	4W GN	2								
BCM Ground	BCM	40W BK	4								
BCM Ground	BCM	15W WI	B1	E220	7	MC20S	3	5W BR	6212	RLH Door Lock Assembly Ground	
FLH Door Lock Assembly And Mirros Ground	IC70	16W BK	10								
Seat Belt Switch Gruond	4730	2W WI	1								
Hand Brake Switch Gruond	4400	2W BR	2								
Bootlid Relay Gruond	RB00A	10W GY	A4								
Not Used					8					Not Used	
Not Used					9					Not Used	
Not Used					10					Not Used	
Not Used					11					Not Used	
Doors Unlock	BCM	15W WI	B2								
FLH Door Lock Assembly	IC70	16W BK	2	6213	12	6211	4	5W BR	6212	RLH Door Lock Assembly	
FRH Door Lock Assembly	IC71	16W BK	2								
RLH Door Lock assembly	IC73	14W BK	12								
Boot Lock Motor	6260	2W WI	1								
Not Used					13	622	2	5W BR	6212	RLH Door Lock Assembly	
RLH Door Switch	BCM	40W BK	20	6288	14	6287	1	5W BR	6212	RLH Door Lock Assembly	

Interconnector – Runna ECO MUX

interior					IC73 14w BK	Rear Door RH					
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function	
Radio	8410B	8W WI	1	8470	1	8470	1	2W BK	8435	RRH Door Speaker	
Radio	8410B	8W WI	2	8471	2	8471	2	2W BK	8435	RRH Door Speaker	
Not Used					3					Not Used	
Not Used					4					Not Used	
Door Lock	BCM	15W WI	B3								
FRH Door Lock Assembly	IC71	16W BK	15	6204	5	620	5	5W BR	6217	RRH Door Lock Assembly	
RLH Door Lock Assembly	IC72	14W BK	5								
FLH Door lock Assembly	IC70	16W BK	15								
Not Used					6					Not Used	
Gruond		EC22									
FRH View Mirror Gruond	IC71	16W BK	10								
RRH Door Lock Assembly Ground	IC71	16W BK	7								
Radio	8410A	8W BK	8	E64	7	MC20S	3	5W BR	6217	RRH Door Lock Assembly Ground	
Electric Window/Mirror Control Pad	6036P	9W BK	A4								
Electrical Mirror Switch	6405	8W BK	A4								
Not Used					8					Not Used	
Not Used					9					Not Used	
Not Used					10					Not Used	
Not Used					11					Not Used	
Doors Unlock	BCM	15W WI	B2								
FLH Door Lock Assembly	IC70	16W BK	2	6214	12	6211	4	5W BR	6217	RRH Door Lock Assembly	
RLH Door Lock Assembly	IC72	14W BK	12								
FRH Door Lock Assembly	IC71	16W BK	2								
Boot Unlock	6260	2W WI	1								
Not Used					13	622	2	5W BR	6217	RRH Door Lock Assembly	
RRH Door Switch	BCM	40W BK	19	6287	14	6287	1	5W BR	6217	RRH Door Lock Assembly	



Interconnector – Runna ECO MUX

Dashboard					IC77 2w GN	Interior				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Passenger Airbag Module	6564	2W BK	1	6510	1	6510	18	50W OR	6750	Passenger Airbag
Passenger Airbag Module	6564	2W BK	2	6511	2	6511	19	50W OR	6750	Passenger Airbag

  

Engine					IC22A 6w BK	Injector				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Engine ECU (-)	1320	90W BK	B59	1321	1	1321	1	2W BK	1331	Injector 1 (ECU Earth)
Engine ECU (-)	1320	90W BK	B89	1322	2	1322	1	2W BK	1332	Injector 2 (ECU Earth)
Oxygen Sensor	1350B	4W BK	3	1200	3	1320	2	2W BK	1331	Injector 1 (+)
Ignition Coil	1135	6W BK	2				2	2W BK	1332	Injector 2 (+)
Canister Discharge Electrovalve	1215	2W BR	2				2	2W BK	1333	Injector 3 (+)
Main Relay	RLYb	10W BK	A5				2	2W BK	1334	Injector 4 (+)
Engine ECU (+)	1320	90W BK	A66		4					Not Used
Not Used										
Engine ECU (-)	1320	90W BK	B90	1323	5	1323	1	2W BK	1333	Injector 3 (ECU Earth)
Engine ECU (-)	1320	90W BK	B60	1324	6	1324	1	2W BK	1334	Injector 4 (ECU Earth)

  

Interior					IC80 3w BK	Rear Bumper				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Ground		EC21		EC80	1	EC21B	1	2W BK	2011	Rear Fog Lamp Ground
RH Tail Lamp Ground	2635	6W BK	3				2	2W BR	2633	LH Number Plate Lamp Ground
Rear Fog Lamp	BCM	15W WI	A6	202	2	201	2	2W BK	2011	Rear Fog Lamp
Mirror Switch Backlight	6405	8W BK	A1	V094	3	V091	1	2W BR	2633	LH Number Plate Lamp
Side Lamp	BCM	15W WI	A7							
Radio Backlight	8410A	8W BK	6							
Side Lamp	IC23C	16W BK	2							
Aircondition Panel Backlight	8025	10W BK	1B							
Dashboard Switches Backlight	IC23A	16W BK	12							
Side Lamp	2635	6W BK	6							
Side Lamp	2630	6W BK	6							

Interconnector - Runna ECO MUX

Interior					IC8060A 6w BK	Air condition				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
Evaprator Sensor	BCM	18W WI	10	8051	1	8051	2	2W BK	8006	Evaprator Sensor
Grand		EC50		E8052	2	E8052	1	2W BK	8006	Evaprator Sensor grand
AC switch power (IGN)	RB00B	10W BK	3A	8031	3	6	5A	10W BK	8025	AC switch power (IGN)
Grand		EC50		E802	4	8	1	2W GY	8050	Blower motor Grand
Not Used					5					Not Used
Not Used					6					Not Used

Interior					IC8060B 6w BK	Air condition				
Function	Part	Connector	Pin Num	Wire Num	Interconnector Pin Num	Wire Num	Pin Num	Connector	Part	Function
LED Air condition panel	BCM	15W WI	A7	V811	1	V811	1B	10W BK	8025	Air condition panel back light
Heater screen & mirrors power	RB00B	10W BK	B5	813A	2	813A	2A	10W BK	8025	Heater screen & mirrors LED
Heater screen power	8120B	1W BK	1							
Heater left mirror power	IC70	16W BK	4							
Heater right mirror power	IC71	16W BK	4							
AC request	BCM	40W BK	35	8054	3	8054	3A	10W BK	8025	AC command
Not Used					4					Not Used
Heater screen & mirrors request	BCM	40W BK	29	K23	5	K23	1A	10W BK	8025	Heater screen & mirrors command
Grand		EC50		E806	6	E806	4A	10W BK	8025	Air condition panel grand



اولین سامانه دیجیتال تعمیرکاران خودرو (مستقلیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

