


Combination instrument power supply, grounding, data line

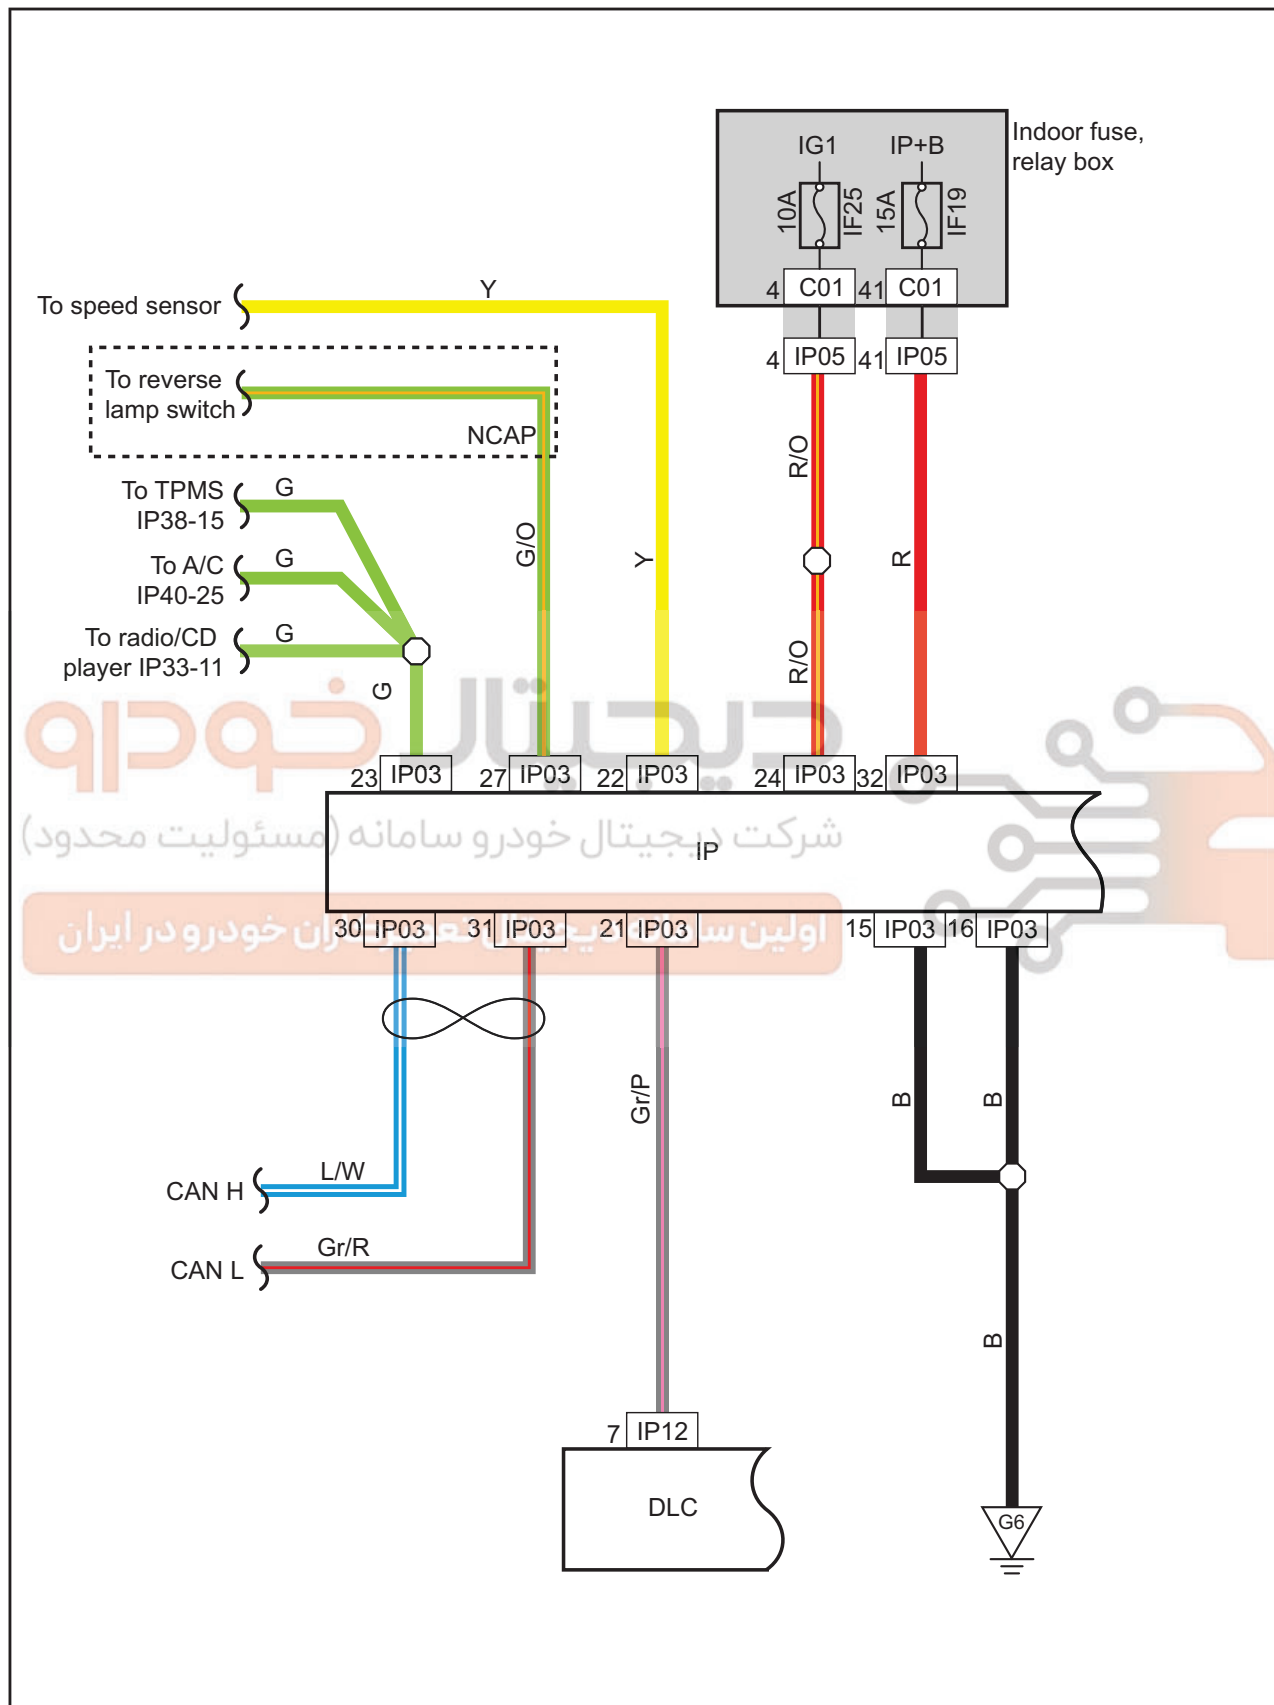


Harness connector	Name	Pages
C01	Rear Connector of Indoor Fuse Box	17
IP05	To harness connector of indoor fuse box	80
IP03	Combination instrument harness connector	80
IP12	DLC harness connector	80
G6	Instrument panel grounding	125

Connection point	Descriptions	Pages
IP03-22	To speed sensor	249/251/253 255/257/258 260/262
IP03-23	To TPMS control module IP38-15	412
IP03-23	To A/C control module IP40-25	362
IP03-23	To Radio/CD player IP33-11	534/536
IP03-30	CAN H	550/552/554 558/560/561 563/565/567
IP03-31	CAN L	550/552/554 558/560/561 563/565/567

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Combination instrument power supply, grounding, data line (JL4G18-G-CVT)

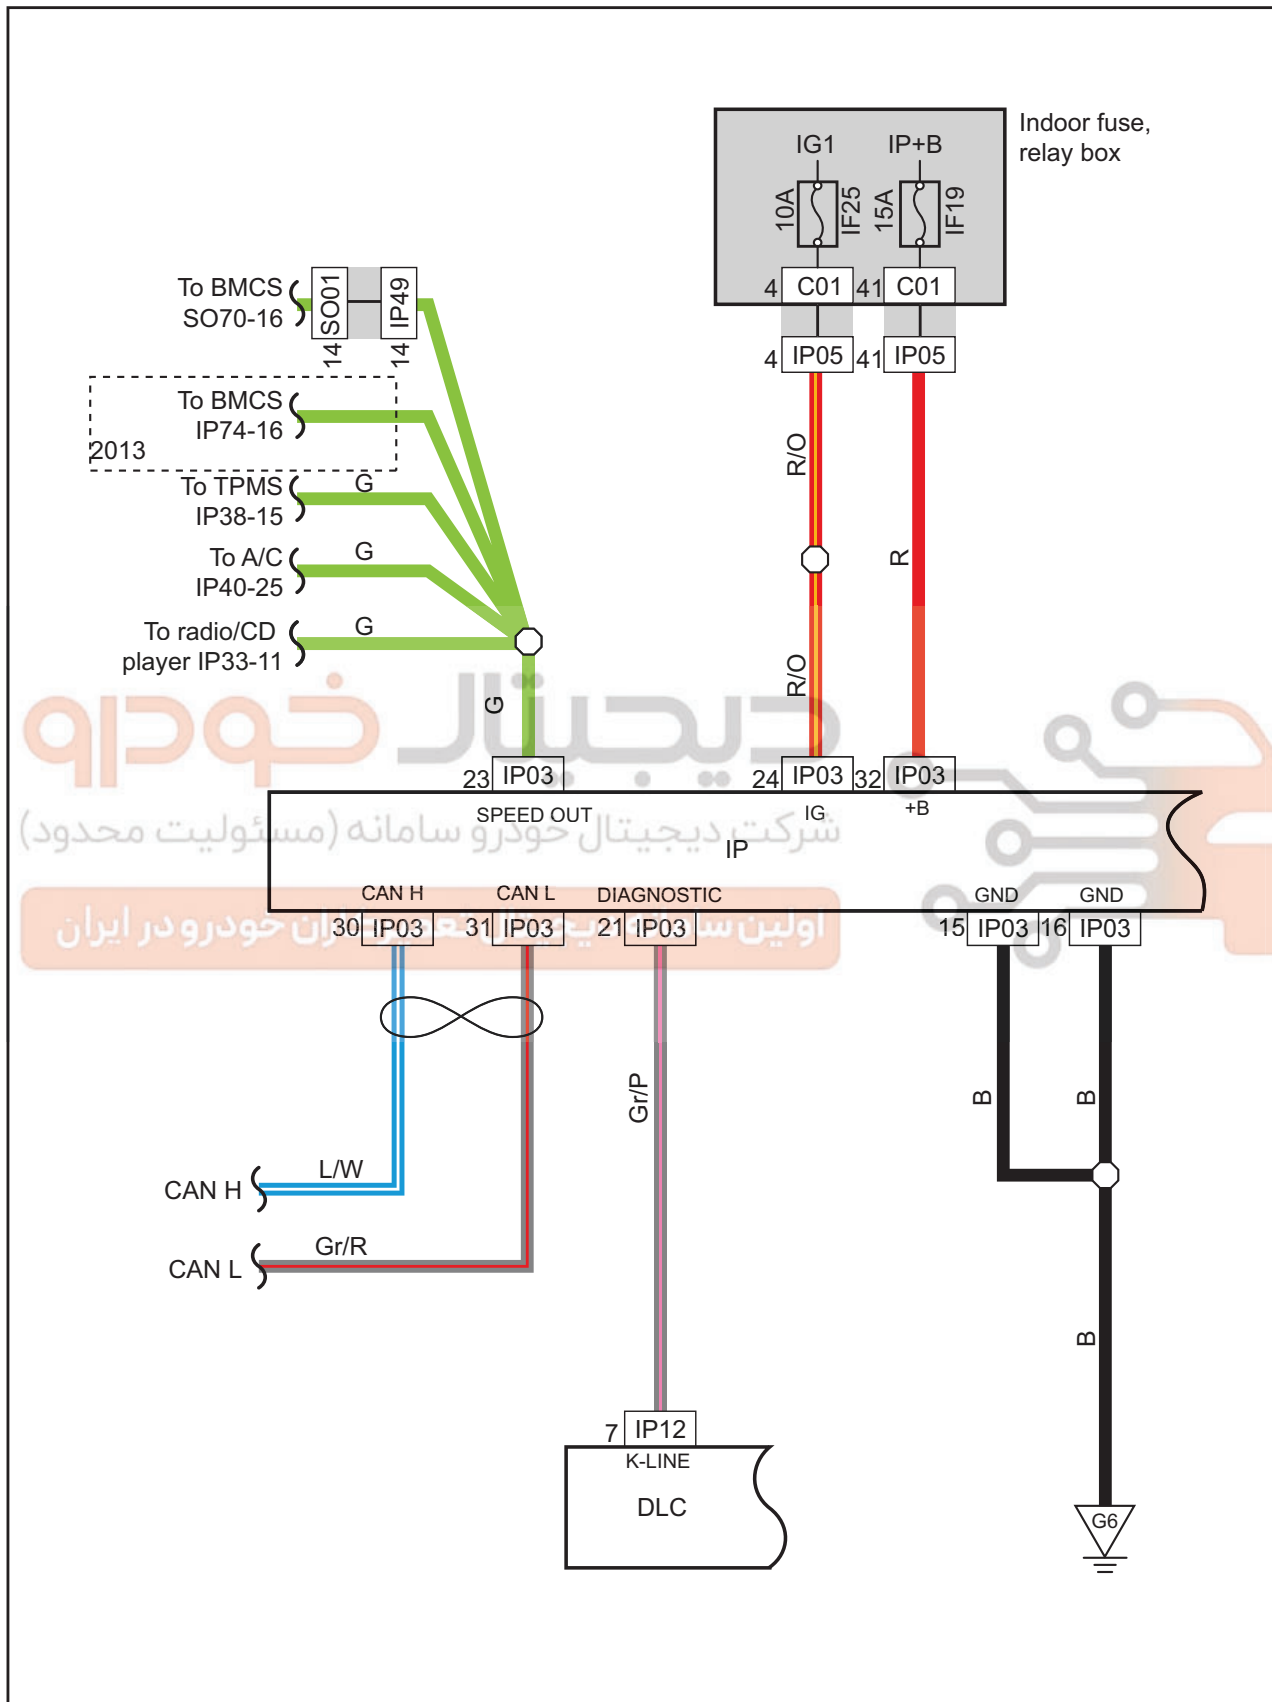


Harness connector	Name	Pages
C01	Rear Connector of Indoor Fuse Box	17
IP03	Combination instrument harness connector	80
IP05	To harness connector of indoor fuse box	80
IP12	DLC harness connector	80
IP49	To harness connector of body harness (right)	80
SO01	To harness connector of instrument harness	97/106
G6	Instrument panel grounding	125


Connection point	Descriptions	Pages
IP03-23	To BMCS control module SO70-16	414
IP03-23	To BMCS control module IP74-16	415
IP03-23	To TPMS control module IP38-15	412
IP03-23	To A/C control module IP40-25	362
IP03-23	To Radio/CD player IP33-11	534/536
IP03-30	CAN HI	556
IP03-31	CAN LOW	556

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

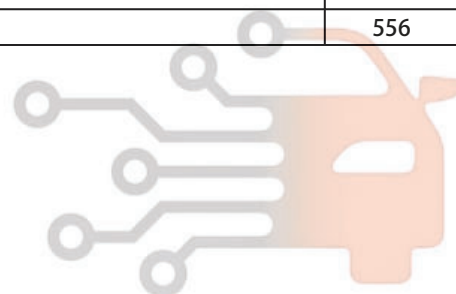

Combination instrument sound warning, alarm

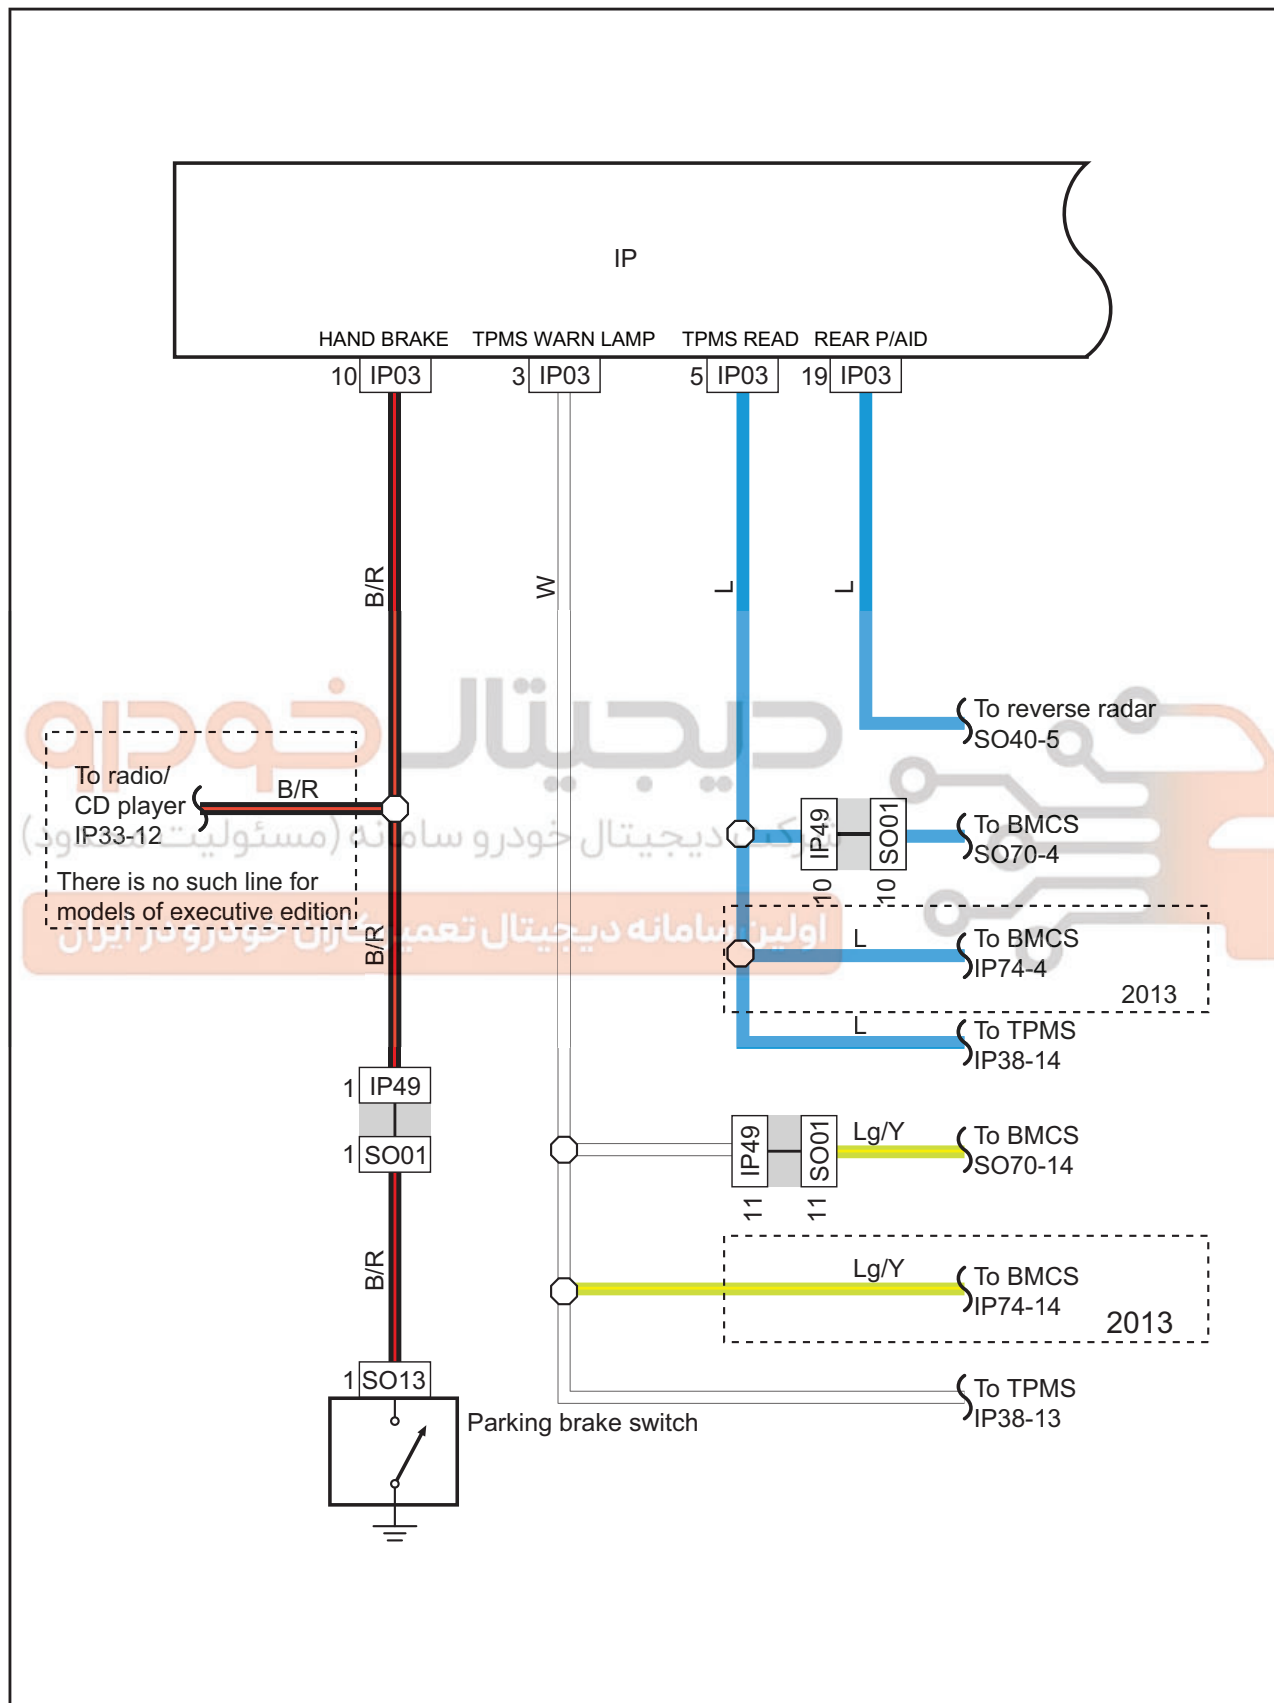

Harness connector	Name	Pages
IP03	Combination instrument harness connector	80
IP49	To harness connector of body harness (right)	80
SO01	To harness connector of instrument harness	97/106
SO13	Handbrake switch harness connector	97/106

Connection point	Descriptions	Pages
IP03-10	To Radio/CD player IP33-12	534/536
IP03-3	To TPMS control module IP38-13	412
IP03-3	To BMCS control module SO70-14	414
IP03-3	To BMCS control module IP74-14	415
IP03-5	To TPMS control module IP38-14	412
IP03-5	To BMCS control module SO70-4	414
IP03-5	To BMCS control module IP74-4	415
IP03-19	To reverse radar SO40-5	418/420


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Combination instrument lighting, indicator

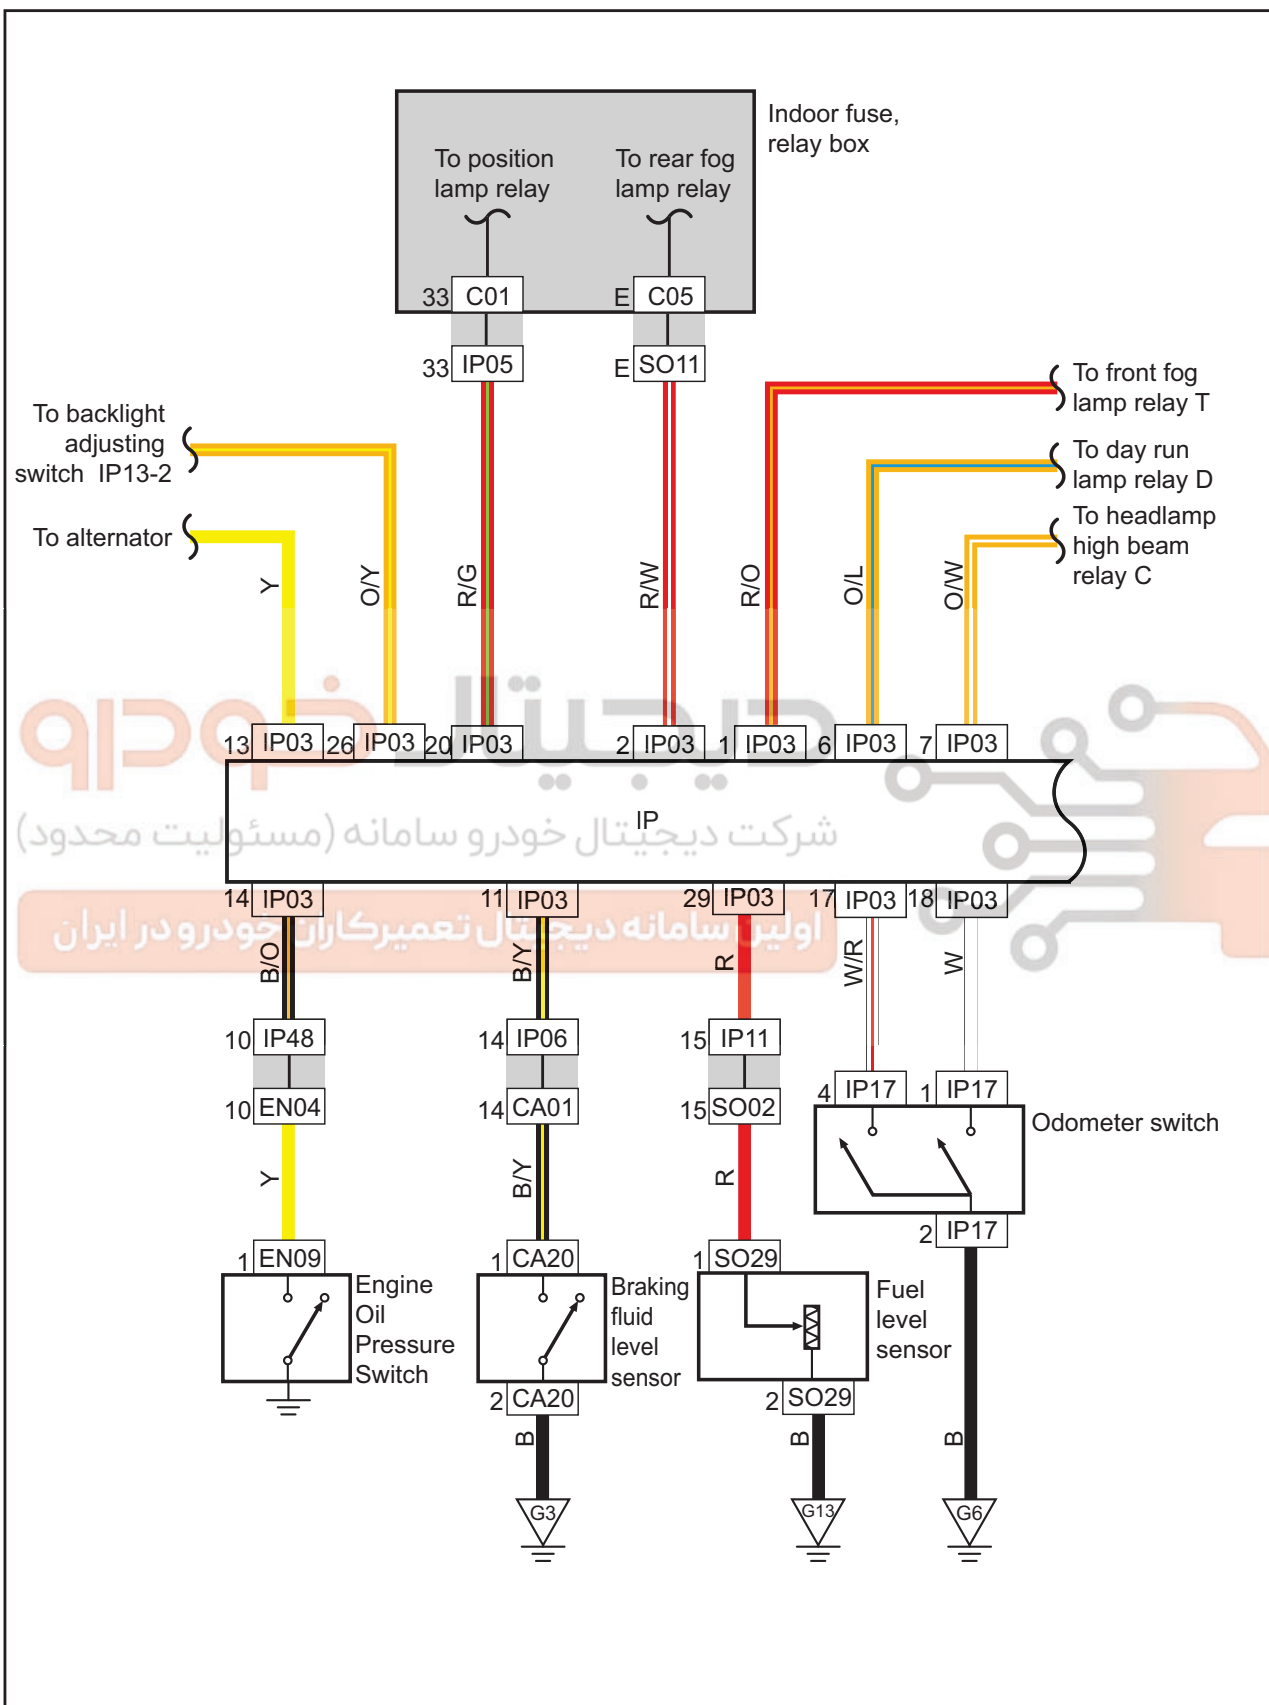

Harness connector	Name	Pages
C01	Rear Connector of Indoor Fuse Box	17
C05	Rear Connector of Indoor Fuse Box	17
CA01	To harness connector of instrument harness 1	22
CA20	Harness connector of brake fluid level sensor	23
EN04	To instrument harness connector	28
EN09	Oil pressure sensor harness connector	29
IP03	Combination instrument harness connector	80
IP05	To harness connector of indoor fuse & relay box	80
IP06	To engine compartment harness connector	80
IP11	To body harness connector	80
IP17	Odometer shifting switch harness connector	80
IP48	To engine harness connector	80
SO02	To instrument harness connector	97/106
SO11	To harness connector of indoor fuse & relay box	97/106
SO29	Harness connector of fuel pump	97/106
G3	Engine compartment grounding	121
G6	Instrument panel grounding	125
G13	Body harness grounding	126/127/128

Connection point	Descriptions	Pages
IP03-1	To front fog lamp relay T	473/474/475 477/478
IP03-6	To day run lamp relay D	467
IP03-7	To headlamp high beam relay C	465
IP03-13	To alternator	142/144/146 148
IP03-26	To backlight adjusting switch IP13-2	517

Multi-functional Instrument



Harness connector	Name	Pages
IP01	Multi-functional instrument harness connector	80
IP02	Harness connector from combination instrument to multi-functional instrument	80

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

