


Air Conditioning

Manual A/C System

Circuit Diagram (Page 1 of 3)

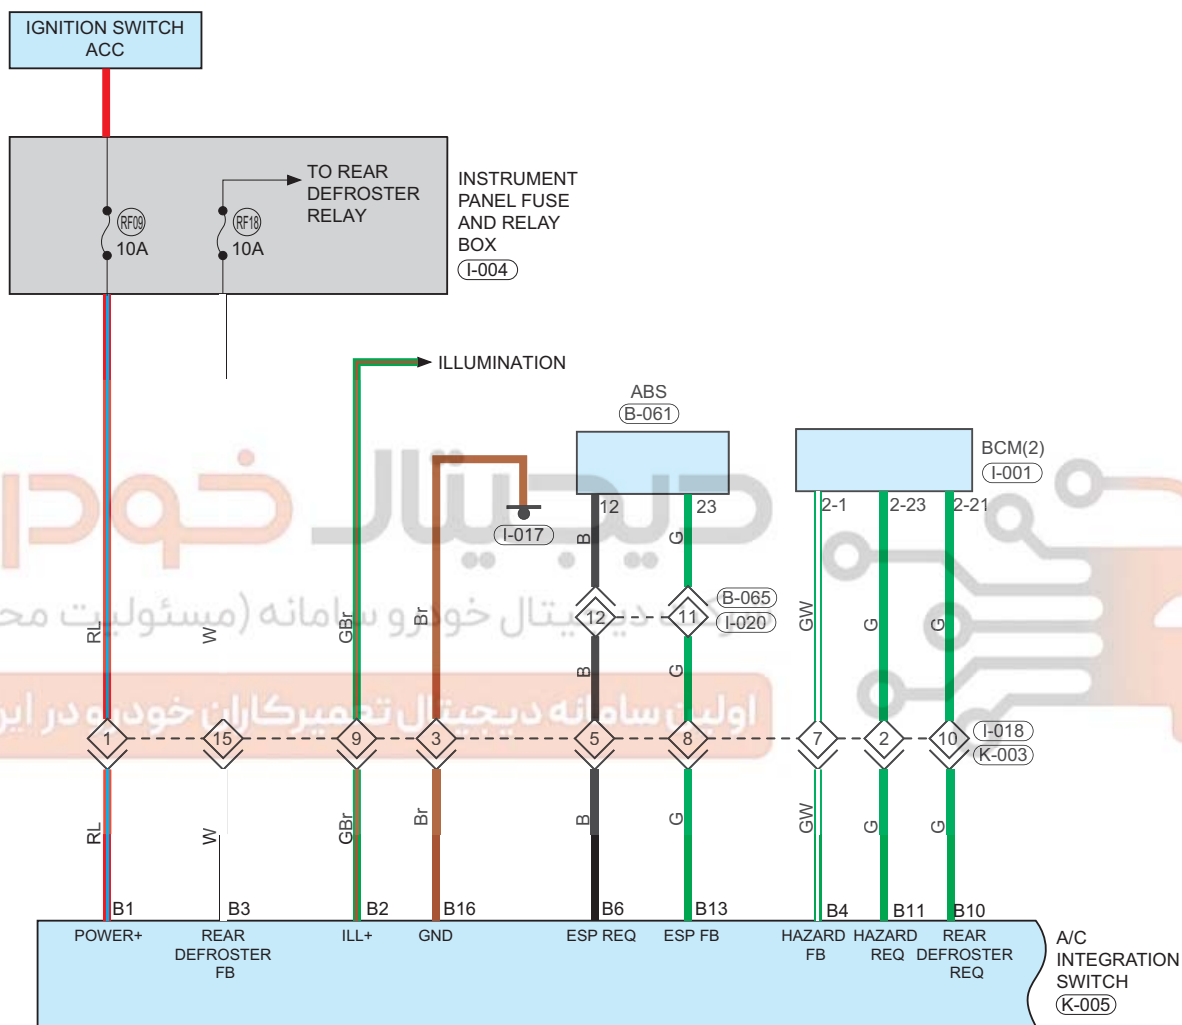

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004	08-8	B-061	08-11	I-001	08-8
K-005	08-10				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF09	06-13	Instrument Panel Fuse and Relay Box
RF18	06-13	Instrument Panel Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-065, I-020	08-11, 08-8	K-003, I-018	08-10, 08-8		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004	12-4	I-001	12-4	B-061	12-8
K-005	12-12	B-065, I-020	12-9, 12-5	K-003, I-018	12-12, 12-5

Circuit Diagram (Page 2 of 3)

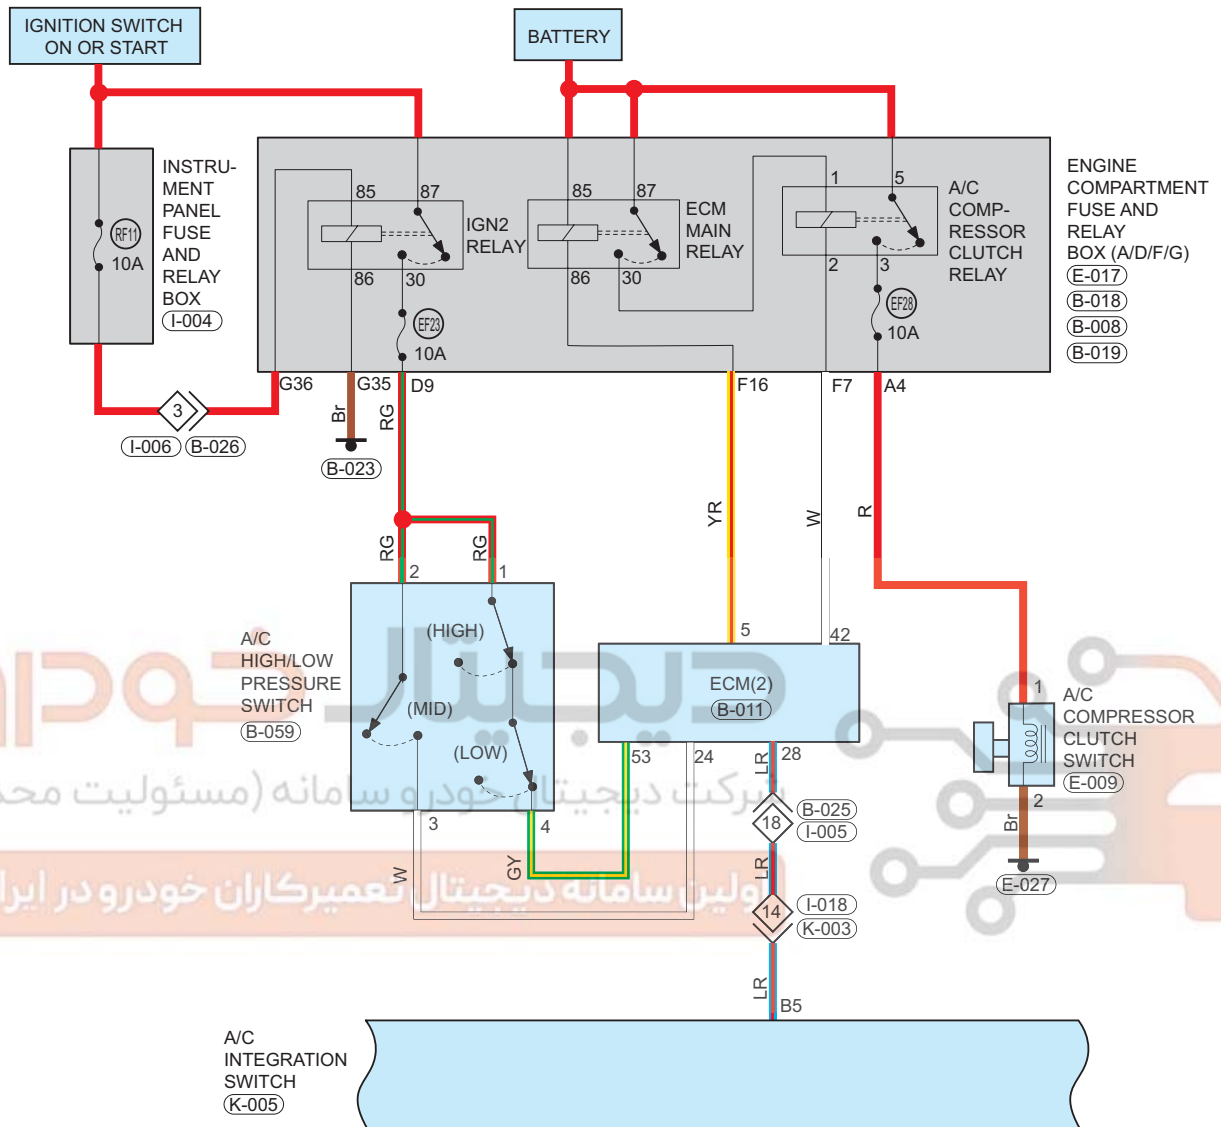

دیجیتال خودرو (مسئولیت محدود)
 اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004	08-8	B-018	08-11	E-009	08-5
K-005	08-10	B-019	08-11	B-008	08-11
E-017	08-5	B-059	08-11	B-011	08-11

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF11	06-13	Instrument Panel Fuse and Relay Box
EF23	06-4	Engine Compartment Fuse and Relay Box
EF28	06-4	Engine Compartment Fuse and Relay Box
IGN2 Relay	06-4	Engine Compartment Fuse and Relay Box
ECM Main Relay	06-4	Engine Compartment Fuse and Relay Box
A/C Compressor Clutch Relay	06-4	Engine Compartment Fuse and Relay Box

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-026, I-006	08-11, 08-8	K-003, I-018	08-10, 08-8	B-025, I-005	08-11, 08-8

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004	12-4	B-018	12-6	E-009	12-3
K-005	12-12	B-019	12-6	B-008	12-6
E-017	12-3	B-059	12-8	B-011	12-6
K-003, I-018	12-12, 12-5	B-025, I-005	12-6, 12-4	B-026, I-006	12-7, 12-4

Circuit Diagram (Page 3 of 3)

