
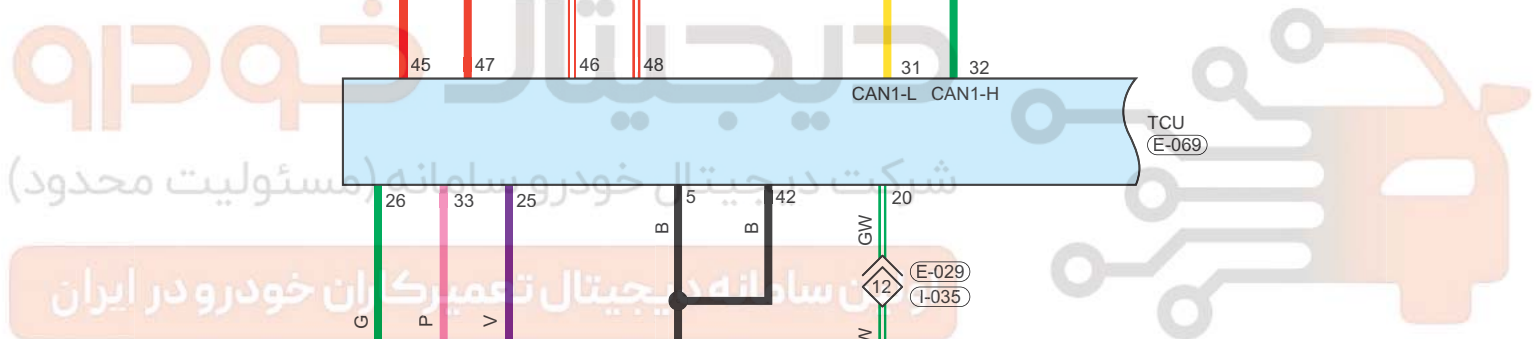


QR416AHA TCU

Circuit Diagram (Page 1 of 2)

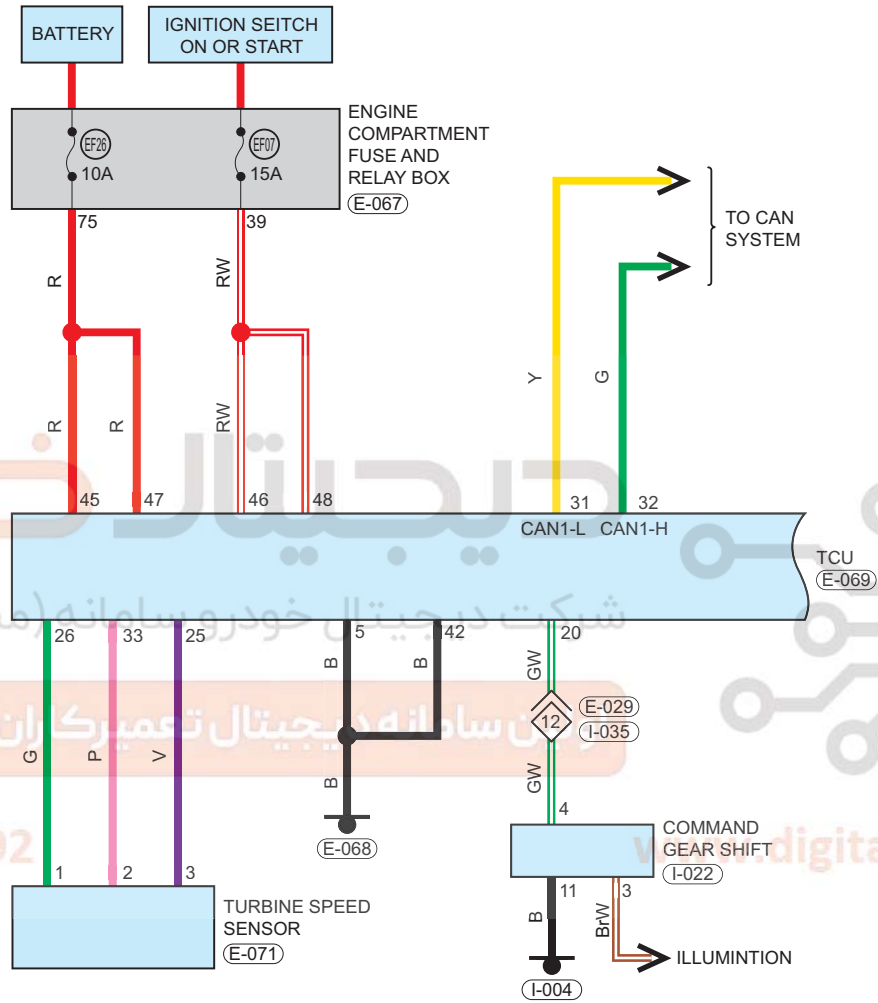

02 09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	08-7	E-069	08-7	E-071	08-7
E-068	08-7	I-004	08-10	I-022	08-10

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF07	06-2	Engine Compartment Fuse and Relay Box
EF26	06-2	Engine Compartment Fuse and Relay Box

Location of Junction Connector



Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-029, I-035	08-7, 08-10				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	12-6	E-069	12-6	E-071	12-6
E-068	12-6	I-004	12-7	I-022	12-8
E-029, I-035	12-3				

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 2 of 2)

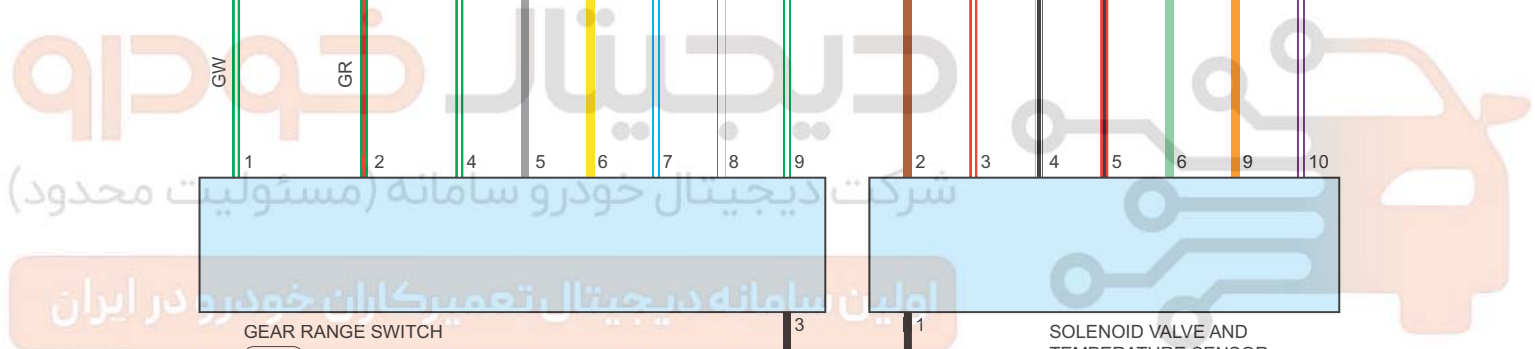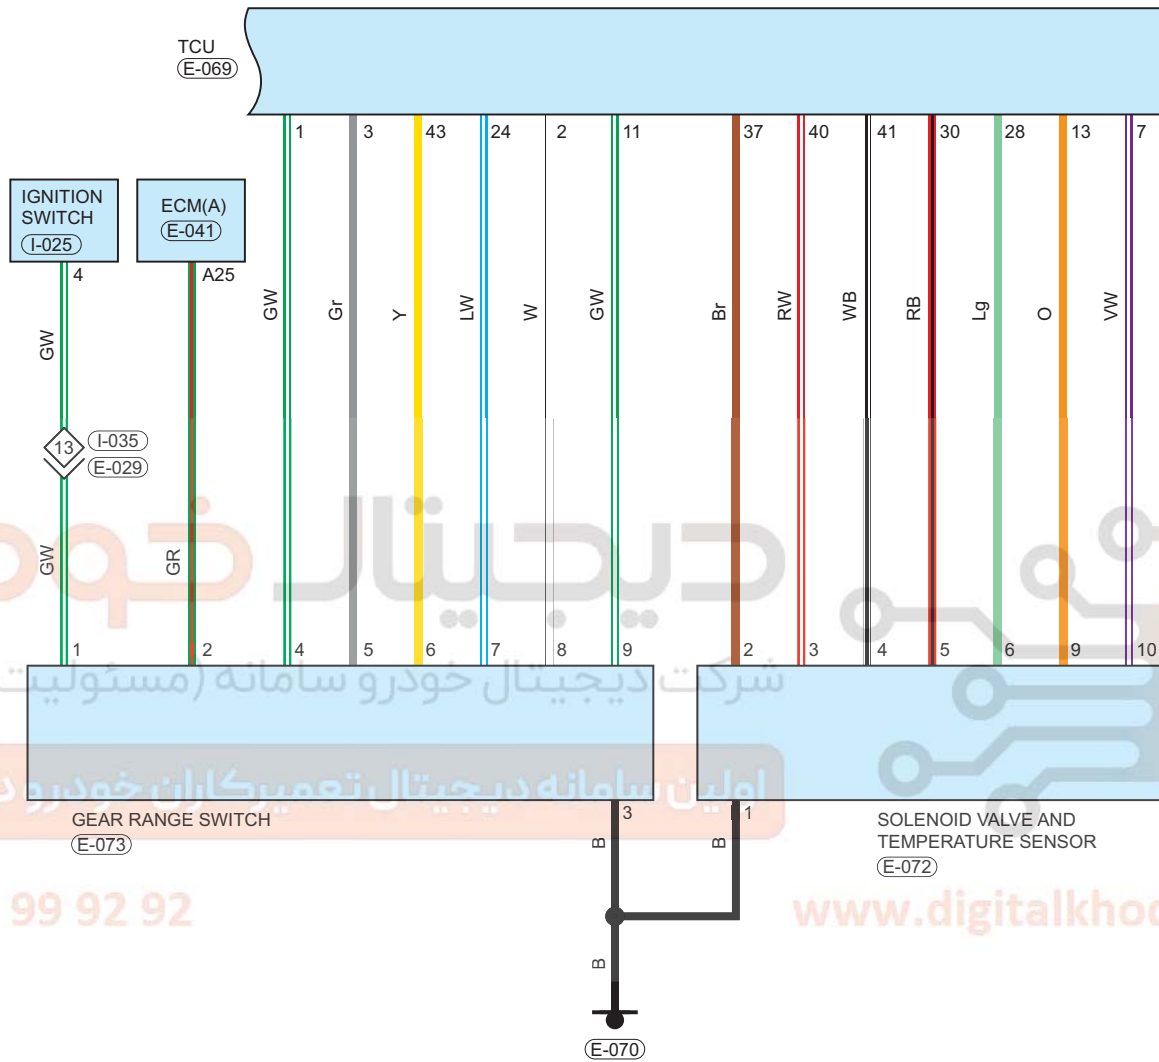

02 09 52 99 92 92

www.digitalkhodro.com

EA13T090220

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-069	08-7	E-072	08-7	E-070	08-7
E-073	08-7	E-041	08-7	I-025	08-10

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-035, E-029	08-10, 08-7				


Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-069	12-6	E-072	12-6	E-070	12-6
E-073	12-6	E-041	12-4	I-025	12-8
I-035, E-029	12-9				

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

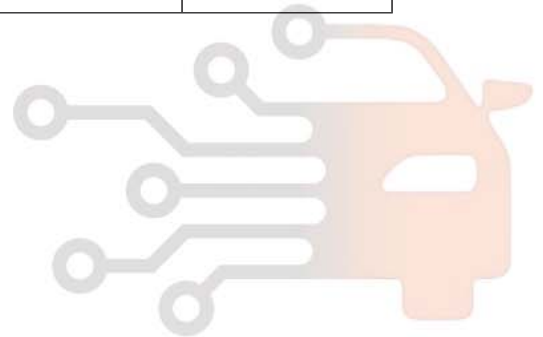

021 62 99 92 92

www.digitalkhodro.com 09