


PEPS System

Circuit Diagram (Page 1 of 5)

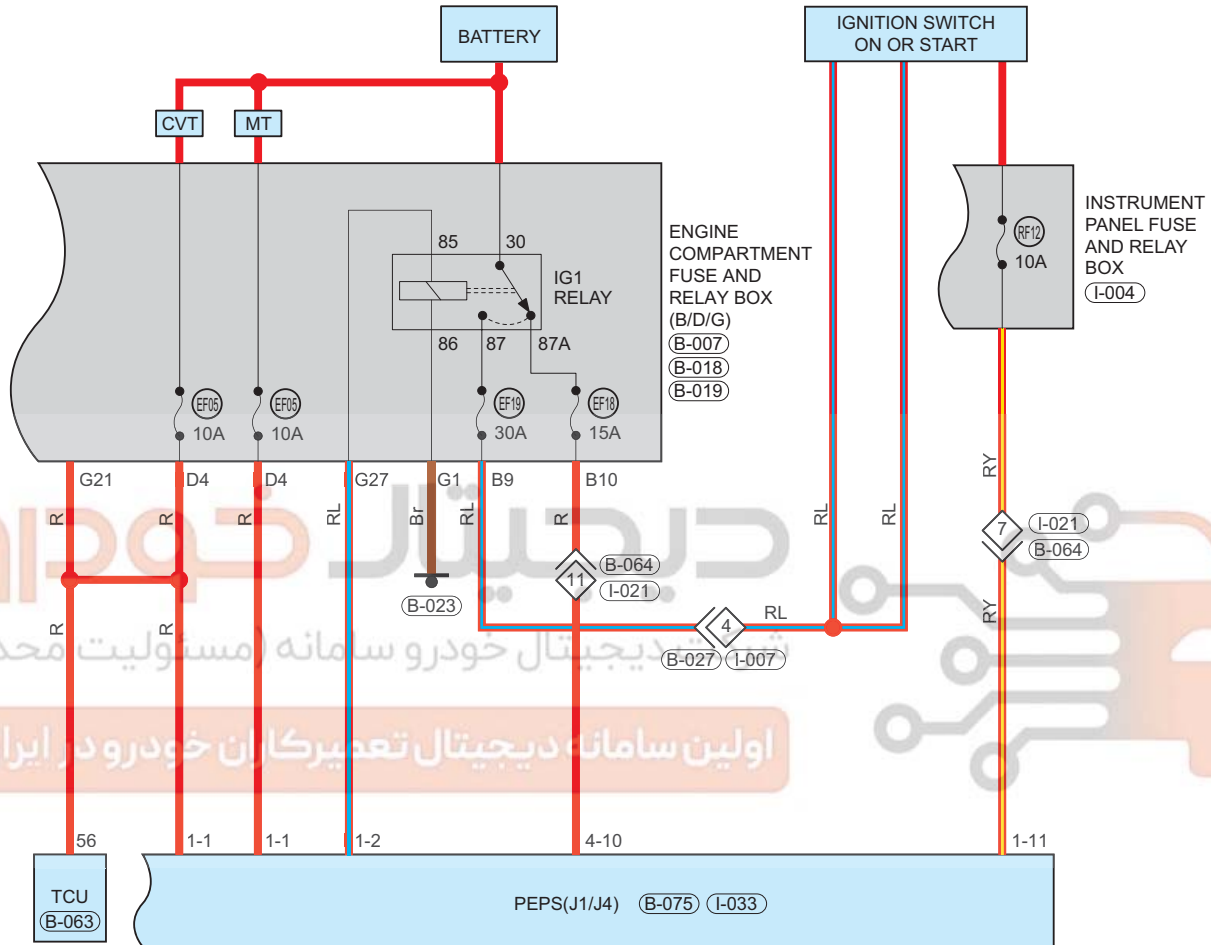

09

EM1A090710

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004	08-8	I-033	08-8	B-007	08-11
B-018	08-11	B-019	08-11	B-075	08-11
B-063	08-11				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF05	06-4	Engine Compartment Fuse and Relay Box
EF18	06-4	Engine Compartment Fuse and Relay Box
EF19	06-4	Engine Compartment Fuse and Relay Box
IG1 Relay	06-4	Engine Compartment Fuse and Relay Box
RF12	06-13	Instrument Panel Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-027, I-007	08-11, 08-8	B-064, I-021	08-11, 08-8		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004	12-4	I-033	12-5	B-007	12-6
B-018	12-6	B-019	12-6	B-075	12-9
B-063	12-8	B-027, I-007	12-7, 12-4	B-064, I-021	12-9, 12-5

Circuit Diagram (Page 2 of 5)

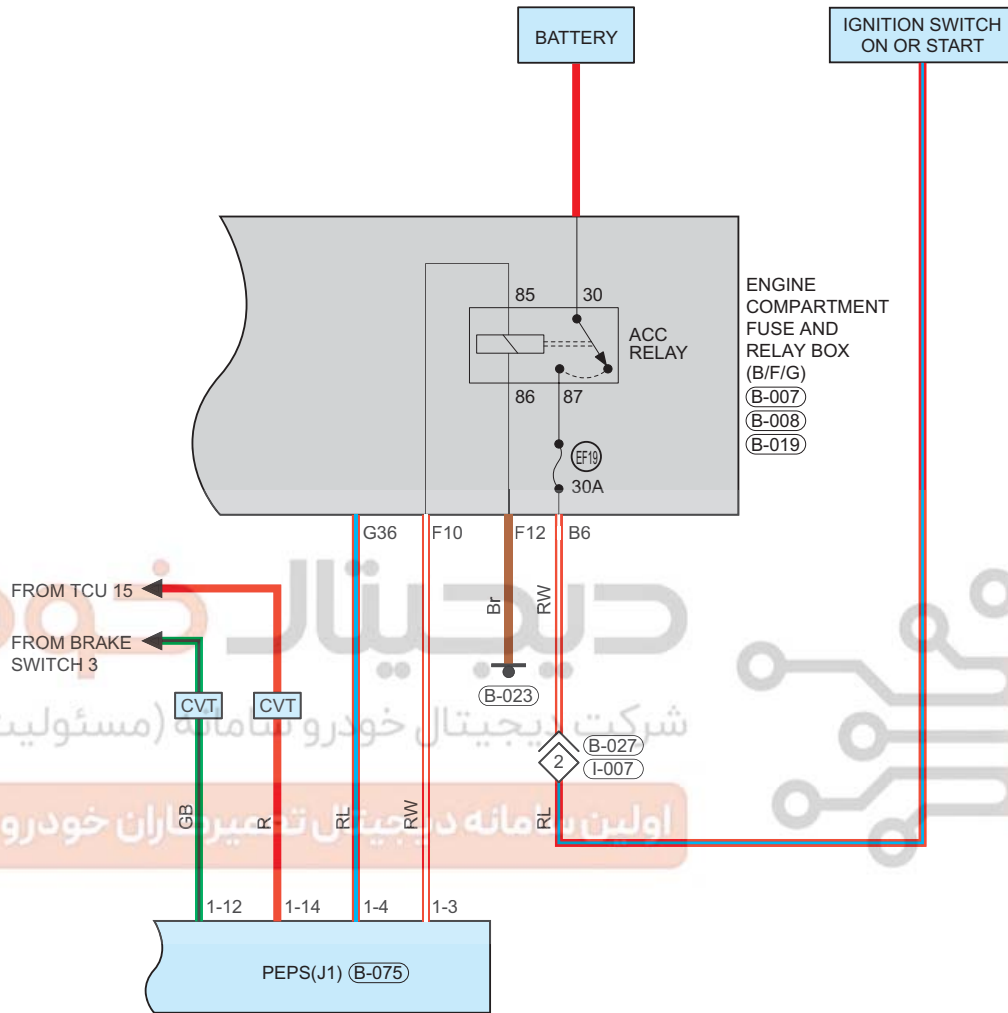

09

EM1A090720

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-007	08-11	B-008	08-11	B-019	08-11
B-075	08-11				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF19	06-4	Engine Compartment Fuse and Relay Box
ACC Relay	06-4	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-027, I-007	08-11, 08-8				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-007	12-6	B-008	12-6	B-019	12-6
B-075	12-9	B-027, I-007	12-7, 12-4		

Circuit Diagram (Page 3 of 5)

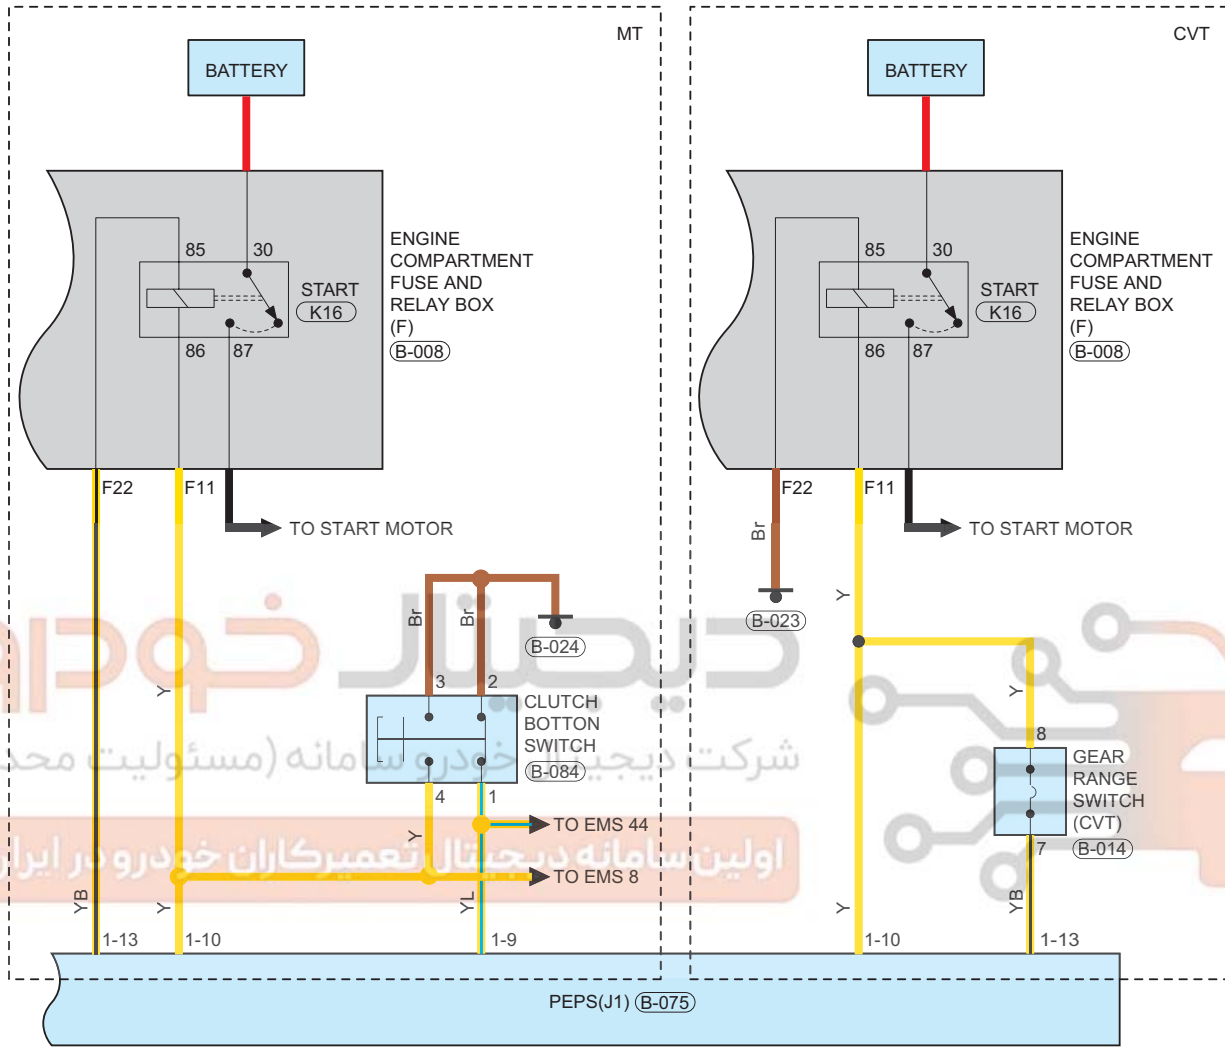

09

EM1A090730

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-008	08-11	B-075	08-11	B-014	08-11
B-084	08-11				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
Start Relay	06-4	Engine Compartment Fuse and Relay Box

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-008	12-6	B-075	12-9	B-014	12-6
B-084	12-9				


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 4 of 5)

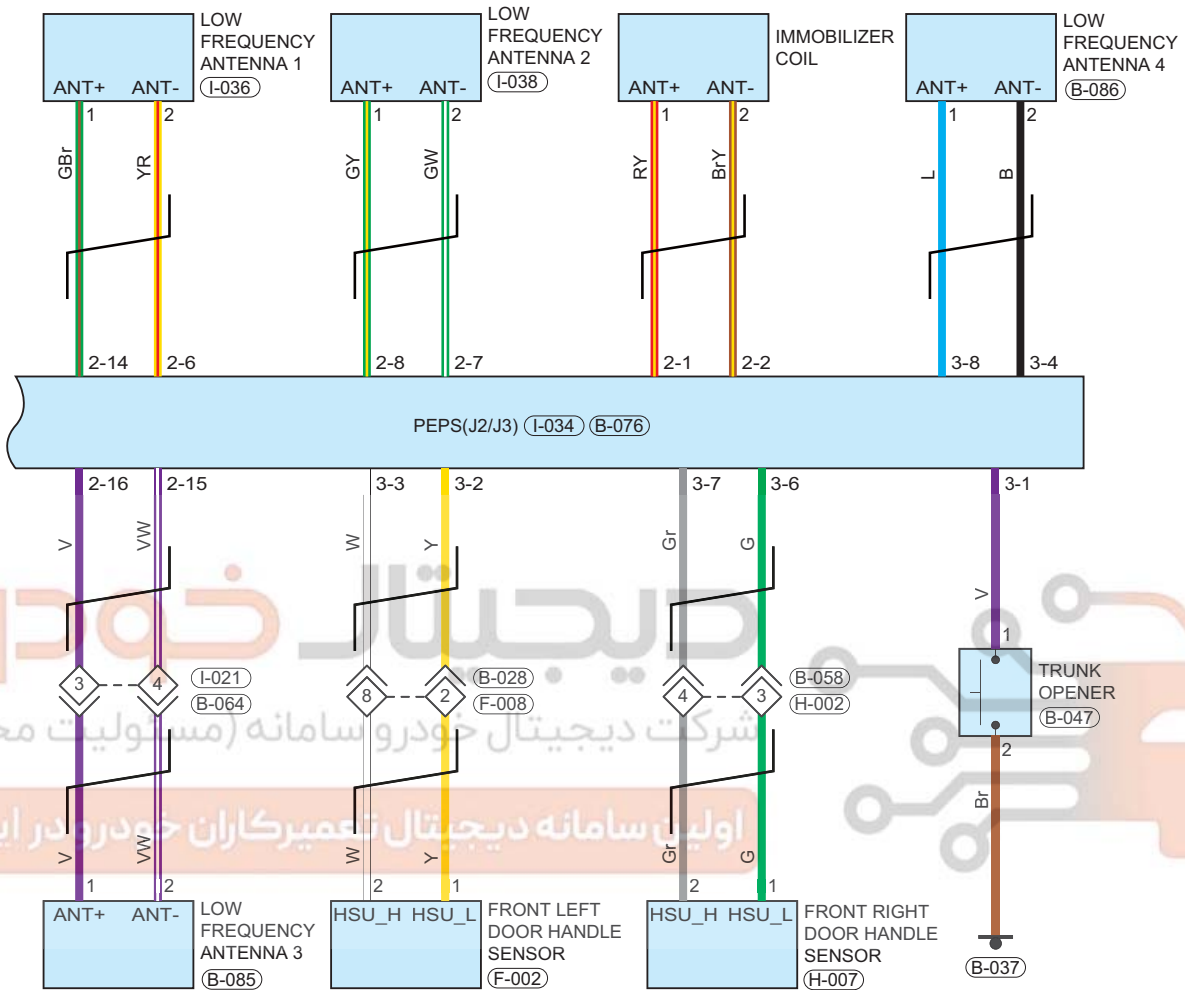

09

EM1A090740

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-036	08-8	I-038	08-8	I-034	08-8
B-076	08-11	F-002	08-17	B-086	08-11
B-085	08-11	H-007	08-18	B-047	08-11

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-064, I-021	08-11, 08-8	B-028, F-008	08-11, 08-17	B-058, H-002	08-11, 08-18

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004	12-4	I-038	12-4	I-034	12-4
B-076	12-9	F-002	12-10	B-086	12-9
B-085	12-9	H-007	12-10	B-047	12-7
B-064, I-021	12-9, 12-5	B-028, F-008	12-7, 12-10	B-058, H-002	12-8, 12-10

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

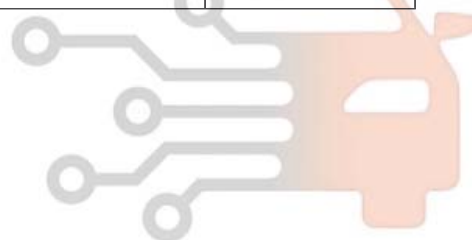

Circuit Diagram (Page 5 of 5)

