




Indoor fuse & relay box

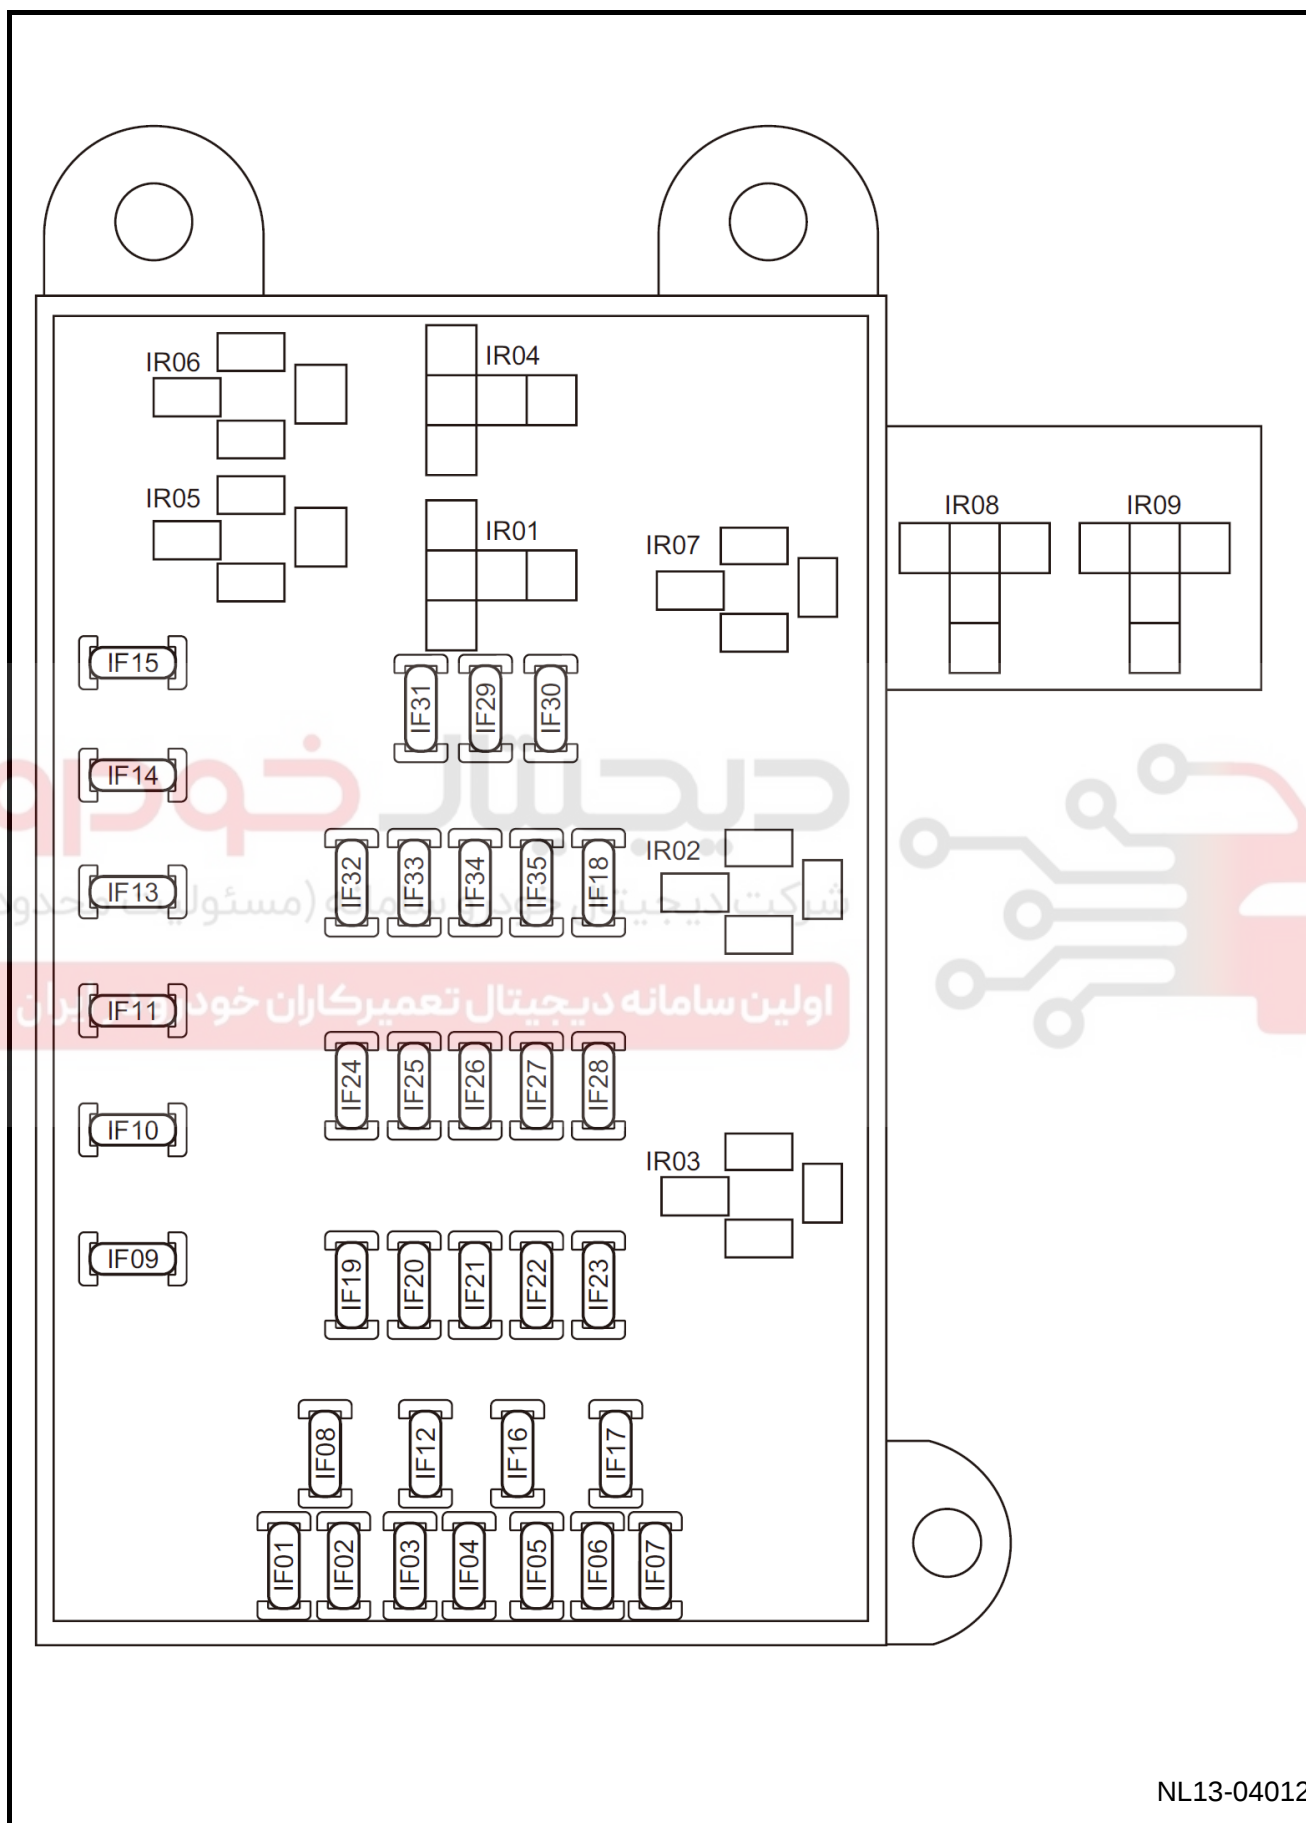

Internal Wiring Diagram of Indoor Fuse, Relay Box

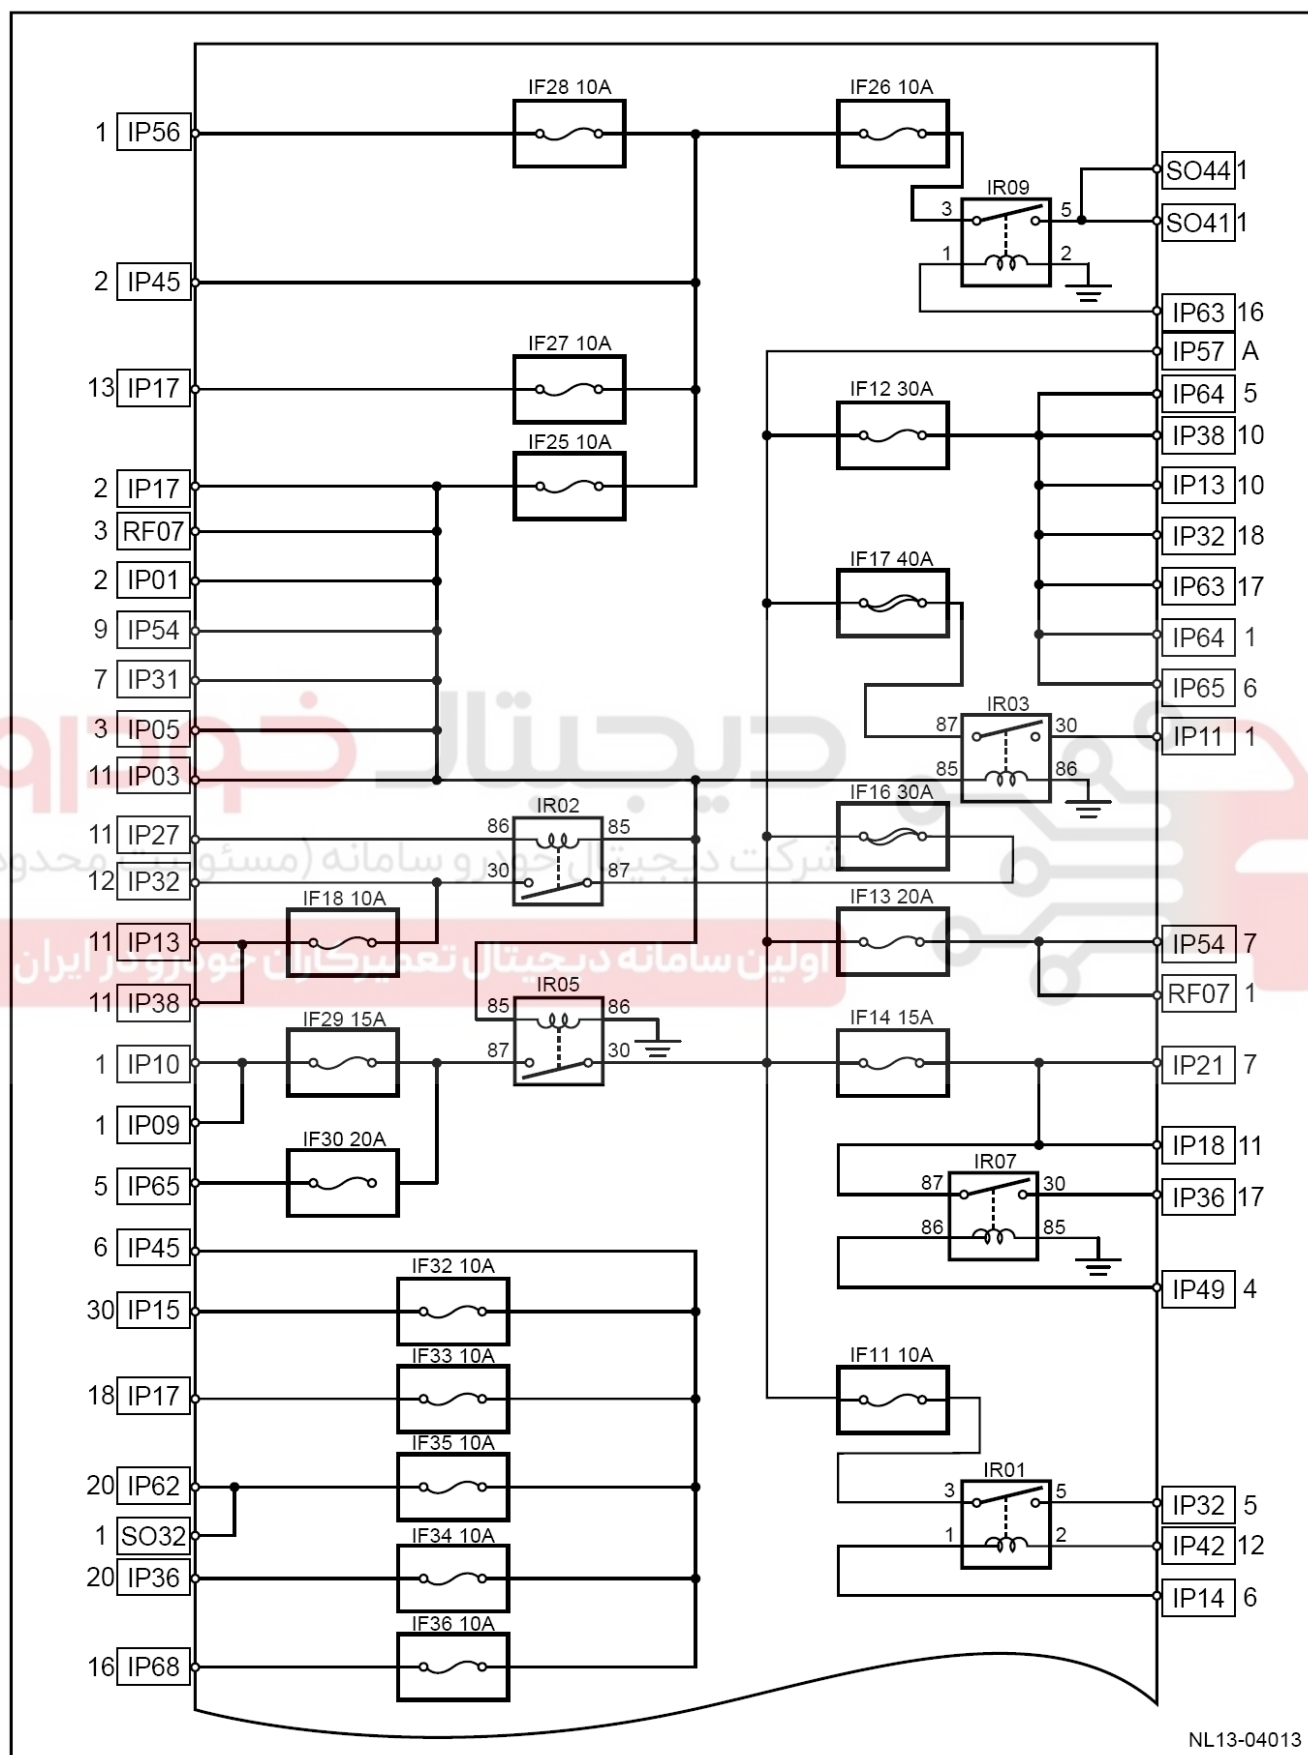

Internal Wiring Diagram of Indoor Fuse, Relay Box (Continued)

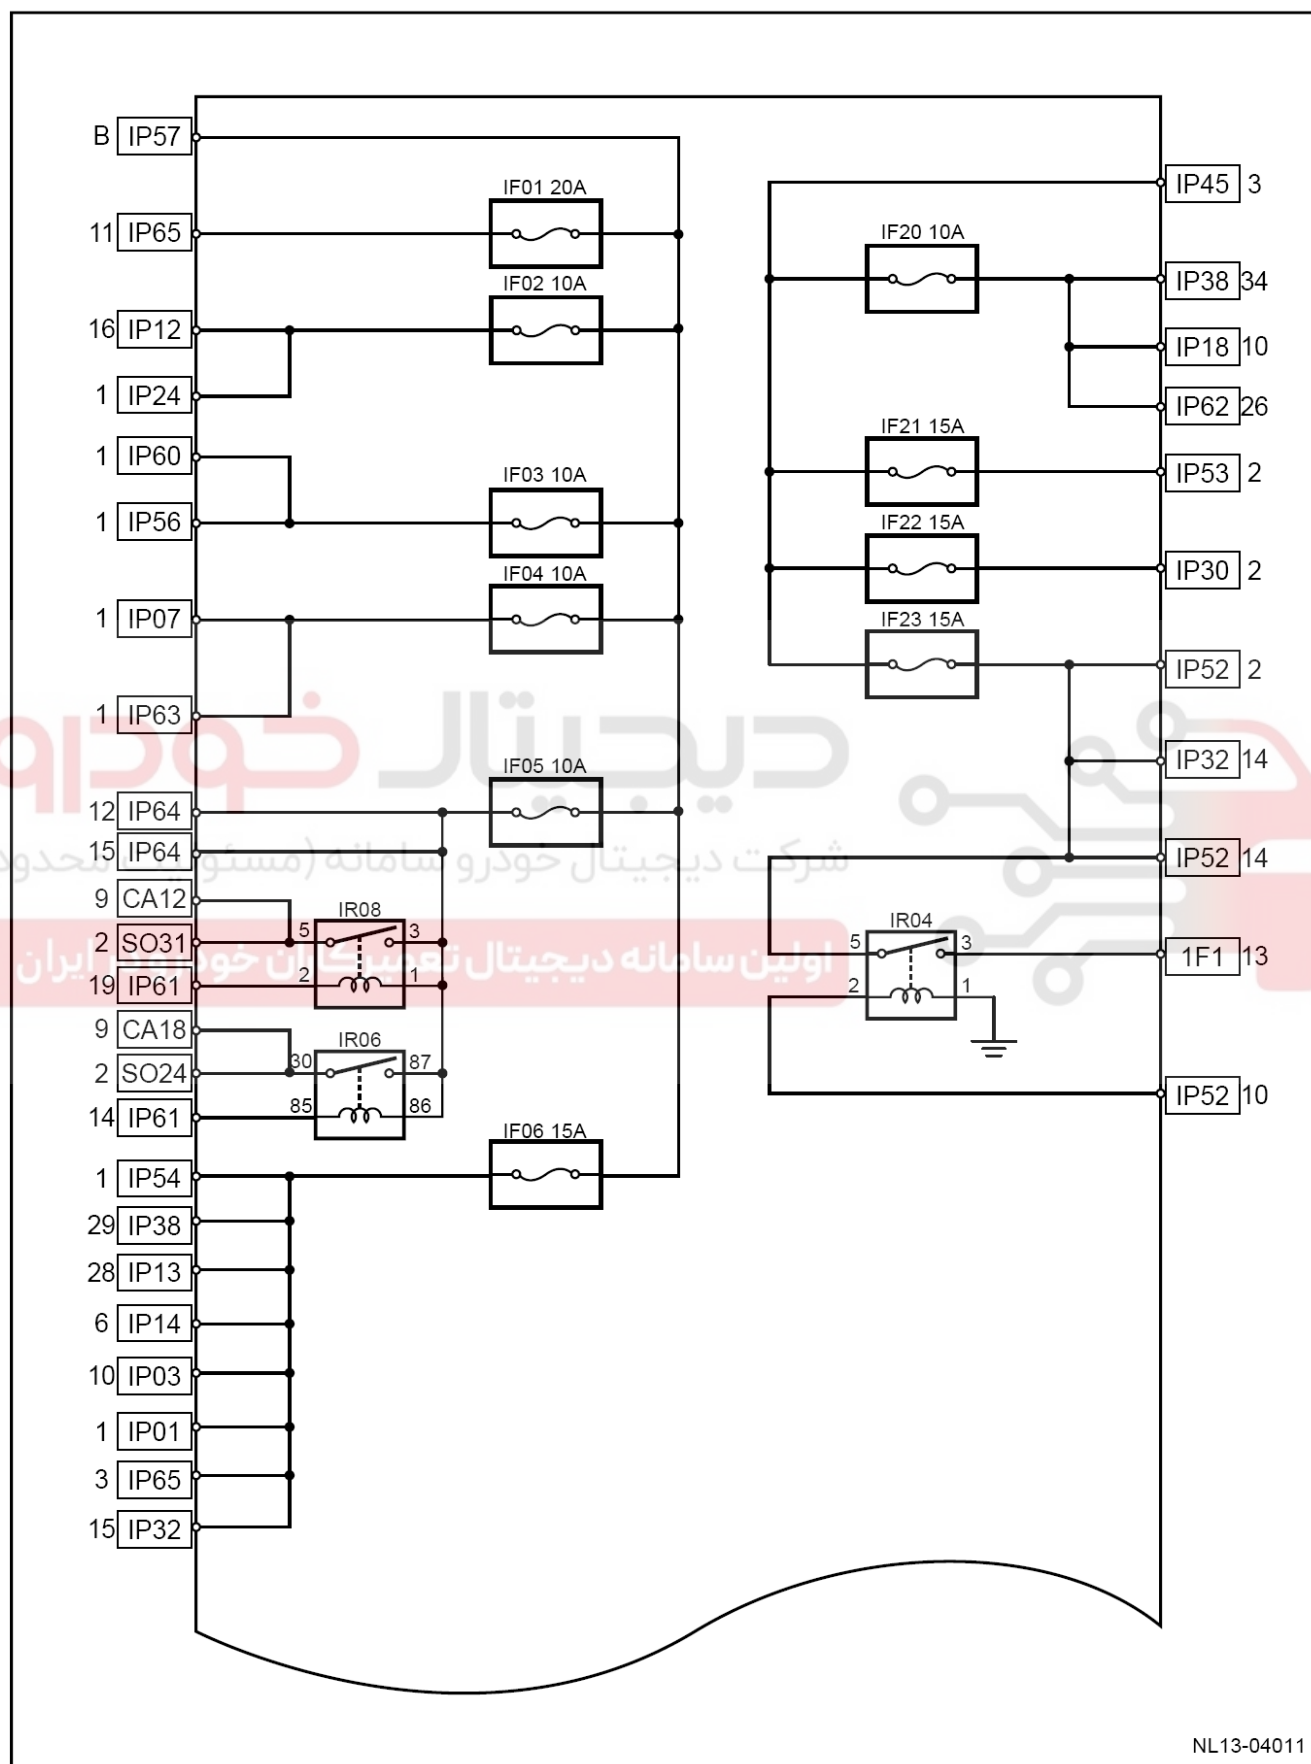

NL13-04011

List of Indoor Fuse

NO.	Description	Rated current(A)	Descriptions
IF01	Fuse of door lock	20	/
IF02	Diagnosis fuse	10	/
IF03	Fuse of brake lamp	10	/
IF04	Fuse of turning / hazard warning lamp	10	/
IF05	Fuse of position lamp	10	Tail lamp, instrument and switch backlight
IF06	Fuse of A/C and instrument	15	/
IF11	Fuse of rear fog lamp	10	/
IF12	Fuse of power window	30	/
IF13	Fuse of sunroof	20	/
IF14	Fuse of radio/CD player	15	/
IF16	Fuse of rear defrost	30	/
IF17	Fuse of blower	40	/
IF18	Rear view mirror heating fuse	10	/
IF20	Fuse of radio/CD player	10	/
IF21	Fuse of spare power supply	15	/
IF22	Fuse of cigarette lighter	15	/
IF23	Fuse of rear wiper	15	/
IF25	Fuse of combination instrument	10	/
IF26	Empty	Empty	/
IF27	Fuse of reverse lamp	10	/
IF28	Fuse of brake lamp	10	/
IF30	Fuse of front wiper	30	/
IF32	Fuse of airbag	10	/
IF33	ECM fuse	10	/
IF34	ABS fuse	10	/
IF35	Fuse of immobilizer	10	/
IF36	Fuse of DSI transmission	10	/

List of Indoor Relay

NO.	Description	Descriptions
IR01	Rear fog lamp relay	/
IR02	Rear defrost relay	/
IR03	Blower relay	/
IR05	IG1 relay	/
IR06	Right position lamp relay	/
IR08	Left position lamp relay	/
IR09	License lamp relay	/

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

