


Audio System

Circuit Diagram (Page 1 of 4)

For MT

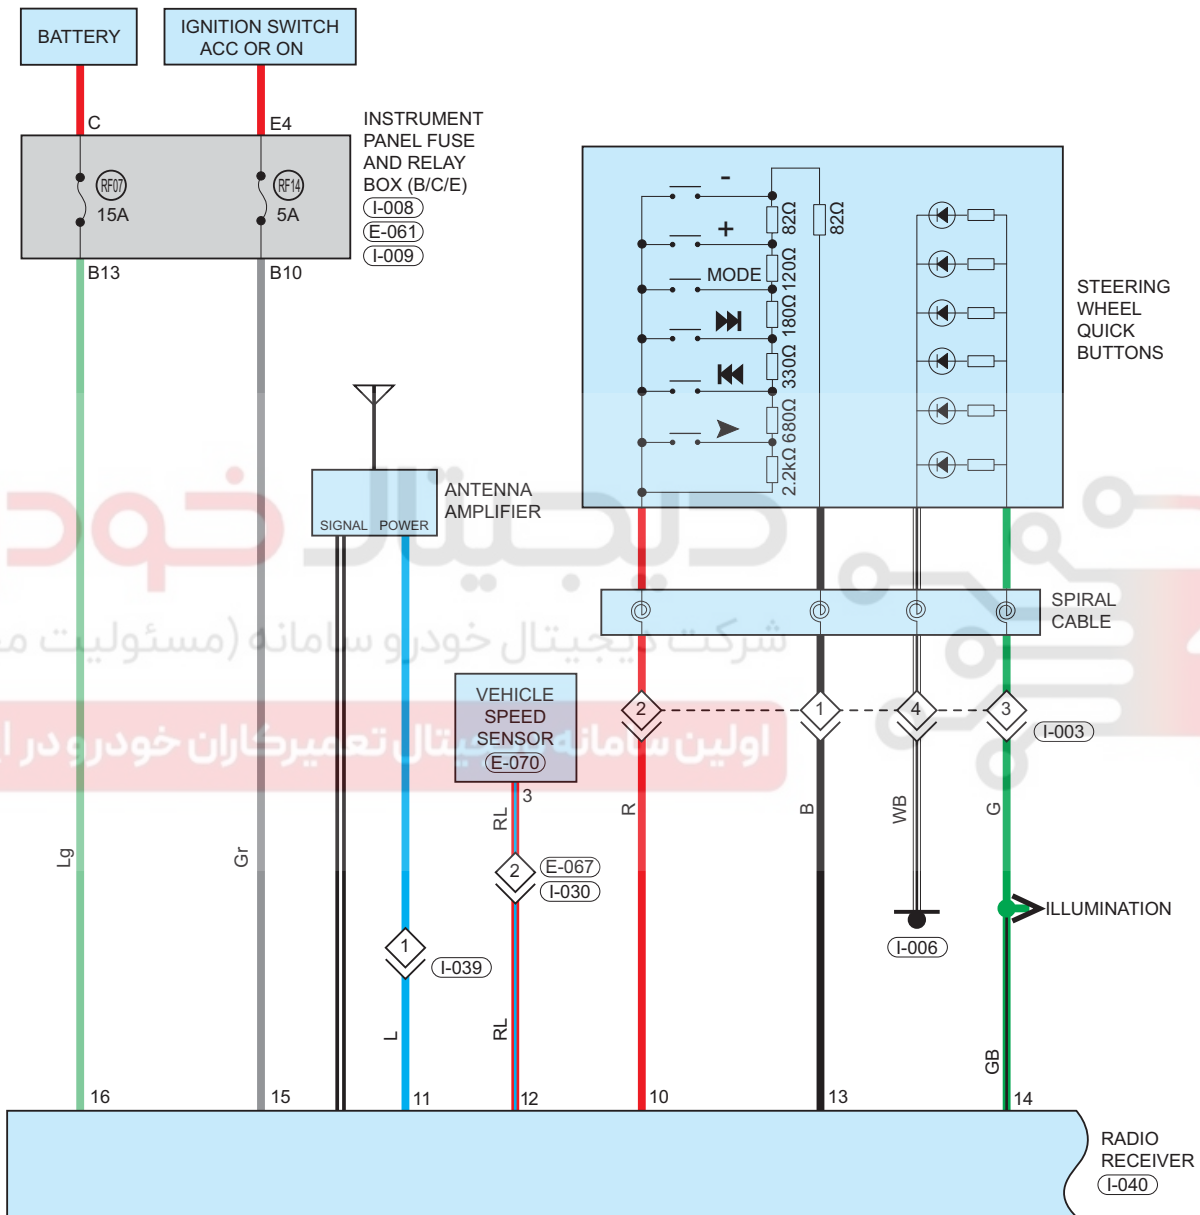

دیجیتال خودرو (مسئولیت محدود)
 شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
 اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-008	08-12	I-006	08-12	I-009	08-12
I-039	08-12	I-040	08-12	I-003	08-12
E-070	08-4	E-061	08-4		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF07	06-12	Instrument Panel Fuse and Relay Box
RF14	06-12	Instrument Panel Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067, I-030	08-4, 08-12				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-008	12-8	E-061	12-4	I-009	12-8
I-039	12-10	E-070	12-5	I-003	12-8
I-006	12-8	I-040	12-10	E-067, I-030	12-5

Circuit Diagram (Page 2 of 4)

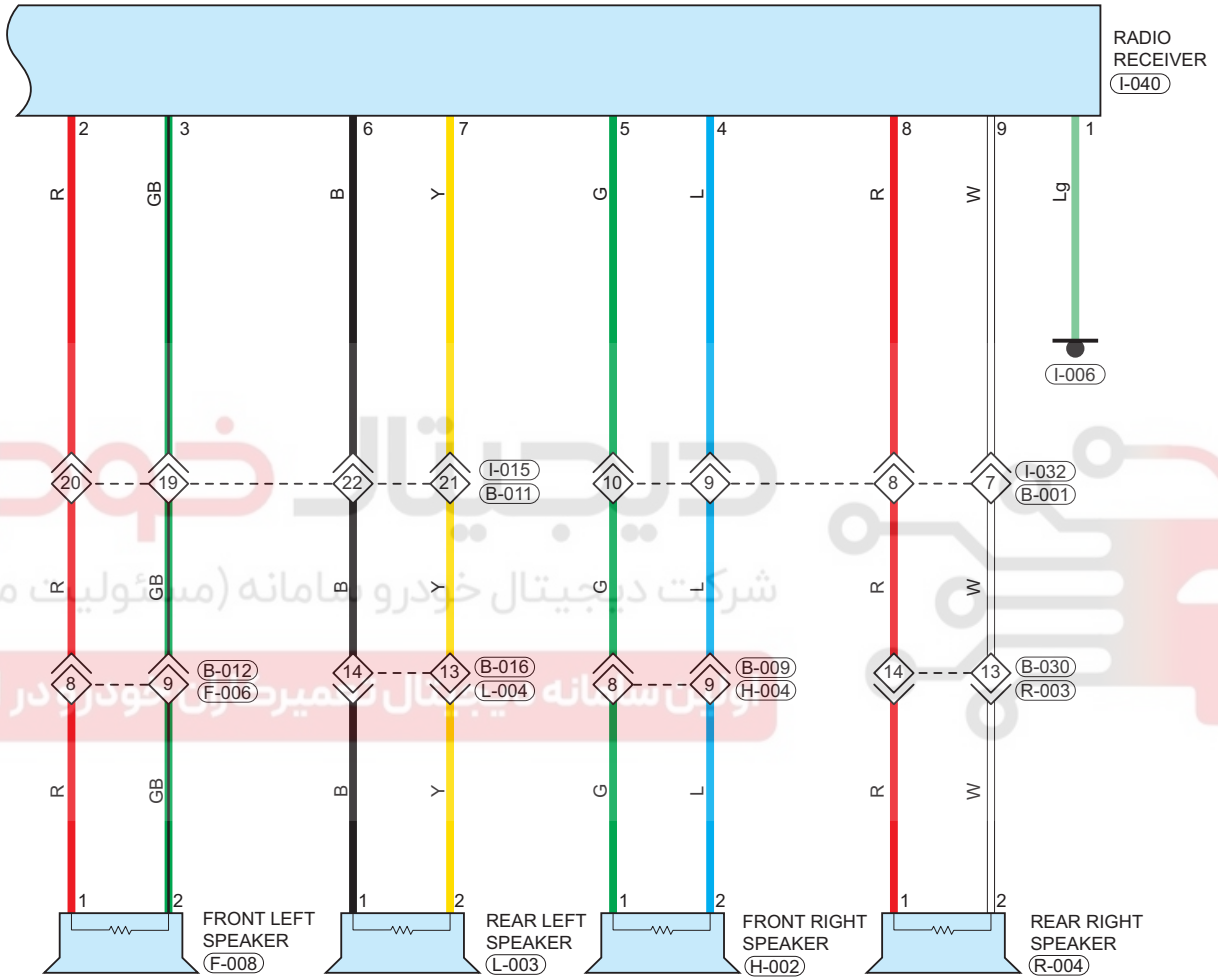

09

ET11090680

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-040	08-12	I-006	08-12	F-008	08-19
L-003	08-21	H-002	08-20	R-004	08-22

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-015, B-011	08-12, 08-17	I-032, B-001	08-12, 08-17	B-012, F-006	08-17, 08-19
B-016, L-004	08-17, 08-21	B-009, H-004	08-17, 08-20	B-030, R-003	08-17, 08-22

Form of Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-040	12-10	I-006	12-8	F-008	12-16
L-003	12-18	H-002	12-17	R-004	12-18
I-015, B-011	12-9	I-032, B-001	12-10	B-012, F-006	12-13
B-016, L-004	12-13	B-009, H-004	12-13	B-030, R-003	12-14

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 3 of 4)

For CVT

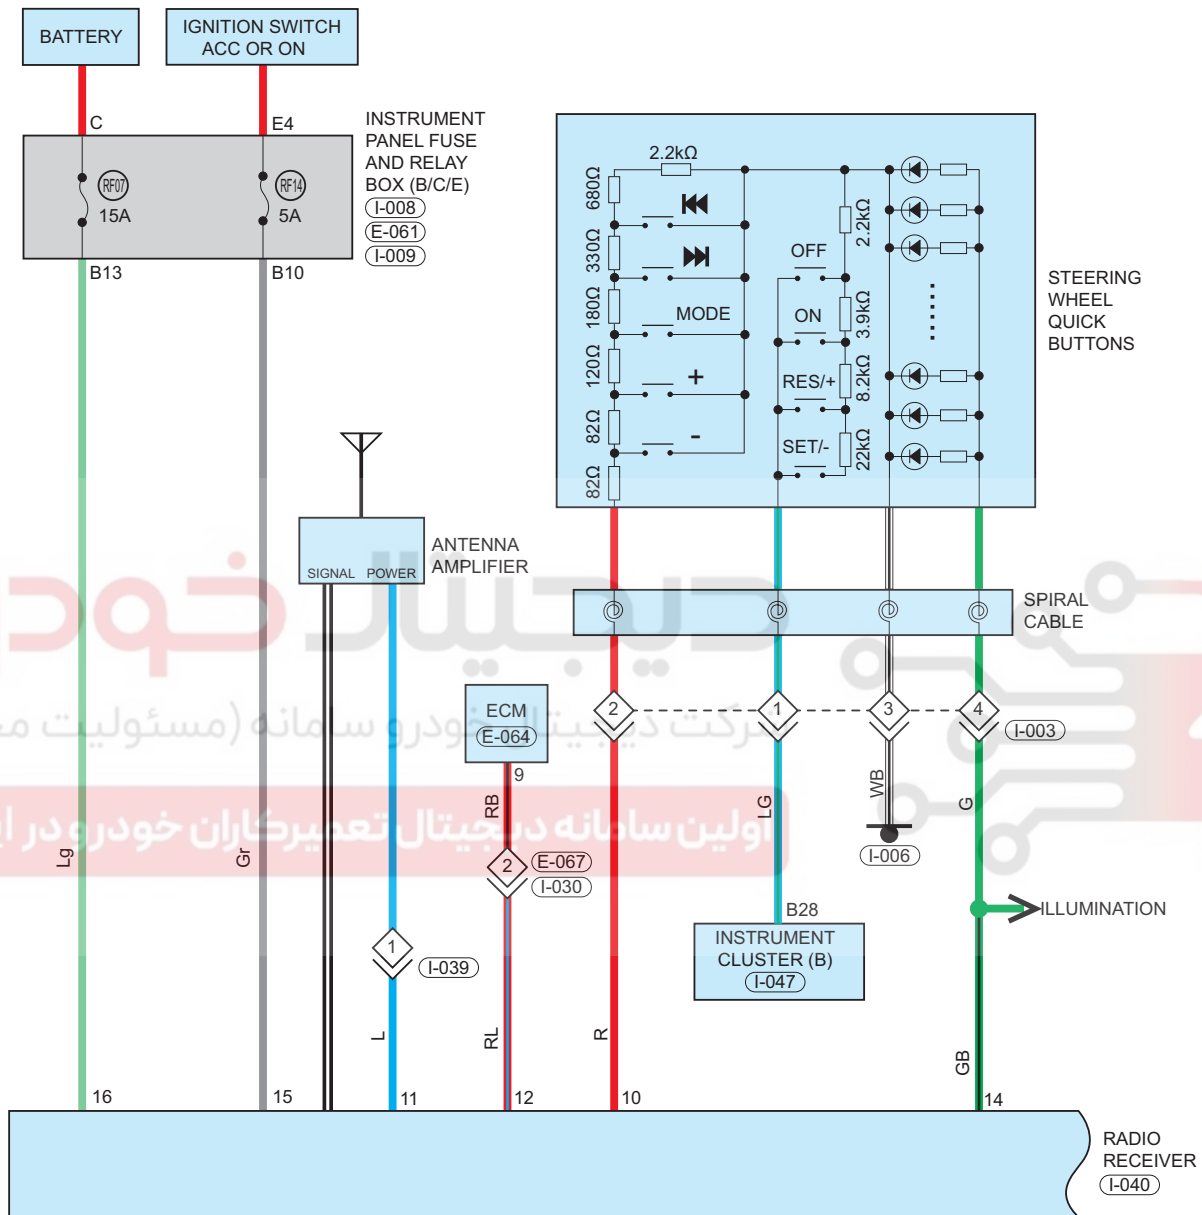

09

ET11090690

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-064	08-7	E-061	08-7	I-009	08-12
I-008	08-12	I-039	08-12	I-003	08-12
I-006	08-12	I-047	08-12	I-040	08-12

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF07	06-12	Instrument Panel Fuse and Relay Box
RF14	06-12	Instrument Panel Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067, I-030	08-7, 08-12				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-008	12-8	E-061	12-4	I-009	12-8
E-064	12-5	I-039	12-10	I-003	12-8
I-006	12-8	I-047	12-11	I-040	12-10
E-067, I-030	12-5				

Circuit Diagram (Page 4 of 4)

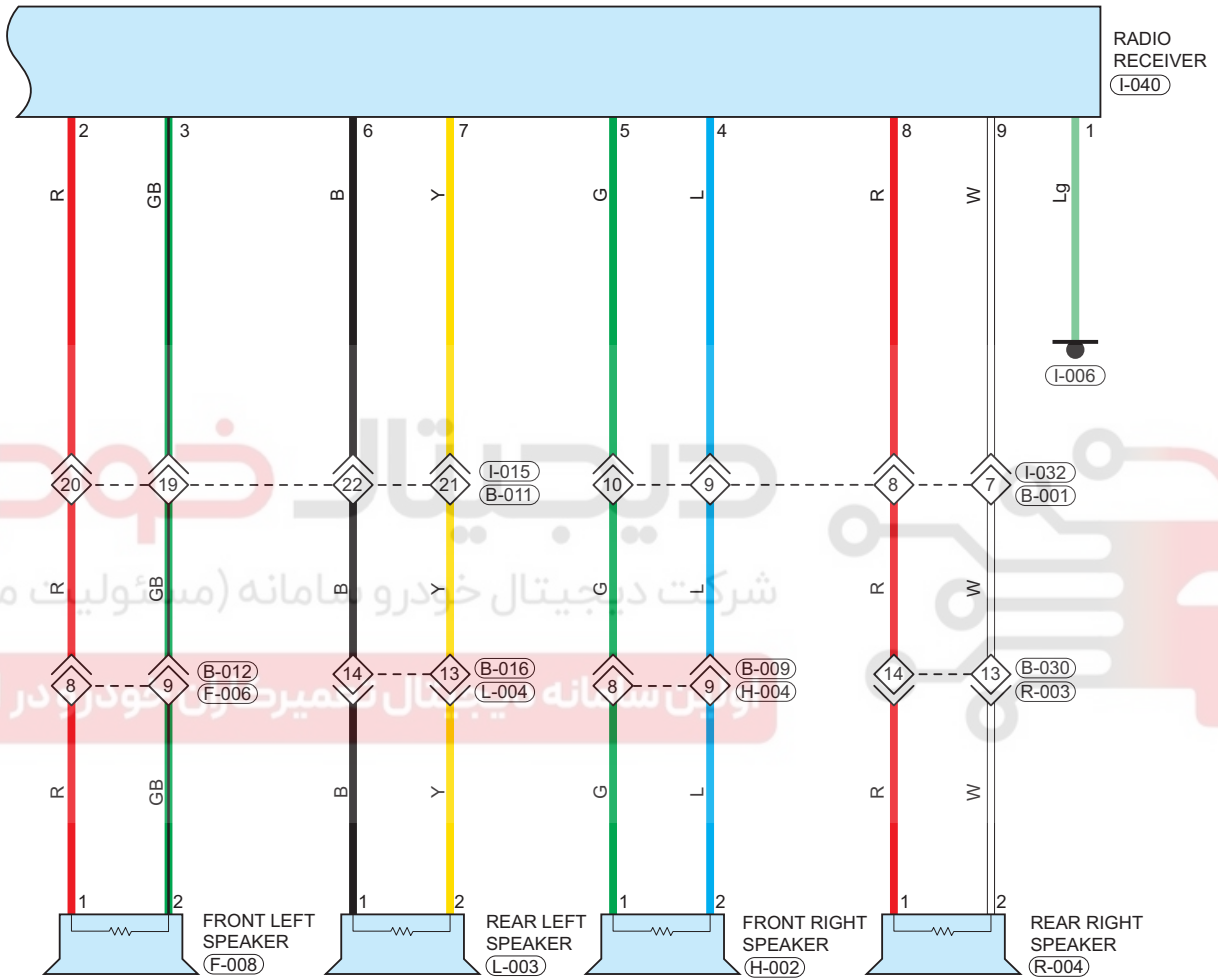

09

ET11090680