


SQRE4G16 Fuel Supply System

Circuit Diagram (Page 1 of 2)

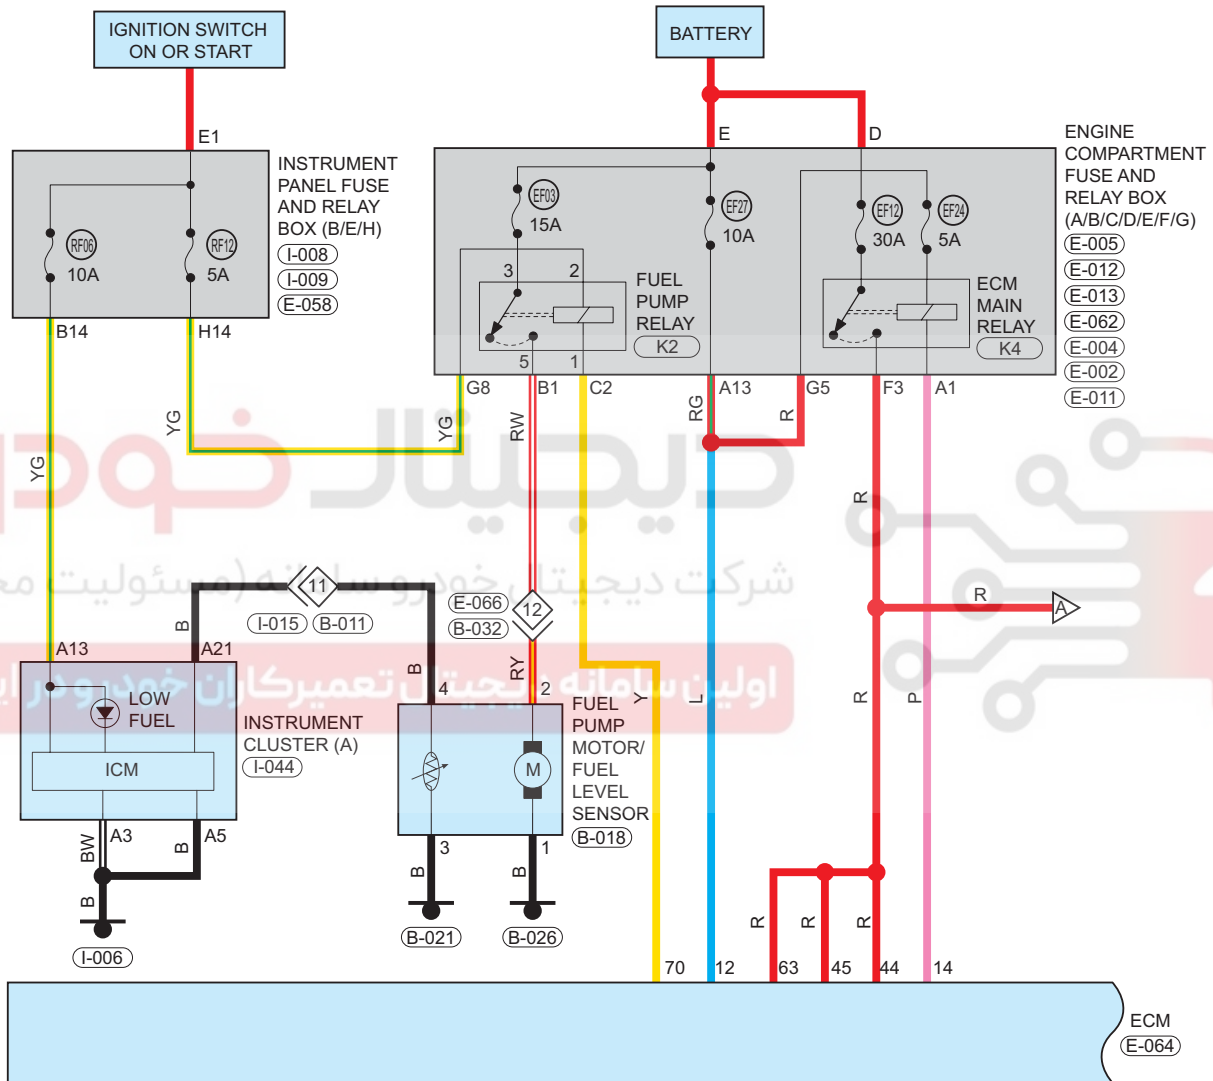

09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-058	08-4 (MT)	E-005	08-4 (MT)	E-012	08-4 (MT)
	08-7 (CVT)		08-7 (CVT)		08-7 (CVT)
E-013	08-4 (MT)	E-062	08-4 (MT)	E-004	08-4 (MT)
	08-7 (CVT)		08-7 (CVT)		08-7 (CVT)
E-002	08-4 (MT)	E-011	08-4 (MT)	E-064	08-4 (MT)
	08-7 (CVT)		08-7 (CVT)		08-7 (CVT)
I-006	08-12	I-044	08-12	B-026	08-17
B-018	08-17	B-021	08-17	I-009	08-12
I-008	08-12				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF06	06-12	Instrument Panel Fuse and Relay Box
RF12	06-12	Instrument Panel Fuse and Relay Box
EF03	06-5	Engine Compartment Fuse and Relay Box
EF12	06-5	Engine Compartment Fuse and Relay Box
EF24	06-5	Engine Compartment Fuse and Relay Box
EF27	06-5	Engine Compartment Fuse and Relay Box
Fuel Pump Relay	06-5	Engine Compartment Fuse and Relay Box
ECM Main Relay	06-5	Engine Compartment Fuse and Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-015, B-011	08-12, 08-17	E-066, B-032	08-4, 08-17 (MT)		
			08-7, 08-17 (CVT)		

09

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-008	12-8	I-009	12-8	E-058	12-4
E-005	12-2	E-012	12-2	E-013	12-2
E-062	12-4	E-004	12-2	E-002	12-2
E-011	12-2	I-044	12-10	I-006	12-8
B-018	12-13	B-021	12-14	B-026	12-14
E-064	12-5	I-015, B-011	12-9	E-066, B-032	12-5

Circuit Diagram (Page 2 of 2)

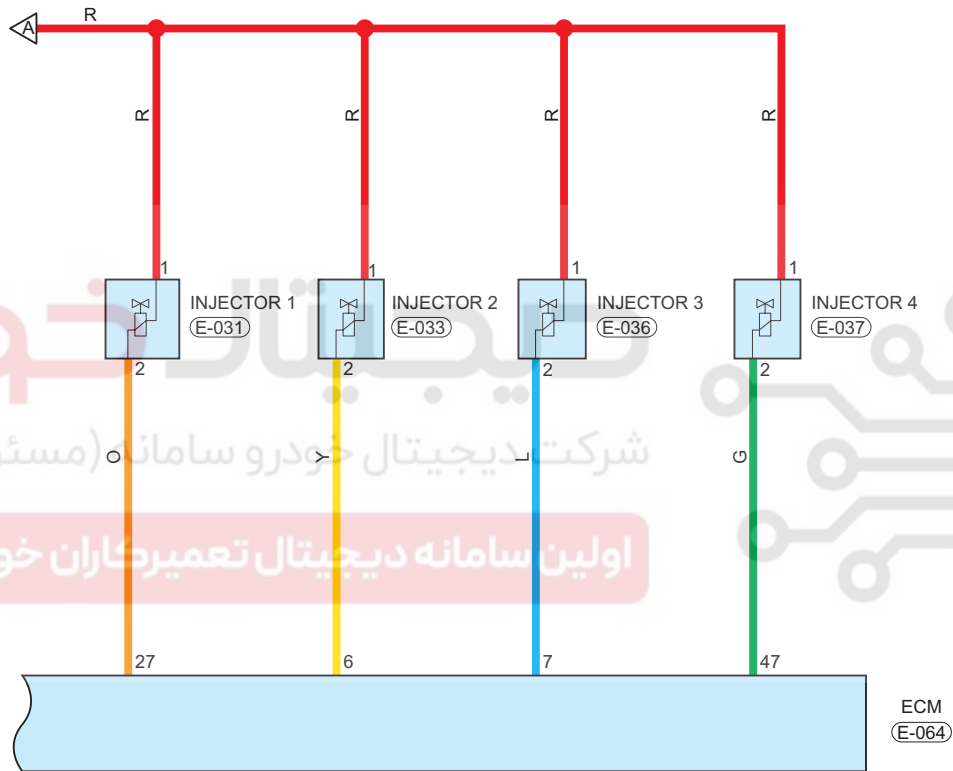

شركت دیجیتال خودرو (مسئولیت محدود)
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

09

ET11090110