


Cruise Control System (For 2.0L Model)

Circuit Diagram (Page 1 of 2)

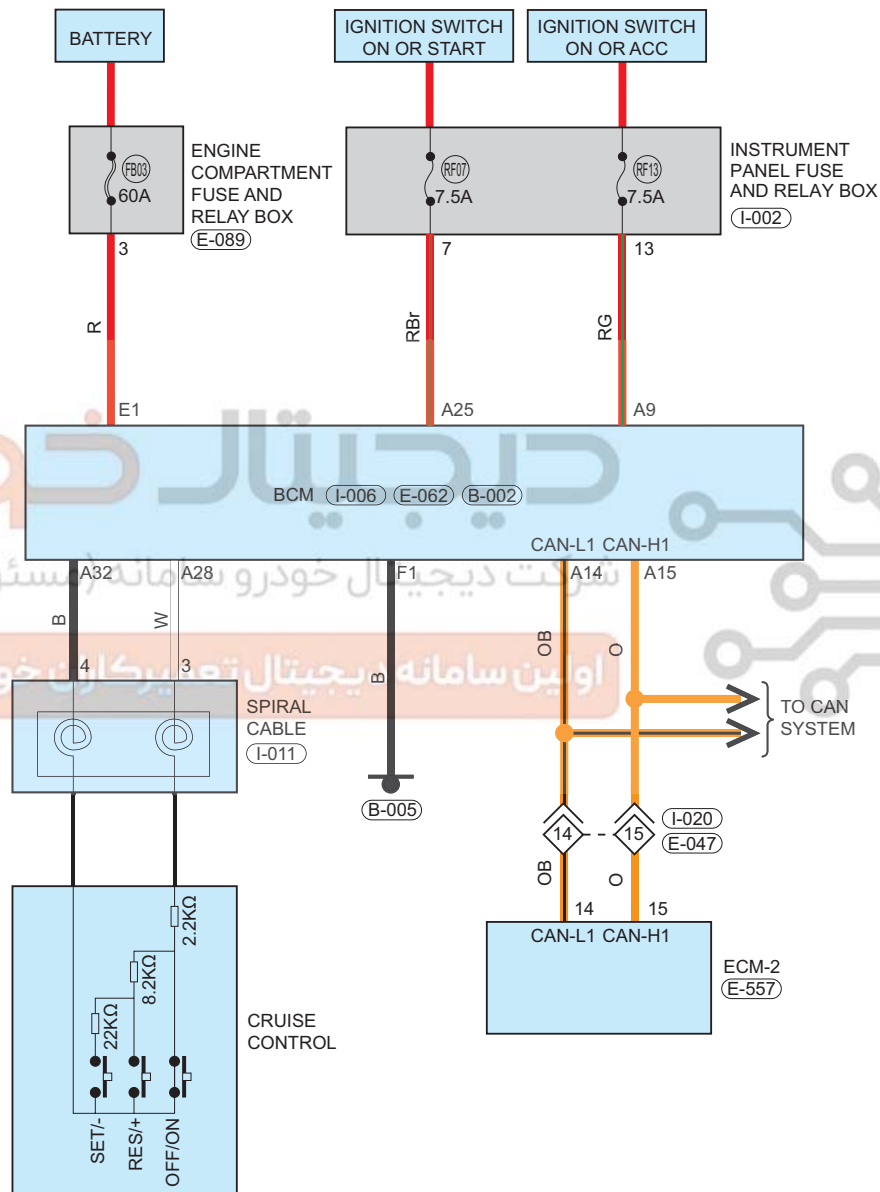

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-089	08-10	I-002	08-13	I-006	08-13
E-062	08-10	B-002	08-16	I-011	08-13
B-005	08-16	E-557	08-10		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
FB03	06-2	Power Fuse Box
RF07	06-13	Instrument Panel Fuse and Relay Box A
RF13	06-13	Instrument Panel Fuse and Relay Box A

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-020, E-047	08-13, 08-10				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-089	12-5	I-002	12-9	I-006	12-9
E-062	12-5	B-002	12-11	I-011	12-9
B-005	12-11	E-557	12-7	I-020, E-047	12-9

Circuit Diagram (Page 2 of 2)

