


3.7.8 0520

Diagnosis Circuit Diagram

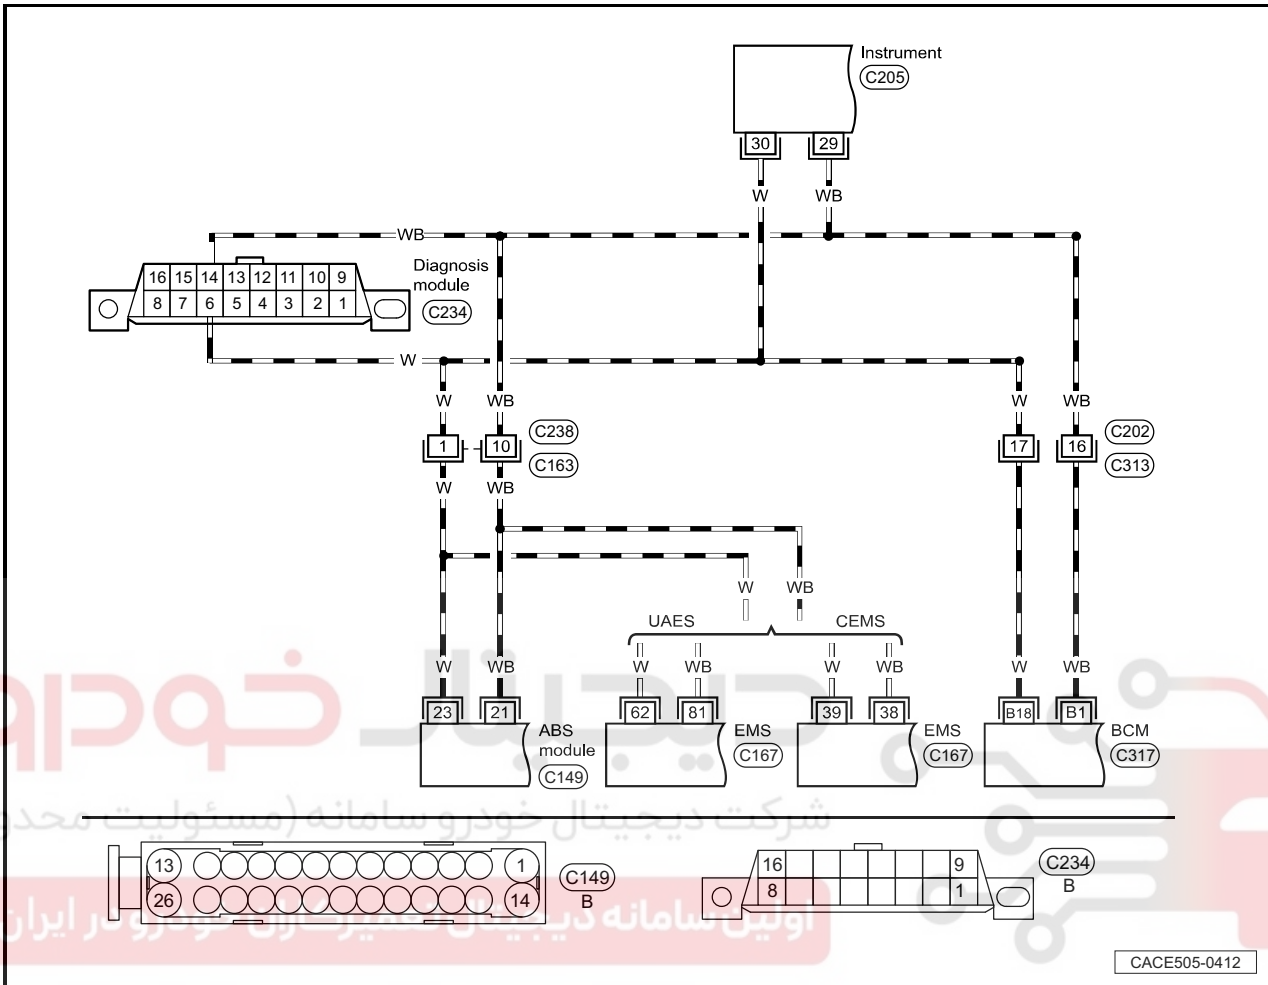

DTC Definition and Fault Reason

DTC	DTC Definition	DTC Inspection Condition	DTC Triggering Condition	Possible Fault Reason
0520	Data bus is abnormal	Ignition switch to ON	ABS control unit detects the abnormal of CAN network data bus	<ul style="list-style-type: none"> • ABS module fault • EMS module fault • BCM module fault • Instrument cluster fault • CAN circuit fault

DTC inspection step:

Make sure that the battery voltage is normal before the following operation.

- Turn off the ignition switch.