


Electrical A/C System

Circuit Diagram (Page 1 of 4)

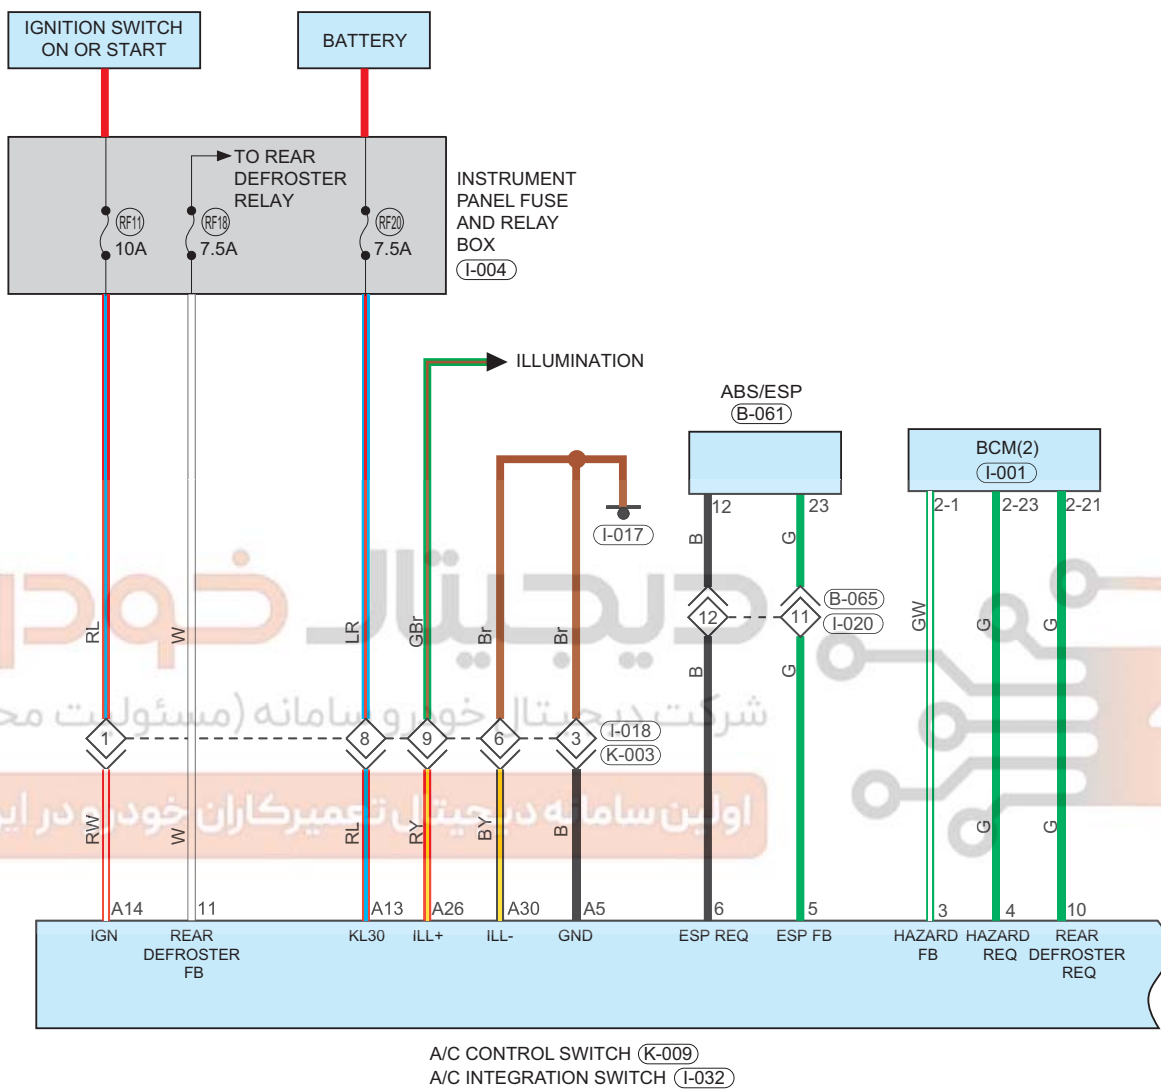

## 09 - SYSTEM CIRCUITS

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004	08-8	I-032	08-8	I-001	08-8
B-061	08-11	K-009	08-23		

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF11	06-13	Instrument Panel Fuse and Relay Box
RF18	06-13	Instrument Panel Fuse and Relay Box
RF20	06-13	Instrument Panel Fuse and Relay Box


## Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-065, I-020	08-11, 08-8	K-003, I-018	08-23, 08-8		

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004	12-4	I-032	12-5	I-001	12-4
B-061	12-8	K-009	12-12	B-065, I-020	12-9, 12-5
K-003, I-018	12-12, 12-5				

Circuit Diagram (Page 2 of 4)

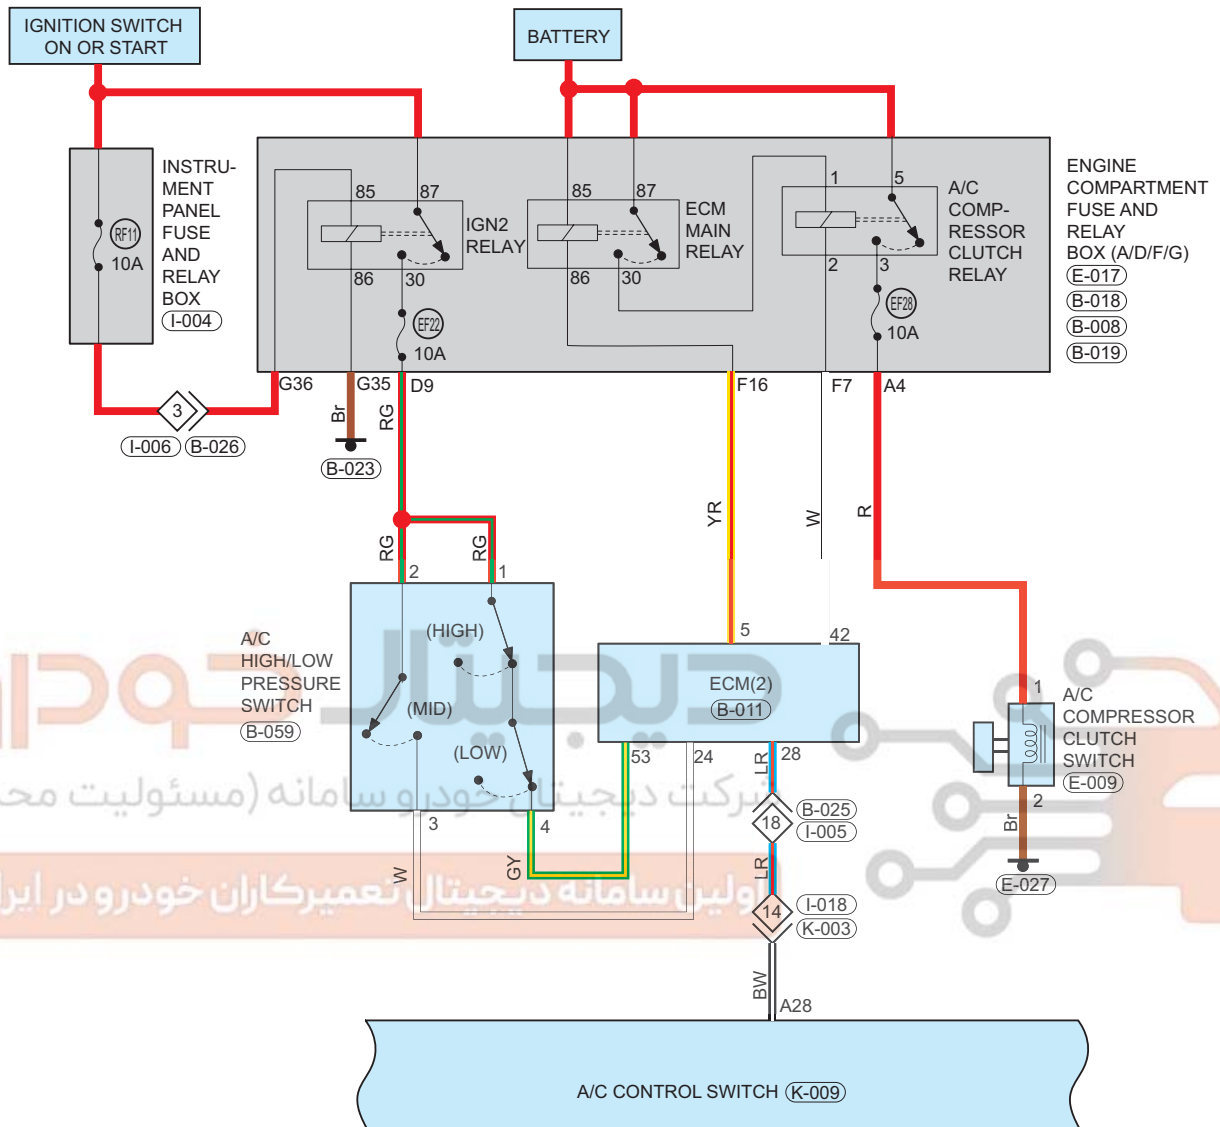

## 09 - SYSTEM CIRCUITS

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004	08-8	B-008	08-11	B-018	08-11
B-019	08-11	B-059	08-11	B-011	08-11
E-017	08-5	E-009	08-5	K-009	08-23

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF11	06-13	Instrument Panel Fuse and Relay Box
EF22	06-4	Engine Compartment Fuse and Relay Box
EF28	06-4	Engine Compartment Fuse and Relay Box
ECM Main Relay	06-4	Engine Compartment Fuse and Relay Box
IGN2 Relay	06-4	Engine Compartment Fuse and Relay Box
A/C Compressor Clutch Relay	06-4	Engine Compartment Fuse and Relay Box


## Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-025, I-005	08-11, 08-8	K-003, I-018	08-23, 08-8		

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004	12-4	B-008	12-6	B-018	12-6
B-019	12-6	B-059	12-8	B-011	12-6
E-017	12-3	E-009	12-3	K-009	12-12
B-025, I-005	12-6, 12-4	K-003, I-018	12-12, 12-5		

Circuit Diagram (Page 3 of 4)

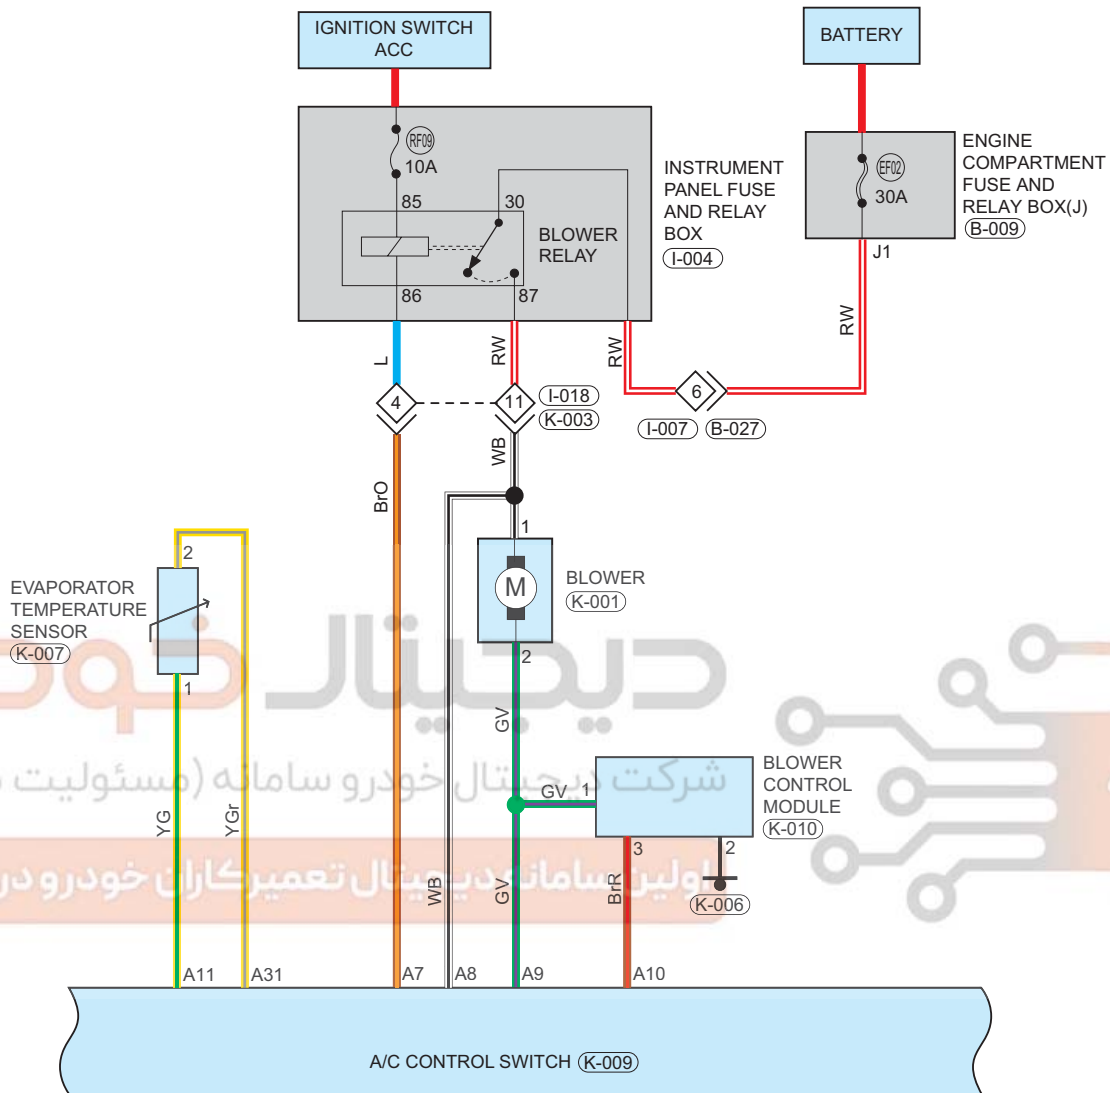

EM1A090293

## 09 - SYSTEM CIRCUITS

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004	08-8	B-009	08-11	K-010	08-23
K-009	08-23	K-001	08-23	K-007	08-23

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF09	06-13	Instrument Panel Fuse and Relay Box
Blower Relay	06-13	Instrument Panel Fuse and Relay Box
EF02	06-4	Engine Compartment Fuse and Relay Box


## Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-027, I-007	08-11, 08-8	K-003, I-018	08-23, 08-8		

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004	12-4	B-009	12-6	K-010	12-12
K-009	12-12	K-001	12-12	K-007	12-12
B-027, I-007	12-7, 12-4	K-003, I-018	12-12, 12-5		

Circuit Diagram (Page 4 of 4)

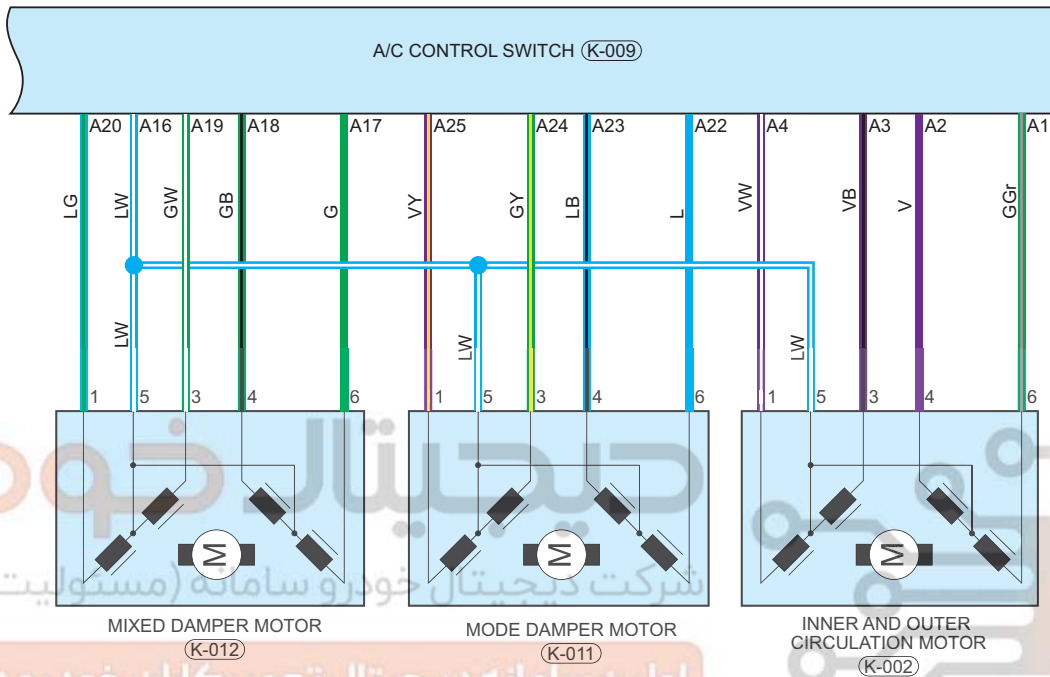

دیجیتال خودرو (مستوایت محدود)  
شرکت دیجیتال خودرو سامانه (مستوایت محدود)  
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران