


Windshield/Window Glass

Circuit Diagram (Page 1 of 3)

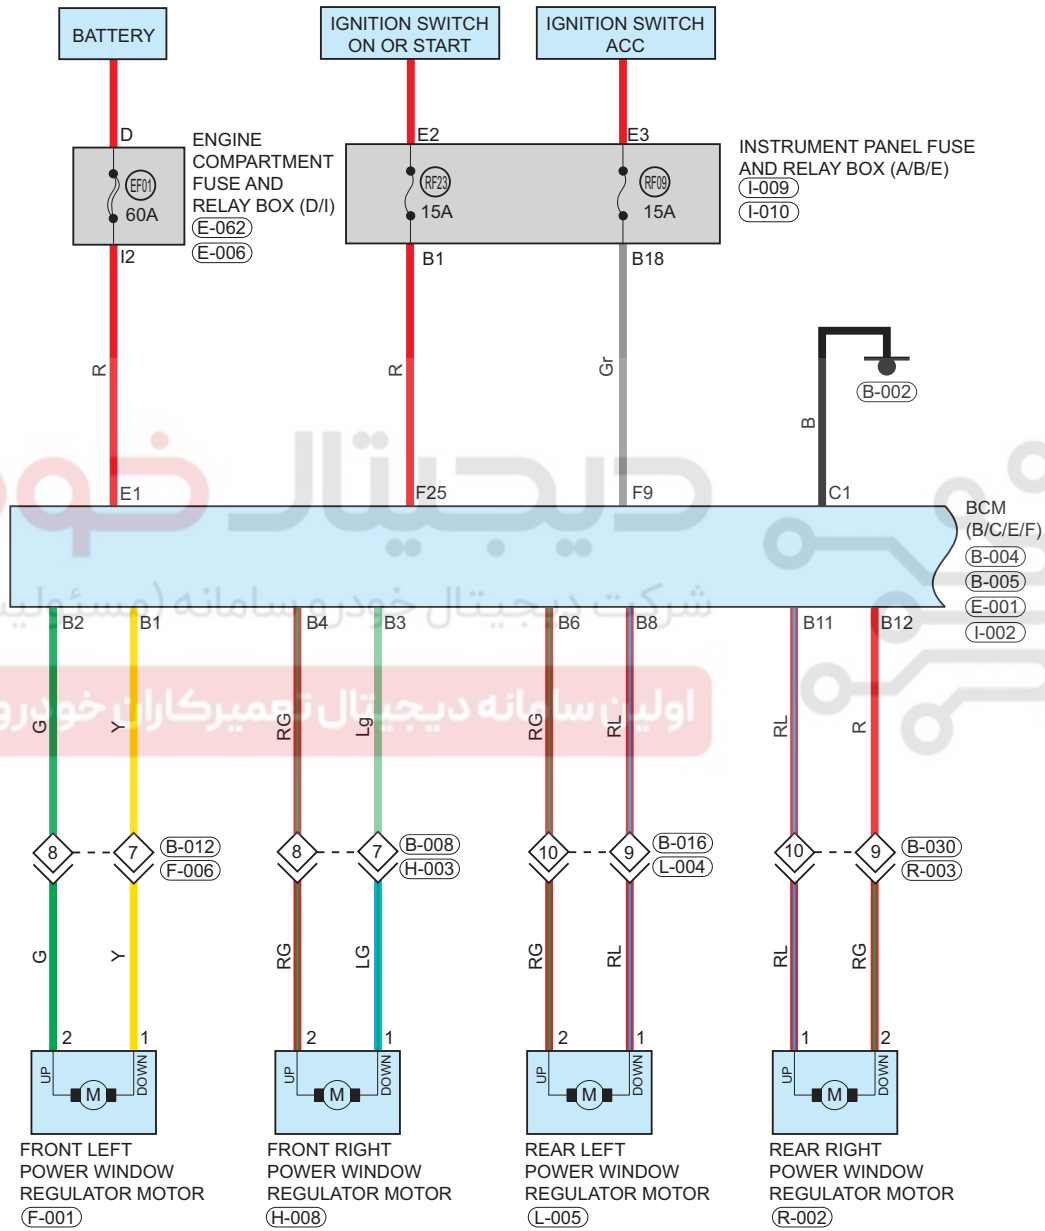

دیجیتال خودرو

شرکت دیجیتال خودروسامانه (سئوایت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-062	08-3	E-006	08-3	I-009	08-9
I-010	08-9	B-004	08-13	B-005	08-13
E-001	08-3	I-002	08-9	F-001	08-18
H-008	08-19	L-005	08-20	R-002	08-21
B-002	08-13				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF01	06-4	Engine Compartment Fuse and Relay Box
RF09	06-15	Instrument Panel Fuse and Relay Box
RF23	06-15	Instrument Panel Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-012, F-006	08-13, 08-18	B-008, H-003	08-13, 08-19	B-016, L-004	08-13, 08-20
B-030, R-003	08-13, 08-21				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-062	12-2	E-006	12-2	I-009	12-7
I-010	12-7	B-004	12-10	B-005	12-10
E-001	12-2	I-002	12-7	F-001	12-12
H-008	12-13	L-005	12-14	R-002	12-14
B-002	12-10	B-012, F-006	12-10, 12-12	B-008, H-003	12-10, 12-13
B-016, L-004	12-10, 12-14	B-030, R-003	12-10, 12-14		

Circuit Diagram (Page 2 of 3)

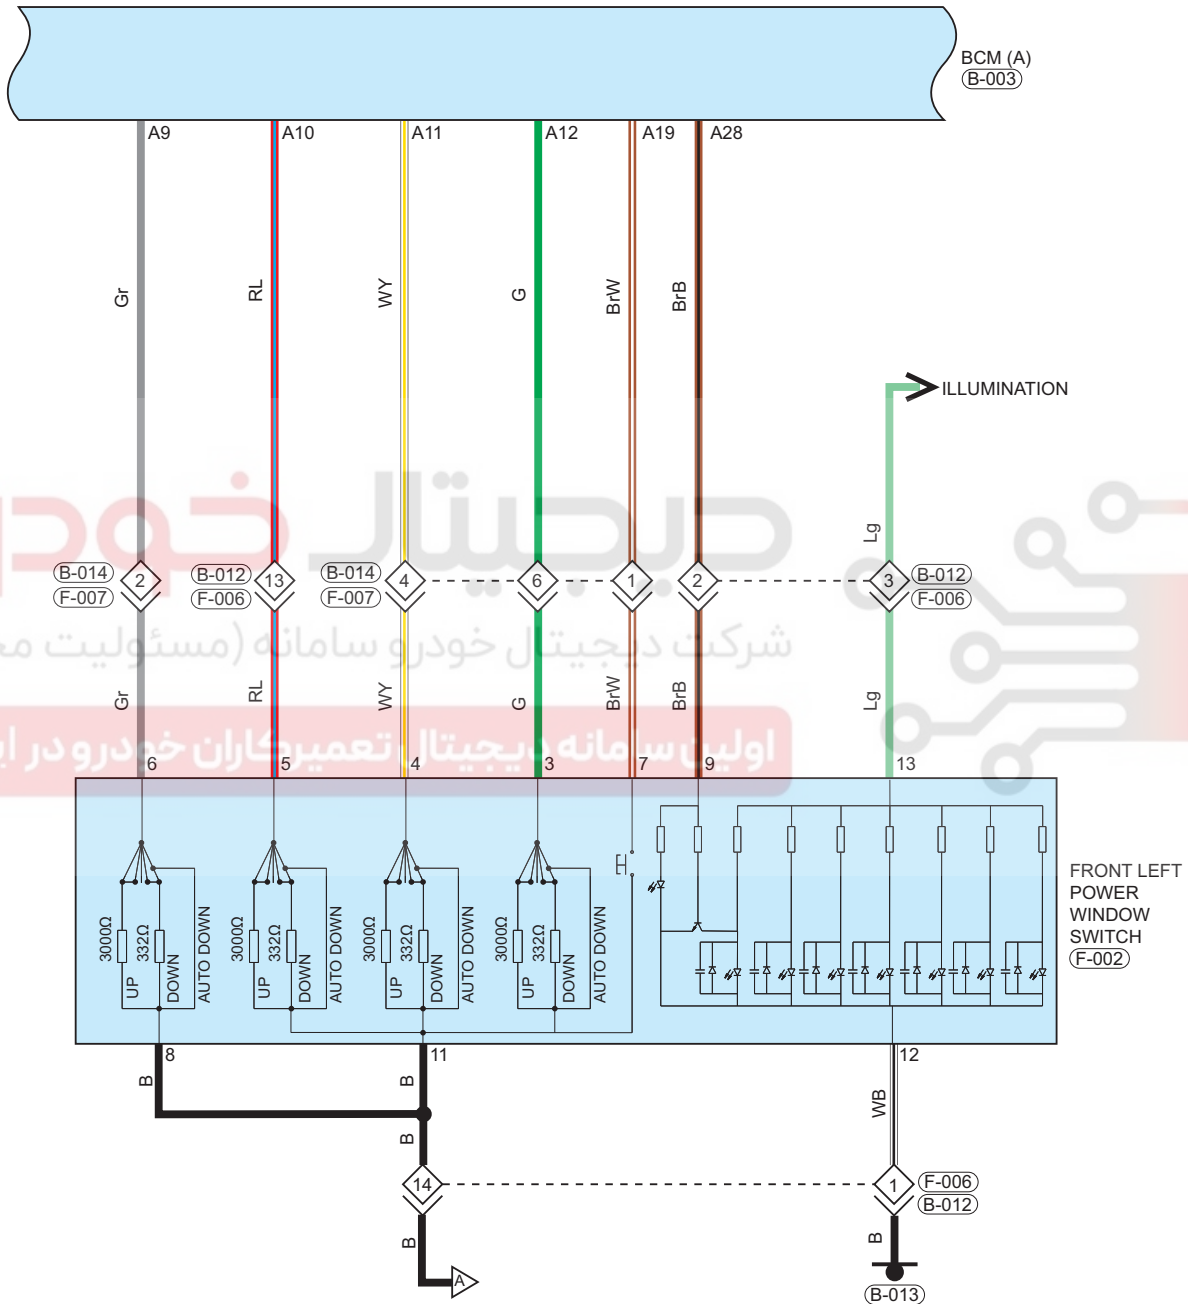

09

ET11092602

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-003	08-13	F-002	08-18		

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-014, F-007	08-13, 08-18	B-012, F-006	08-13, 08-18		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-003	12-10	F-002	12-12	B-014, F-007	12-10, 12-12
B-012, F-006	12-10, 12-12				


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 3 of 3)

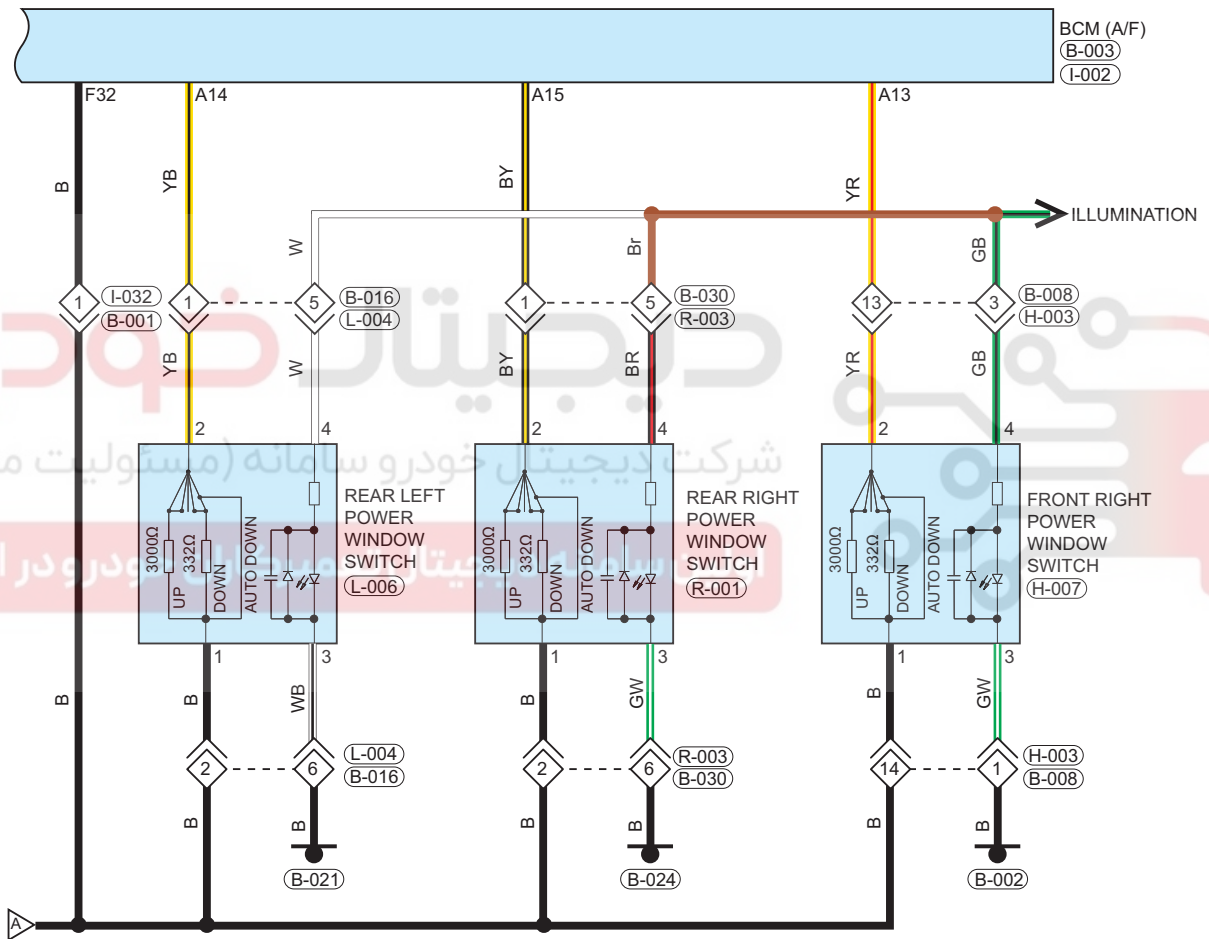

09

ET11092603