


ABS/ESP

Circuit Diagram (Page 1 of 3)

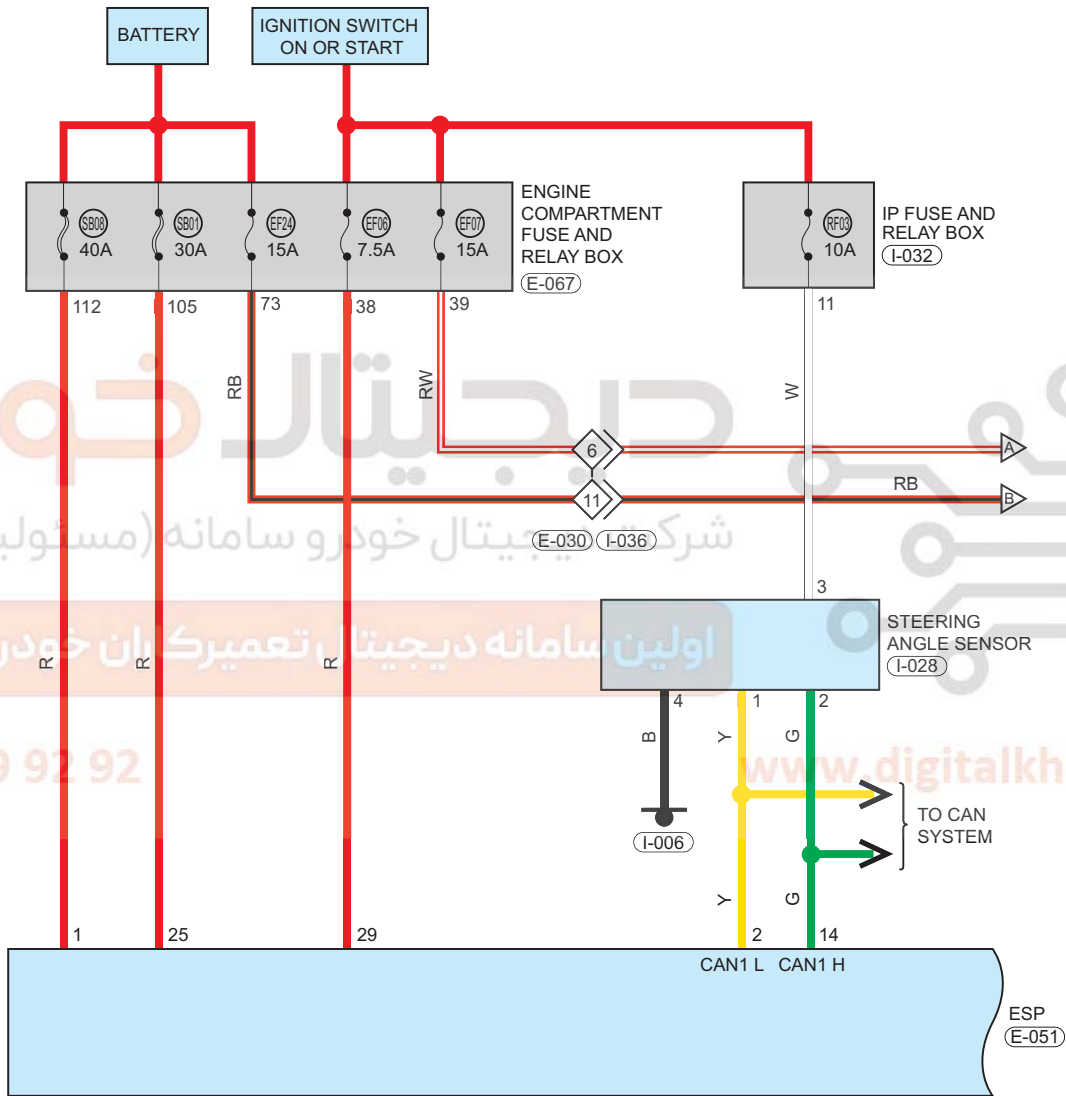

دیجیتال خودرو
 شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
 اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

02 09

www.digitalkhodro.com

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	08-5 (MT) 08-7 (AT)	I-032	08-10	I-028	08-10
I-006	08-10	E-051	08-5 (MT) 08-7 (AT)		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
SB01	06-2	Engine Compartment Fuse and Relay Box
SB08	06-2	Engine Compartment Fuse and Relay Box
EF06	06-2	Engine Compartment Fuse and Relay Box
EF07	06-2	Engine Compartment Fuse and Relay Box
EF24	06-2	Engine Compartment Fuse and Relay Box
RF03	06-10	IP Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-030, I-036	08-5, 08-10 (MT) 08-7, 08-10 (AT)				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	12-6	I-032	12-9	I-028	12-8
I-006	12-7	E-051	12-5	E-030, I-036	12-3

Circuit Diagram (Page 2 of 3)

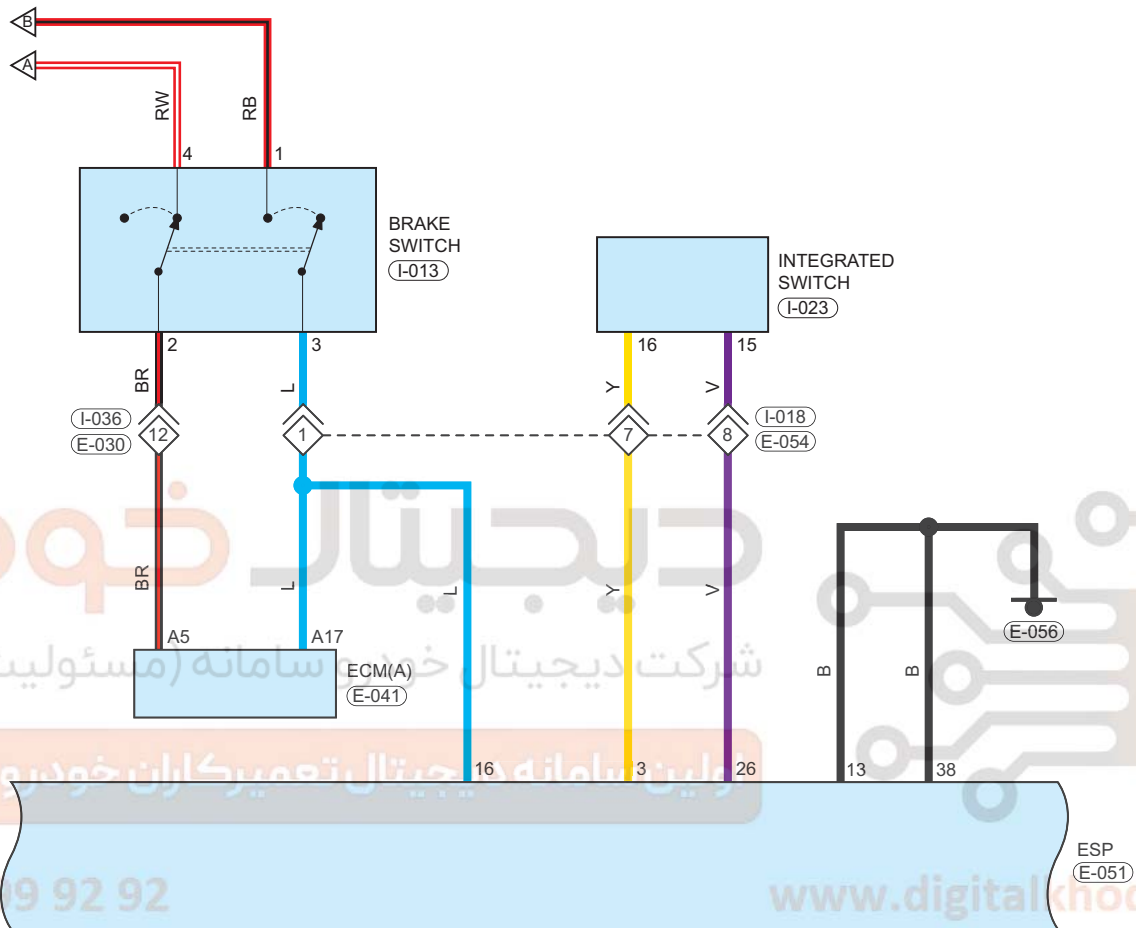

02 09

52 09 92 92

www.digitalkhodro.com

ESP (E-051)

EA13T090240

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-051	08-5 (MT) 08-7 (AT)	E-056	08-5 (MT) 08-7 (AT)	E-041	08-5 (MT) 08-7 (AT)
I-023	08-10	I-013	08-10		

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-036, E-030	08-10, 08-5 (MT) 08-10, 08-7 (AT)	I-018, E-054	08-10, 08-5 (MT) 08-10, 08-7 (AT)		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-051	12-5	E-056	12-5	E-041	12-4
I-023	12-8	I-013	12-7	I-036, E-030	12-9
I-018, E-054	12-8				


شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

021 62 99 92 92

www.digitalkhodro.com 09

Circuit Diagram (Page 3 of 3)

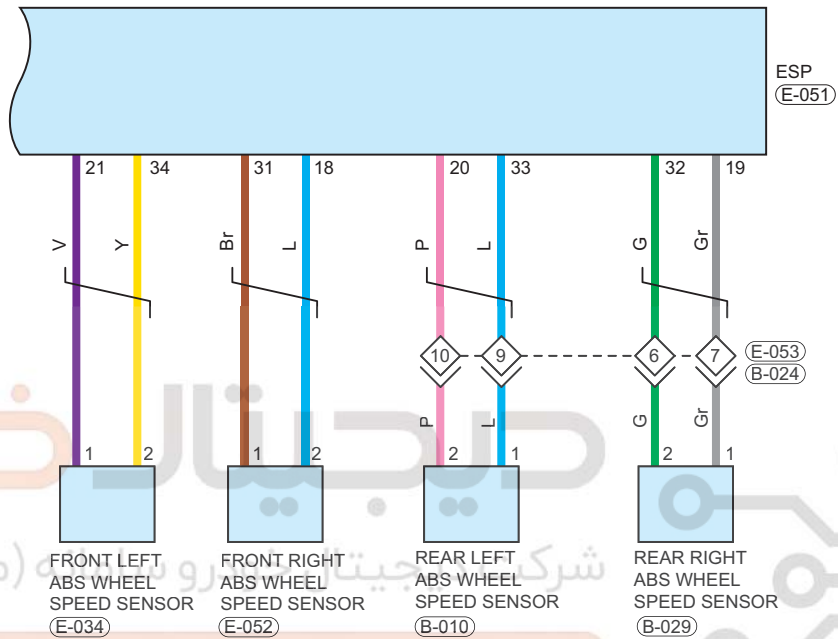

دیجیتال خودرو (مسئولیت محدود) شرکت دیجیتال خودرو

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



02 09 52 99 92 92

www.digitalkhodro.com

EA13T090250

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-051	08-5 (MT) 08-7 (AT)	E-034	08-5 (MT) 08-7 (AT)	E-052	08-5 (MT) 08-7 (AT)
B-010	08-12	B-029	08-12		

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-053, B-024	08-5, 08-12 (MT) 08-7, 08-12 (AT)				


Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-051	12-5	E-034	12-4	E-052	12-5
B-010	12-10	B-029	12-12	E-053, B-024	12-5

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

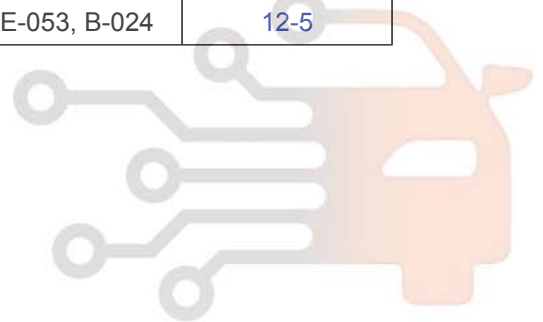

021 62 99 92 92

www.digitalkhodro.com 09