


SQRE4T15B Starting System

Circuit Diagram (Page 1 of 4)

MT

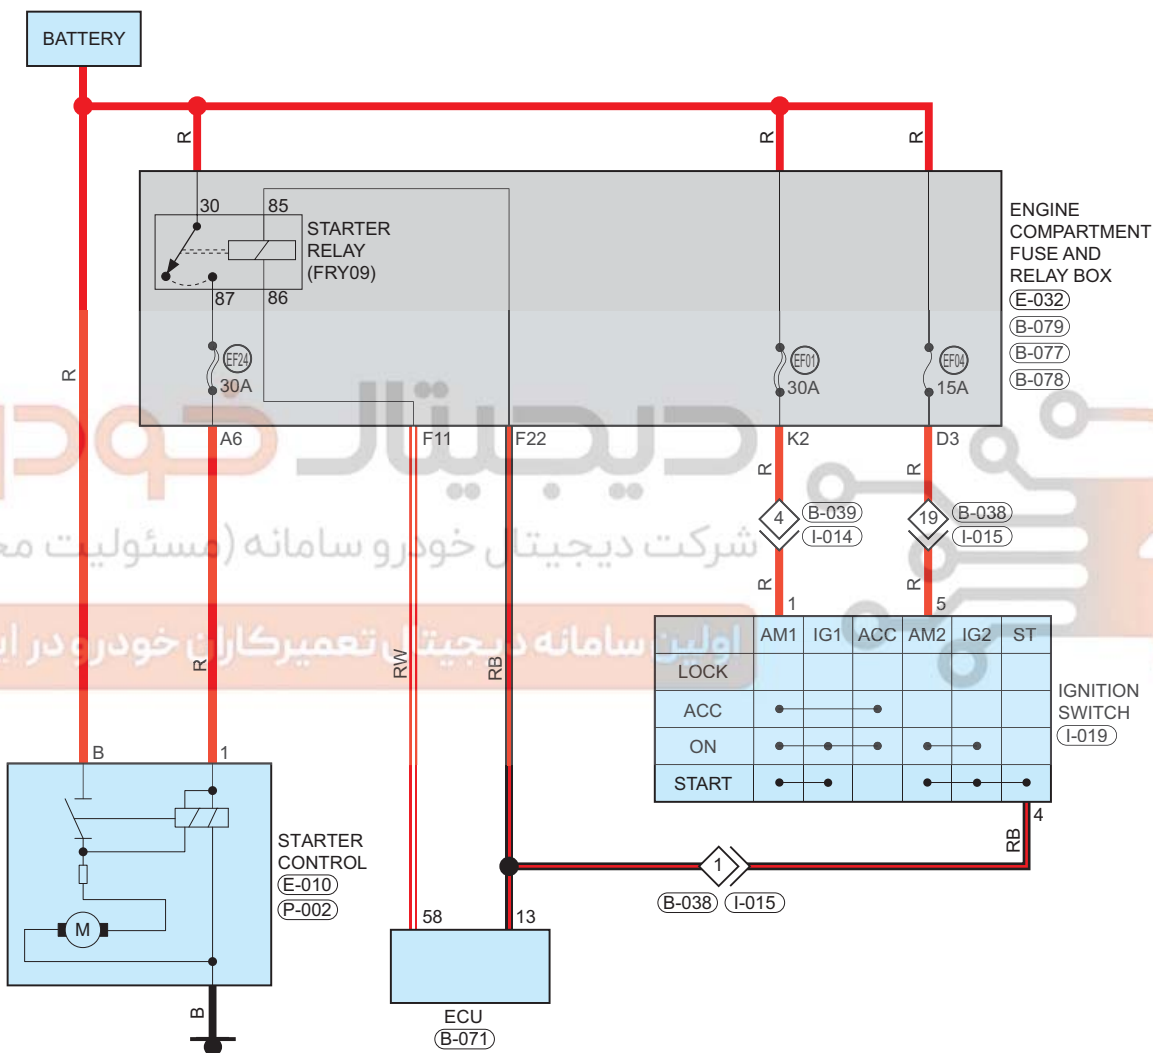

09

STE001501

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-032	08-3	B-079	08-12	B-077	08-12
B-078	08-12	E-010	08-3	P-002	08-37
B-071	08-12	I-019	08-8		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF24	06-2	Engine Compartment Fuse and Relay Box
EF01	06-2	Engine Compartment Fuse and Relay Box
EF04	06-2	Engine Compartment Fuse and Relay Box
Starter Relay (FRY09)	06-2	Engine Compartment Fuse and Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-039, I-014	08-12	B-038, I-015	08-12		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-032	12-2	B-079	12-7	B-077	12-7
B-078	12-7	E-010	12-2	P-002	12-18
B-071	12-7	I-019	12-4	B-039, I-014	12-7
B-038, I-015	12-7				

Circuit Diagram (Page 2 of 4)

CVT

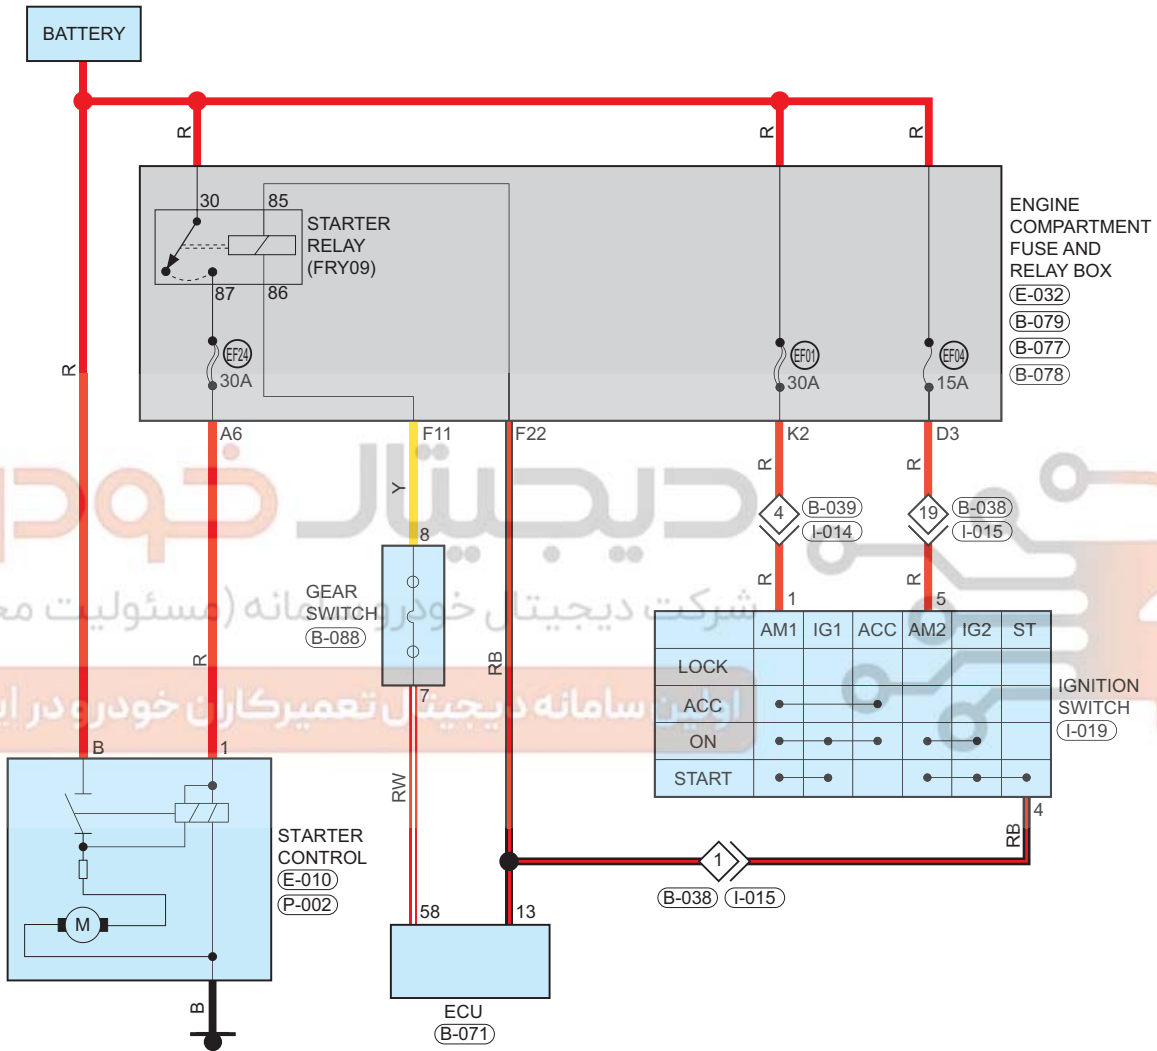

09

STE002501

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-032	08-3	B-079	08-12	B-077	08-12
B-078	08-12	E-010	08-3	P-002	08-37
B-071	08-12	I-019	08-8	B-088	08-12

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF24	06-2	Engine Compartment Fuse and Relay Box
EF01	06-2	Engine Compartment Fuse and Relay Box
EF04	06-2	Engine Compartment Fuse and Relay Box
Starter Relay (FRY09)	06-2	Engine Compartment Fuse and Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-039, I-014	08-12	B-038, I-015	08-12		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-032	12-2	B-079	12-7	B-077	12-7
B-078	12-7	E-010	12-2	P-002	12-18
B-071	12-7	I-019	12-4	B-039, I-014	12-7
B-038, I-015	12-7	B-088	12-7		

Circuit Diagram (Page 3 of 4)

PEPS+MT

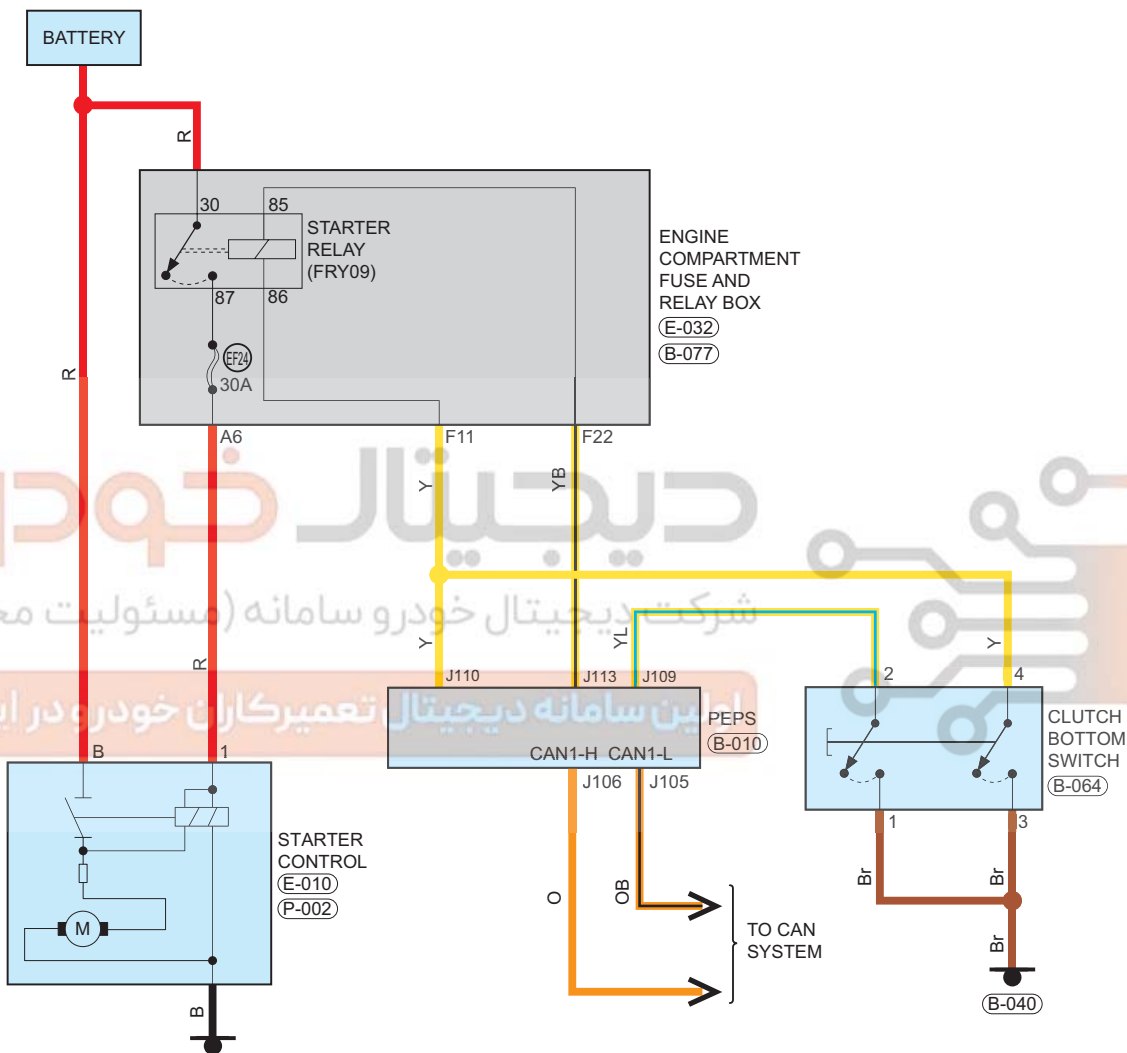

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-032	08-3	B-077	08-12	E-010	08-3
P-002	08-37	B-010	08-12	B-064	08-12
B-040	08-12				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF24	06-2	Engine Compartment Fuse and Relay Box
Starter Relay (FRY09)	06-2	Engine Compartment Fuse and Relay Box


Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-032	12-2	B-077	12-7	E-010	12-2
P-002	12-18	B-010	12-7	B-064	12-7
B-040	12-7				

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

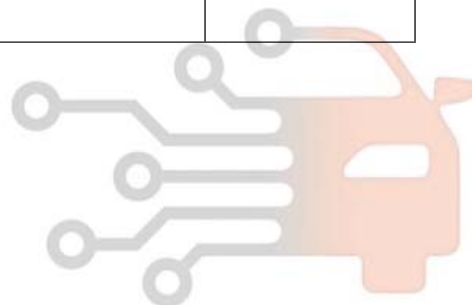

Circuit Diagram (Page 4 of 4)

PEPS+CVT

