

HARNESS CONNECTORS

EADDAB9E


HARNESS CONNECTORS (1)

CC-1

CC101




KUM_KNMWP_04F_GR

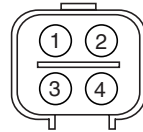


KUM_PB621_04120

CC102

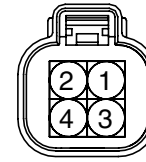


KUM_NMWP_04F_B

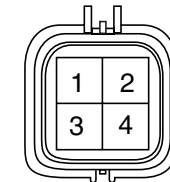


KUM_PB625_04020

CC103

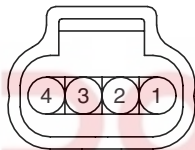


PKD_GT150_04F_Gr

 


CR04M004

CF12

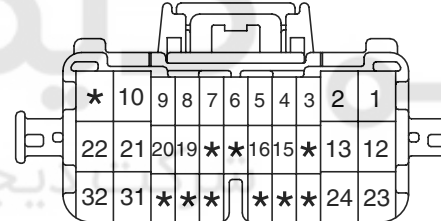


KET_0409_32F_W

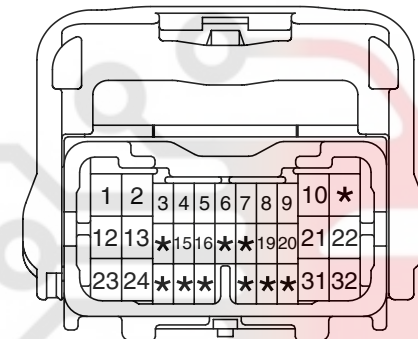

KET_0409_32M_B

DD01

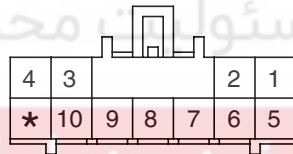


KUM_CDR_11F_W




KUM_CDR_11M_B

DD02

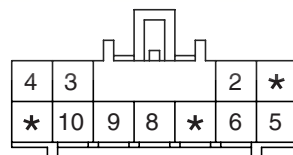


KUM_CDR_11F_W

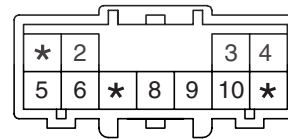


KUM_CDR_11M_B

DD03/DD04

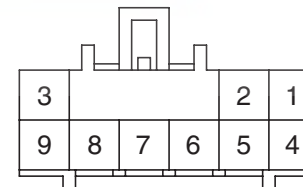

KUM_CDR_09F_W

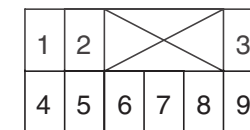


KUM_PH841_09010

EC11




KUM_NMWP_03F_B

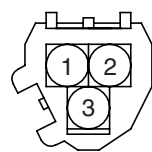


KUM_NMWP_03M_B

EE12

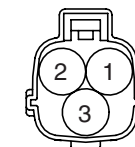

KET_312IWP_03F_B

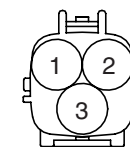


KET_312IWP_03M_B

HARNESS CONNECTORS


HARNESS CONNECTORS (2)

CC-2

EF12

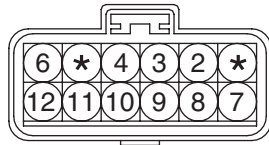


KUM_NMWP_12F_B

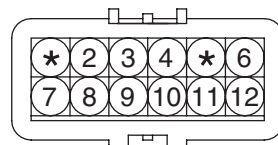


KUM_NMWP_12M_B

EFW11

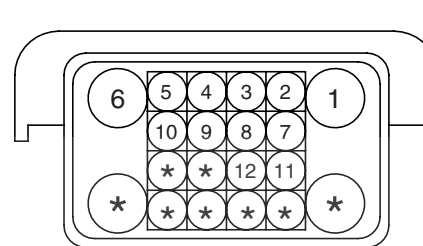


AMP_MTIJPT_20F_B

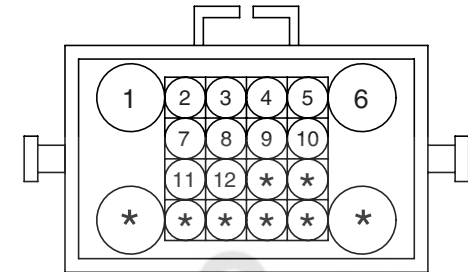


AMP_MTIJPT_20M_B

FDDA

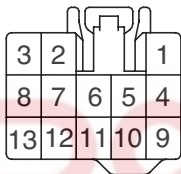


KET_090III_13F_Gr

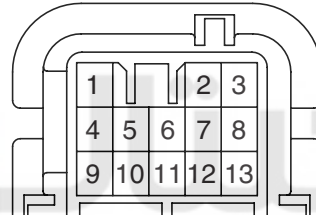


KET_DOOR_34M_W

FDDB

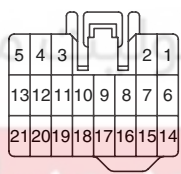


KET_050_21F_B

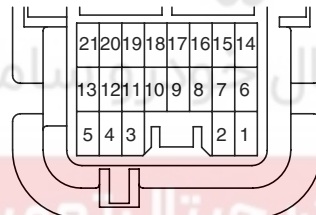


KET_DOOR_34M_W

FDPA

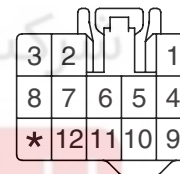


KET_090III_13F_Gr

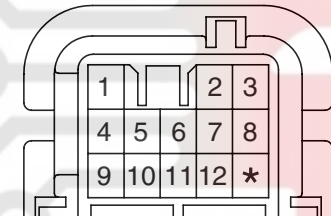


KET_DOOR_34M_W

FDRL

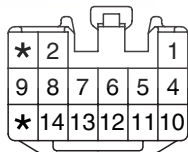


KET_090II_15F_W

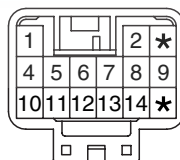


KET_090II_15M_W

FDPB

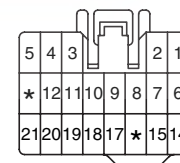


KET_050_21F_B

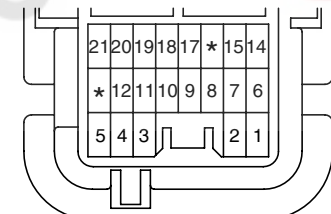


KET_DOOR_34M_W

FDRR

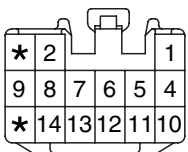


KET_090II_15F_W

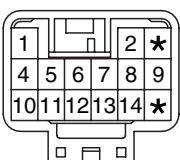


KET_090II_15M_W

FF01

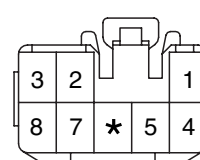

KET_090II_08F

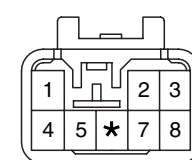


KET_090II_08M_W

HARNESS CONNECTORS


HARNESS CONNECTORS (3)

CC-3

FF11

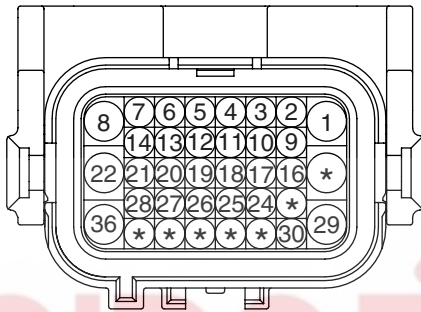


AMP_MTIJPT_36F_B

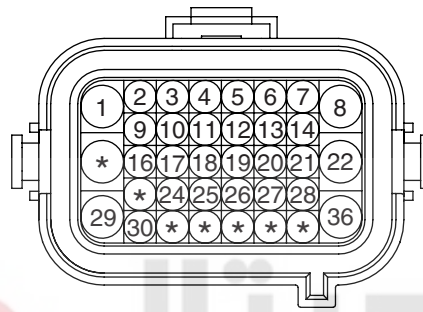


AMP_MTIJPT_36M_B

FF31

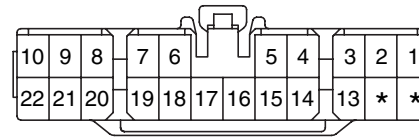


KET_090II_22F_W

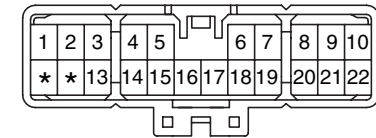


KET_090II_22M_W

FRR1

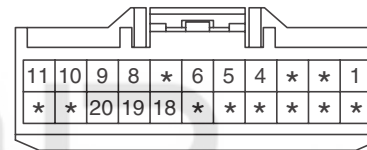


AMP_090III_22F_W

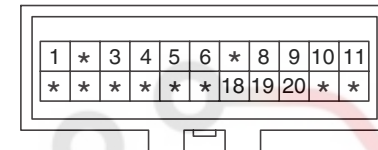


AMP_090III_22M_W

FRT1

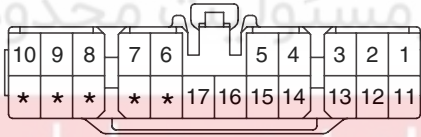


KET_090II_22F_W

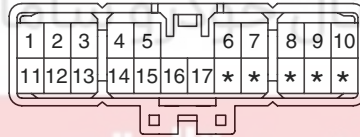

KET_090II_20M_W

FSFD

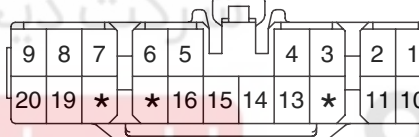


KET_090II_20F_W




KET090II_20M

FSFP

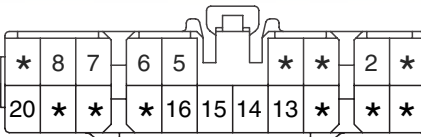


KET_090II_20F_W

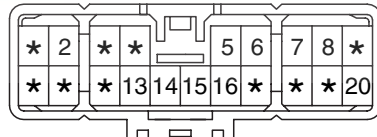


KET090II_20M

FSNA

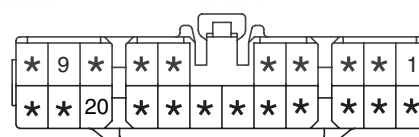


KET_090II_22F_W

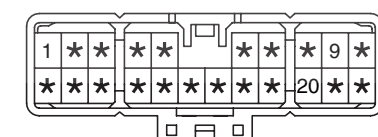


KET090II_22M

FSNB

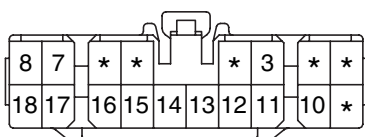


KET_090II_18F_W

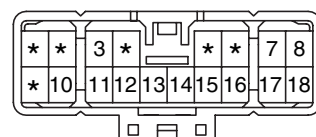


KET090II_18M

FSRL

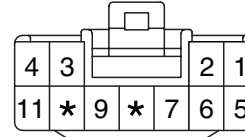

KET_090II_11F_W

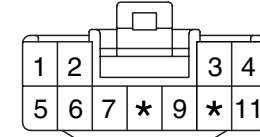


KET090II_11M

HARNESS CONNECTORS


HARNESS CONNECTORS (4)

CC-4

FSRRA

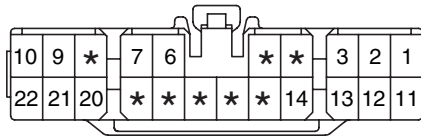


KET_090II_22F_G

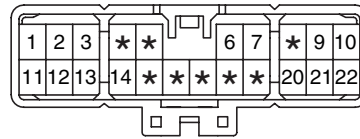


KET090II_22M

FSRRB

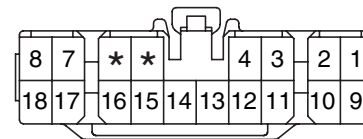


KET_090II_18F_W

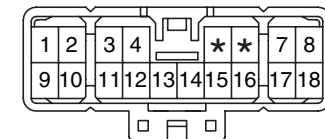


KET090II_18M

MA0A

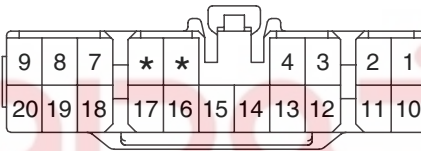


KET_090II_20F_W

 


KET_MG641083

MA0B

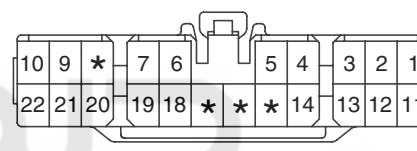

KET_090II_22F_W

 

KET_MG641089

MA12




AMP_ABG_20F_B




AMP_ABG_20M_B

MA32

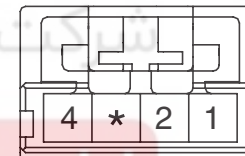


AMP_MQS_04F_Y_040

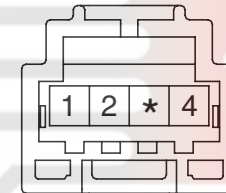


AMP_MQS_04M_Y_040

MC12

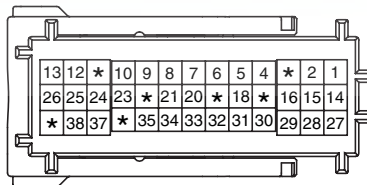


AMP_0409LIF_39F_W

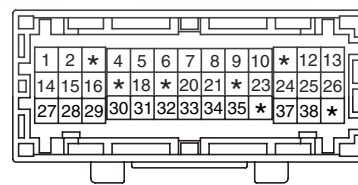


AMP_LIF0409_39M_W

MFL12

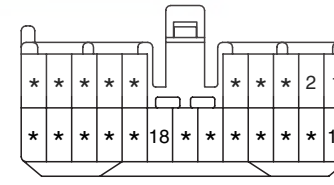


KET_050_23F_W

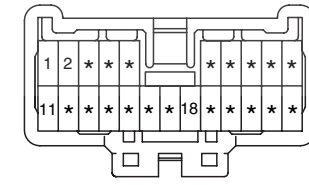


KET_050_23M_W

MFL22

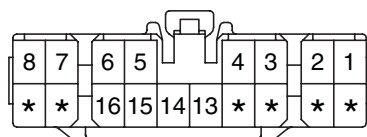


KET_090II_18F_W

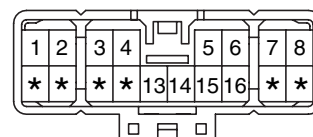


KET_090II_18M_W

MFL42

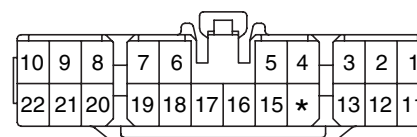

KET_090II_22F_W

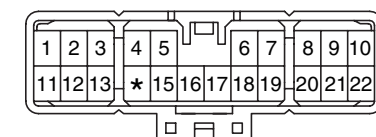


KET_090II_22M_W

HARNESS CONNECTORS

HARNESS CONNECTORS (5)

CC-5

MFL52

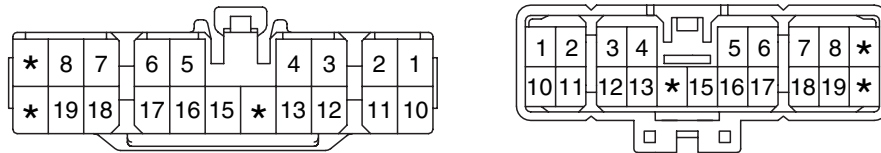

KET_090II_20F_B

KET_090II_20M_B


MFL62



KET_050_15F_W

KET_050_15M_W

MFR12

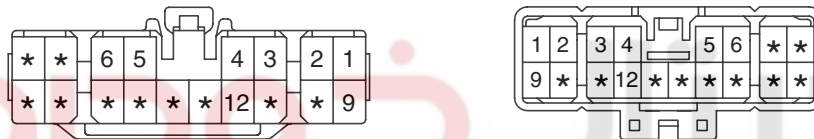

KET_090II_18F_W

KET_090II_18M_W

MFR22



KET_050_15F_W

KET_050_15M_W


MFR32



KET_050_23F_W

KET_050_23M_W


MFR42

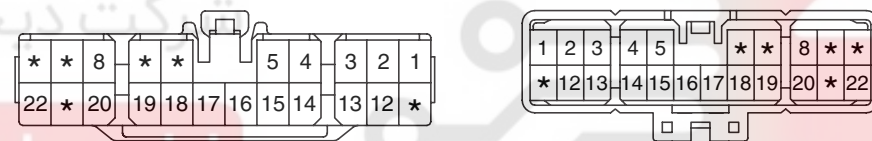

KET_090II_22F_W

KET_090II_22M_W

MFR52

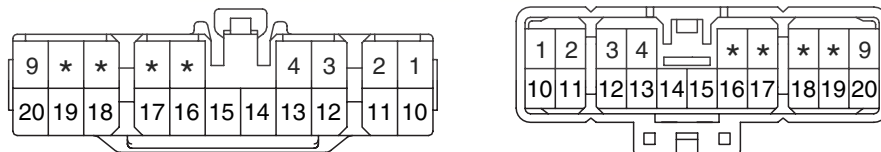

KET_090II_20F_B

KET_090II_20M_B

MM01



AMP_025_12F_W

AMP_025_12F_W

MM12



KET_090II_06F_W

KET_090II_06M_W

RR01



KET_090II_06F_B


KET_090II_06M_B

HARNESS CONNECTORS


HARNESS CONNECTORS (6)

CC-6

RR02

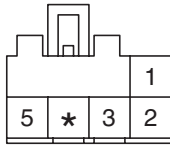


KUM_CDR_05F_W

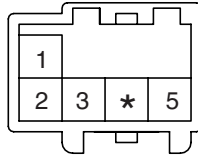


KUM_CDR_05M

 RR11




KET_090II_14F_W

 


KET_090II_14M_W

RRW11

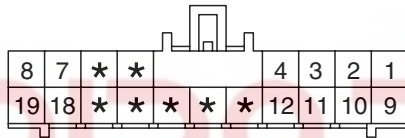


KUM_CDR_19F_W

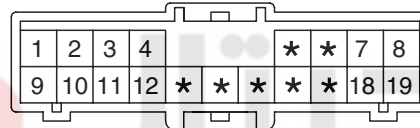


KUM_CDR_19M_W

RRW21

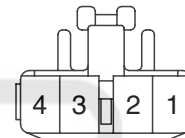


KET_090II_04F_W

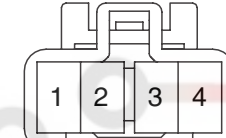


KET_090II_04M_W

SS01

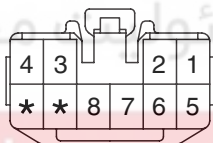


KET_090II_10F

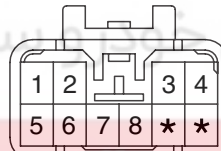


KET_090II_10M

SS11

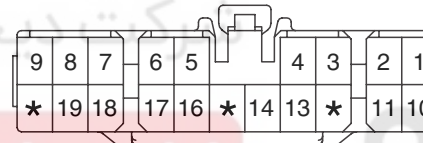


KET090II_20F_L

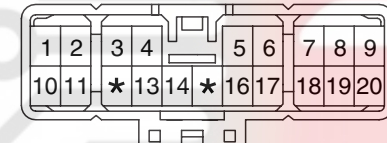


KET090II_20M_L

SS31

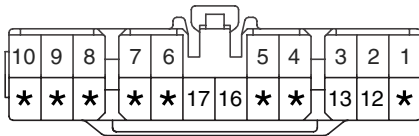

KET090II_22F_Y

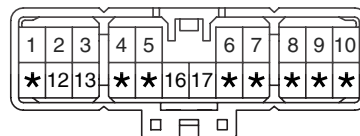

KET090II_22M_Y


BLANK

E/R JUNCTION BOX E024A1B8

E/R JUNCTION BOX (1)


CC-7

JC01

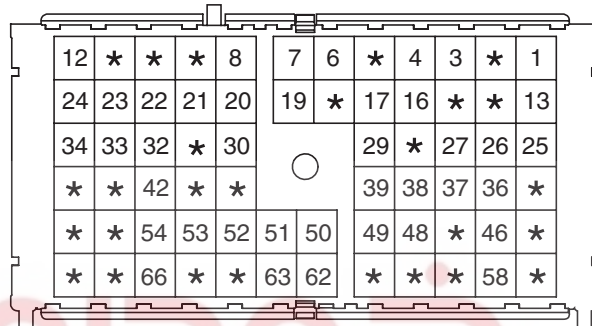


PKD_280_68F_GR_BECCR

JE0B

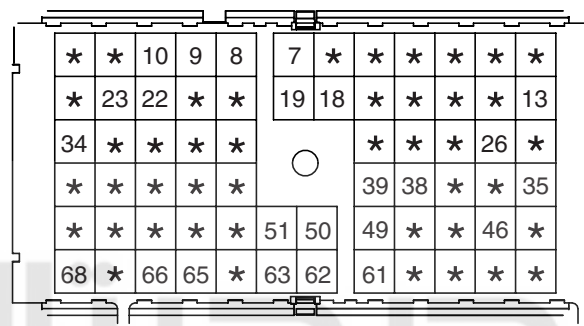


PKD_280_68F_B_BECCB

JE0F

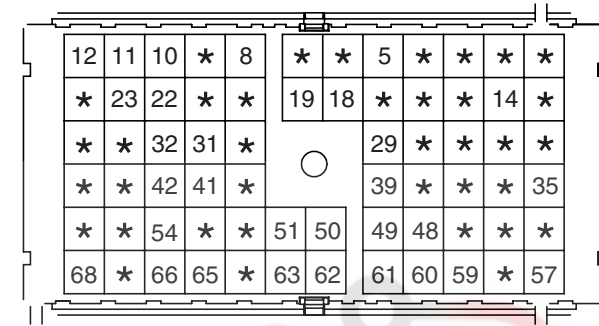

PKD_280_68F_BR_BECCB

JE0A

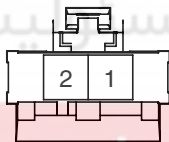

PKD_800_02F_W_BECA

BLANK

BLANK

I/P JUNCTION BOX E8CB621B

I/P JUNCTION BOX (1)

CC-8

I/P-A

*	7	6	5					4	3	2	1
20	19	18	*	16	15	14	13	*	11	10	9

AMP_0925_20F_W

I/P-B

5	4					*	*	1
14	13	12	11	10	9	*	7	6

AMP_0925_14F_W

I/P-C

*	7	6	5				4	3	*	1
19	18	17	16	15	14	13	*	11	10	9
*	29	28	27	26	25	*	23	22	21	20

AMP_090III_30F_W

I/P-D

*	5	4					3	2	1
*	15	14	13	12	11	10	9	*	7

AMP_0925_16F_W

I/P-E

7	*	5					4	3	2	1
18	17	16	15	14	13	12	11	10	9	8

AMP_0925_18F_W

I/P-F

13	12	11	10	9	8	7	6	5	4	3	2	1
26	25	*	23	*	*	20	*	18	17	16	15	14

AMP_090III_26F_W

I/P-G

7	6	5					4	3	2	1
18	17	16	15	14	13	12	11	10	9	*

AMP_0925_18F_W

I/P-H

8	7	6	5			4	3	2	1	
19	18	17	16	15	14	13	12	*	10	9
30	29	*	27	26	25	24	23	22	21	20

AMP_090III_30F_W

I/P-J

*	12	11	10	9	*	7	6	5	4	*	2	1
26	25	24	23	22	21	20	19	18	17	16	15	14

AMP_090III_26F_W

I/P-K

6	5	*					*	2	1
16	15	14	13	12	11	10	9	8	7

AMP_0925_16F_W

I/P-L

	8	*	6	5					4	3	2	1
	20	19	18	17	16	15	14	13	*	11	10	9

AMP_0925_20F_W


BLANK

JOINT CONNECTORS EAC7FDB7

JOINT CONNECTORS (1)


CC-9

D14

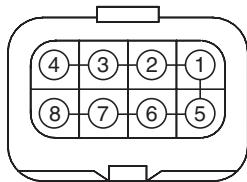


KET_090IWP_08F_B_JCH

D34

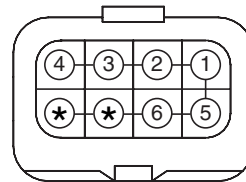


KET_090IWP_08F_B_JCH

E26

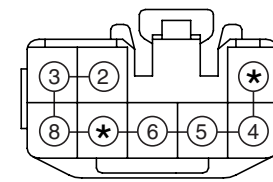


KET_090II_08F_B

F15

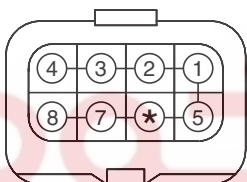


KET_090IWP_08F_B_JCH

F47

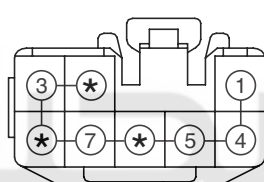


KET_090II_08F_W

F62

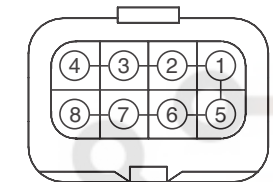


KET_090IWP_08F_B_JCH

M30

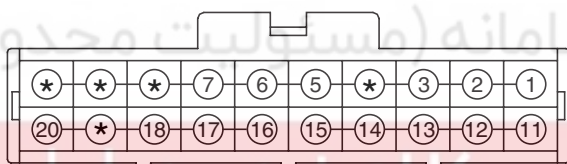


KET_090II_20F_B_JCH

M31

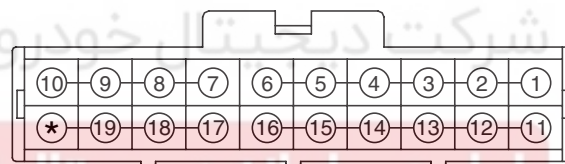


KET_090II_20F_B_JCH

M32

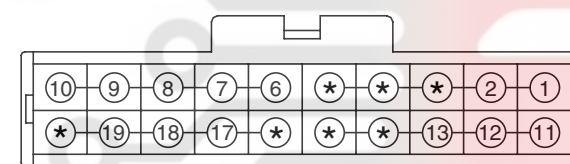


KET_090II_20F_B_JCH

M33

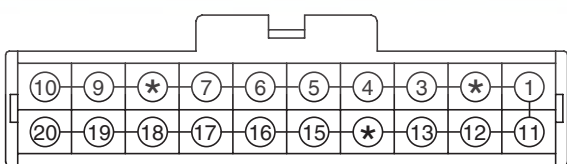


KET_090II_20F_B_JCH

M34

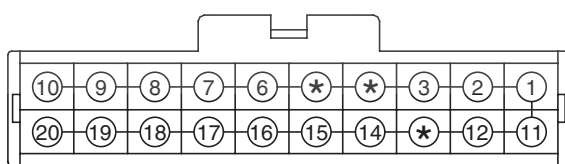


KET_090II_20F_B_JCH

M35

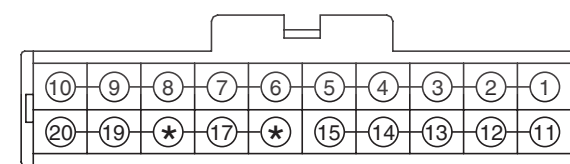


KET_090II_20F_B_JCH

R62

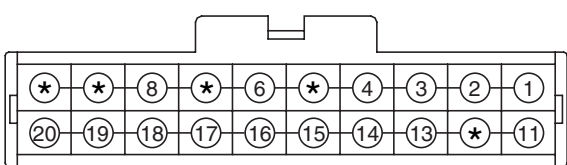


KET_090II_20F_B_JCH

S23

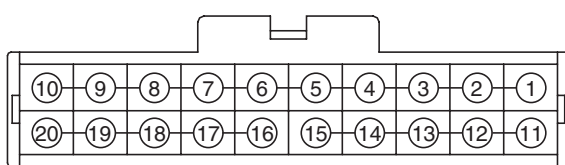

KET090II_20F_JCH

S24

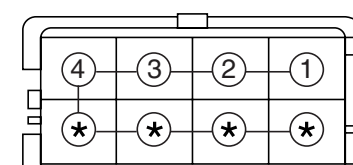


KET070_08F_B_JCH

JOINT CONNECTORS

JOINT CONNECTORS (2)


CC-10

S46

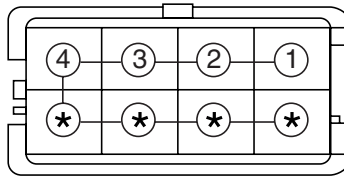


KET070_08F_B_JCH

S47

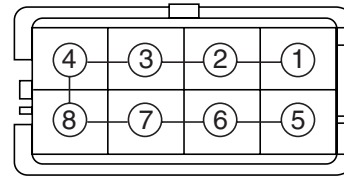


KET070_08F_JCH

S66

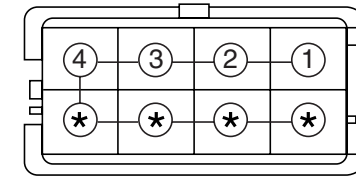


KET070_08F_JCH

S76

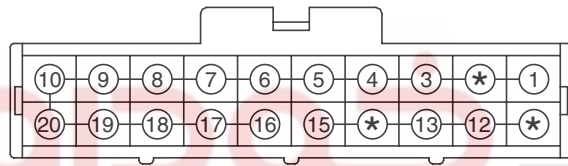

KET090II_20F_JCH

S106

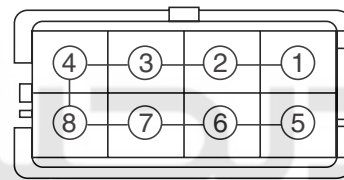

KET070_08F_JCH

BLANK


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

MAIN HARNESS EAAAC607

MAIN HARNESS (1)

HL-1

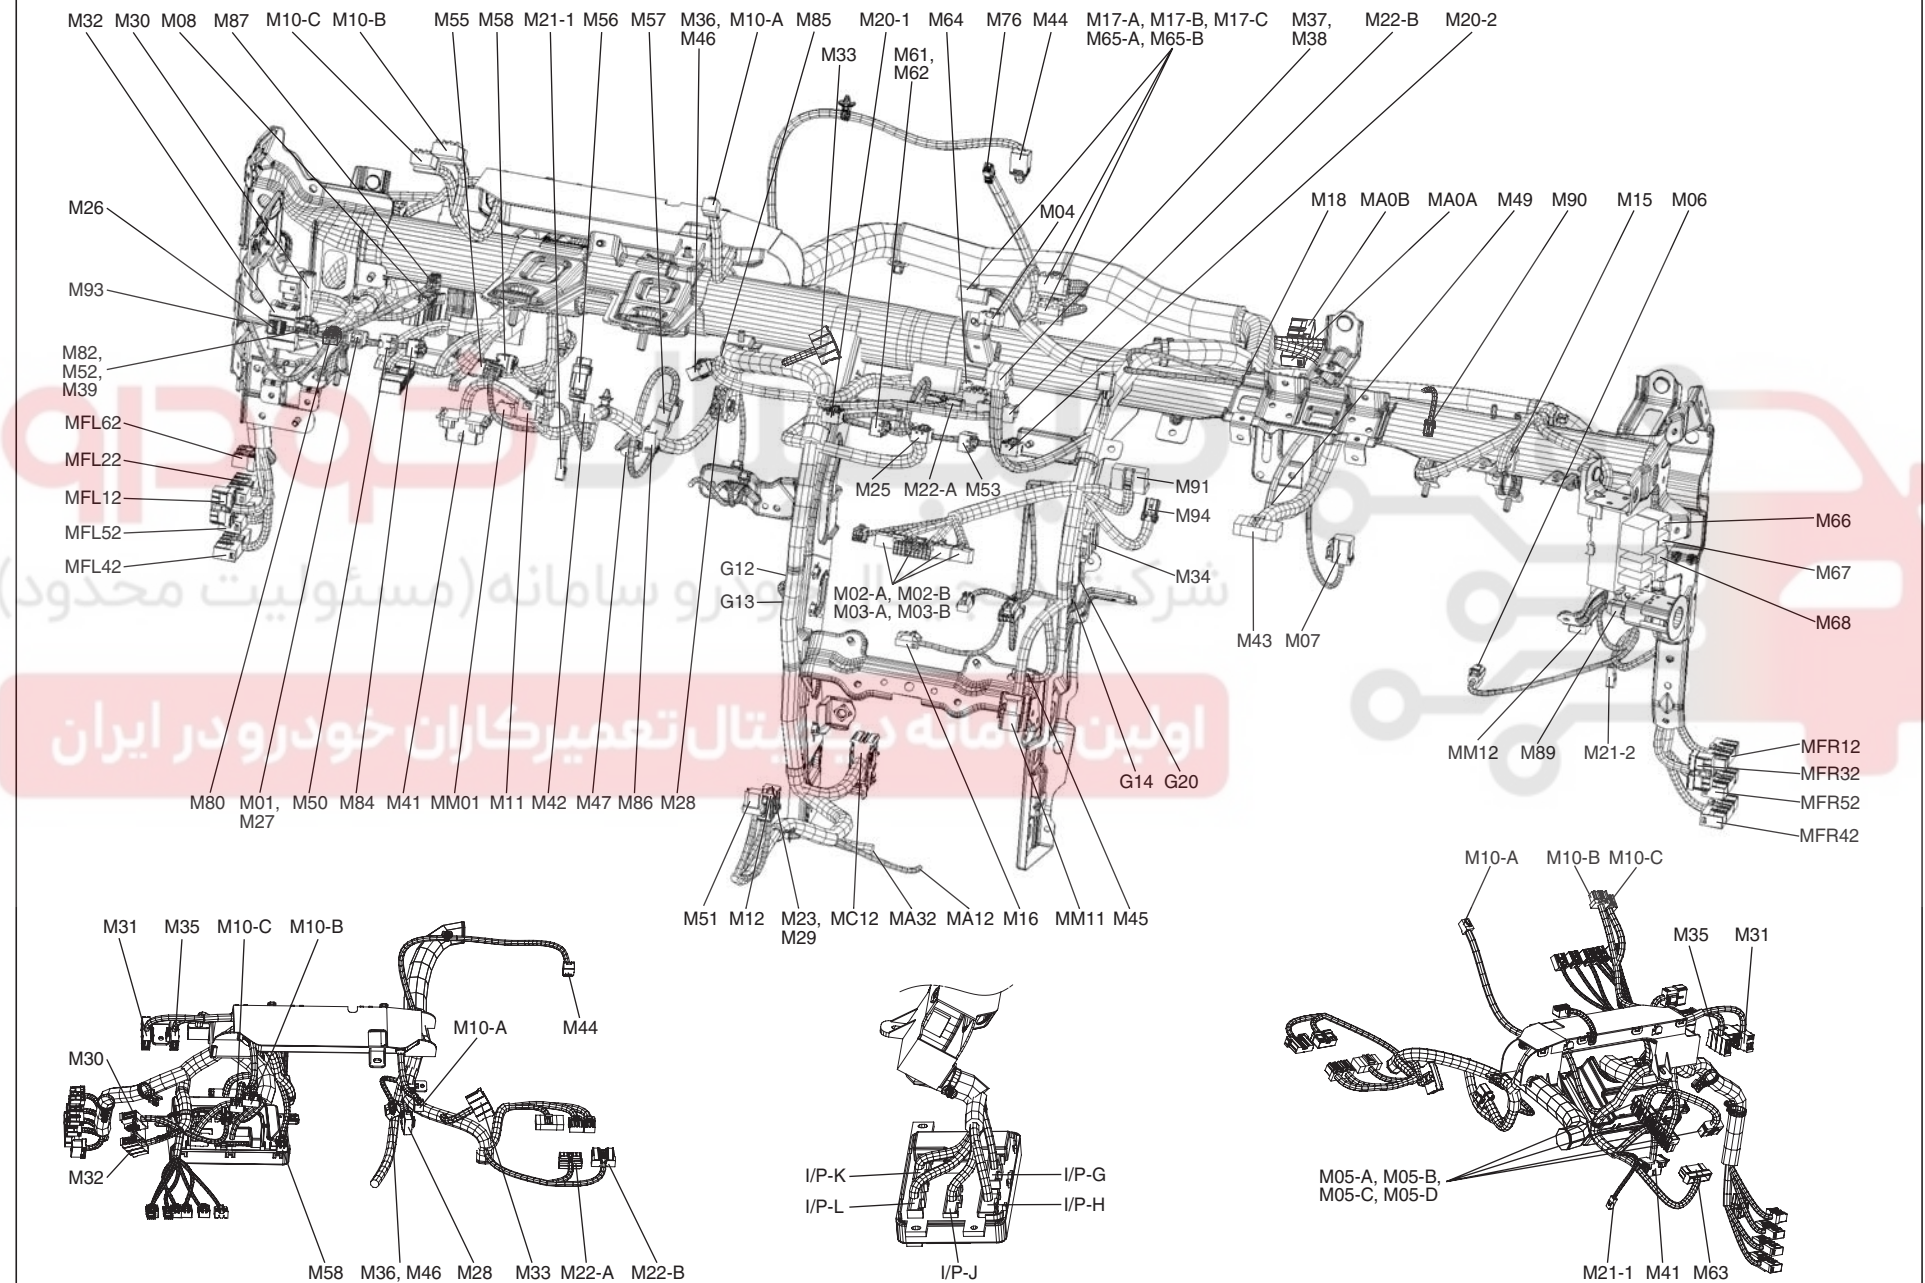

MAIN HARNESS

MAIN HARNESS (2)

HL-2

MAIN HARNESS

M01	Air Purifier Switch	M50	Rheostat
M02-A	Audio	M51	Rear Curtain Switch
M02-B	Audio	M52	Rear Fog Lamp Switch
M04	Analog Clock	M53	Rear Vent Switch
M05-A	BCM(Body Control Module)	M55	Steering Tilt & Telescopic Switch
M05-B	BCM(Body Control Module)	M56	Steering Angle Sensor
M05-C	BCM(Body Control Module)	M57	Telescopic Motor & Sensor
M05-D	BCM(Body Control Module)	M58	Tilt Motor & Sensor
M06	Blower Motor	M61	TCS Switch
M07	FET(Field Effect Transistor)	M63	Tilt & Telescopic Module
M10-A	Instrument Cluster	M65-A	Trip Computer
M10-B	Instrument Cluster	M65-B	Trip Computer
M10-C	Instrument Cluster	M66	HTD Glass Relay
M11	Driver Air Bag	M67	FOG LP (RR) Relay
M12	ECS Switch	M68	ADJ Pedal Relay
M16	Front Cigarette Lighter	M80	Adjustable Pedal Switch
M18	Passenger Air Bag	M81	ATM Shift Lever ILL.
M20-1	Front Seat Warmer Switch LH	M84	Front & Back Warning Switch
M20-2	Front Seat Warmer Switch RH	M85	Immobilizer Control Module (W/O PIC)
M21-1	Front Foot Lamp LH	M86	Key Solenoid
M21-2	Front Foot Lamp RH	M87	Trip Mode Reset Switch
M25	Hazard Switch	M89	PAB On/Off Switch
M26	Head Lamp Leveling Switch (Manual)	M90	RF Receiver
M27	Head Lamp Washer Switch	M91	Rear Curtain Module
M28	Ignition Switch	MA0A	Connection With AIR CON Harness
M30	Joint Connector	MA0B	Connection With AIR CON Harness
M31	Joint Connector	MA12	Connection With AIR BAG Harness
M32	Joint Connector	MA32	Connection With AIR BAG Harness
M33	Joint Connector	MC12	Connection With CONTROL Harness
M34	Joint Connector	MFL12	Connection With FLOOR LH Harness
M35	Joint Connector	MFL22	Connection With FLOOR LH Harness
M36	Ignition Key ILL. & Door Warning Switch (W/O PIC)	MFL42	Connection With FLOOR LH Harness
M37	Audio Key Console	MFL52	Connection With FLOOR LH Harness
M41	Data Link Connector	MFL62	Connection With FLOOR LH Harness
M42	Multifunction Switch	MFR12	Connection With FLOOR RH Harness
M44	Auto Light & Photo Sensor	MFR22	Connection With FLOOR RH Harness
M45	PIC Interior Antenna #1	MFR32	Connection With FLOOR RH Harness
M46	PIC Door Warning Switch (With PIC)	MFR42	Connection With FLOOR RH Harness
M47	PIC Key Set Switch	MFR52	Connection With FLOOR RH Harness
M49	RF Antenna	MM01	Connection With STEERING Harness
		MM12	Connection With GLOVE BOX Harness

I/P-G	Connection With I/P JUNCTION BOX Harness
I/P-H	Connection With I/P JUNCTION BOX Harness
I/P-J	Connection With I/P JUNCTION BOX Harness
I/P-K	Connection With I/P JUNCTION BOX Harness
I/P-L	Connection With I/P JUNCTION BOX Harness
G12	Ground
G13	Ground
G14	Ground
G20	Ground


GLOVE BOX HARNESS

M72	Glove Box ILL.
M73-1	Glove Box Lamp Switch
M73-2	Glove Box Lamp Switch
M75	Trunk Lid Main Switch
MM12	Connection With MAIN Harness

STEERING HARNESS

M77	Horn Switch
M78	Steering Remocon LH
M79	Steering Remocon RH
MM01	Connection With MAIN Harness




GLOVE BOX HARNESS

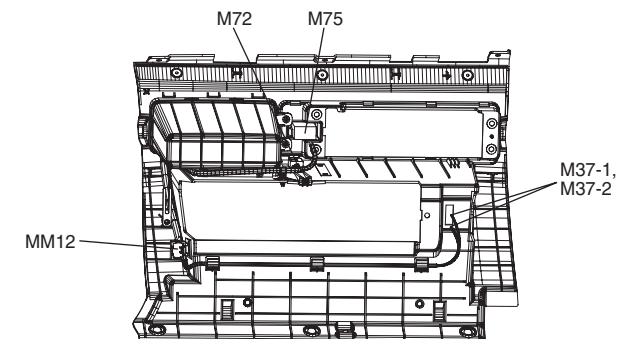


ENGINE HARNESS/ BATTERY HARNESS EEF8CA4F

ENGINE HARNESS/ BATTERY HARNESS (1)

HL-3

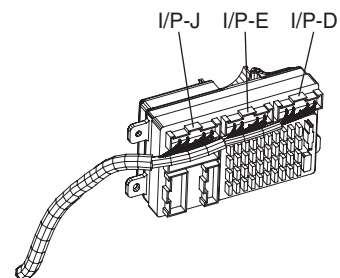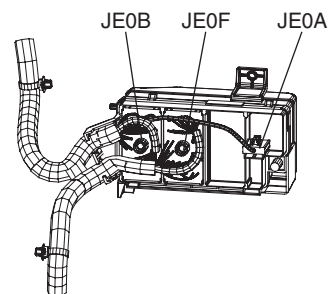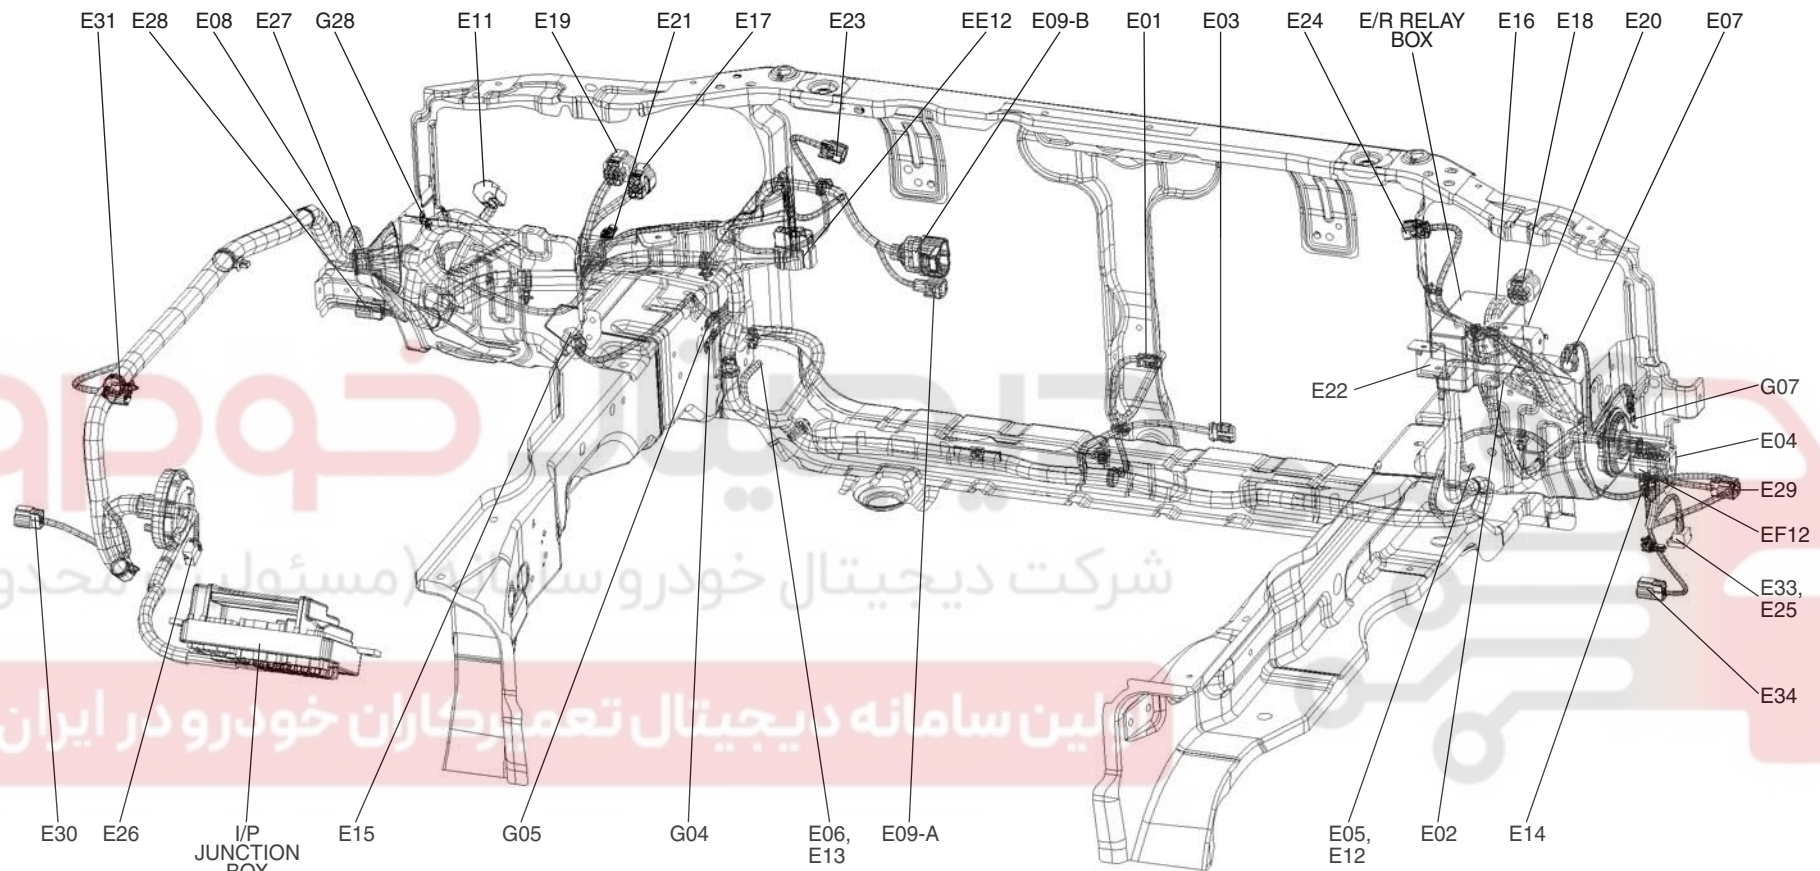

BATTERY HARNESS

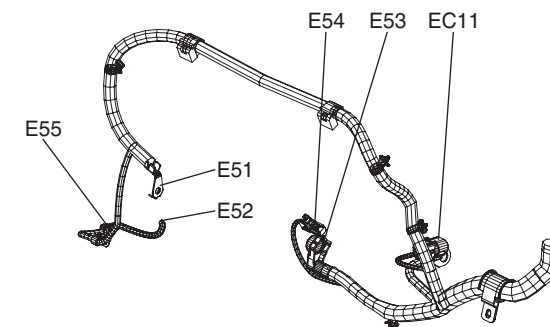

ENGINE HARNESS/ BATTERY HARNESS

ENGINE HARNESS/ BATTERY HARNESS (2)

HL-4

ENGINE HARNESS

E01 Ambient Sensor
 E02 A/C Pressure Transducer
 E03 AQS Sensor
 E04 External Buzzer
 E07 Burglar Alarm Horn
 E08 Front Wheel Sensor LH
 E09-A Cooling Fan Controller
 E09-B Cooling Fan Controller
 E11 Cooling Fan Relay
 E12 Front Impact Sensor RH
 E13 Front Impact Sensor LH
 E14 Front Turn Signal Lamp RH
 E15 Front Turn Signal Lamp LH
 E16 Head Lamp RH (W/O HID)
 E17 Head Lamp LH (W/O HID)
 E18 Head Lamp RH (With HID)
 E19 Head Lamp LH (With HID)
 E20 Head Lamp Leveling Actuator RH
 E21 Head Lamp Leveling Actuator LH
 E22 Hood Switch
 E23 Horn LH
 E24 Horn RH
 E25 Head Lamp Washer Motor
 E26 Joint Connector
 E27 Front ECS Actuator LH
 E30 Side Repeater Lamp LH
 E33 Washer Motor
 E34 Washer Level Sensor
 E35 Head Lamp Washer Relay
 E37 DRL Relay
 E39 H/LP (LO-RH) Relay
 E40 ECS Relay

EE12 Connection With BATTERY Harness
 EF12 Connection With FLOOR RH Harness
 JE0A Connection With E/R JUNCTION BOX Harness
 JE0B Connection With E/R JUNCTION BOX Harness
 JE0F Connection With E/R JUNCTION BOX Harness
 I/P-D Connection With I/P JUNCTION BOX Harness
 I/P-E Connection With I/P JUNCTION BOX Harness
 I/P-F Connection With I/P JUNCTION BOX Harness
 G04 Ground
 G05 Ground
 G06 Ground
 G07 Ground
 G28 Ground


BATTERY HARNESS

E51 Generator
 E52 Generator
 E53 Start Motor
 E54 Start Solenoid
 E55 A/C Compressor
 EC11 Connection With CONTROL Harness
 EE12 Connection With ENGINE Harness

FLOOR HARNESS EDF1BAFB

FLOOR HARNESS (1)

HL-5

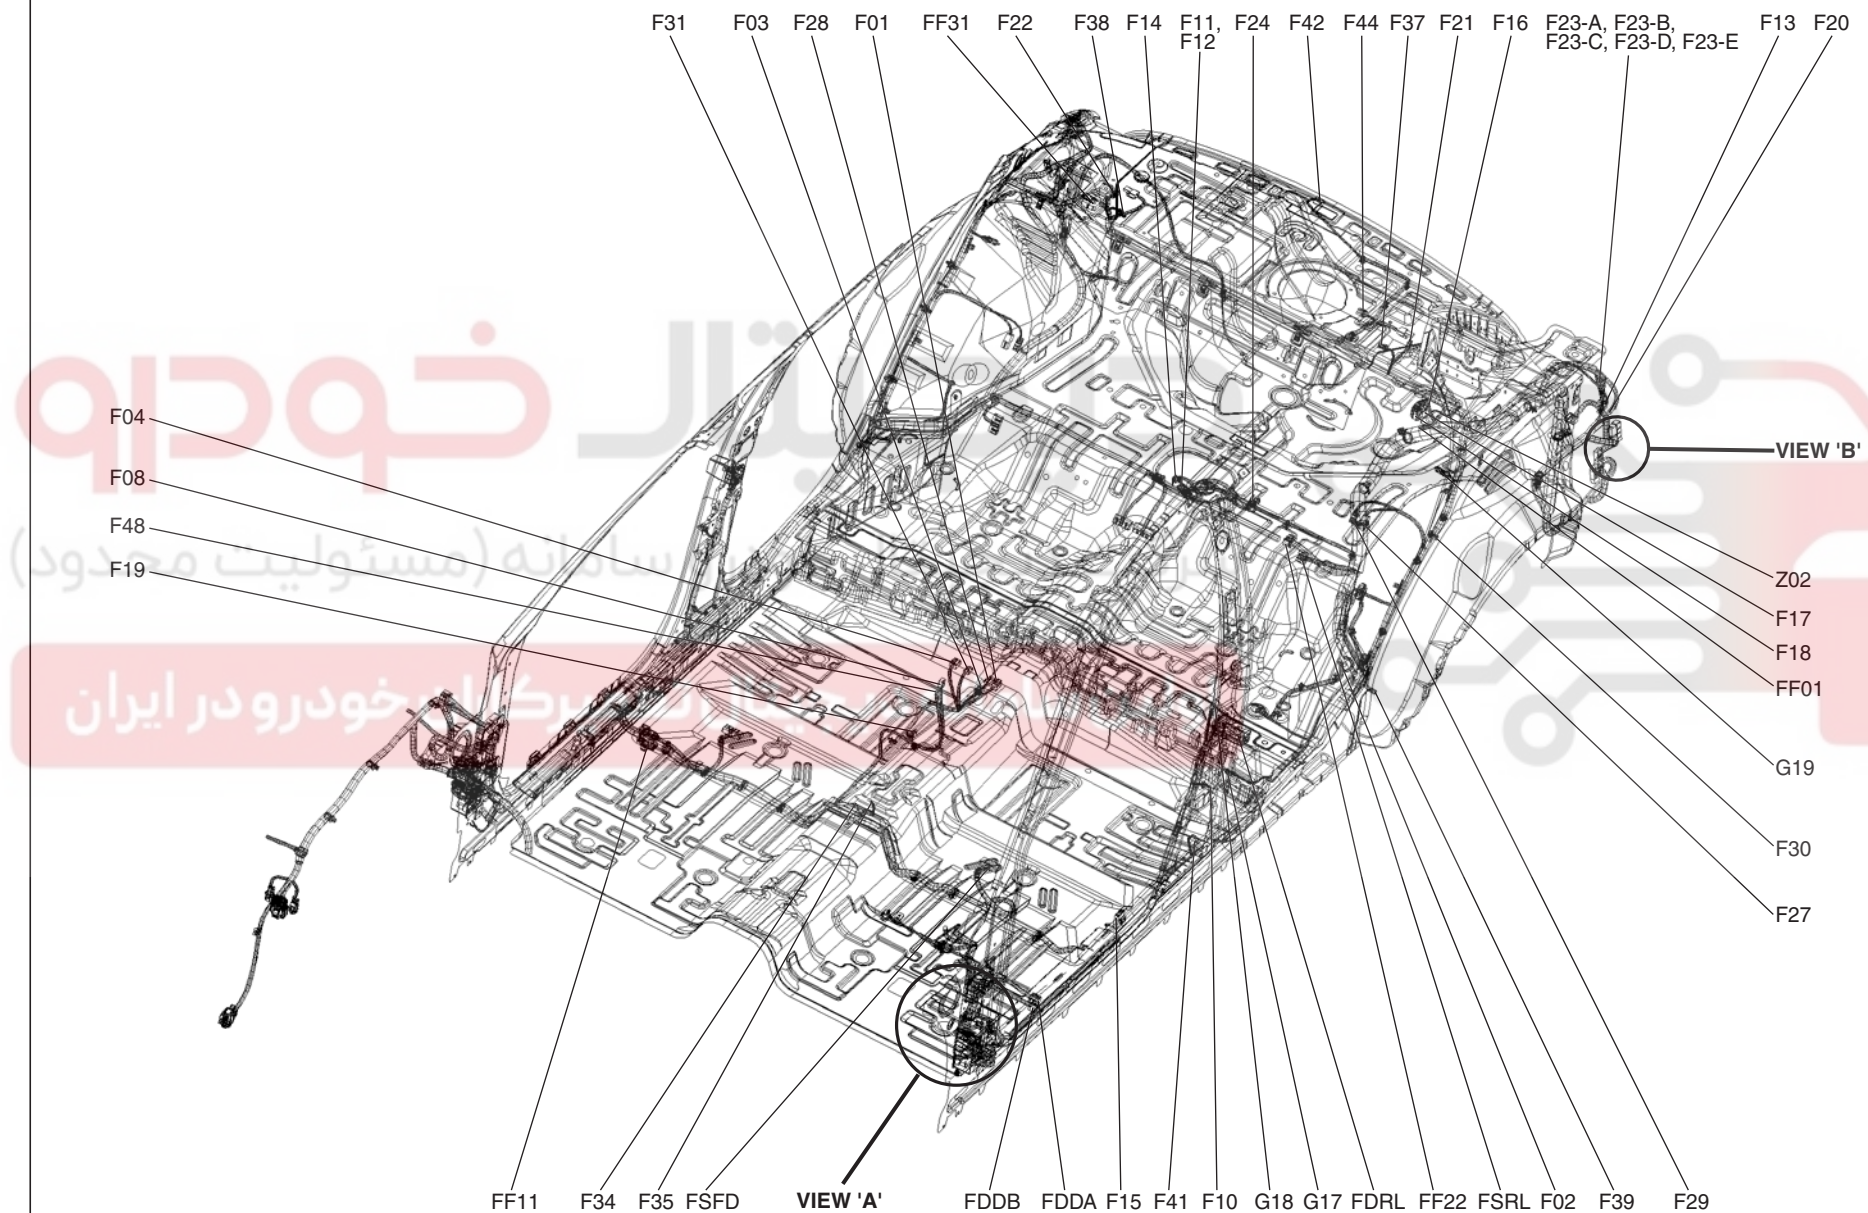


FLOOR HARNESS

FLOOR HARNESS (2)

HL-6


VIEW 'A'

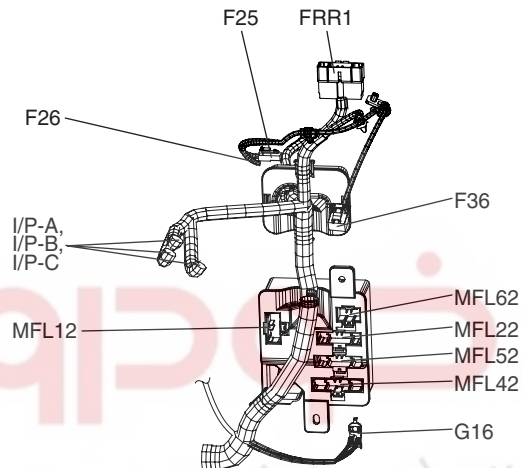

FLOOR LH HARNESS

F02	Head Lamp Leveling Sensor (Auto)	FDDA	Connection With FRONT DOOR LH Harness
F04	Car Phone	FDDB	Connection With FRONT DOOR LH Harness
F08	Console Power Outlet	FDRL	Connection With REAR DOOR LH Harness
F10	Front Door Switch LH	FF01	Connection With FLOOR EXT. Harness
F11	Fuel Sender & Fuel Pump Motor	FF11	Connection With FLOOR RH Harness
F13	Fuel Lid Actuator	FF31	Connection With FLOOR RH Harness
F15	Joint Connector	FRR1	Connection With ROOF Harness
F19	PIC Interior Antenna #2	FRT1	Connection With TRUNK Harness
F20	PIC Interface Module	FSFD	Connection With FRONT SEAT LH Harness
F21	PIC Package Tray Antenna LH	FSRL	Connection With REAR SEAT LH Harness
F22	PIC Package Tray Antenna RH	MFL12	Connection With MAIN Harness
F23-A	PIC Module	MFL22	Connection With MAIN Harness
F23-B	PIC Module	MFL42	Connection With MAIN Harness
F23-C	PIC Module	MFL52	Connection With MAIN Harness
F23-D	PIC Module	MFL62	Connection With MAIN Harness
F23-E	PIC Module	I/P-A	Connection With I/P JUNCTION BOX Harness
F25	Parking Brake Switch	I/P-B	Connection With I/P JUNCTION BOX Harness
F27	Rear Wheel Sensor LH	I/P-C	Connection With I/P JUNCTION BOX Harness
F28	Rear Cigarette Lighter	G16	Ground
F29	Rear ECS Actuator	G17	Ground
F30	Rear Door Switch LH	G18	Ground
F31	Rear Vent Temperature Switch	G19	Ground
F34	Sensor Cluster		
F35	Sports Mode Switch		
F36	Stop Lamp Switch		
F42	Trunk Room Lamp		
F44	Wooper Speaker		
F46-A	JBL Amp		
F46-B	JBL Amp		
F47	Joint Connector		
F48	Tray ILL.		

VIEW 'B'

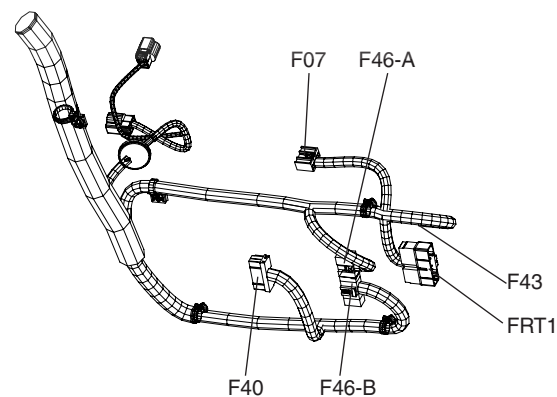


FLOOR EXT. HARNESS

F81	Humidity Sensor
F82	Rear Curtain Motor
F83	High-Mounted Stop Lamp
FF01	Connection With FLOOR LH Harness

FLOOR HARNESS

FLOOR HARNESS (3)

HL-7

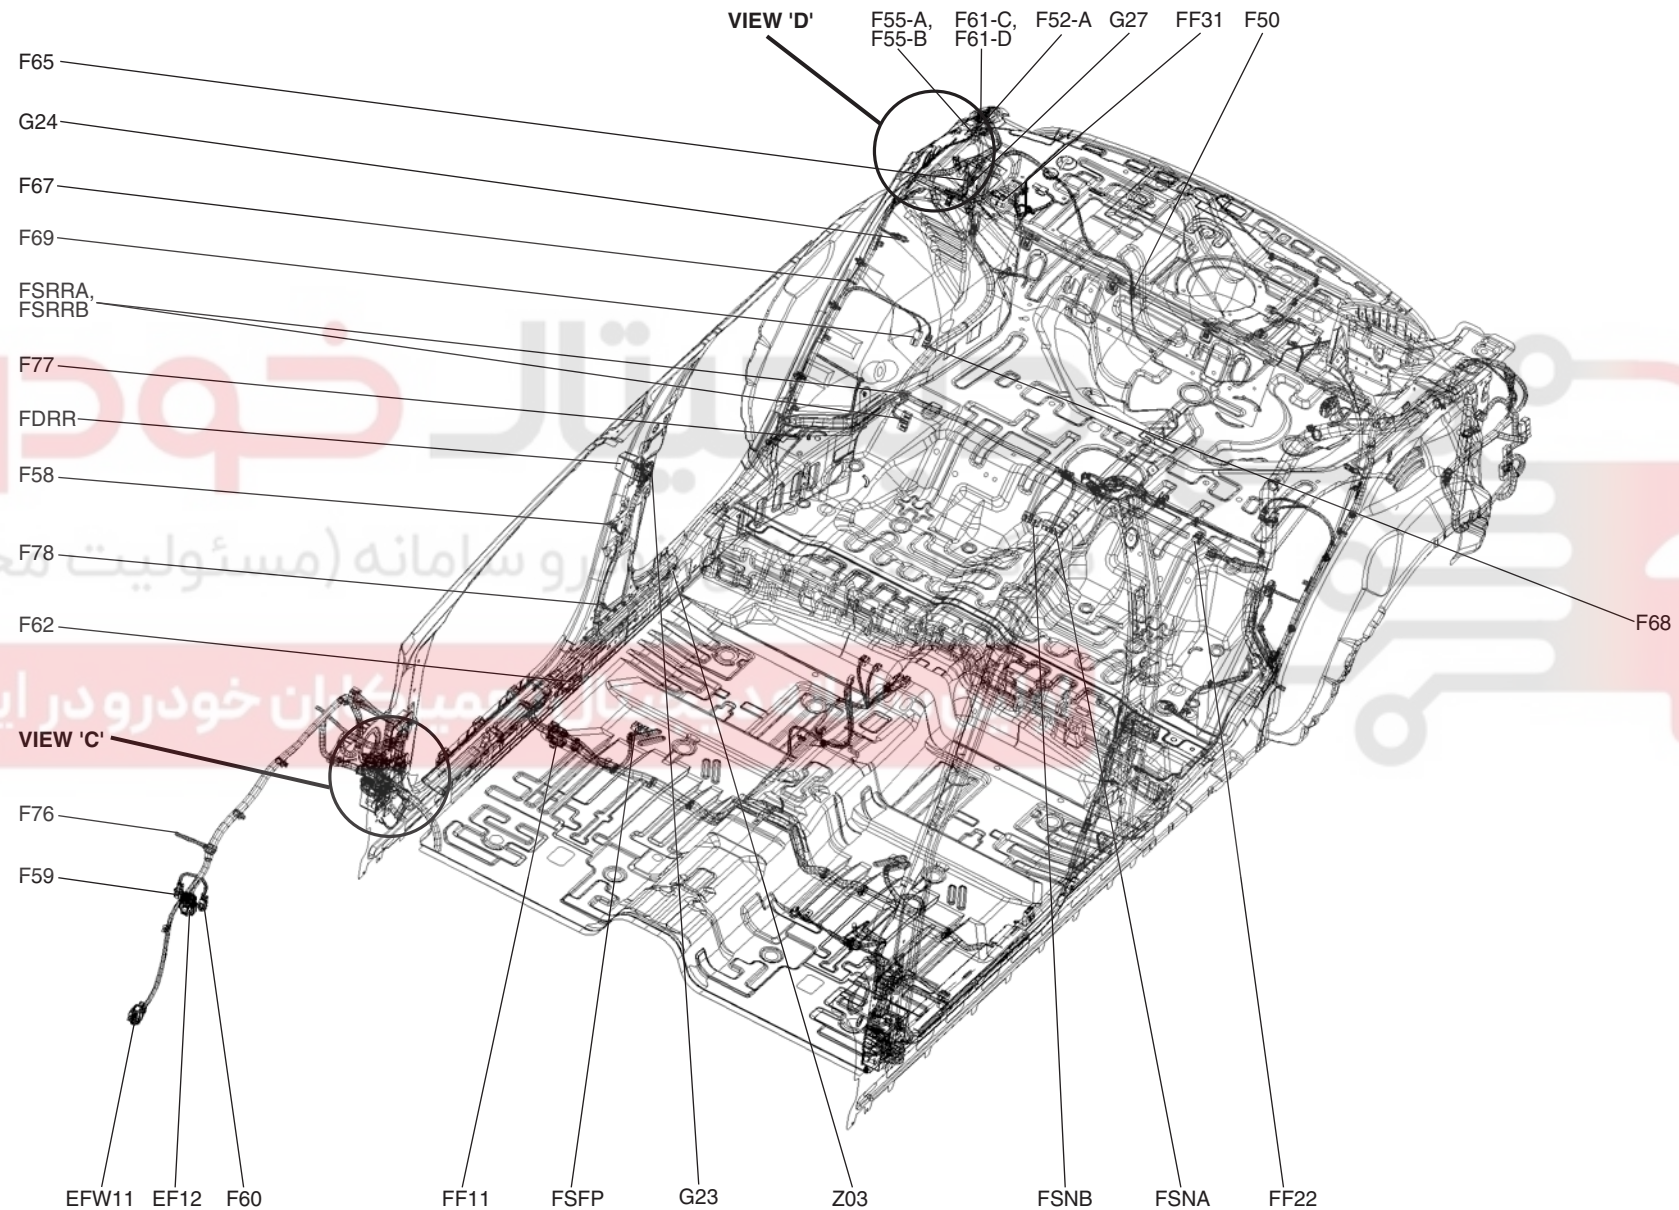


FLOOR HARNESS


FLOOR HARNESS (4)

HL-8

VIEW 'C'

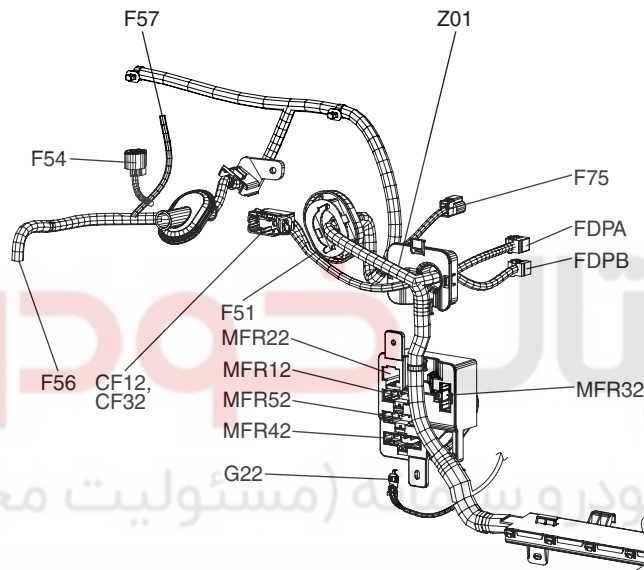

VIEW 'D'

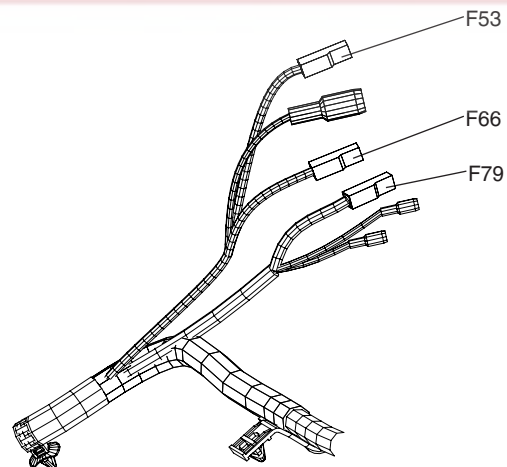

FLOOR RH HARNESS


F50	Air Purifier Module
F51	ATM Key Lock Control Module
F52-A	Front & Back Warning Module
F53	Diversity Antenna Module
F55-A	ECS Control Module
F55-B	ECS Control Module
F56	ABS/ESP Control Module
F57	Front ECS-G Sensor RH
F58	Front Door Switch RH
F59	Front ECS Actuator RH
F60	Front Wheel Sensor RH
F62	Joint Connector
F65	Rear ECS-G Sensor
F66	Rear Defogger '+'
F67	Rear Door Switch RH
F68	Rear ECS Actuator RH
F69	Rear Wheel Sensor RH
F75	Side Repeater Lamp RH
F80	Rear Defogger '-'
CF12	Connection With CONTROL Harness
EF12	Connection With ENGINE Harness
EFW11	Connection With FRONT WARNING Harness
FDPA	Connection With FRONT DOOR RH Harness
FDPB	Connection With FRONT DOOR RH Harness
FDRR	Connection With REAR DOOR RH Harness
FF11	Connection With FLOOR LH Harness
FF31	Connection With FLOOR LH Harness
FSFP	Connection With FRONT SEAT RH Harness
FSNA	Connection With REAR SEAT Harness (W/O Rear Power Seat)
FSNB	Connection With REAR SEAT Harness (W/O Rear Power Seat)
FSRRA	Connection With REAR SEAT RH Harness (With Rear Power Seat)
FSRRB	Connection With REAR SEAT RH Harness (With Rear Power Seat)
MFR12	Connection With MAIN Harness
MFR22	Connection With MAIN Harness
MFR32	Connection With MAIN Harness
MFR42	Connection With MAIN Harness
MFR52	Connection With MAIN Harness
G22	Ground
G23	Ground
G24	Ground
G26	Ground

CONTROL HARNESS E89CD720

CONTROL HARNESS (1)

HL-9

G6DA

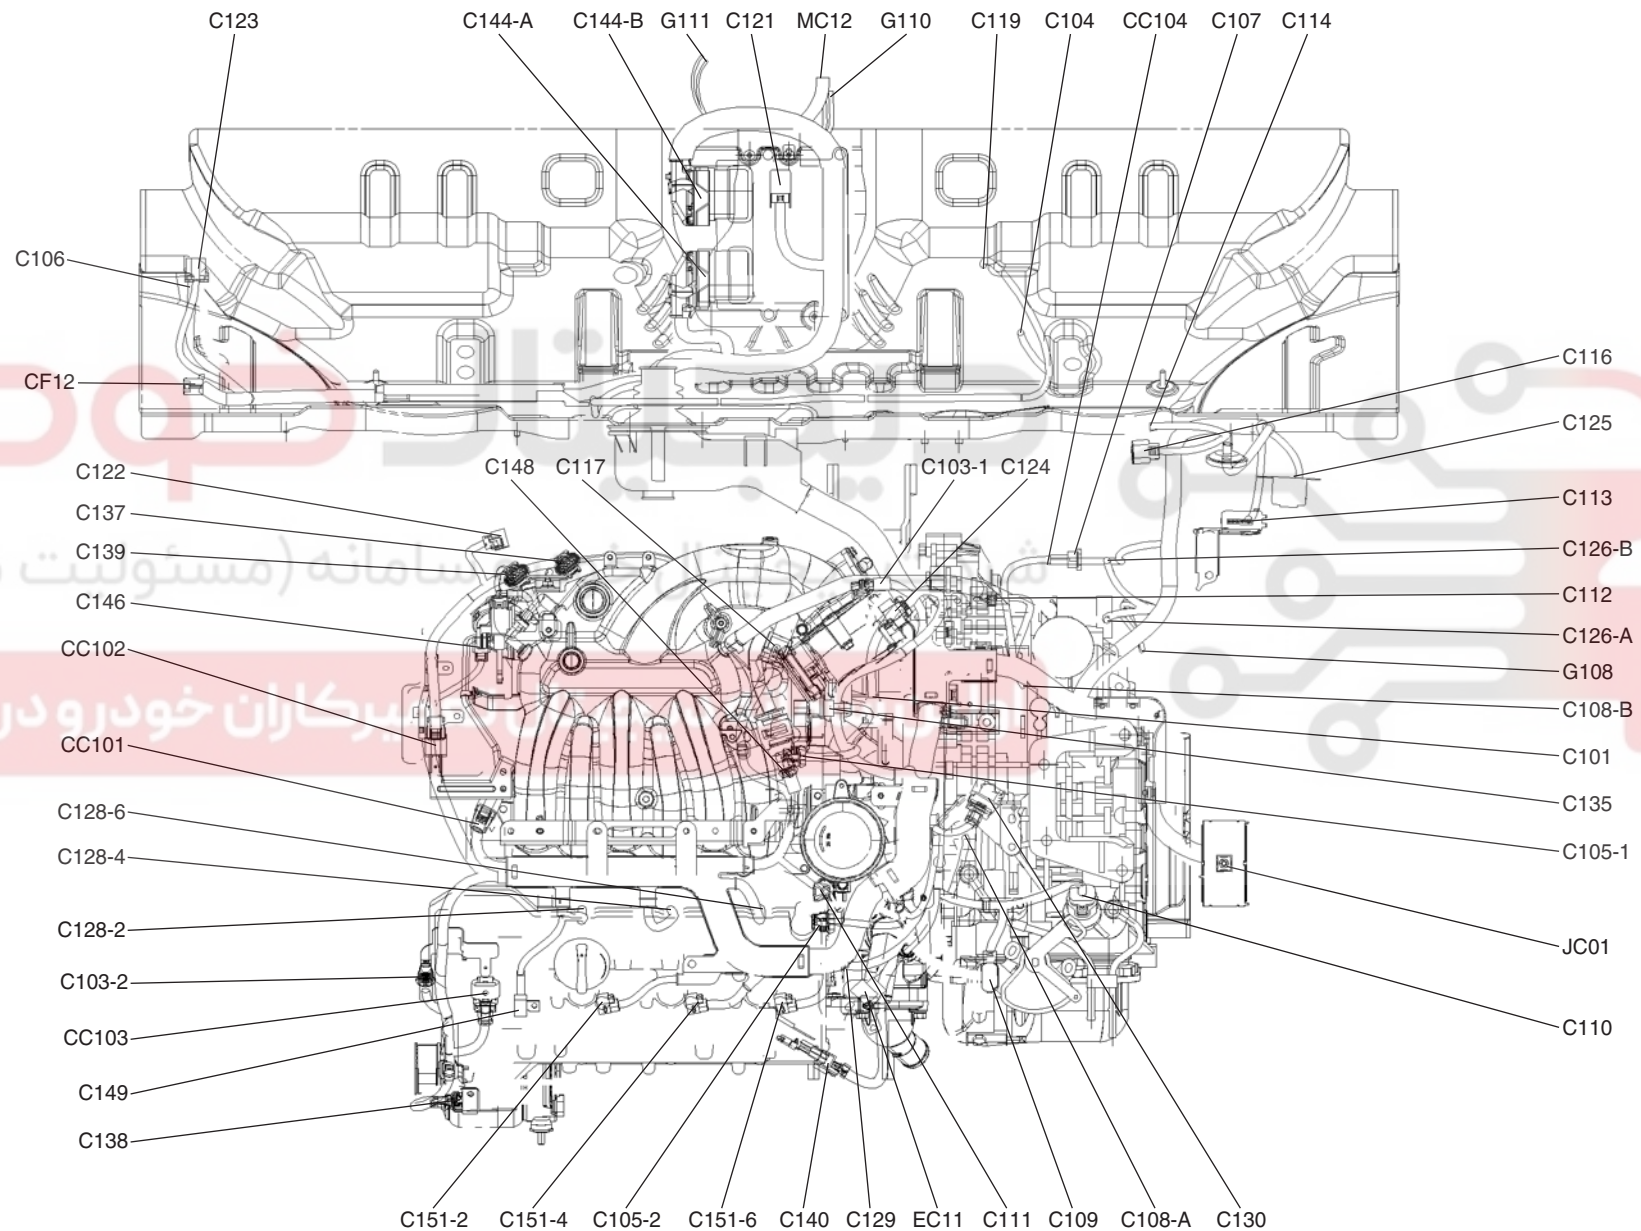

CONTROL HARNESS**CONTROL HARNESS (2)****HL-10****CONTROL HARNESS (G6DA)**

C101	Engine Coolant Temperature Sensor & Sender	C139	Oxygen Sensor #3 (B1/S2)
C103-1	Knock Sensor #1	C140	Oxygen Sensor #4 (B2/S2)
C103-2	Knock Sensor #2	C144-A	PCM
C104	Adjustable Pedal Motor	C144-B	PCM
C105-1	Cam Shaft Position Sensor #1	C146	Variable Intake Manifold Valve
C105-2	Cam Shaft Position Sensor #2	C148	Purge Control Solenoid Valve
C106	Adjustable Pedal Twin Relay	C149	Condenser
C107	Brake Fluid Level Sensor	C151-2	Ignition Coil #2
C108-A	Pulse Generator 'A'	C151-4	Ignition Coil #4
C108-B	Pulse Generator 'B'	C151-6	Ignition Coil #6
C109	Transaxle Range Switch	CC101	Connection With IGNITION COIL EXT. Harness
C110	ATM Solenoid Valve	CC102	Connection With INJECTOR EXT. Harness
C111	Oil Pressure Switch	CC103	Connection With OCV EXT. Harness
C112	Vehicle Speed Sensor	CF12	Connection With FLOOR RH Harness
C113	Multipurpose Check Connector	EC11	Connection With BATTERY Harness
C114	Windshield Defogger	MC12	Connection With MAIN Harness
C116	Wiper Motor	JC01	Connection With E/R JUNCTION BOX Harness
C117	MAP Sensor	G108	Ground
C119	Accel Position Sensor	G110	Ground
C121	ATM Control Relay	G111	Ground
C122	Power Steering Pressure Sensor		
C123	Engine Control Relay		
C124	ETC Motor & Throttle Position Sensor		
C125	Front ESC-G Sensor LH		
C126-A	Pressure Sensor #1		
C126-B	Pressure Sensor #2		
C128-2	Injector #2		
C128-4	Injector #4		
C128-6	Injector #6		
C129	Crank Shaft Position Sensor		
C130	Mass Air Flow Sensor		
C135	Oil Temperature Sensor		
C137	Oxygen Sensor #1 (B1/S1)		
C138	Oxygen Sensor #2 (B2/S1)		

IGNITION COIL EXT. HARNESS

C151-1	Ignition Coil #1
C151-3	Ignition Coil #3
C151-5	Ignition Coil #5
C155	Condenser
CC101	Connection With CONTROL Harness

INJECTOR EXT. HARNESS

C128-1	Injector #1
C128-3	Injector #3
C128-5	Injector #5
CC102	Connection With CONTROL Harness

OCV EXT. HARNESS

C156-1	Oil Control Valve #1 (Right Bank)
C156-2	Oil Control Valve #2 (Left Bank)
CC103	Connection With CONTROL Harness



DOOR HARNESS EA11953A

DOOR HARNESS (1)

HL-11

FRONT DOOR

REAR DOOR

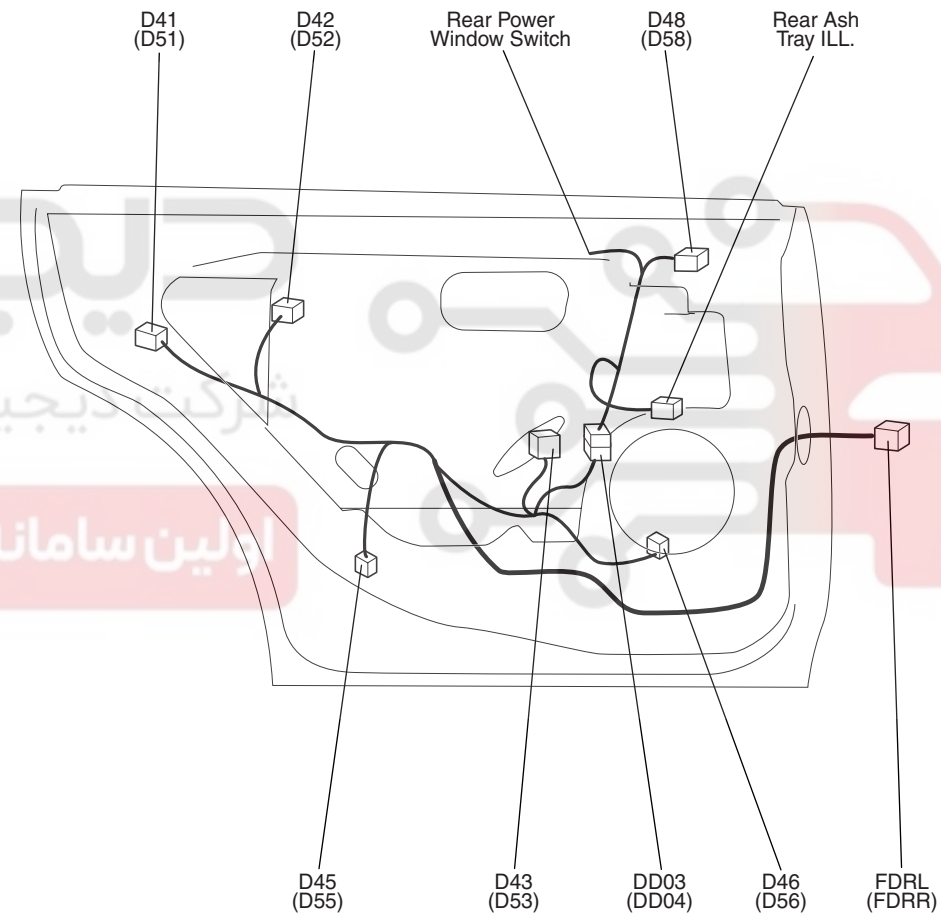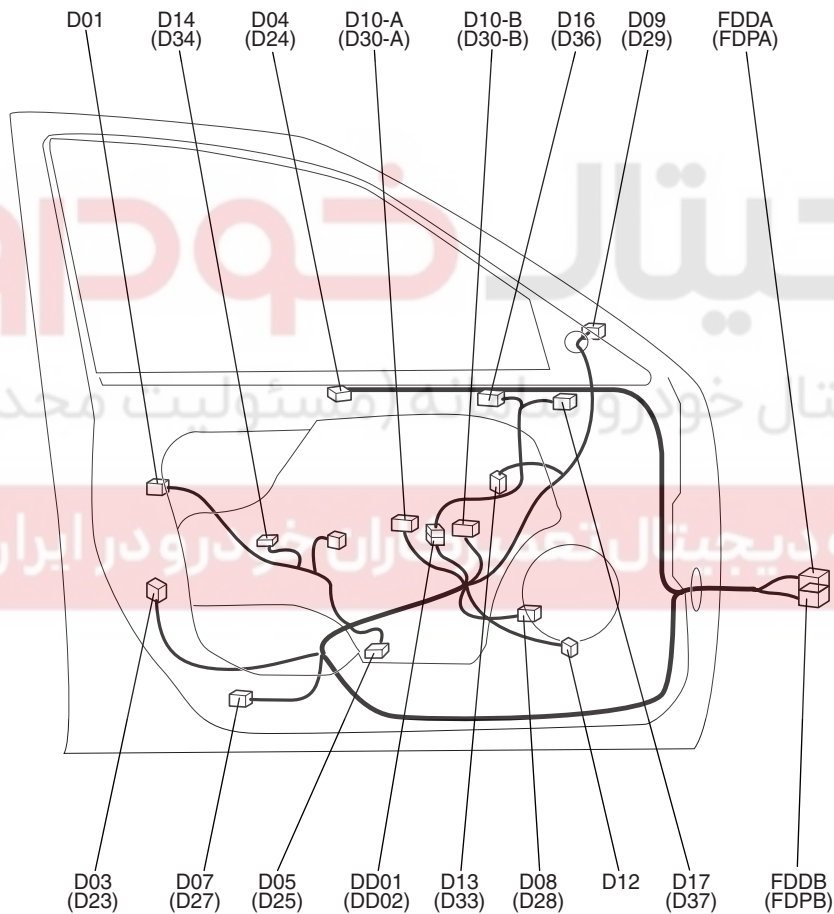

() : RIGHT

DOOR HARNESS**DOOR HARNESS (2)****HL-12****FRONT DOOR LH HARNESS**

D01 Front Door Key Switch LH
 D03 Front Door Lock Actuator LH
 D04 Front PIC Outside Handle LH
 D05 Front Safety Window Module LH
 D07 Front Door Lamp LH
 D08 Front Door Speaker LH
 D09 Power Outside Mirror & Mirror Folding Motor LH
 D10-A Power Window Main Switch
 D10-B Power Window Main Switch
 D12 Fuel Lid Opener & Trunk Lid Switch
 D13 Front Safety Power Window LH
 D14 Joint Connector
 DD01 Connection With FRONT DOOR LH EXT. Harness
 FDDA Connection With FLOOR LH Harness
 Fddb Connection With FLOOR LH Harness

FRONT DOOR LH EXT. HARNESS

D16 Front Power Seat Switch LH
 D17 Front Tweeter Speaker LH
 DD01 Connection With FRONT DOOR LH Harness

REAR DOOR LH HARNESS

D41 Rear Door Lock Actuator LH
 D42 Rear Safety Power Window LH
 D43 Rear Safety Window Module LH
 D45 Rear Door Lamp LH
 D46 Rear Door Speaker LH
 DD03 Connection With REAR DOOR LH EXT. Harness
 FDRL Connection With FLOOR LH Harness

REAR DOOR LH EXT. HARNESS

D48 Rear Tweeter Speaker LH
 DD03 Connection With REAR DOOR LH Harness

FRONT DOOR RH HARNESS

D23 Front Door Lock Actuator RH
 D24 Front PIC Outside Handle RH
 D25 Front Safety Window Module RH
 D27 Front Door Lamp RH
 D28 Front Door Speaker RH
 D29 Power Outside Mirror & Mirror Folding Motor RH
 D30-A Front Power Window Switch RH
 D30-B Front Power Window Switch RH
 D33 Front Safety Power Window RH
 D34 Joint Connector
 DD02 Connection With FRONT DOOR RH EXT. Harness
 FDPA Connection With FLOOR RH Harness
 FDPB Connection With FLOOR RH Harness

FRONT DOOR RH EXT. HARNESS

D36 Front Power Seat Switch RH
 D37 Front Tweeter Speaker RH
 DD02 Connection With FRONT DOOR RH Harness

REAR DOOR RH HARNESS

D51 Rear Door Lock Actuator RH
 D52 Rear Safety Power Window RH
 D53 Rear Safety Window Module RH
 D55 Rear Door Lamp RH
 D56 Rear Door Speaker RH
 DD04 Connection With REAR DOOR RH EXT. Harness
 FDRR Connection With FLOOR RH Harness


REAR DOOR RH EXT. HARNESS

D58 Rear Tweeter Speaker RH
 DD04 Connection With REAR DOOR RH Harness

TRUNK HARNESS E9FF4AA6

TRUNK HARNESS (1)

HL-13

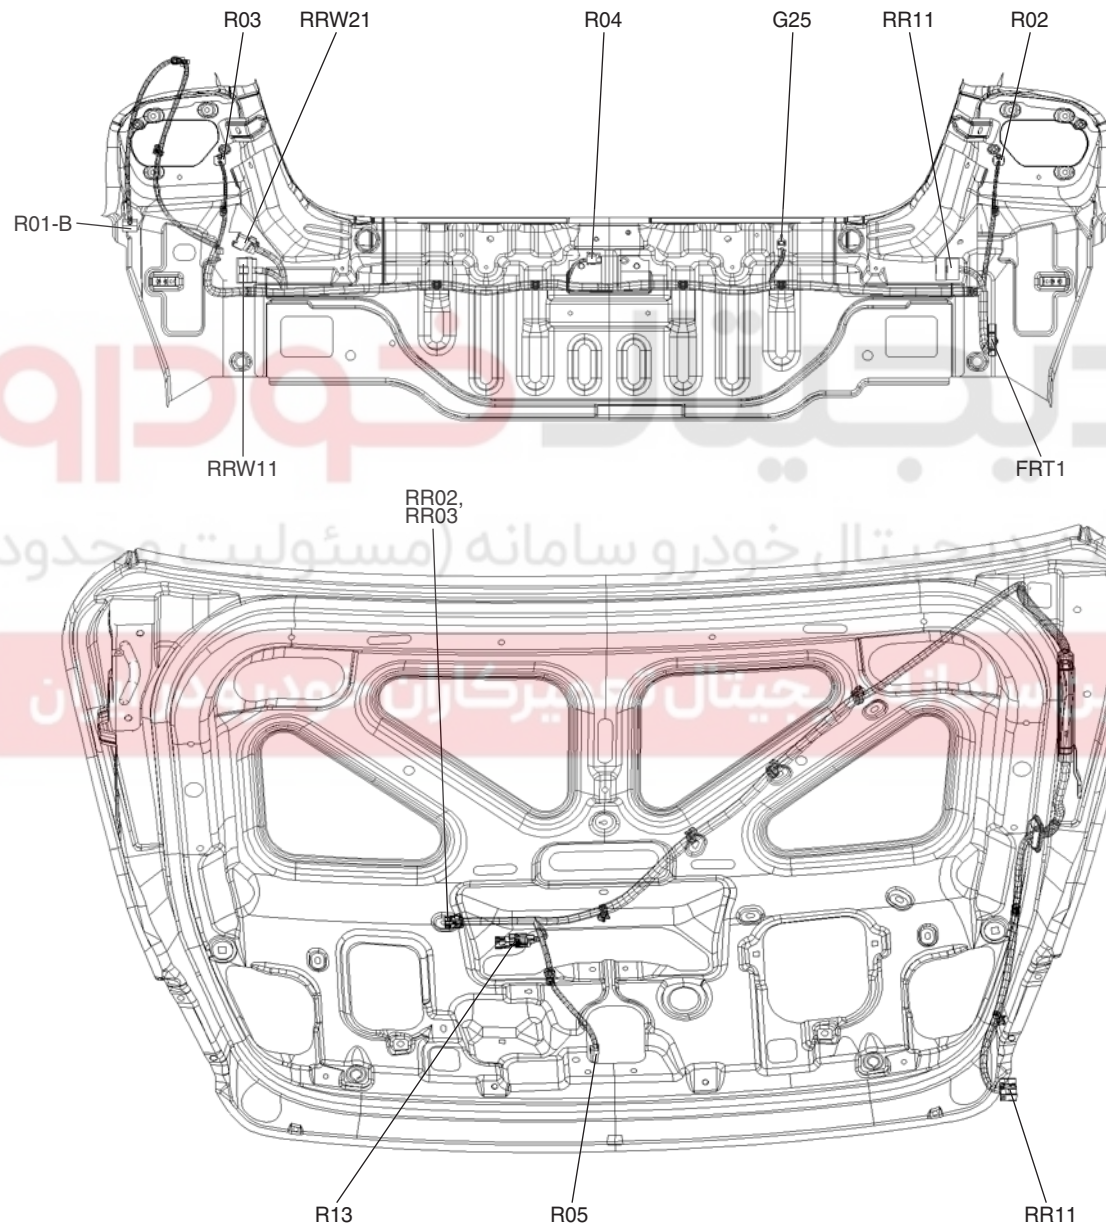

TRUNK ROOM HARNESS

- R01-B Front & Back Warning Module
- R02 Rear Combination Lamp LH
- R03 Rear Combination Lamp RH
- R04 PIC Trunk Antenna
- FRT1 Connection With FLOOR LH Harness
- RR11 Connection With TRUNK LID Harness
- RRW11 Connection With BACK WARNING Harness
- RRW21 Connection With BACK WARNING Harness
- G25 Ground

TRUNK LID HARNESS

- R05 Trunk Lid Latch
- RR02 Connection With TRUNK LID EXT. Harness
- RR11 Connection With TRUNK ROOM Harness

TRUNK LID EXT. HARNESS


- R06 Trunk Switch
- R07 License Lamp LH
- RR02 Connection With TRUNK LID Harness

ROOF HARNESS E3401A4A

ROOF HARNESS (1)

HL-14


W/O SUNROOF

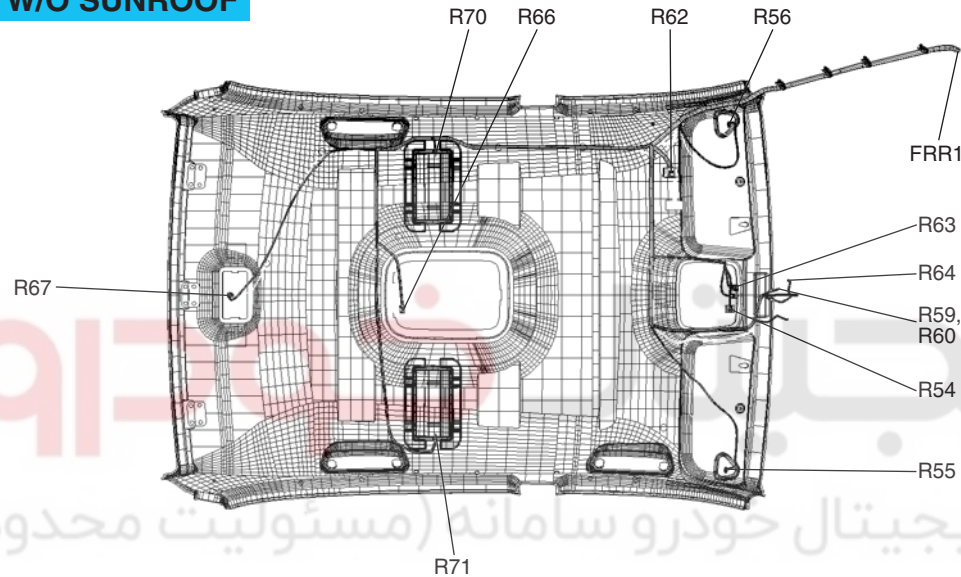

ROOF HARNESS

R55	Sun Visor Lamp RH
R56	Sun Visor Lamp LH
R59	Electro Chromic Mirror
R62	Joint Connector
R63	Map Lamp
R64	Rain Sensor
R66	Room Lamp
R68	Sunroof Switch
RR01	Connection With SUNROOF EXT. Harness
FRR1	Connection With FLOOR LH Harness

With SUNROOF

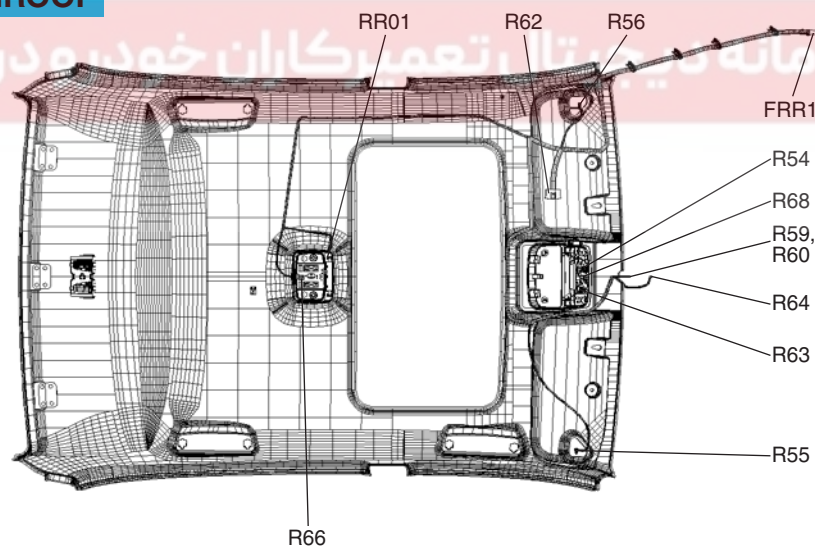


SUNROOF EXT. HARNESS

R72	Sunroof Motor
RR01	Connection With ROOF Harness

AIR BAG HARNESS EAB49B11

AIR BAG HARNESS (1)

HL-15

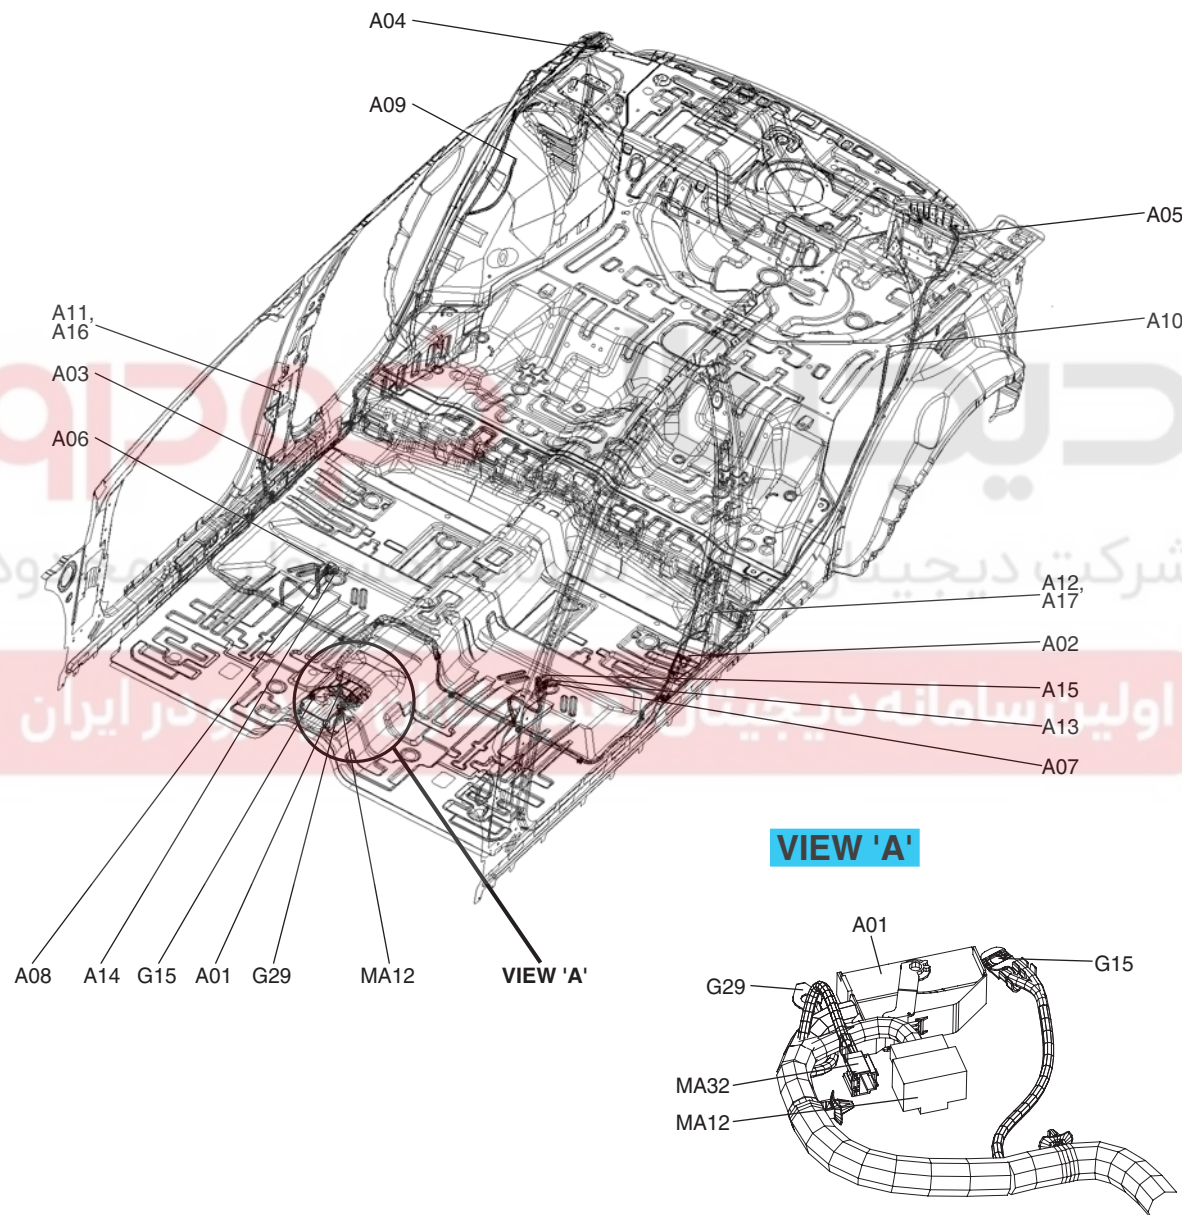

AIR BAG HARNESS


A01	SRS Control Module
A02	Driver Seat Belt Pretensioner
A03	Passenger Seat Belt Pretensioner
A04	Passenger Curtain Air Bag
A05	Driver Curtain Air Bag
A06	Front Side Air Bag RH
A07	Front Side Air Bag LH
A09	Rear Side Air Bag RH
A10	Rear Side Air Bag LH
A11	Passenger Side Impact Sensor
A12	Driver Side Impact Sensor
MA12	Connection With MAIN Harness
MA32	Connection With MAIN Harness
G15	Ground

FRONT WARNING HARNESS/ BACK WARNING HARNESS EFB6E6F5

FRONT WARNING HARNESS/ BACK WARNING HARNESS (1)

HL-16


FRONT BUMPER

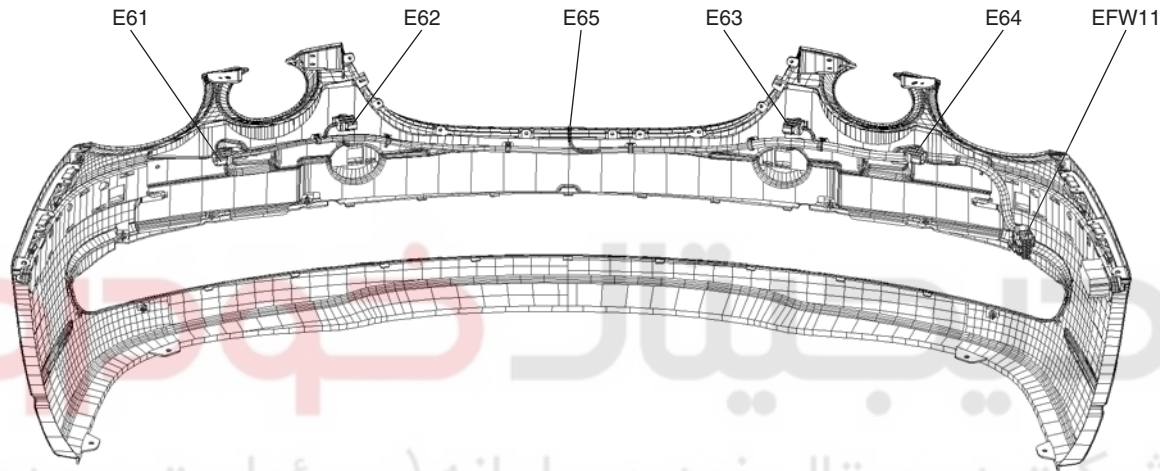

FRONT WARNING HARNESS

- E61 Front Side Warning Sensor LH
- E62 Front Center Warning Sensor LH
- E63 Front Center Warning Sensor RH
- E64 Front Side Warning Sensor RH
- EFW11 Connection With FLOOR RH Harness

REAR BUMPER

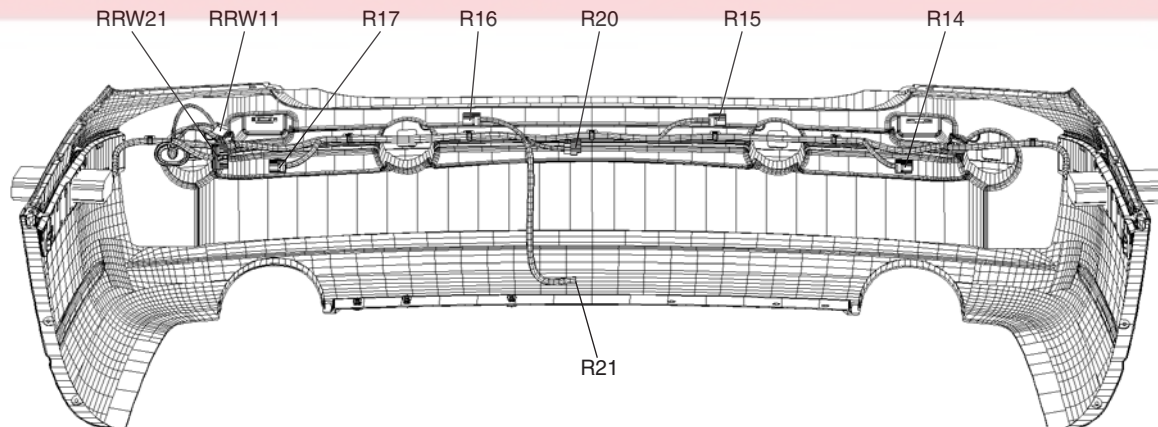

BACK WARNING HARNESS



- R14 Back Side Warning Sensor LH
- R15 Back Center Warning Sensor LH
- R16 Back Center Warning Sensor RH
- R17 Back Side Warning Sensor RH
- R20 PIC Bumper Antenna
- R21 Rear Fog Lamp
- RRW11 Connection With TRUNK ROOM Harness
- RRW21 Connection With TRUNK ROOM Harness

SEAT HARNESS E4FBD3D



SEAT HARNESS (1)

HL-17

FRONT SEAT LH

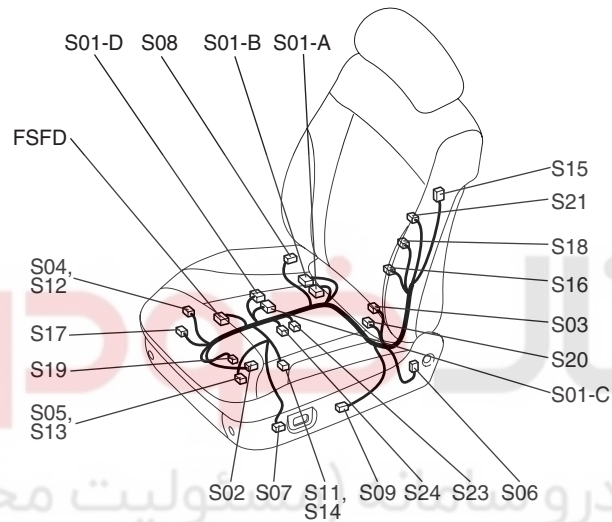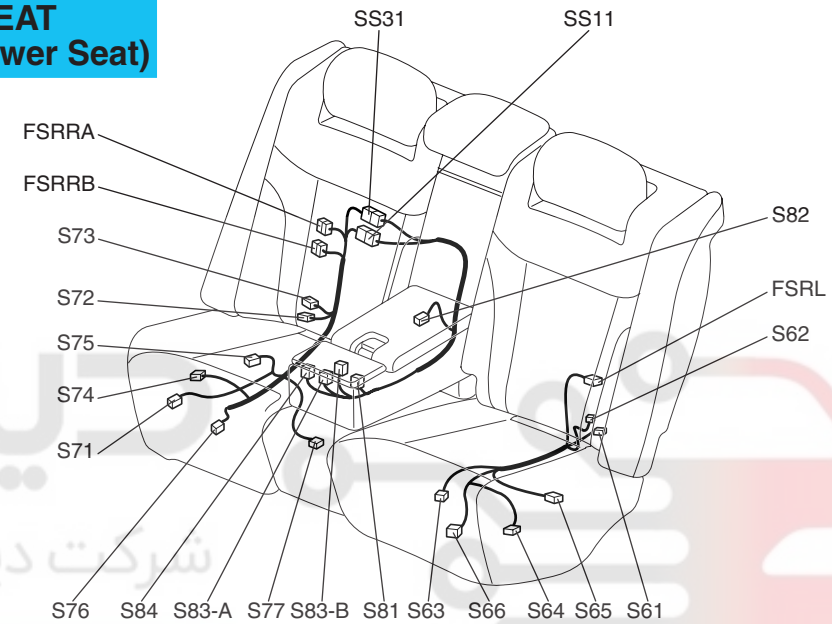REAR SEAT
(With Power Seat)

FRONT SEAT RH

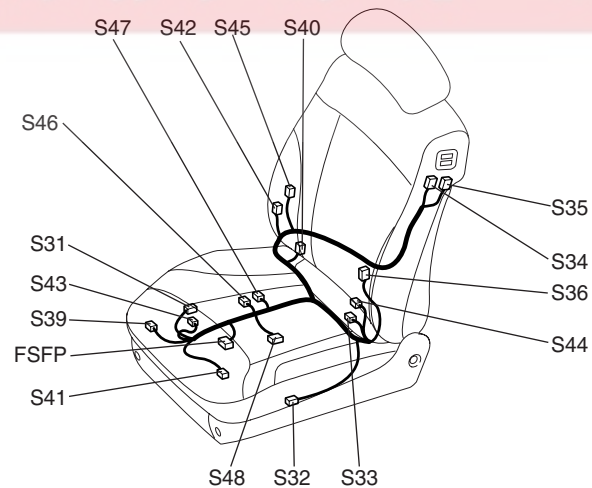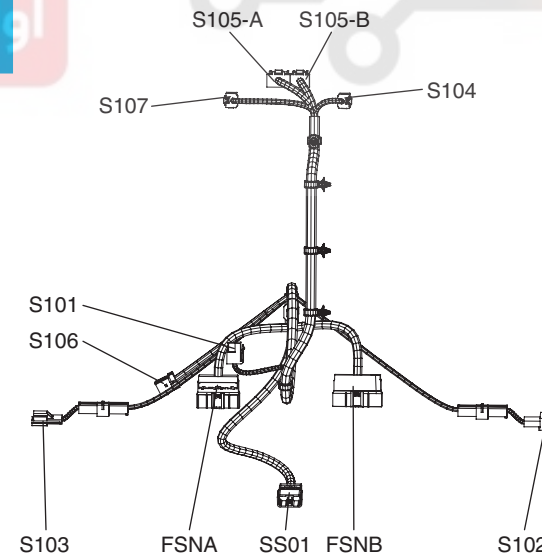REAR SEAT
(W/O Power Seat)

SEAT HARNESS

SEAT HARNESS (2)

HL-18

FRONT SEAT LH HARNESS

S01-A	Power Seat Control Module
S01-B	Power Seat Control Module
S01-C	Power Seat Control Module
S01-D	Power Seat Control Module
S02	Front Seat Warmer Module LH
S03	Front Cushion Warmer LH
S04	Height Motor (Rear)
S05	Front Slide Motor LH
S06	Front Recline Motor LH
S07	Front Lumbar Support Switch LH
S08	Front Recline Limit Switch LH
S09	Front Slide Limit Switch LH
S11	Height Motor (Front)
S12	Height Motor (Rear)
S13	Front Slide Motor LH
S14	Height Motor (Front)
S15	Front Lumbar Support Motor (AFT)
S16	Front Lumbar Support Motor (UP/DN)
S17	CCS Cushion Blower Motor LH
S18	CCS Recline Blower Motor LH
S19	CCS Module LH
S20	CCS Cushion Warmer LH
S21	CCS Recline Warmer LH
S23	Joint Connector
S24	Joint Connector
FSFD	Connection With FLOOR LH Harness

REAR SEAT LH HARNESS
(With Power Seat)

S61	Rear Cushion Warmer LH
S62	Rear Recline Warmer LH
S63	Rear Seat Warmer Module LH
S64	Rear Slide Motor LH
S65	Rear Slide Limit Switch
S66	Joint Connector
FSRL	Connection With FLOOR LH Harness

FRONT SEAT RH HARNESS

S31	Front Seat Warmer Module RH
S32	Front Slide Limit Switch RH
S33	Front Cushion Warmer RH
S34	Walk In Recline Switch
S35	Walk In Slide Switch
S36	Front Recline Motor RH
S39	Front Slide Motor RH
S40	Front Recline Limit Switch RH
S41	CCS Cushion Blower Motor RH
S42	CCS Recline Blower Motor RH
S43	CCS Module RH
S44	CCS Cushion Warmer RH
S45	CCS Recline Warmer RH
S46	Joint Connector
S47	Joint Connector
S48	Front Power Seat Relay Box
FSFP	Connection With FLOOR RH Harness

REAR SEAT RH HARNESS
(With Power Seat)

S71	Rear Seat Warmer Module RH
S72	Rear Cushion Warmer RH
S73	Rear Recline Warmer RH
S74	Rear Slide Motor RH
S75	Rear Slide Limit Switch RH
S76	Joint Connector
S77	Rear Power Seat Relay Box
FSRRA	Connection With FLOOR RH Harness
FSRRB	Connection With FLOOR RH Harness
SS11	Connection With REAR CONSOLE Harness
SS31	Connection With REAR CONSOLE Harness

REAR CONSOLE HARNESS
(With Power Seat)

S81	Rear Seat Warmer Switch LH
S82	Rear Power Outlet
S83-A	Rear Console Switch
S83-B	Rear Console Switch
S84	Rear Seat Warmer Switch RH
SS11	Connection With REAR SEAT RH Harness
SS31	Connection With REAR SEAT RH Harness

REAR SEAT HARNESS
(W/O Power Seat)

S101	Rear Power Outlet
S102	Rear Recline Warmer RH
S103	Rear Recline Warmer LH
S104	Rear Seat Warmer Switch LH
S105-A	Rear Console Switch
S105-B	Rear Console Switch
S106	Joint Connector
S107	Rear Seat Warmer Switch RH
FSNA	Connection With FLOOR RH Harness
FSNB	Connection With FLOOR RH Harness
SS01	Connection With REAR SEAT WARMER Harness

SEAT HARNESS

ANTENNA CABLE (1)

HL-19

