



ECM ignition system

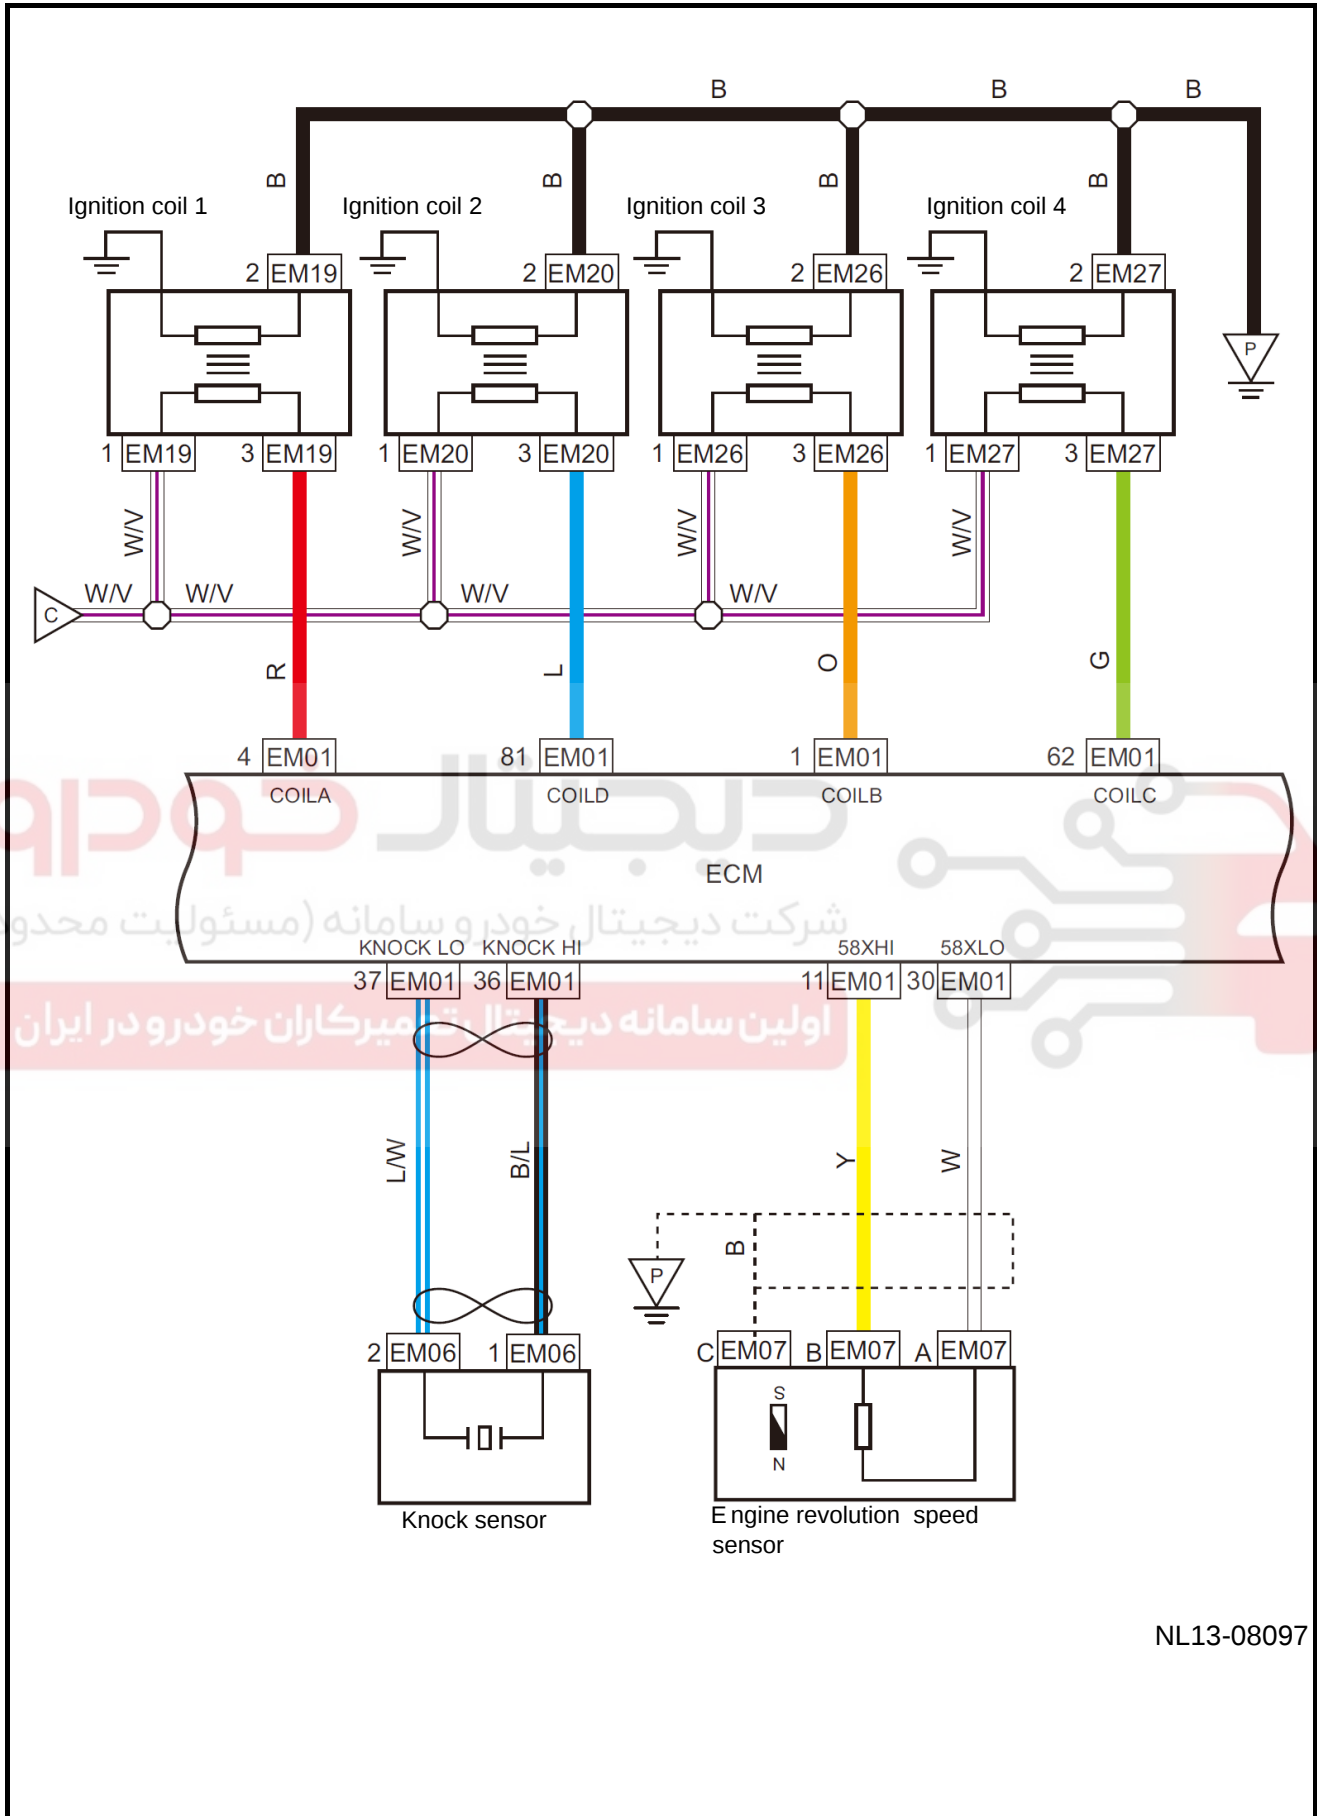

NL13-08097

ECM ignition system (DSI)

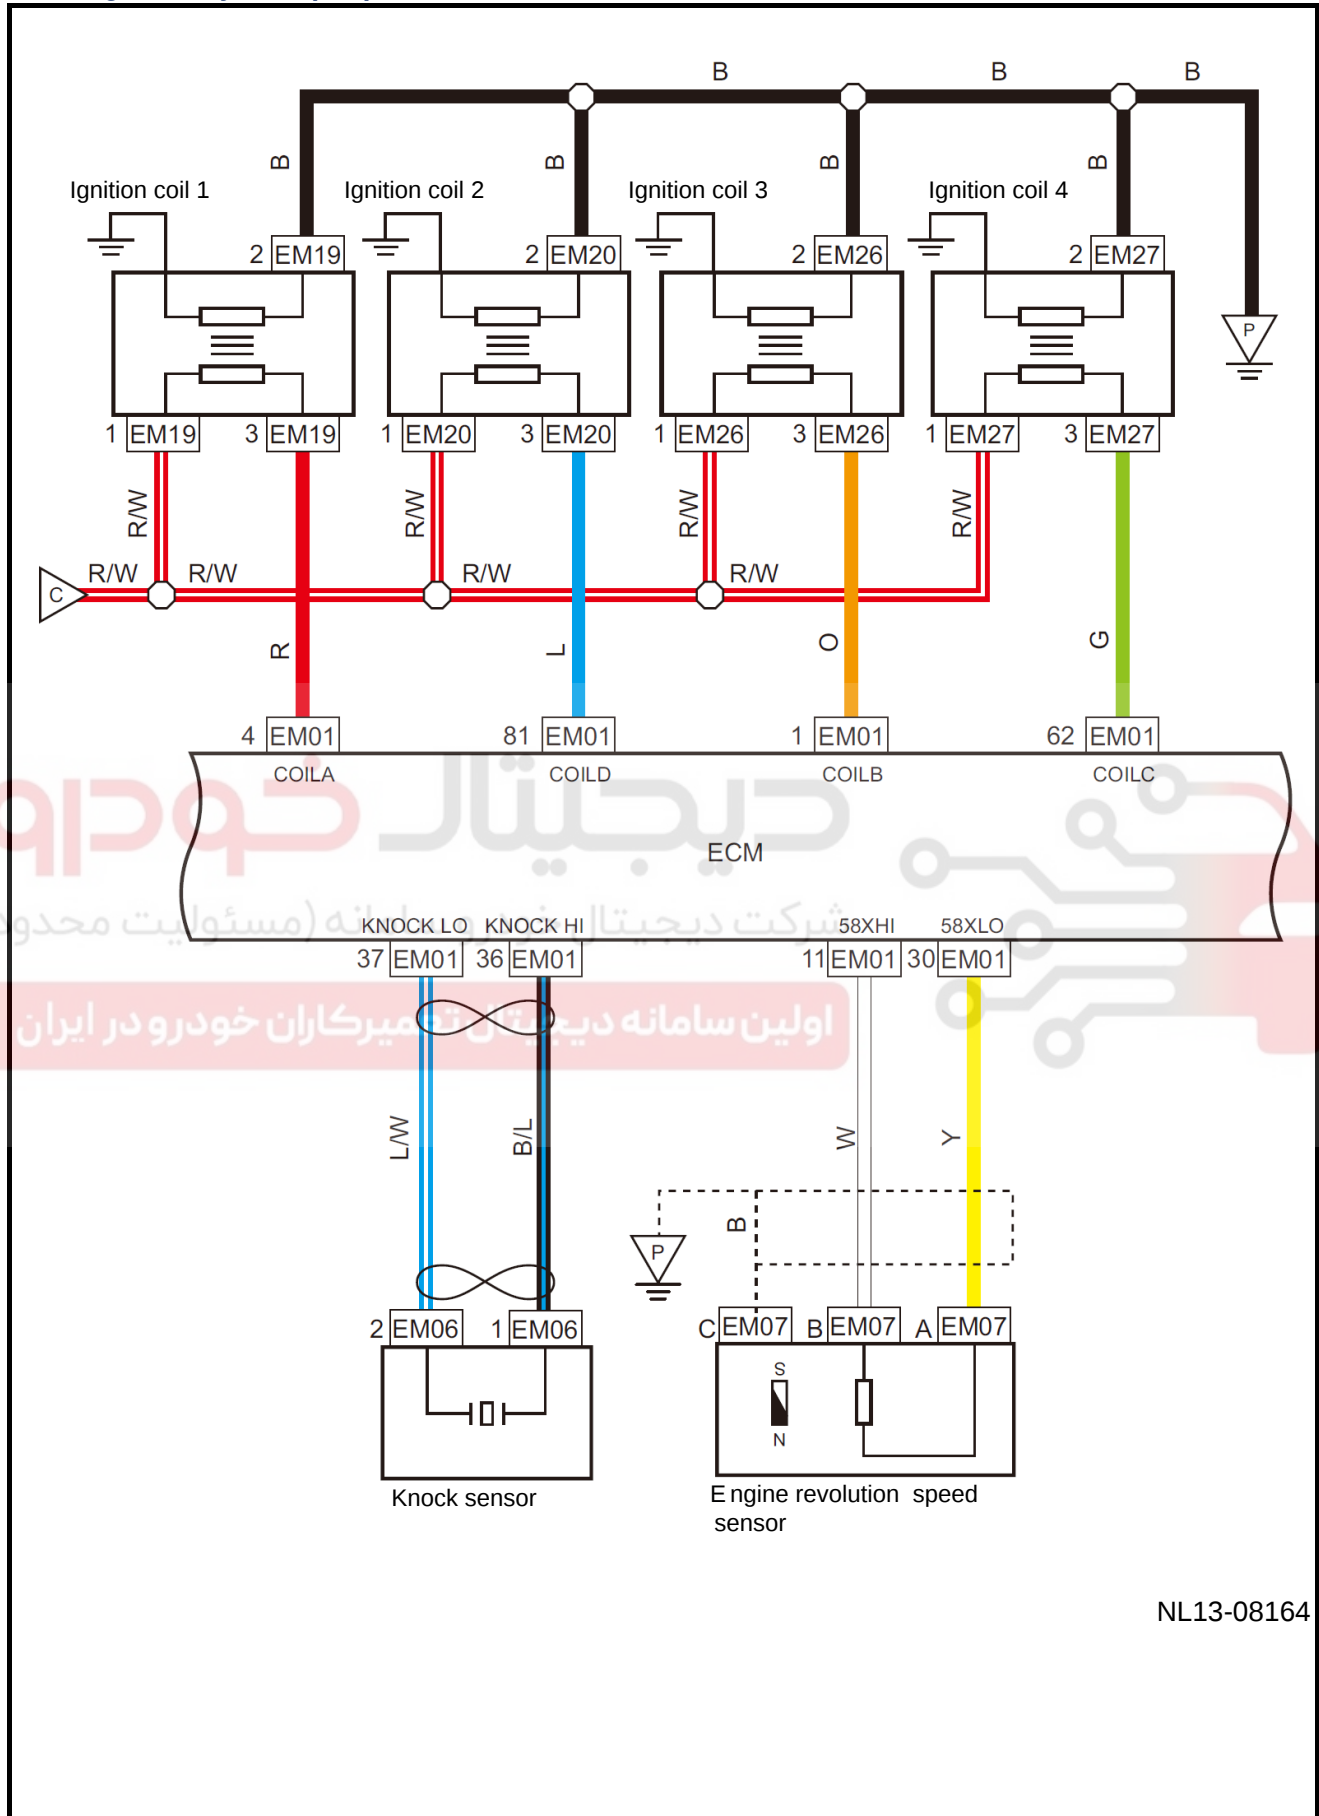

NL13-08164

Harness connector	Description	Pages
EM19	Harness connector of cylinder No.1 ignition coil	34
EM20	Harness connector of cylinder No.2 ignition coil	34
EM26	Harness connector of cylinder No.3 ignition coil	34
EM27	Harness connector of cylinder No.4 ignition coil	34
EM01	Harness connector of engine control module	35
EM06	Harness connector of knock sensor	34
EM07	Harness connector of speed sensor	34
P	Engine harness grounding	68


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Fuel pump & fuel injector

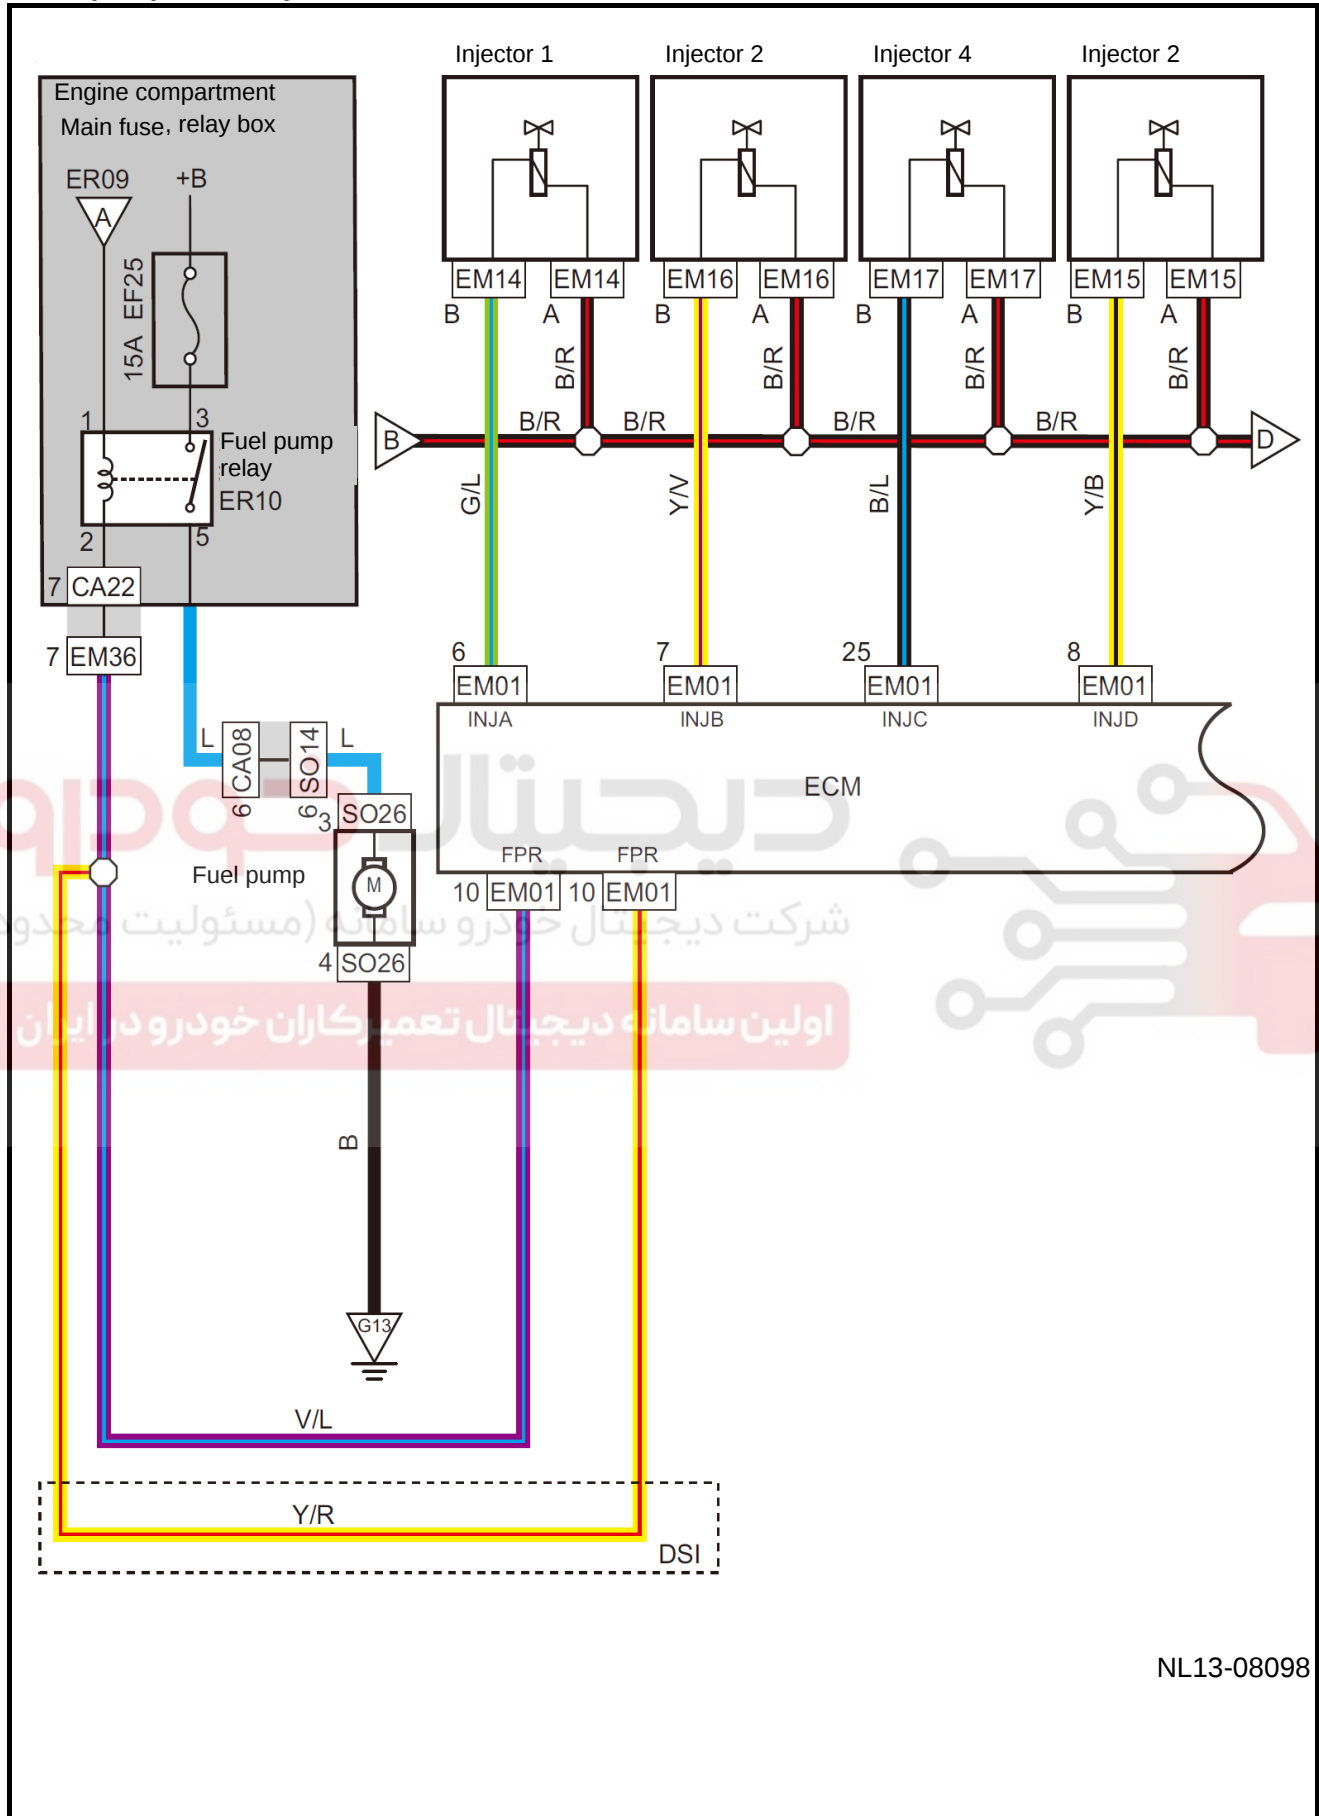

Harness connector	Description	Pages
EM14	Harness connector of 1st cylinder No.1injector	34
EM15	Harness connector of 2nd cylinder No.2injector	34
EM16	Harness connector of 3rd cylinder No.3injector	34
EM17	Harness connector of 4th cylinder No.4injector	34
EM01	Harness connector of engine control module	35
EM36	To harness connector of engine compartment fuse box (2)	34
CA08	To body harness connector	29
CA22	To engine harness connector	28
SO04	To engine compartment harness connector	50
SO26	Harness connector of fuel pump	50


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



ECM equipment control

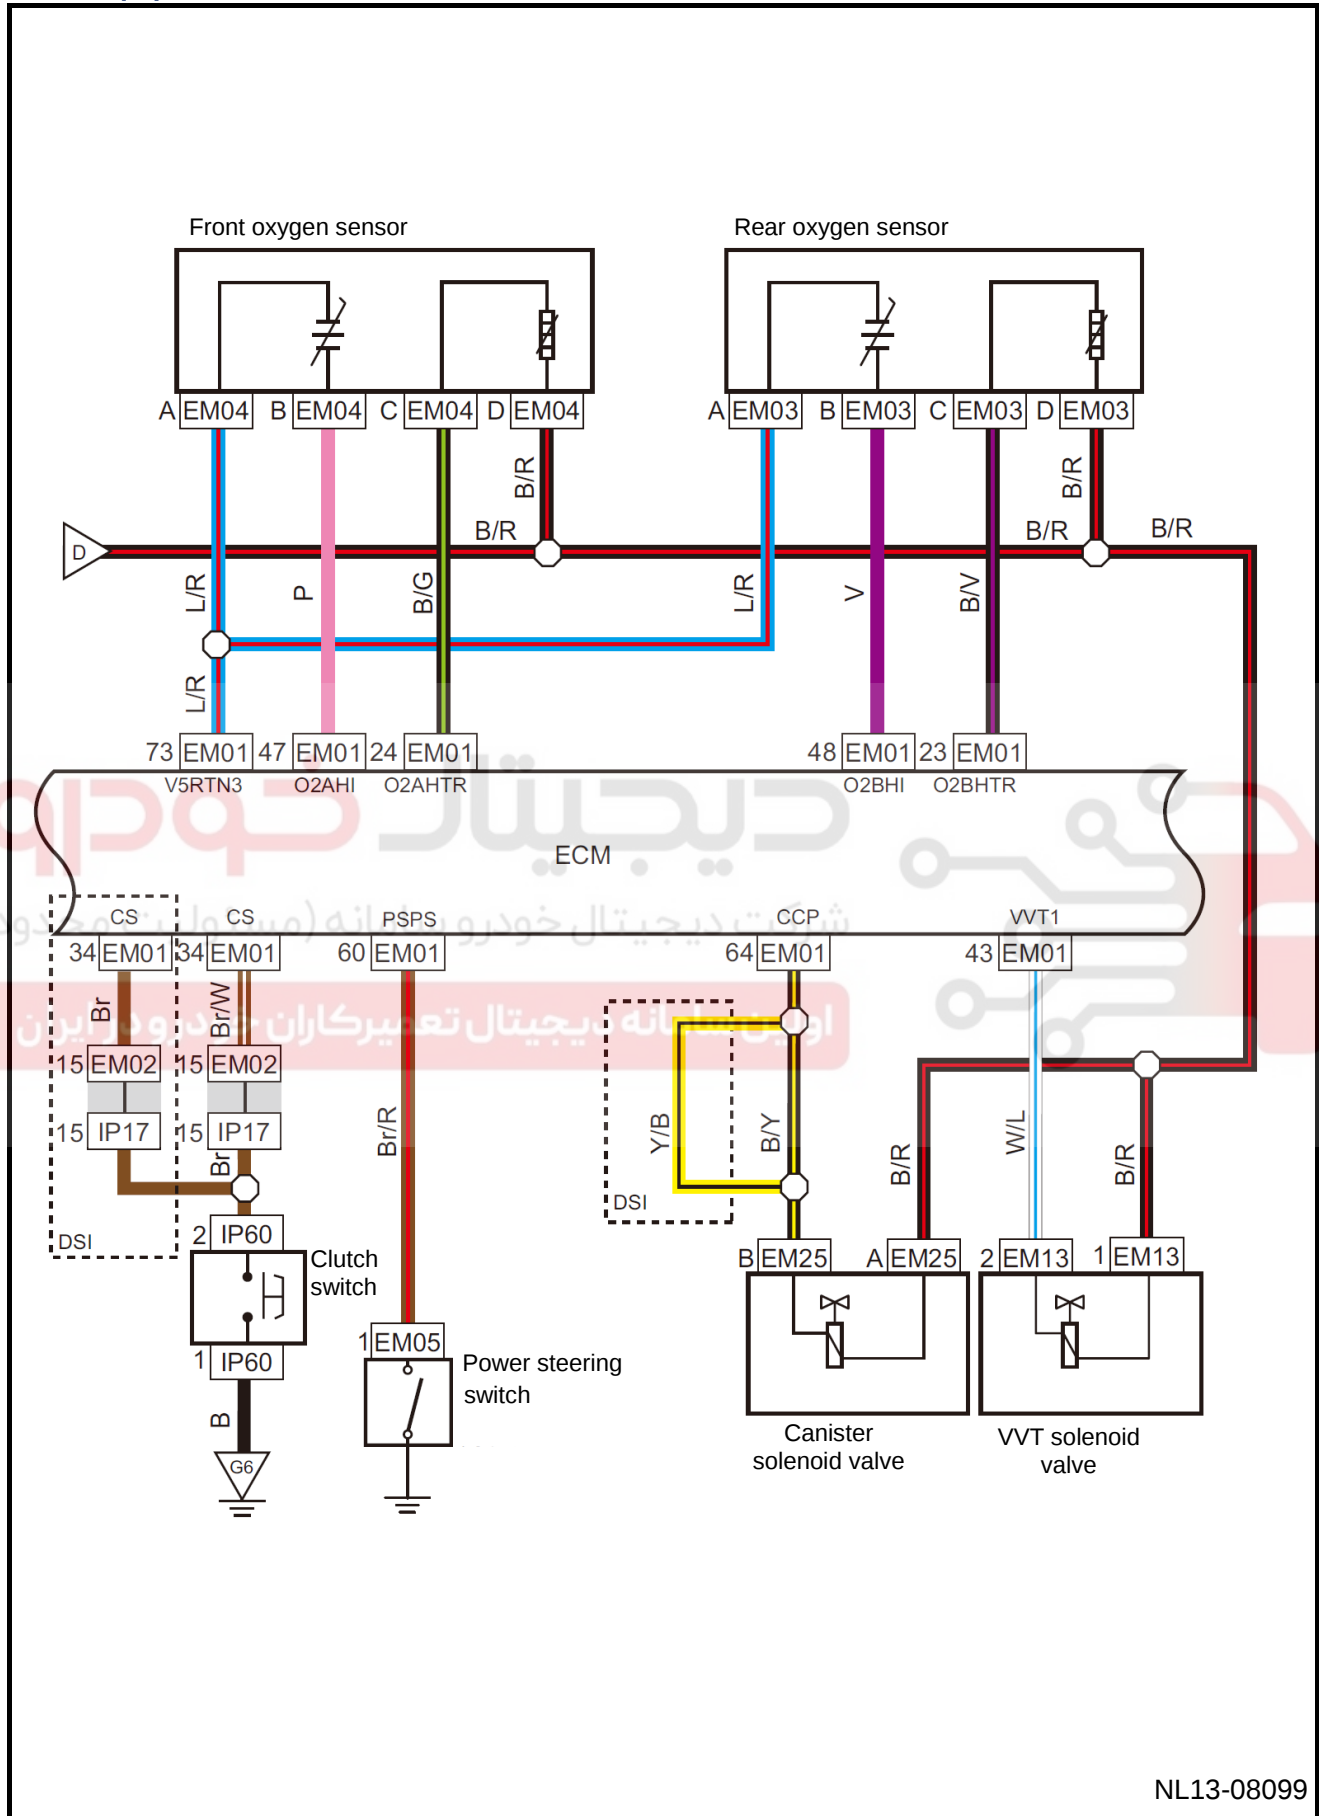

NL13-08099

Harness connector	Description	Pages
EM01	Harness connector of engine control module	35
EM03	Harness connector of rear oxygen sensor	34
EM04	Harness connector of front oxygen sensor	34
EM13	Harness connector of VVT solenoid valve	34
EM25	Harness connector of carbon canister solenoid valve	34
EM05	Harness connector of power steering switch	34
EM02	To harness connector of instrument harness (1)	35
IP17	To engine harness connector	40
IP60	Harness connector of clutch switch	41


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



ECM Sensor

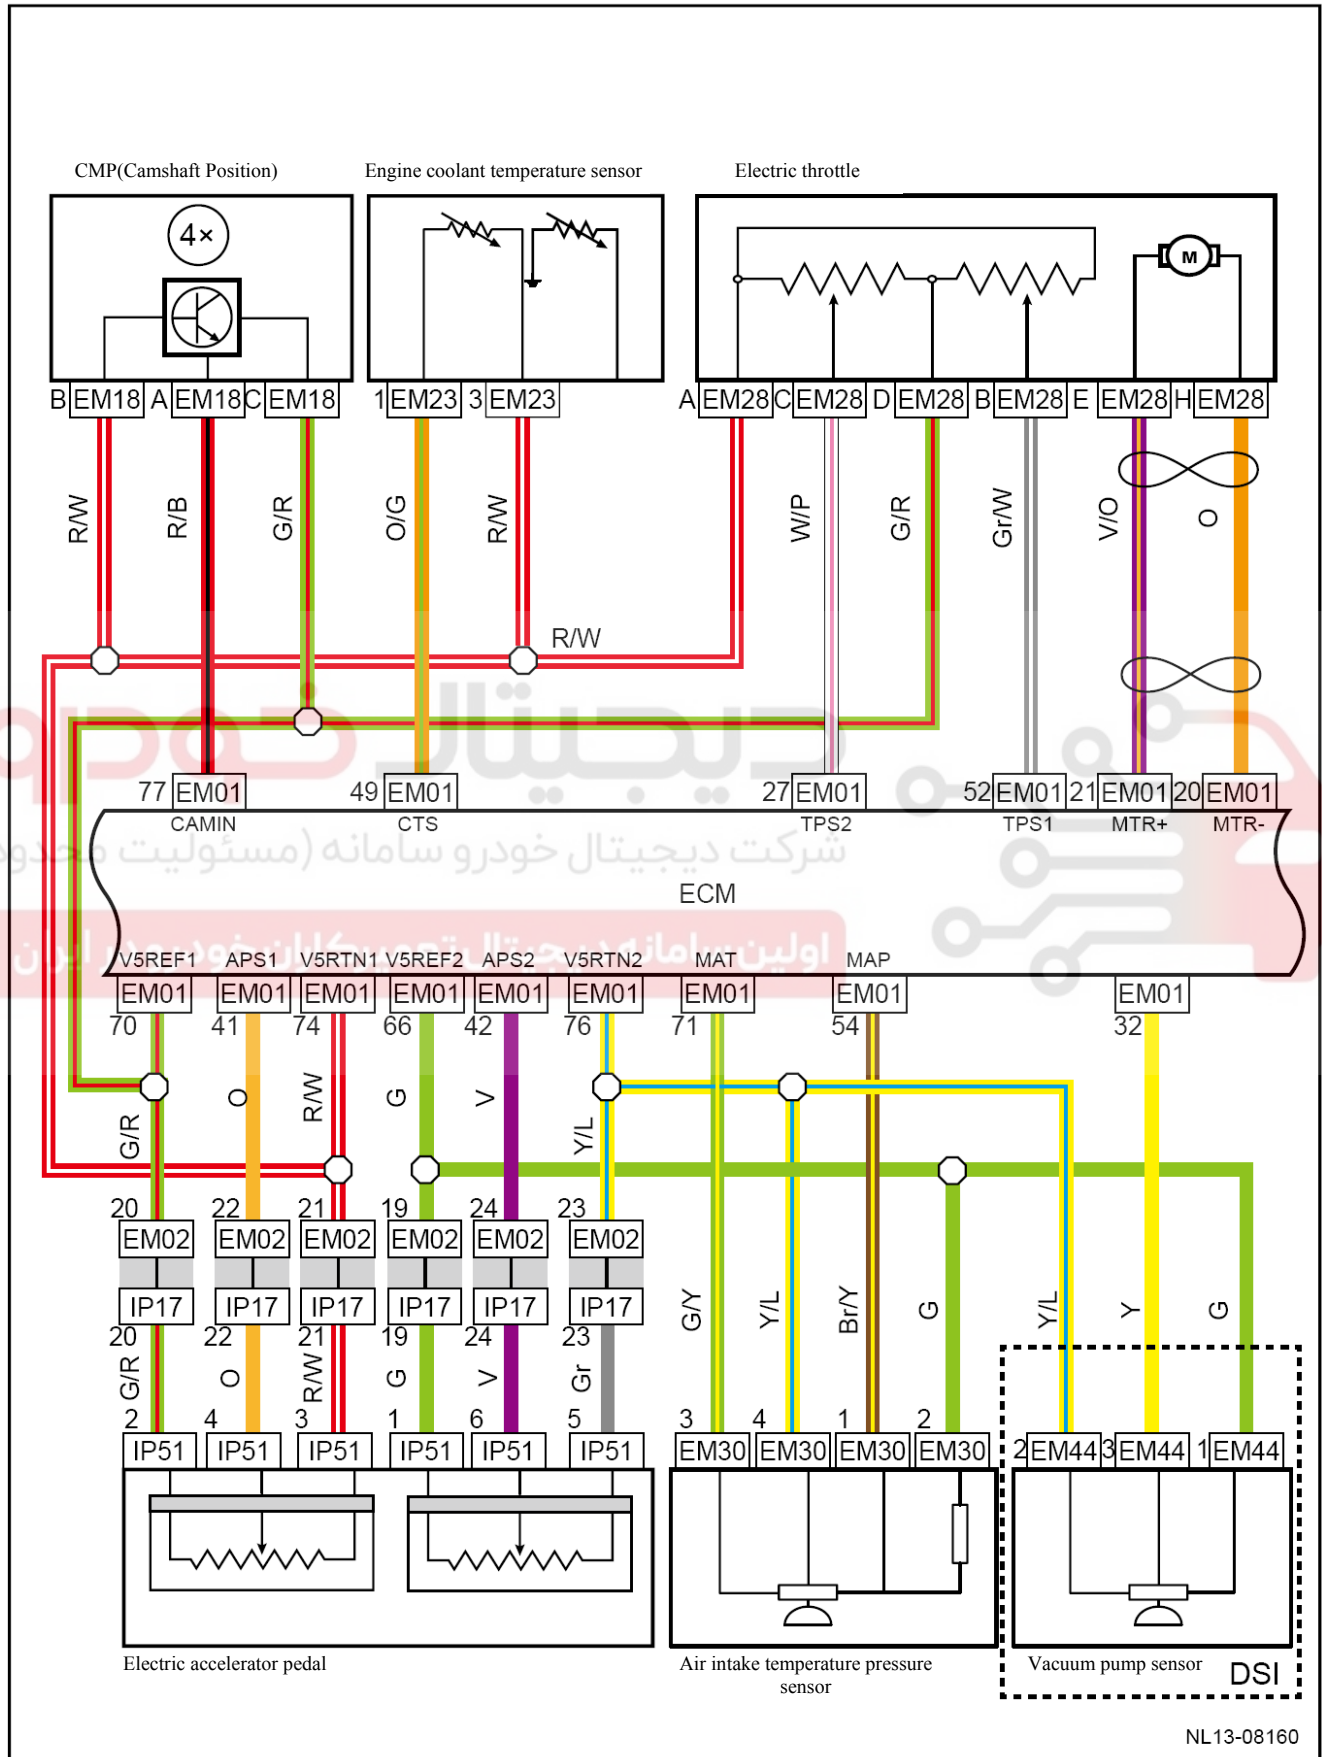

ECM sensor (DSI)

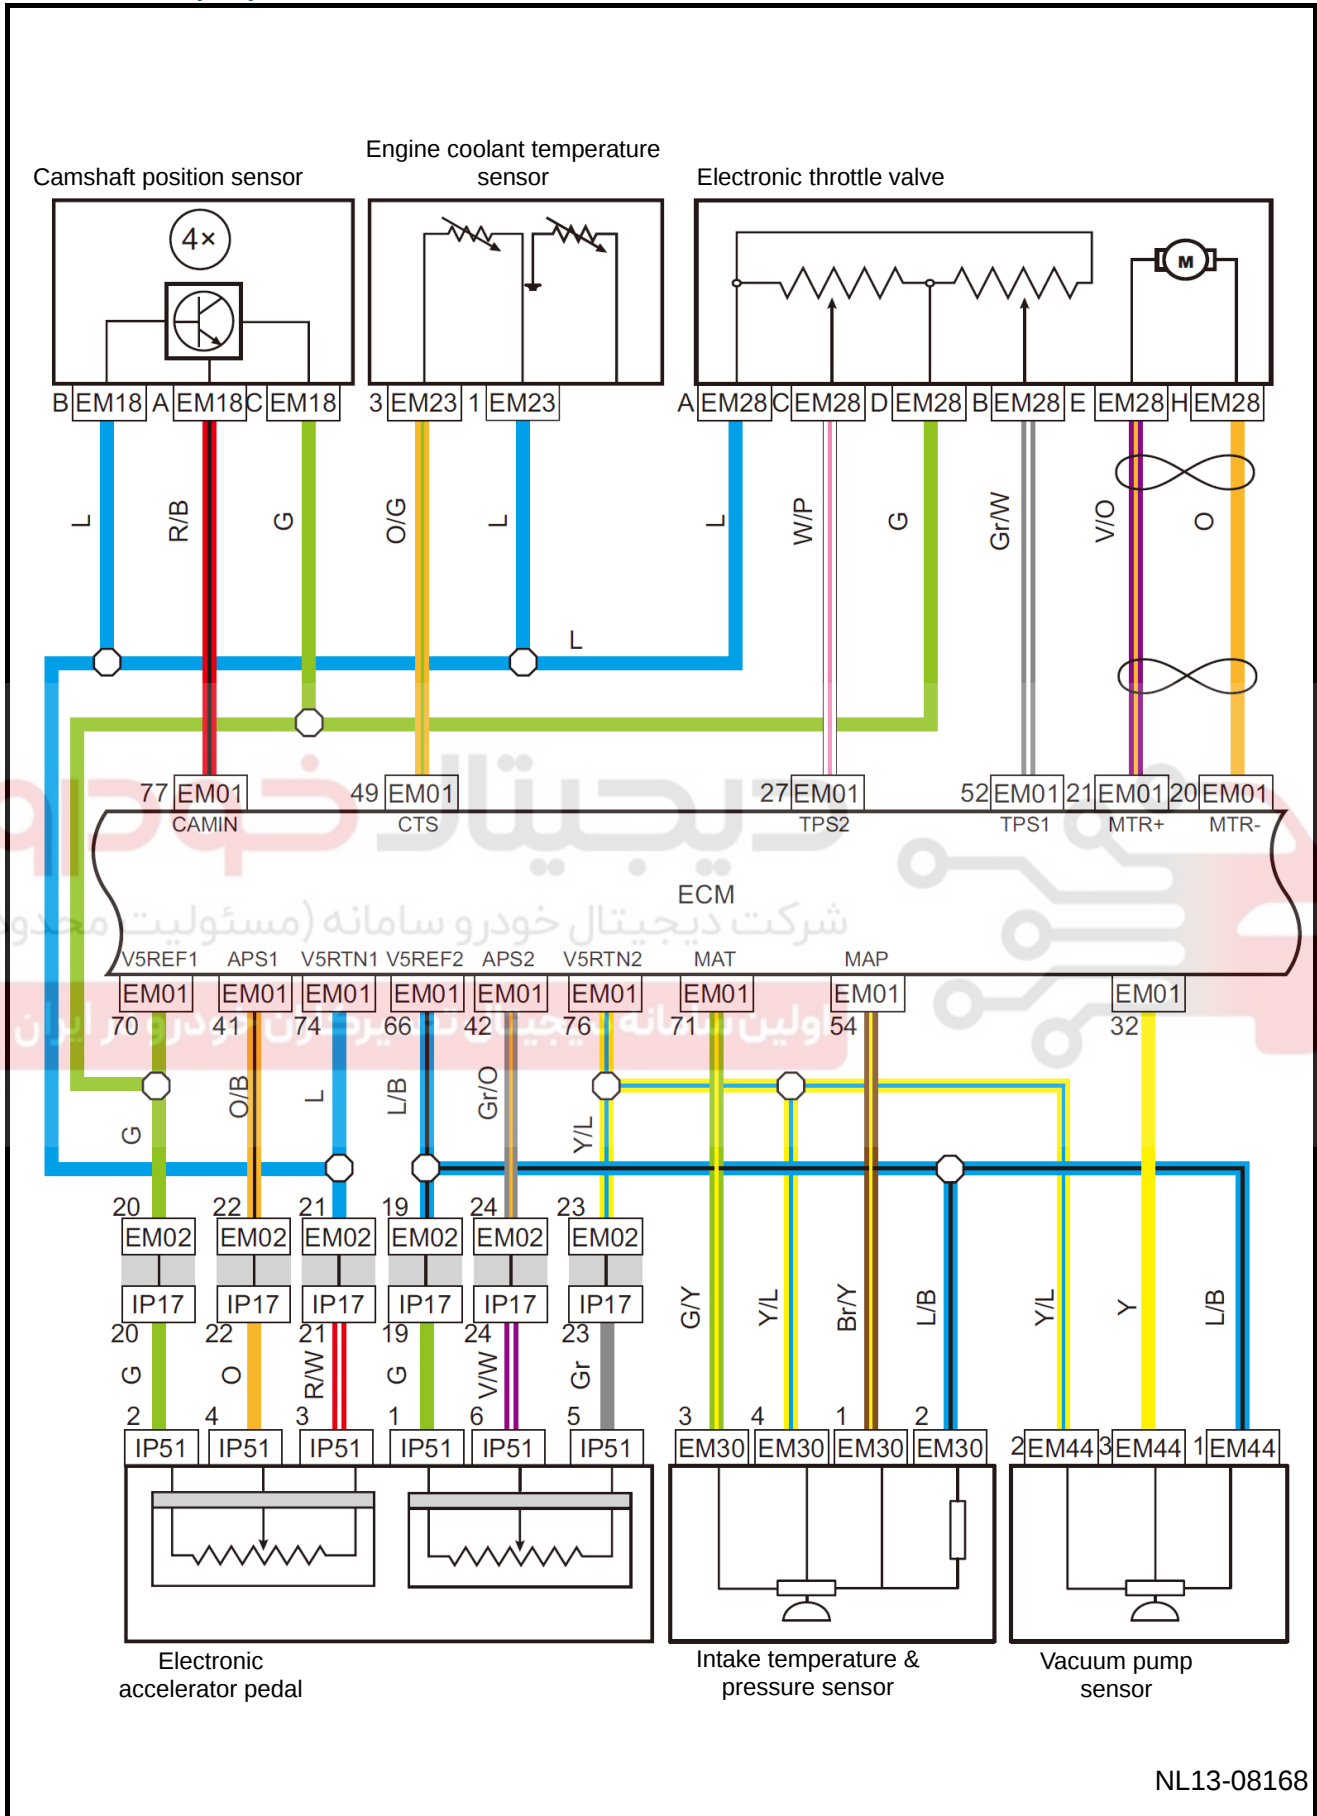

NL13-08168

Harness connector	Description	Pages
EM18	Harness connector of front oxygen sensor	34
EM23	Harness connector of rear oxygen sensor	34
EM28	Harness connector of engine control module	34
EM01	Harness connector of engine control module	35
EM02	To harness connector of instrument harness (1)	35
IP17	To engine harness connector	40
IP51	Harness connector of electric accelerator pedal	40
EM30	Harness connector of air intake pressure temperature sensor	34
EM44	Harness connector of vacuum pump sensor	34


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Speed Sensor

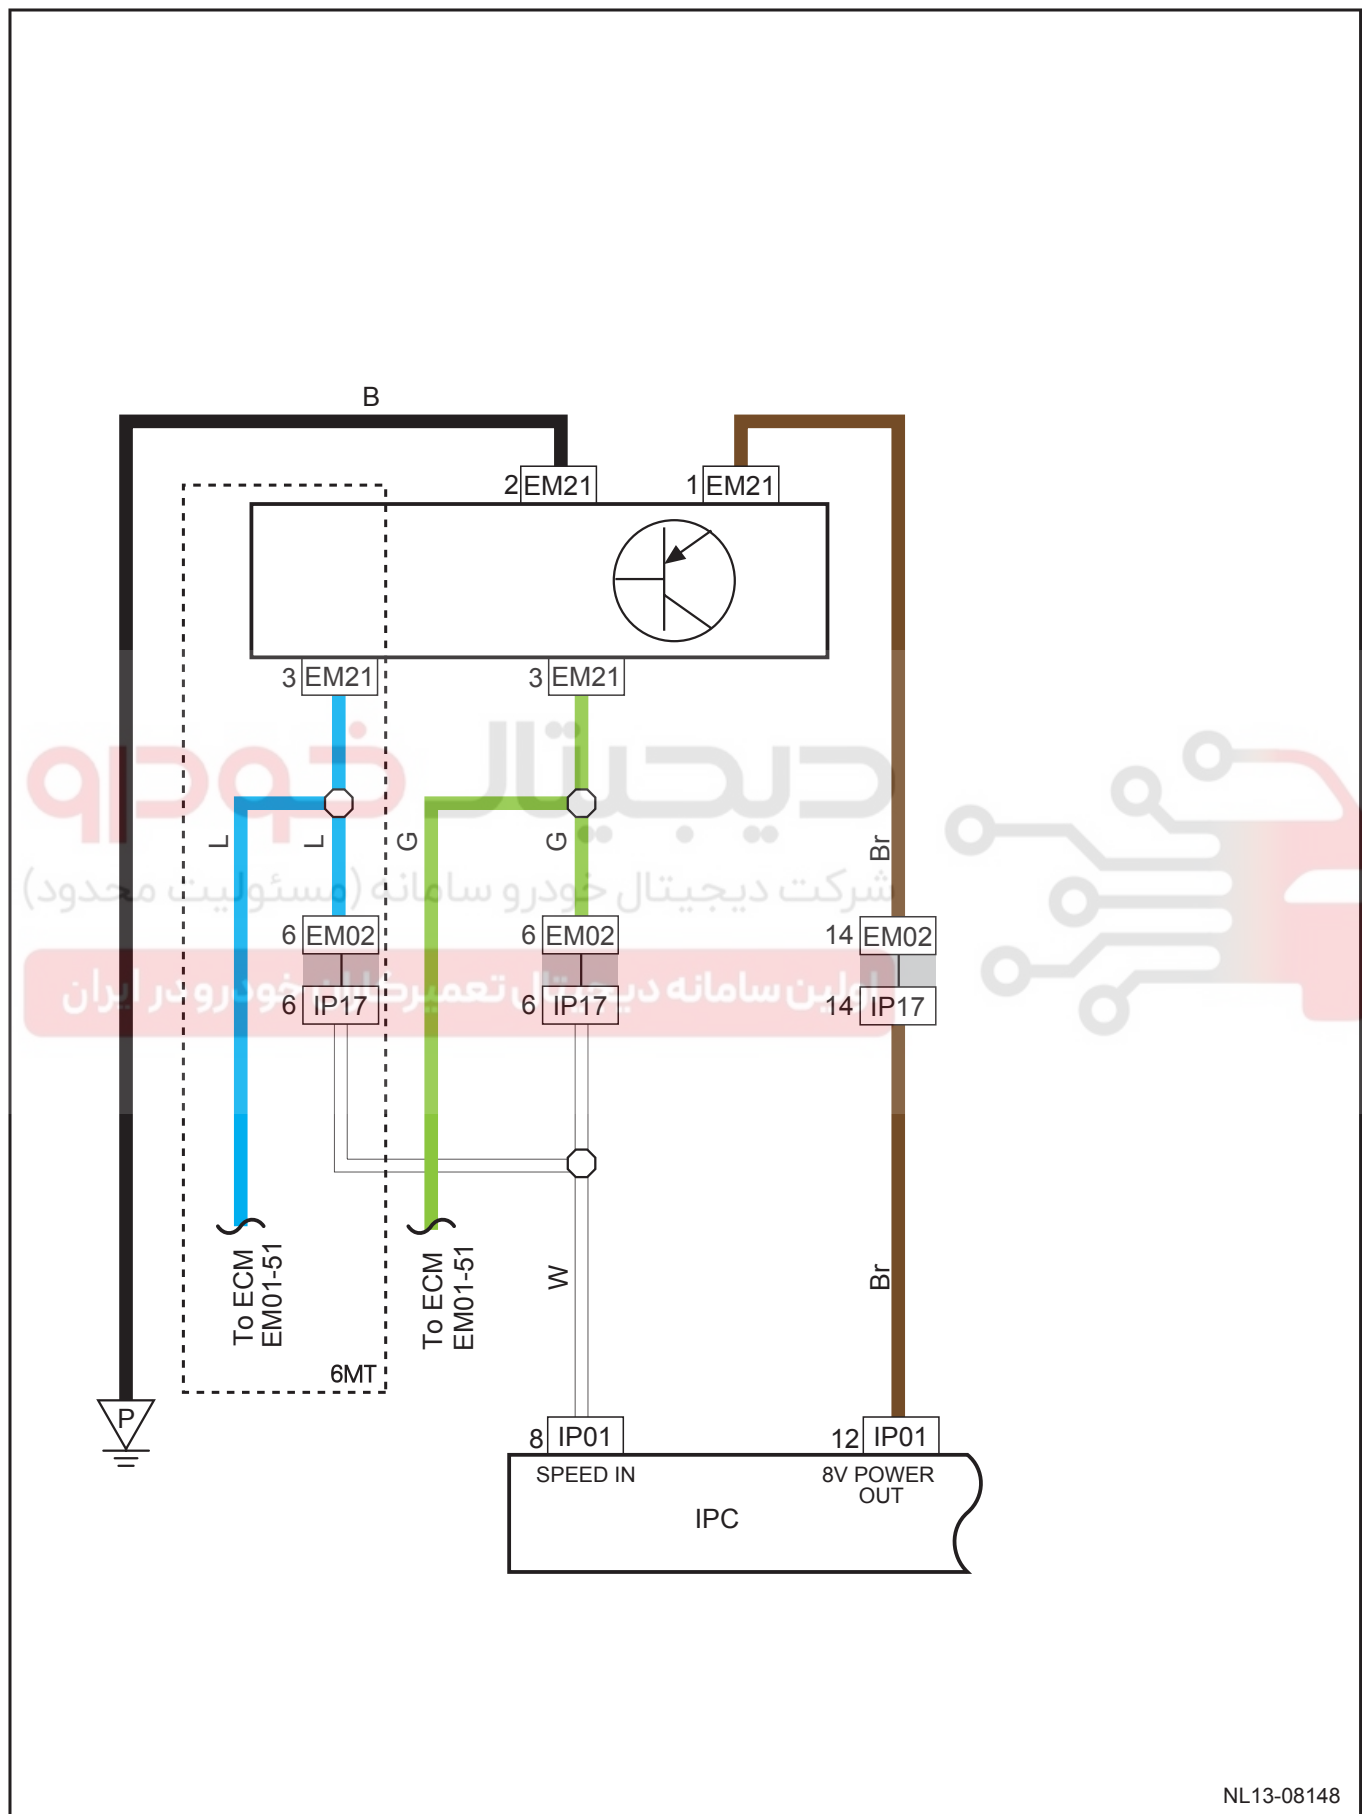

Harness connector	Description	Pages
EM21	Harness connector of speed sensor	34
EM02	To harness connector of instrument harness	35
IP17	To harness connector of engine harness	40
IP01	Harness connector of combination instrument	41
IP33	To body harness connector 2	40
SO10	To instrument harness connector 3	50

Connection point	Descriptions	Pages
EM21-3	To parking control module SO32-3	194
EM21-3	To engine control module EM01-51	100

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

