
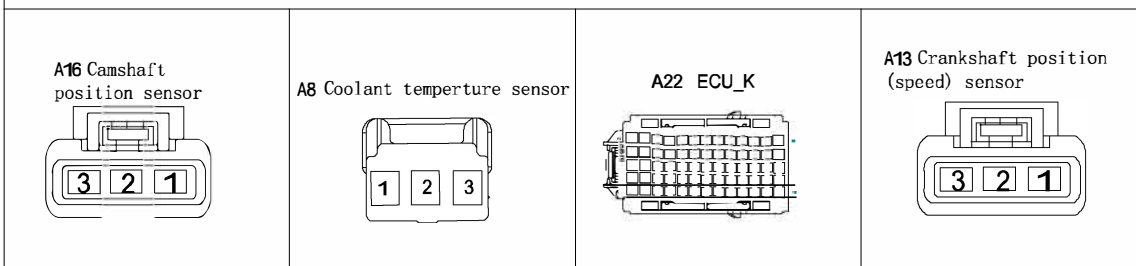



Engine ECU system-2

D-2

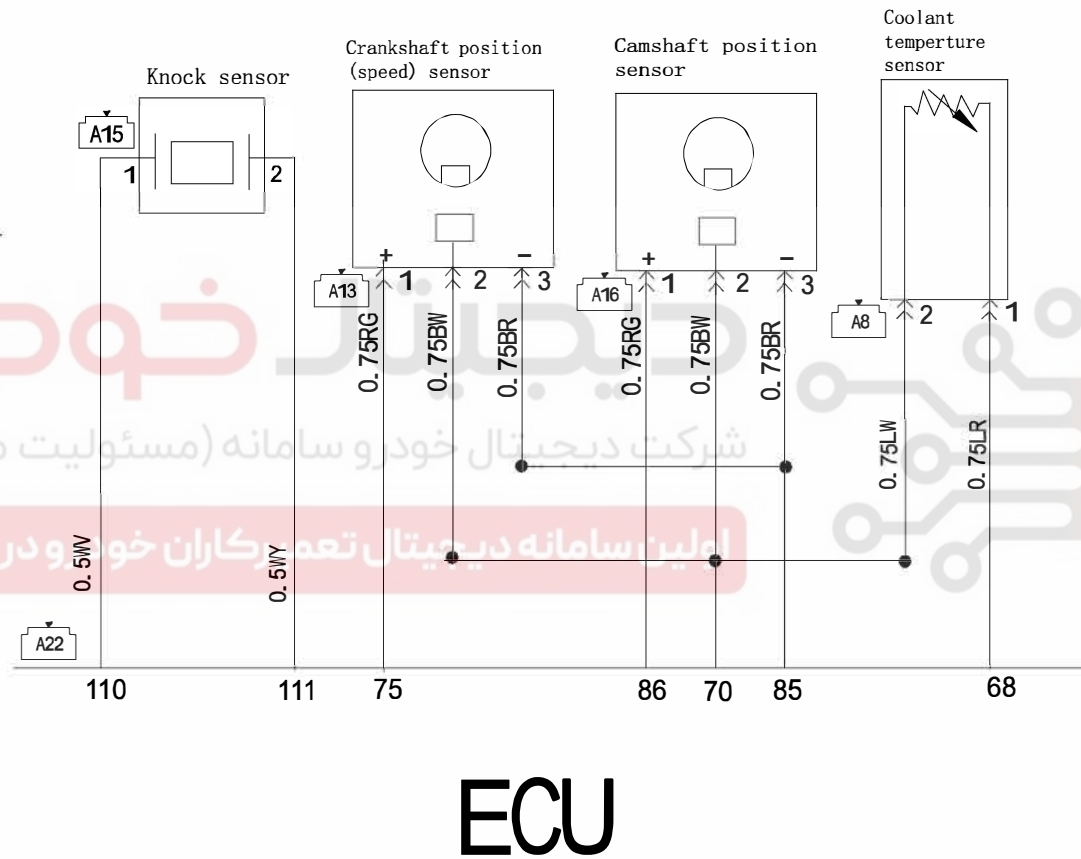


Engine ECU system-3

D-3

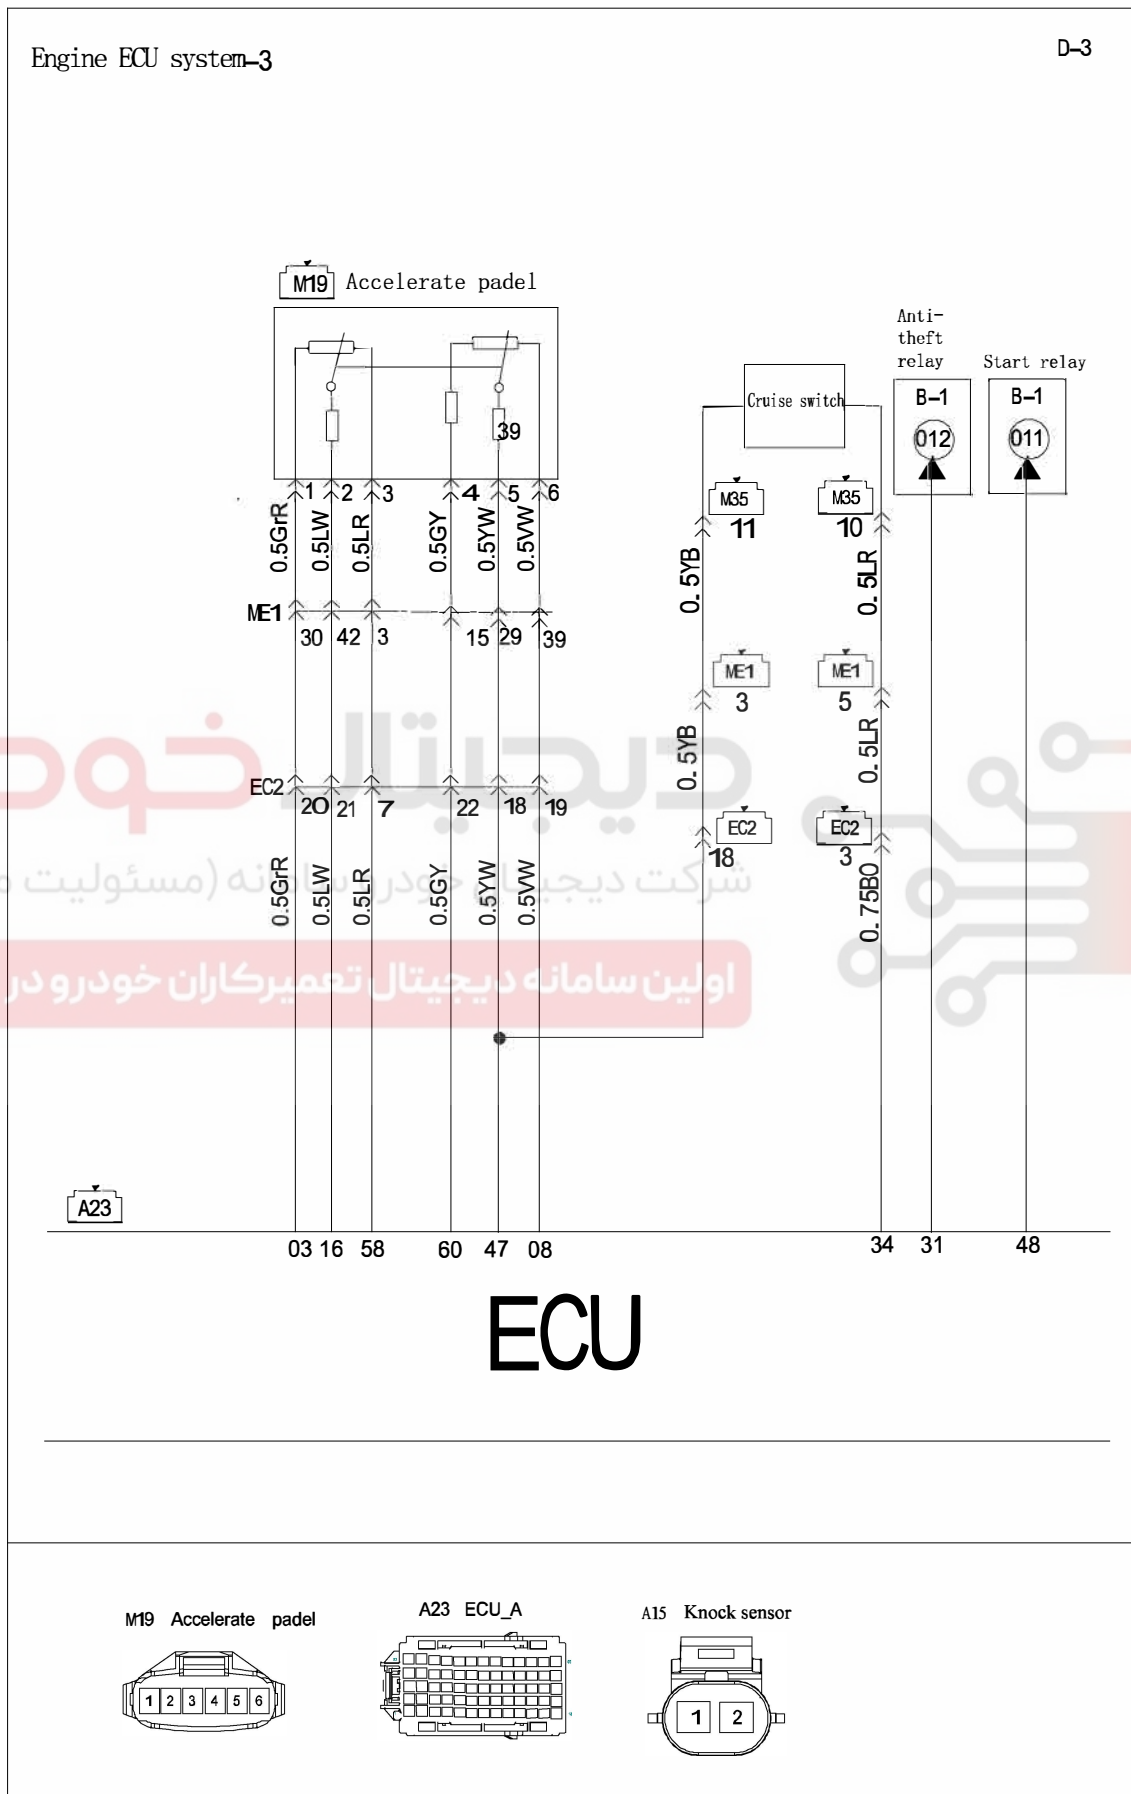

Engine ECU system-4


D-4

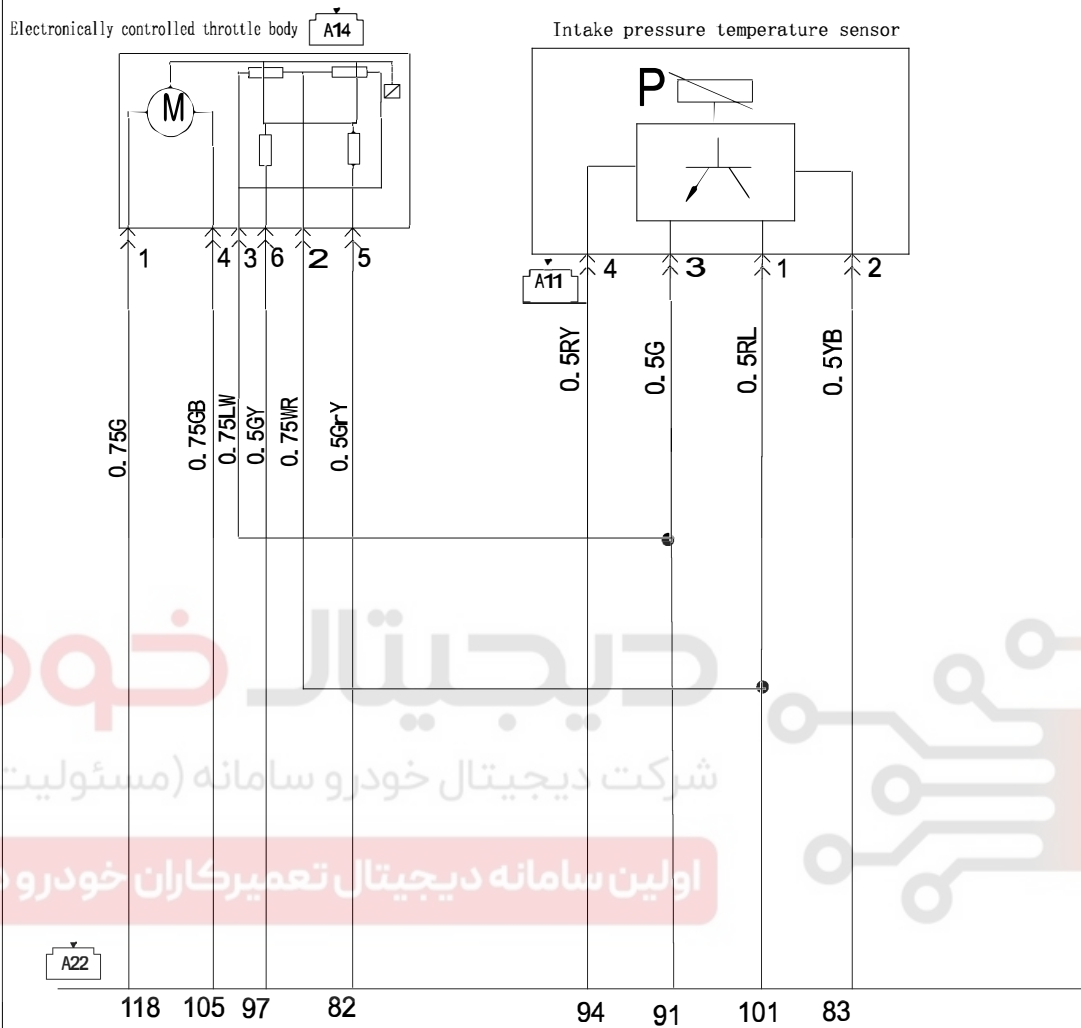

A14 Electronically controlled throttle body




A11 Intake pressure temperature sensor

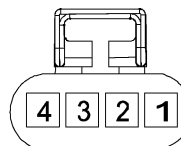


Engine ECU system-5

D-5



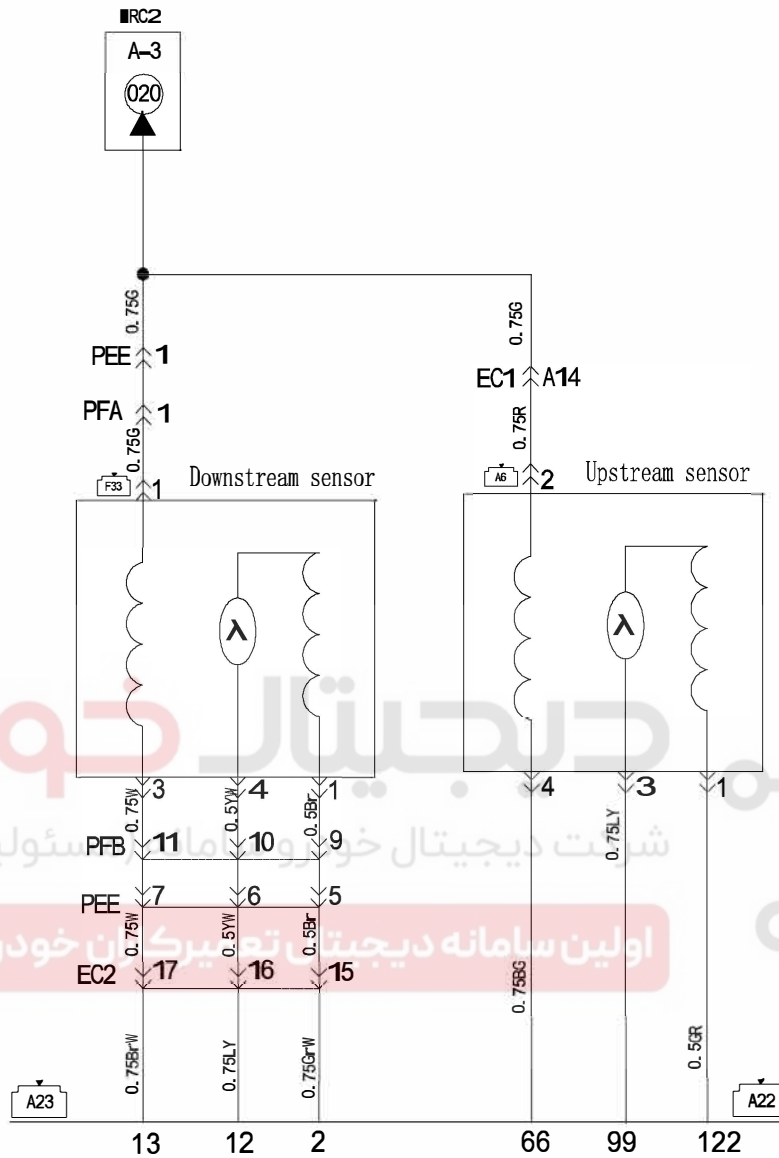


ECU

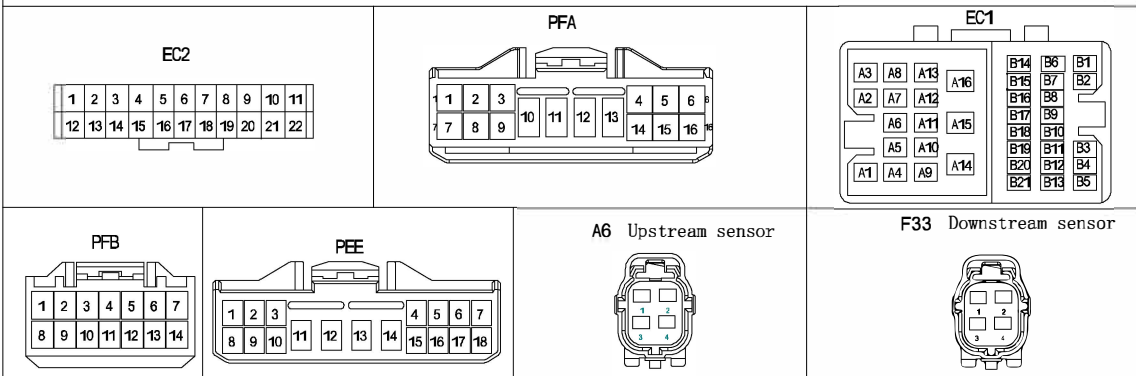


Engine ECU system-6

D-6

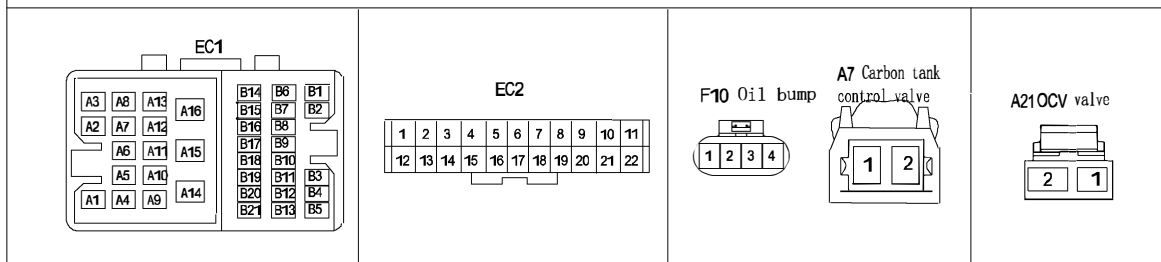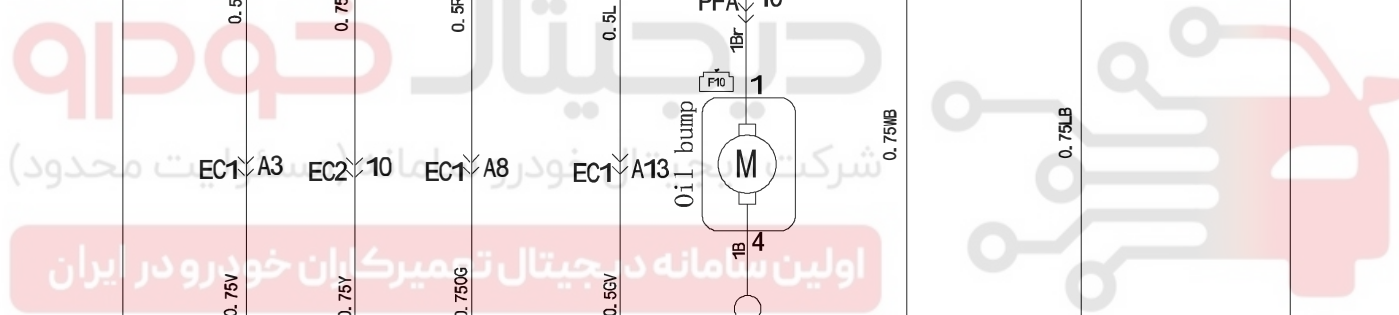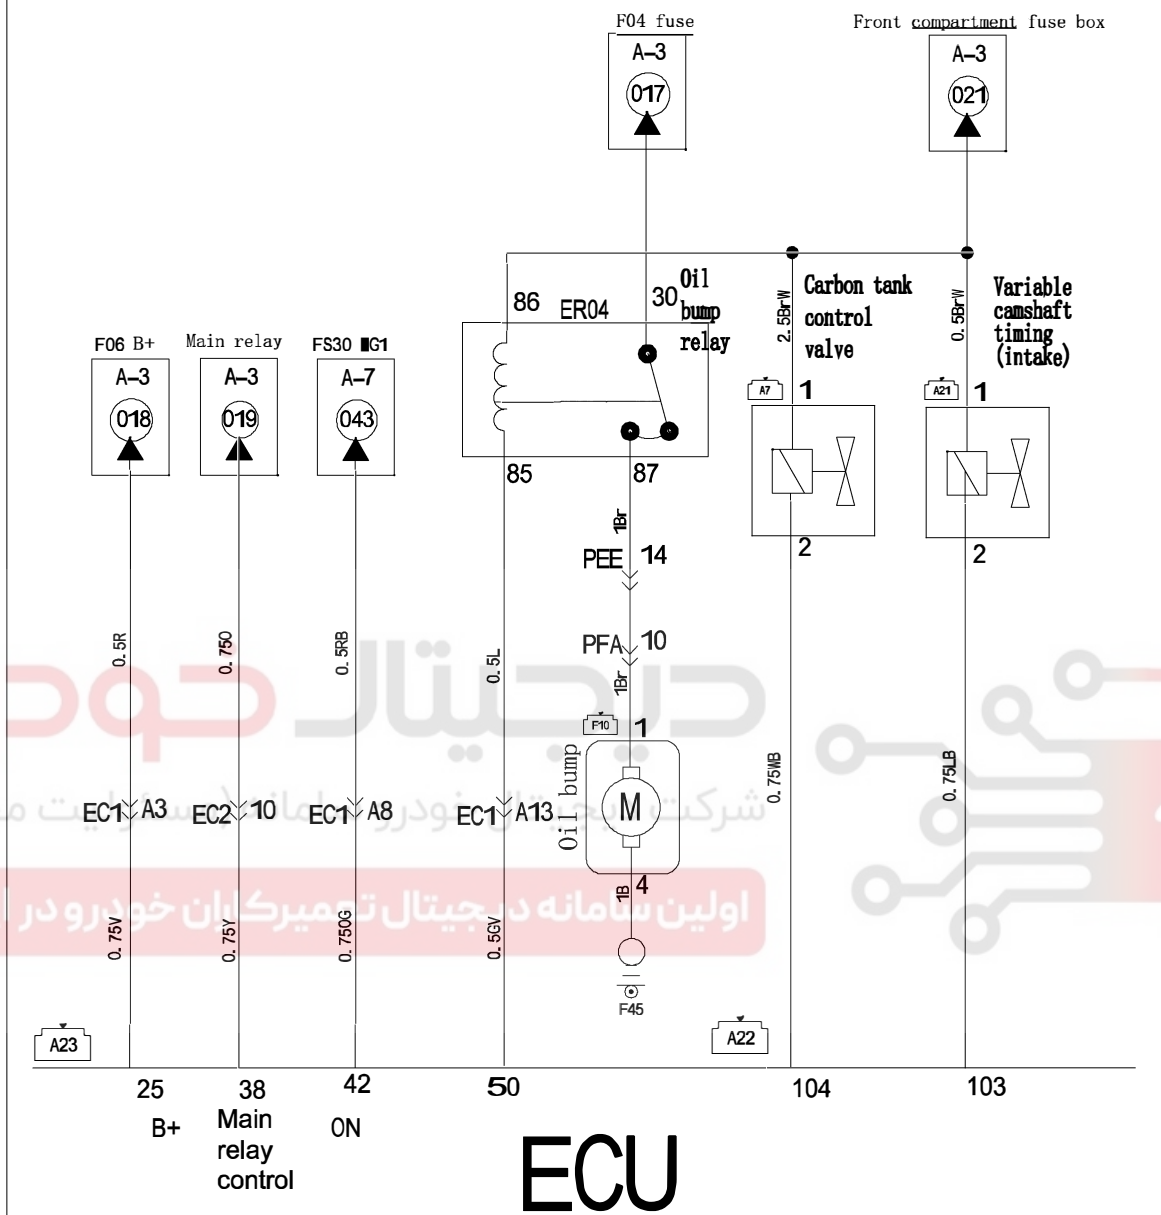

Engine ECU system-7

D-7

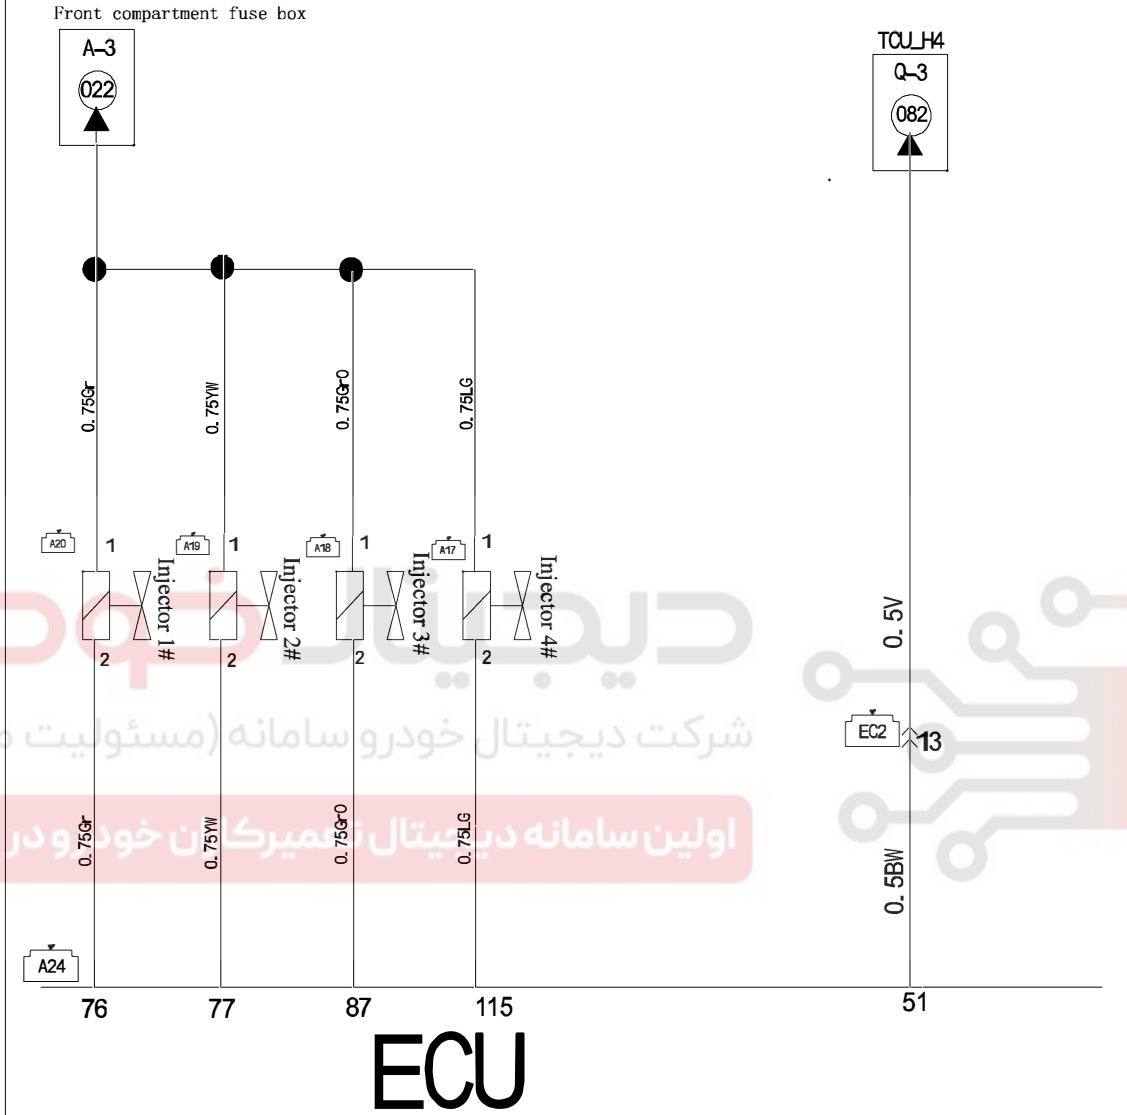


A17 Injector 4#




A18 Injector 3#



 A19 Injector 2#





A20 Injector 1#

 


Engine ECU system-8

D-8

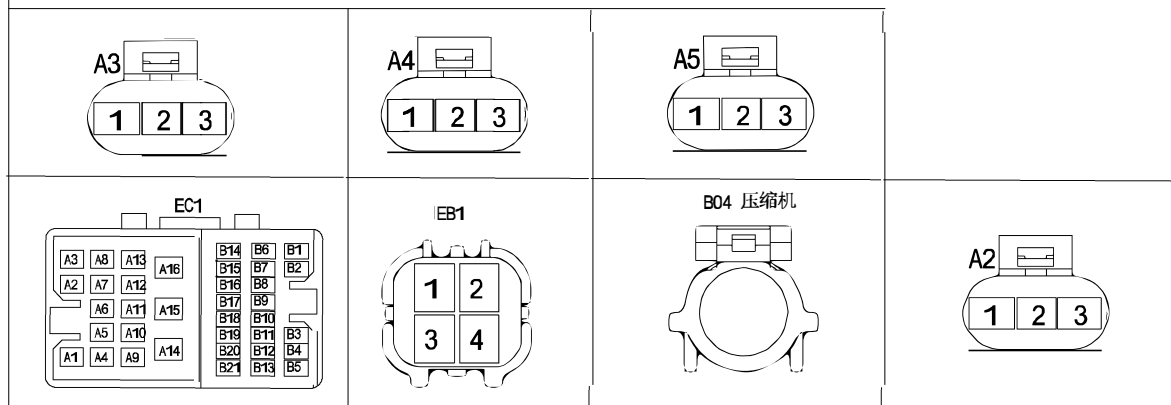
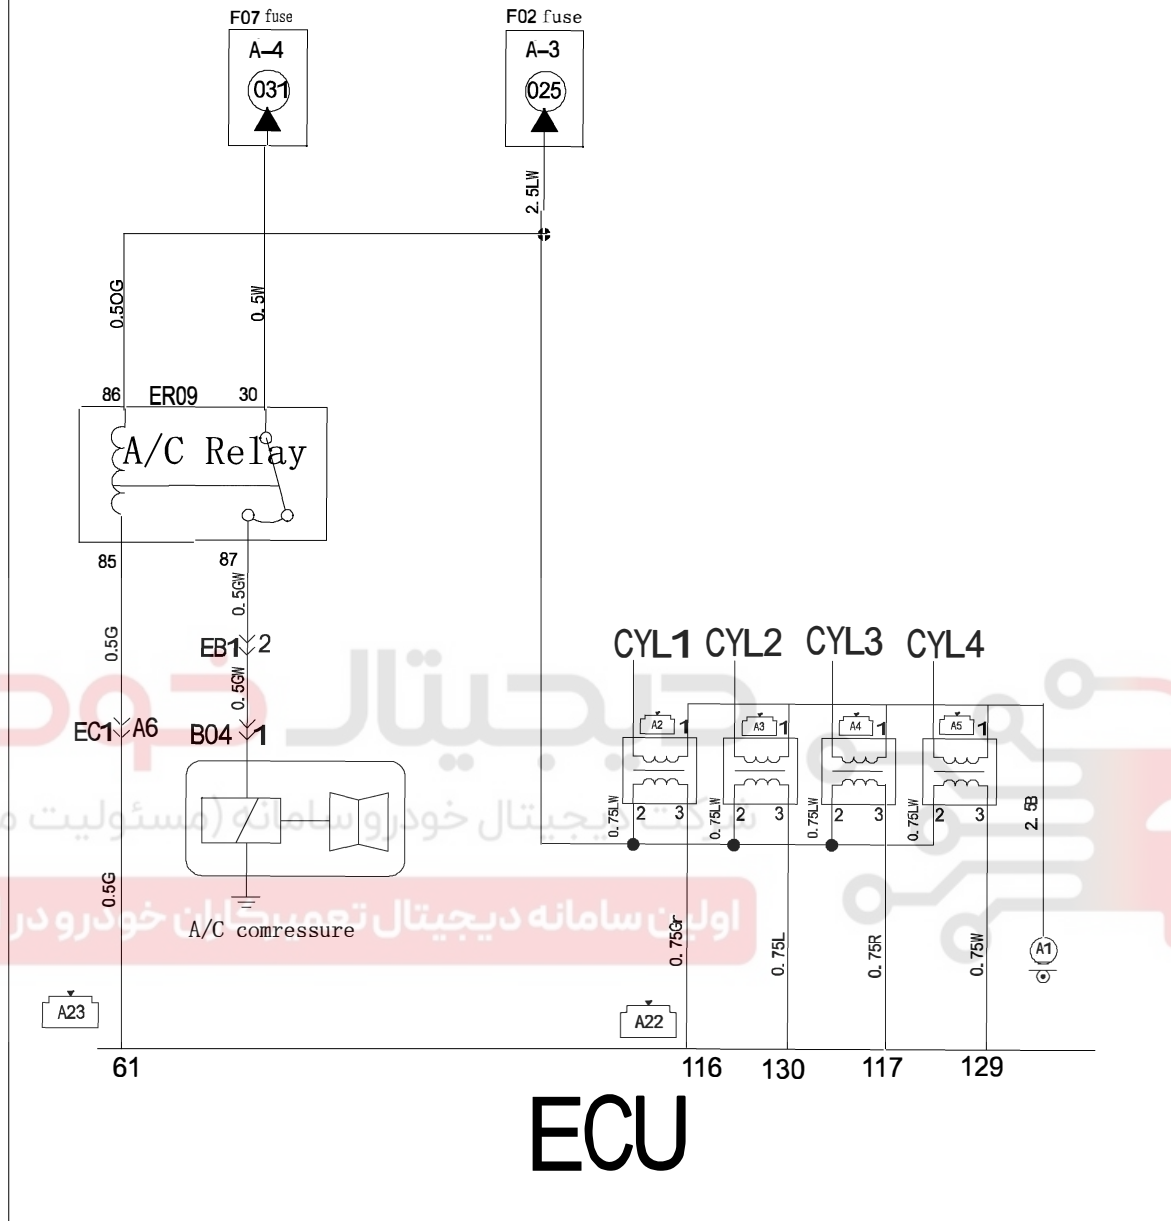


Engine ECU system-9

D-9

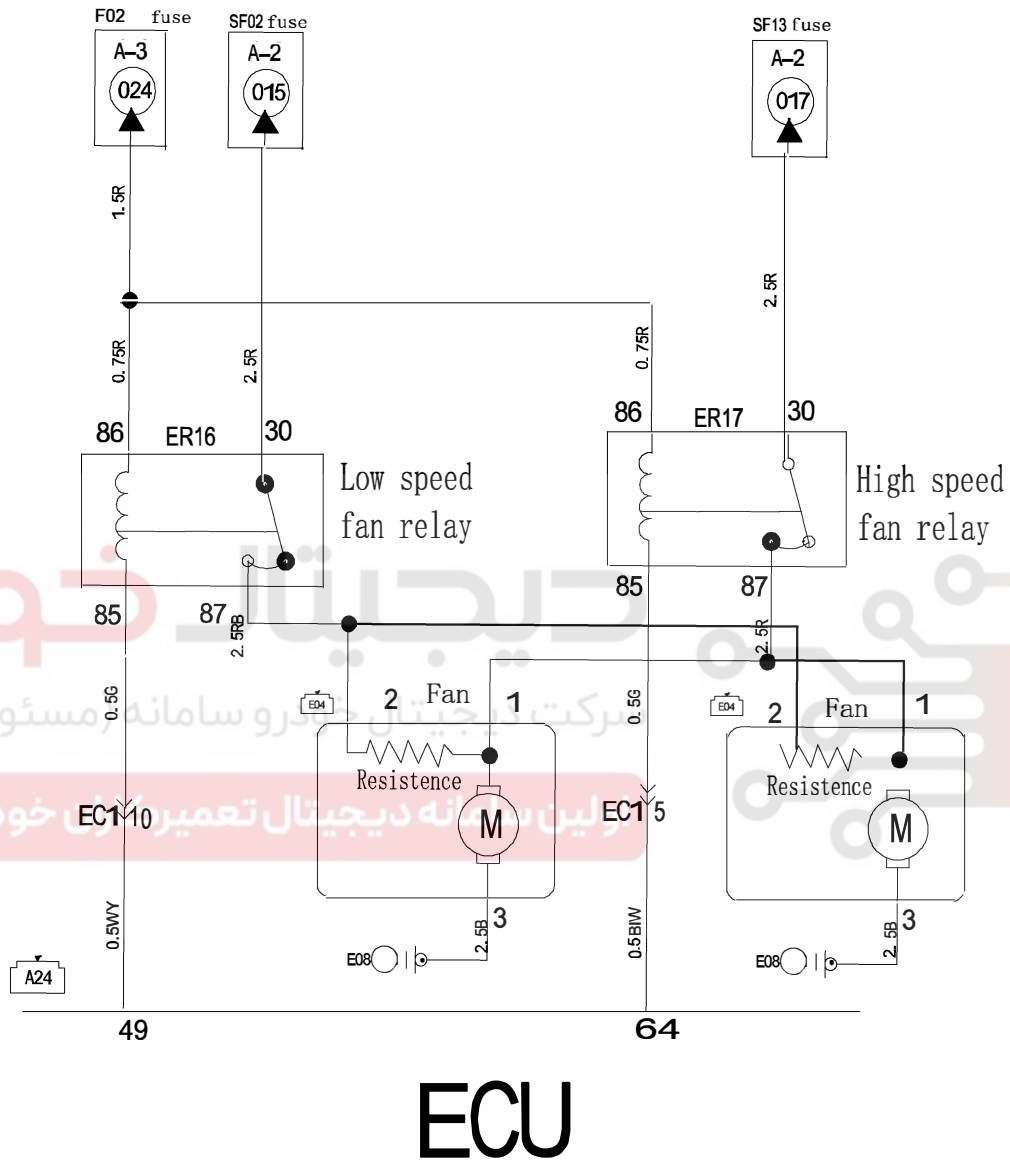




دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
پلین سامانه دیجیتال تعمیراتی خودرو در ایران

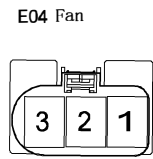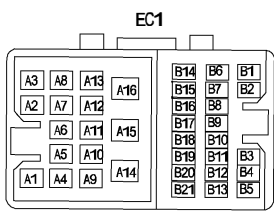

Engine ECU system-10

D-10

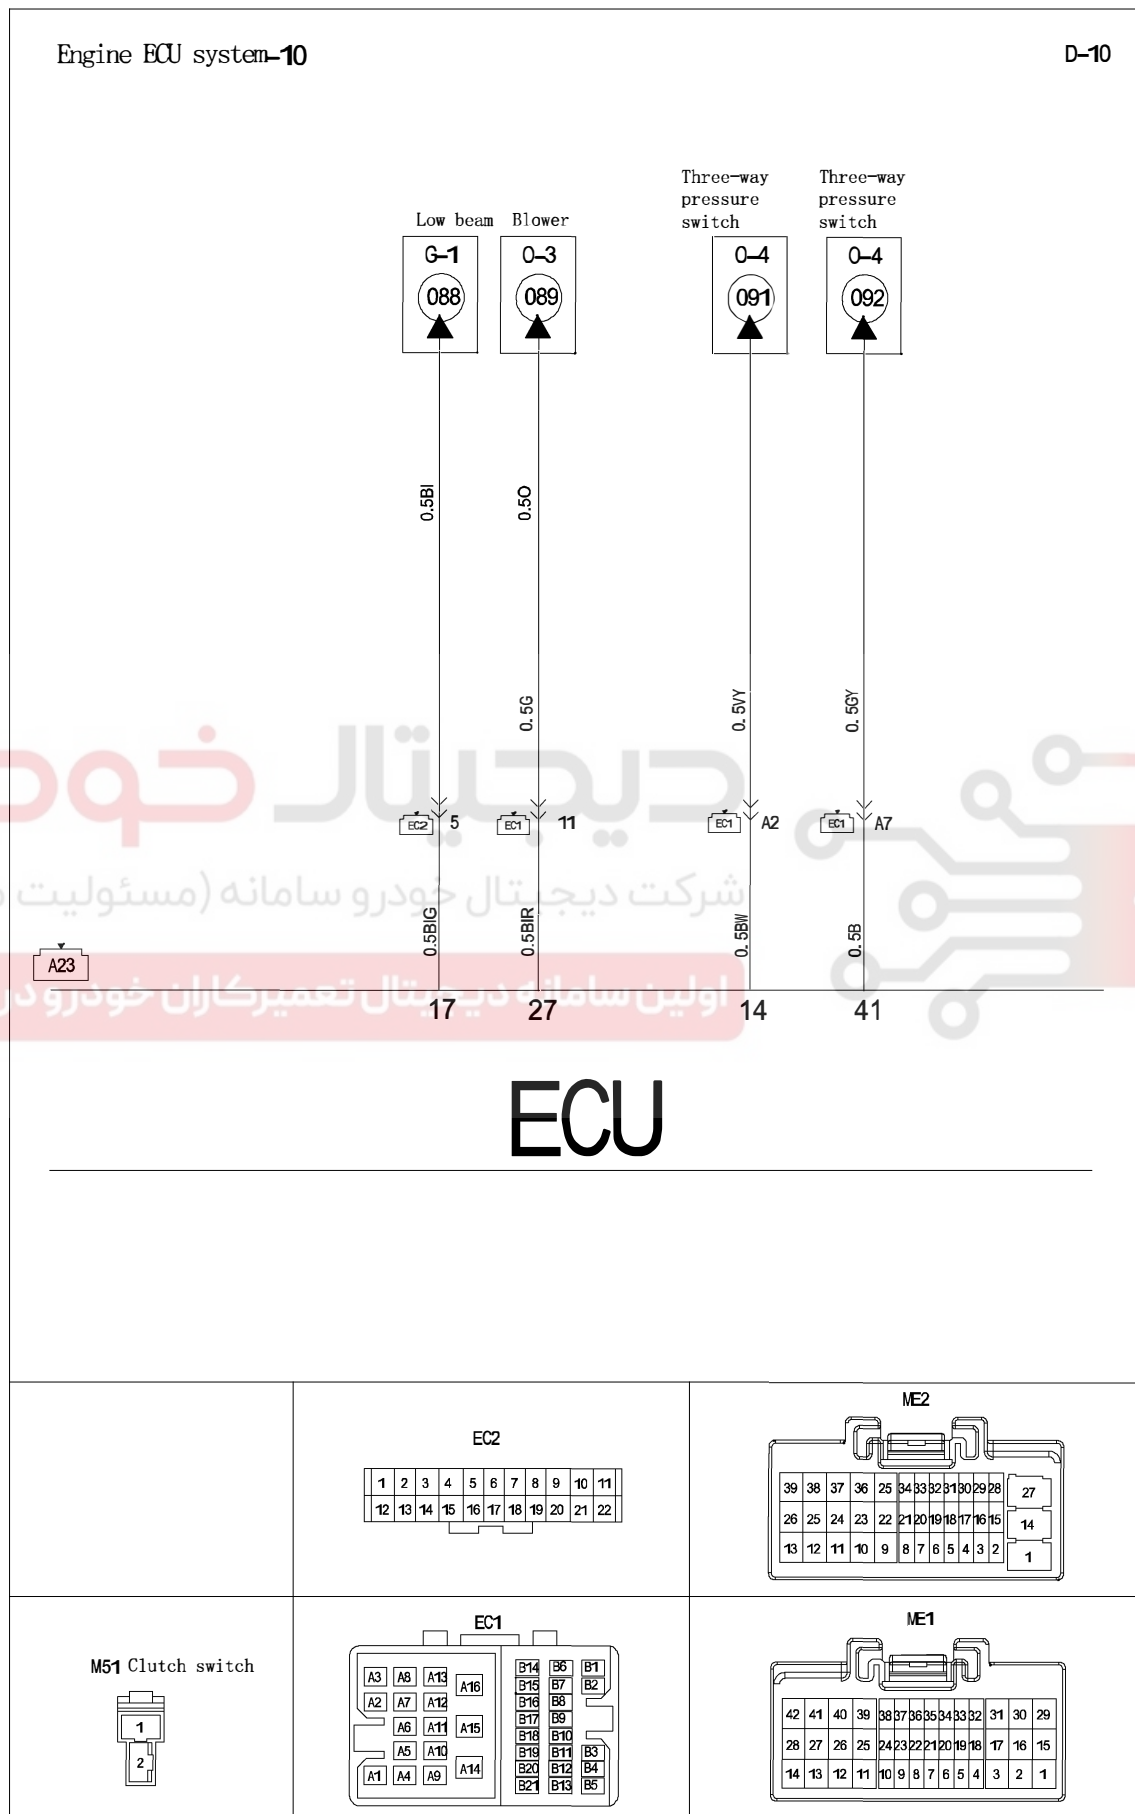

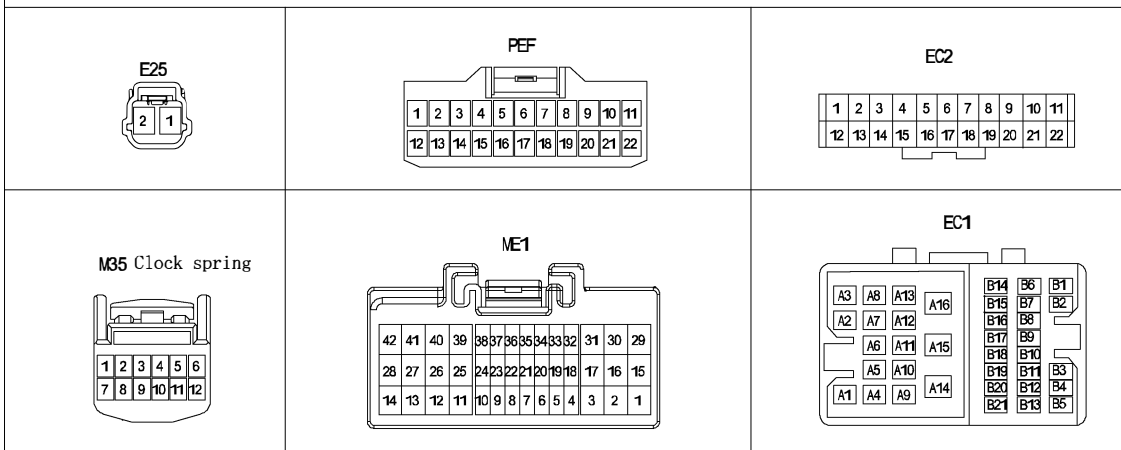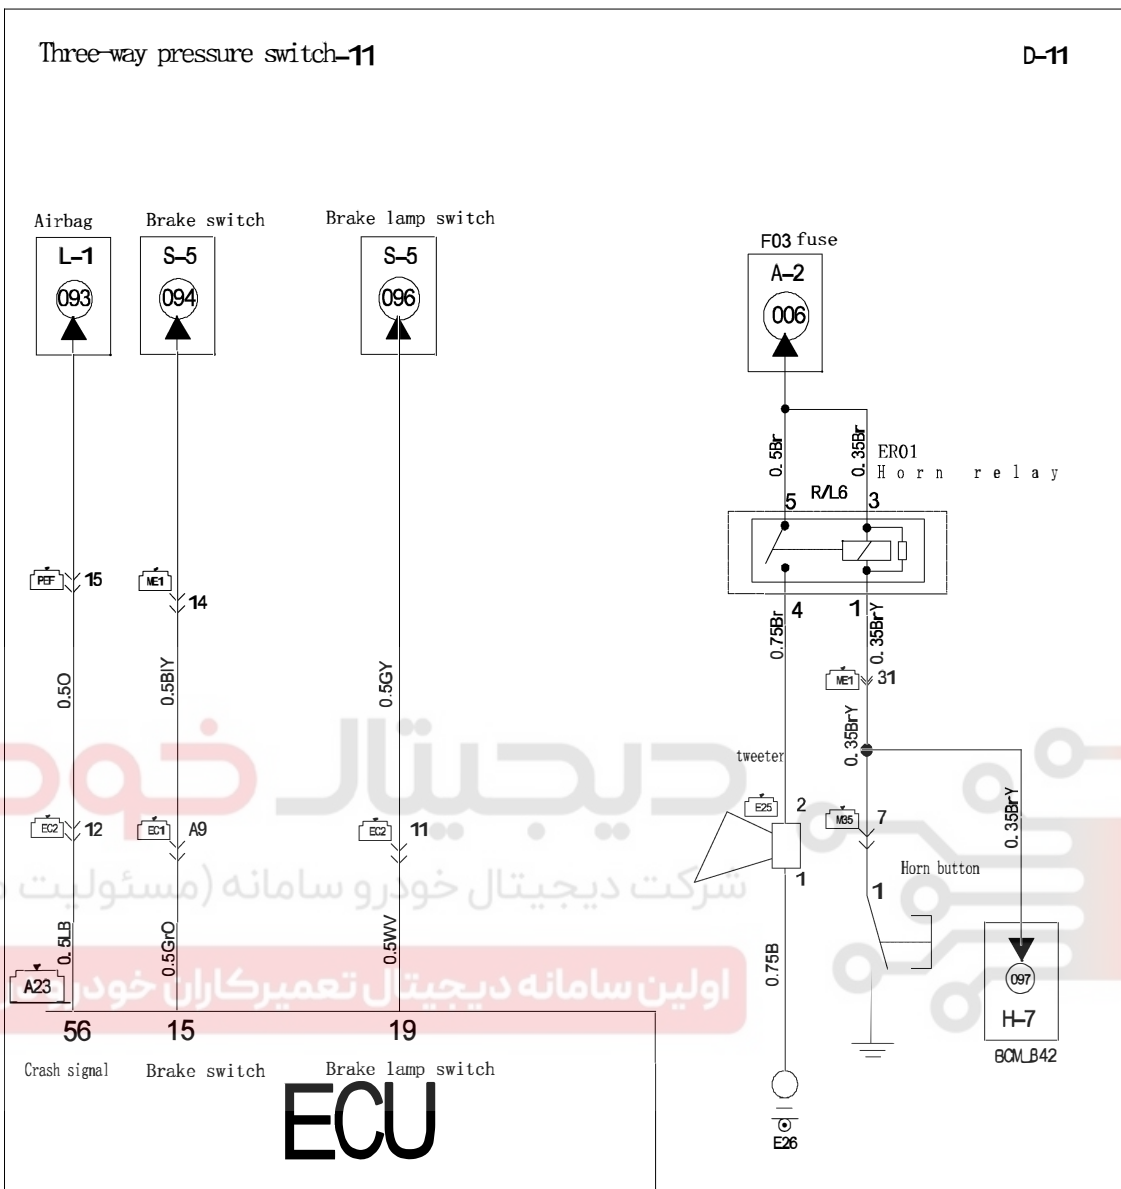

Engine ECU system-12

D-12

Component location index

Component code	Component name
A2	Ignition switch 1
A3	Ignition switch 2
A4	Ignition switch 3
A5	Ignition switch 4
A6	Front oxygen sensor
A7	Carbon canister solenoid valve
A8	Coolant temperature sensor
A11	Intake air temperature sensor
A13	Speed sensor
A14	Electronic throttle valve
A15	Knock sensor
A16	Phase sensor
A17	Fuel injector 4
A18	Fuel injector 3
A19	Fuel injector 2
A20	Fuel injector 1
A21	OCV valve
A24	Engine ECU
M19	Accelerator pedal
F33	Rear oxygen sensor
M19	Accelerator pedal
F10	Fuel pump
E04	Radiator fan
M51	Clutch switch
E25	Loudspeaker
M35	Clock spring
B04	Compressor

Connector

EC1	PFB	ME1
EC2	PEE	ME2
PFA	EB1	PEF

Ground wire

M52	A1
F45	A22
E08	A23
E26	