


Reverse Lamp

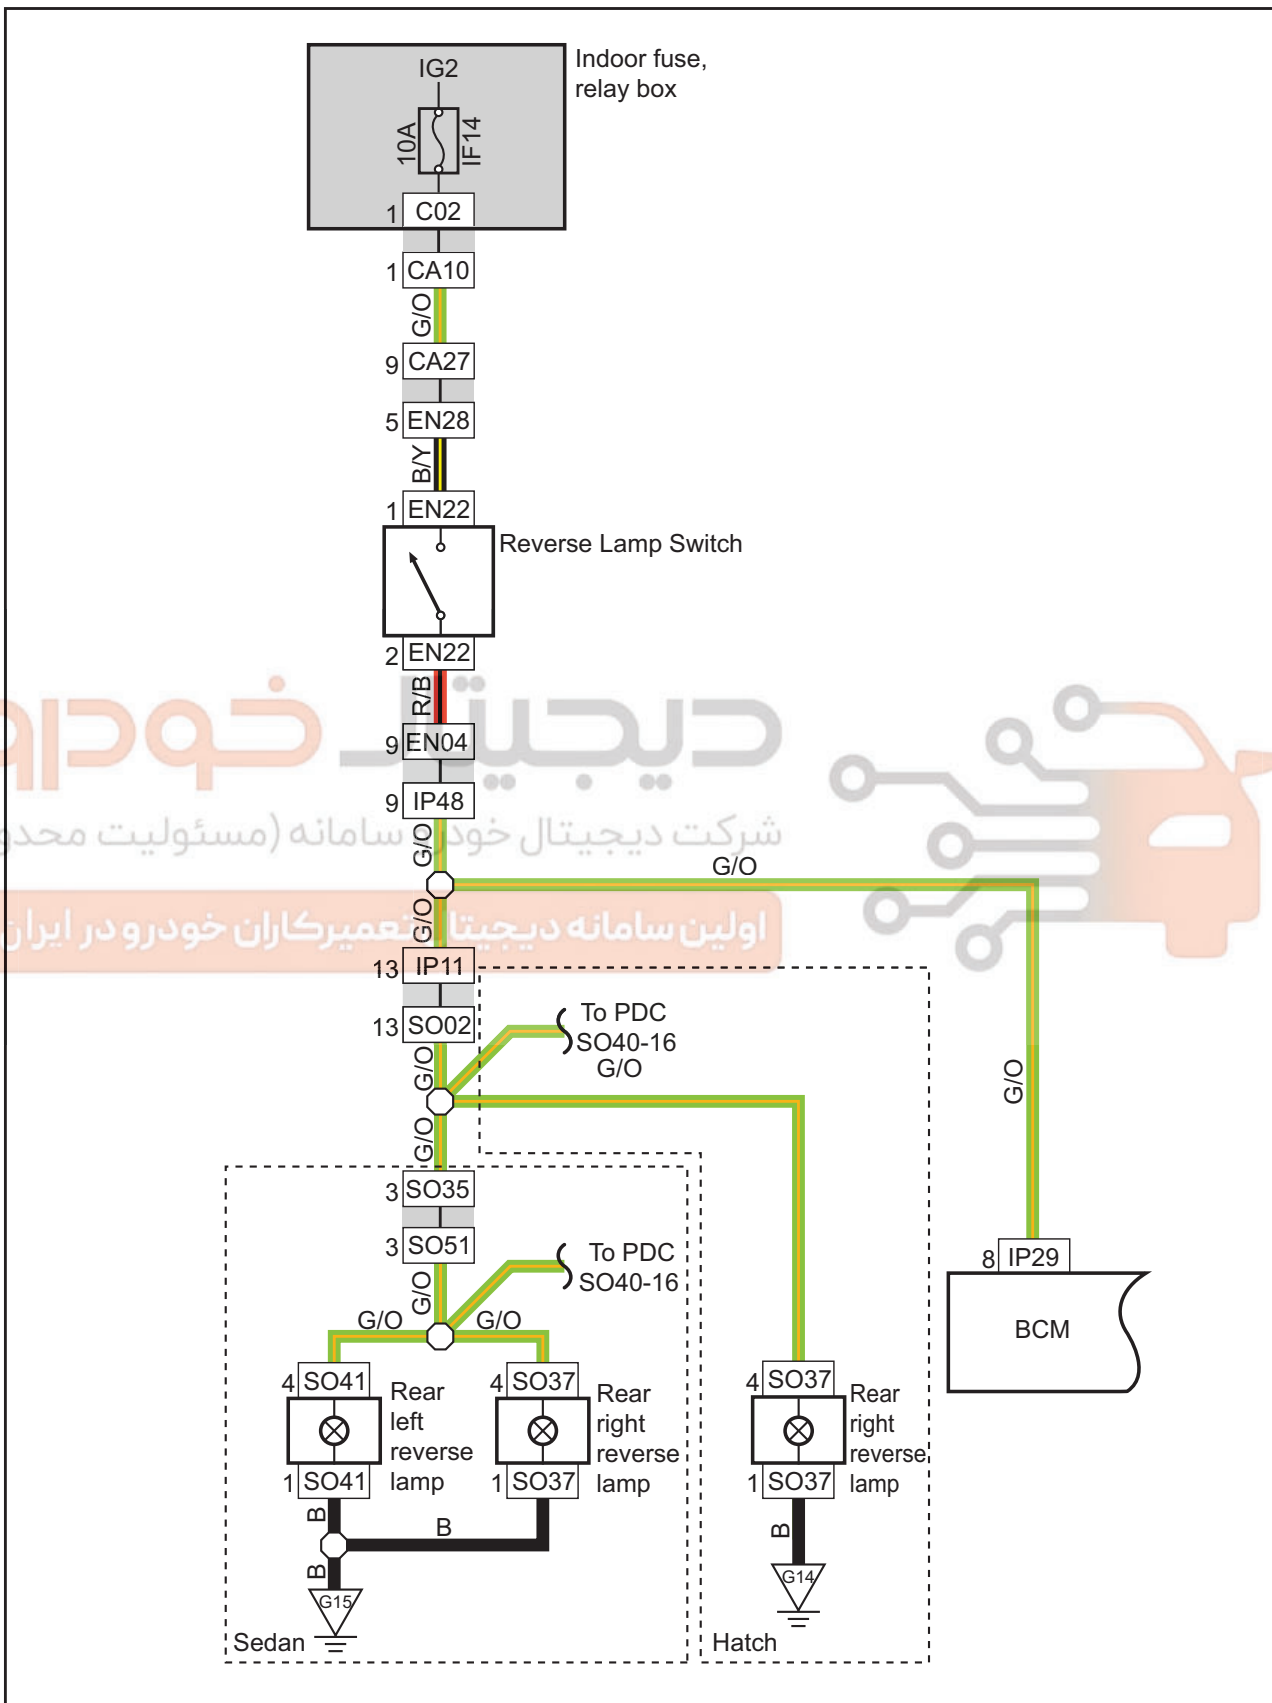

Harness connector	Name	Pages
C02	Rear Connector of Indoor Fuse Box	17
CA10	To harness connector 3 of engine compartment fuse & relay box	22
CA27	To engine harness connector	23
EN04	To instrument harness connector	28
EN22	Harness connector of reverse gear switch	29
EN28	To harness connector of engine compartment distribution box	29
IP11	To body harness connector	80
IP29	Harness connector of body control module 1	80
IP48	To engine harness connector	80
SO02	To instrument harness connector	97/106
SO35 (Sedan)	To luggage compartment harness connector	97
SO37	Harness connector of rear right combination tail lamp	97/106
SO41 (Sedan)	Harness connector of rear left combination tail lamp	97
SO51 (Sedan)	To body harness connector	97
G14 (Hatch)	Body harness grounding	128
G15 (Sedan)	Body harness grounding	126/127

Connection point	Descriptions	Pages
SO35-3 (Sedan)	To reverse radar control module SO40-16	419
SO02-13 (Hatch)	To reverse radar control module SO40-16	421