


4.2A Starting/Power Distribution System

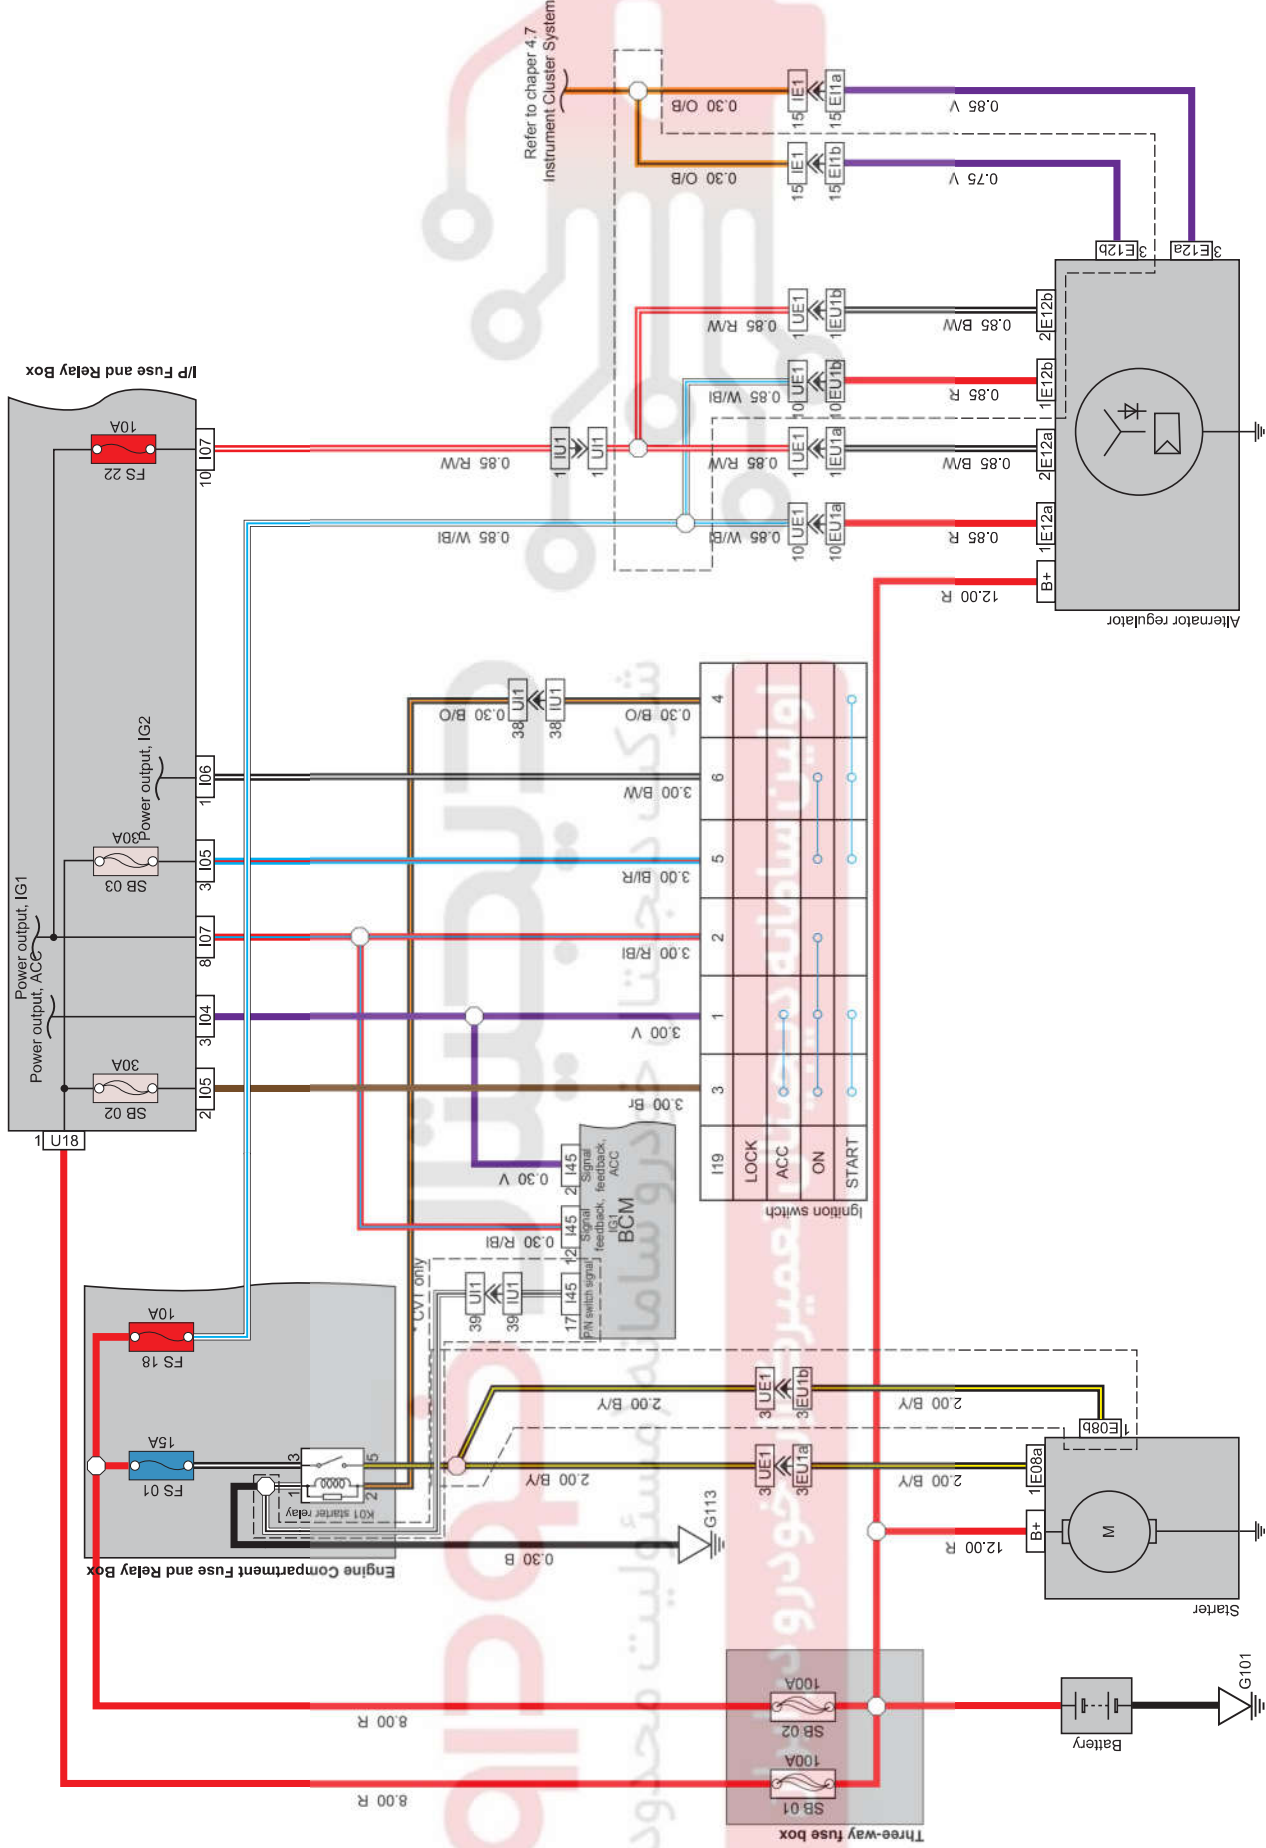

4.2B Starting/Power Distribution System (Engine Start Stop)

