



Frontal View of Engine Compartment Fuse, Relay Box (JLB-4G15, MR479QN Oversea, MR479QA)

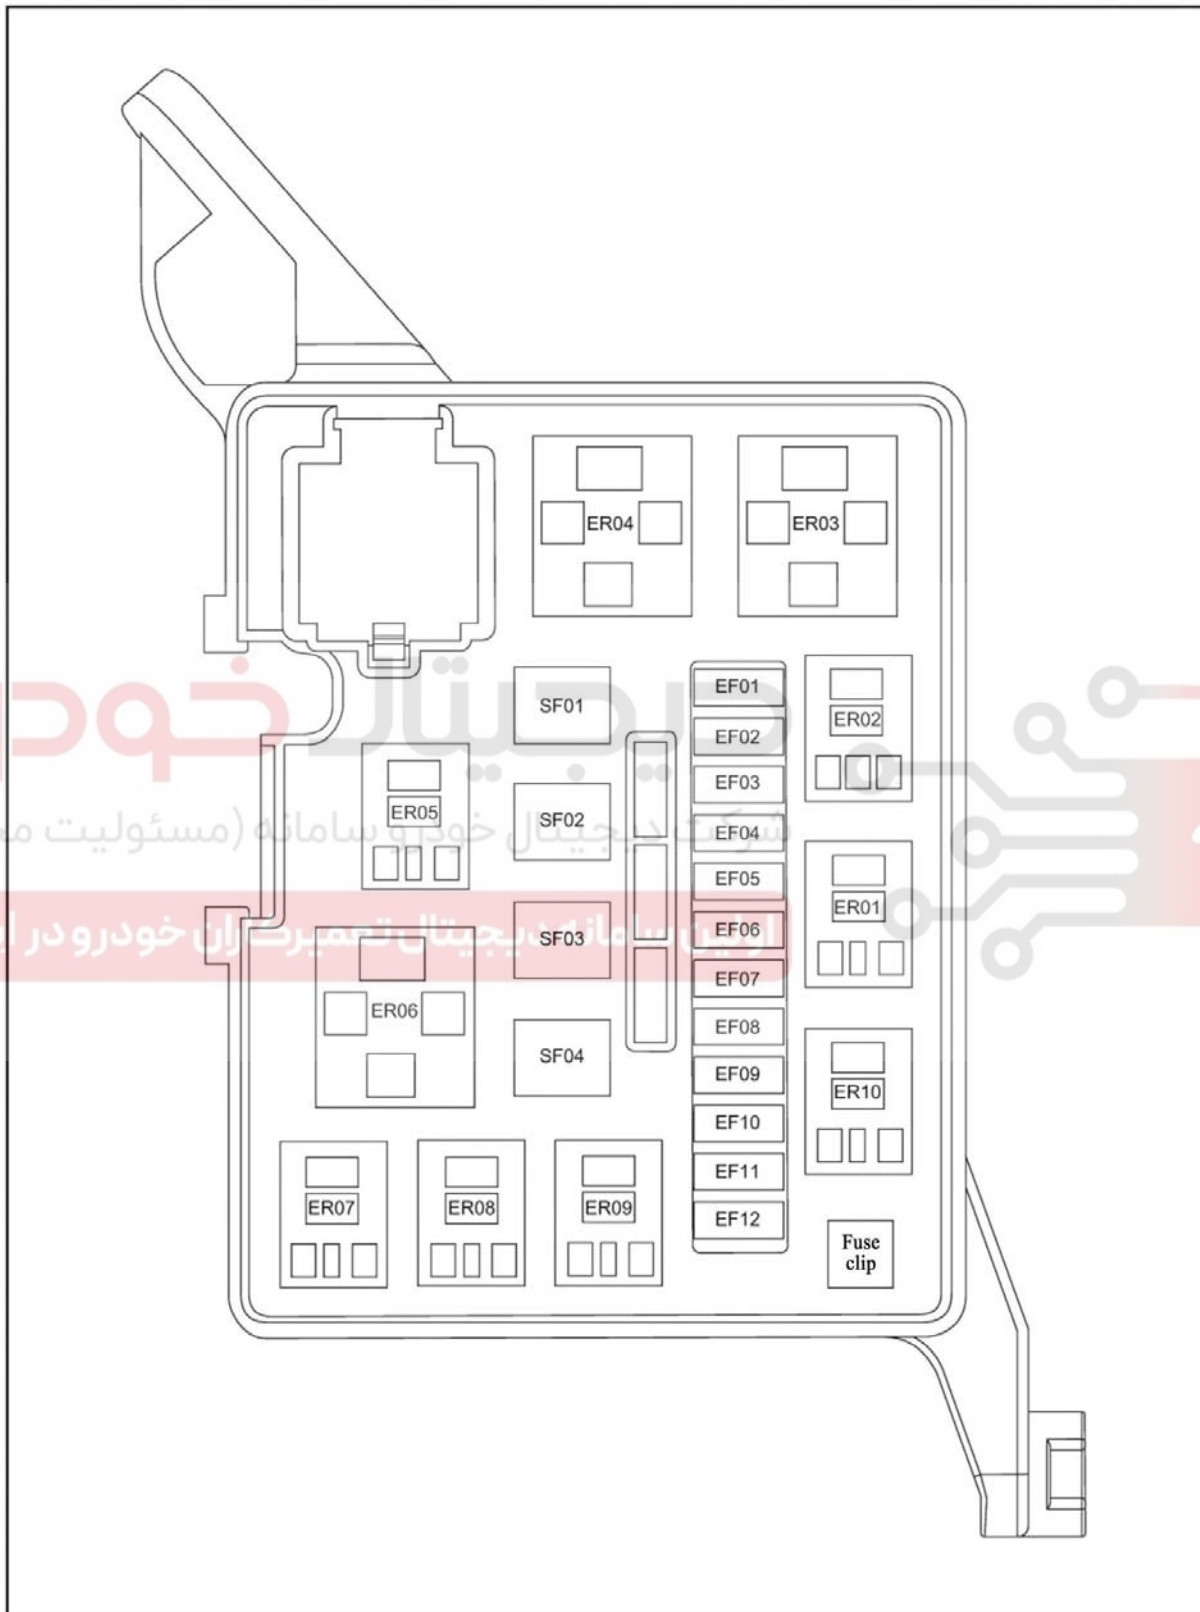

Frontal View of Engine Compartment Fuse (JLB-4G15, MR479QA)

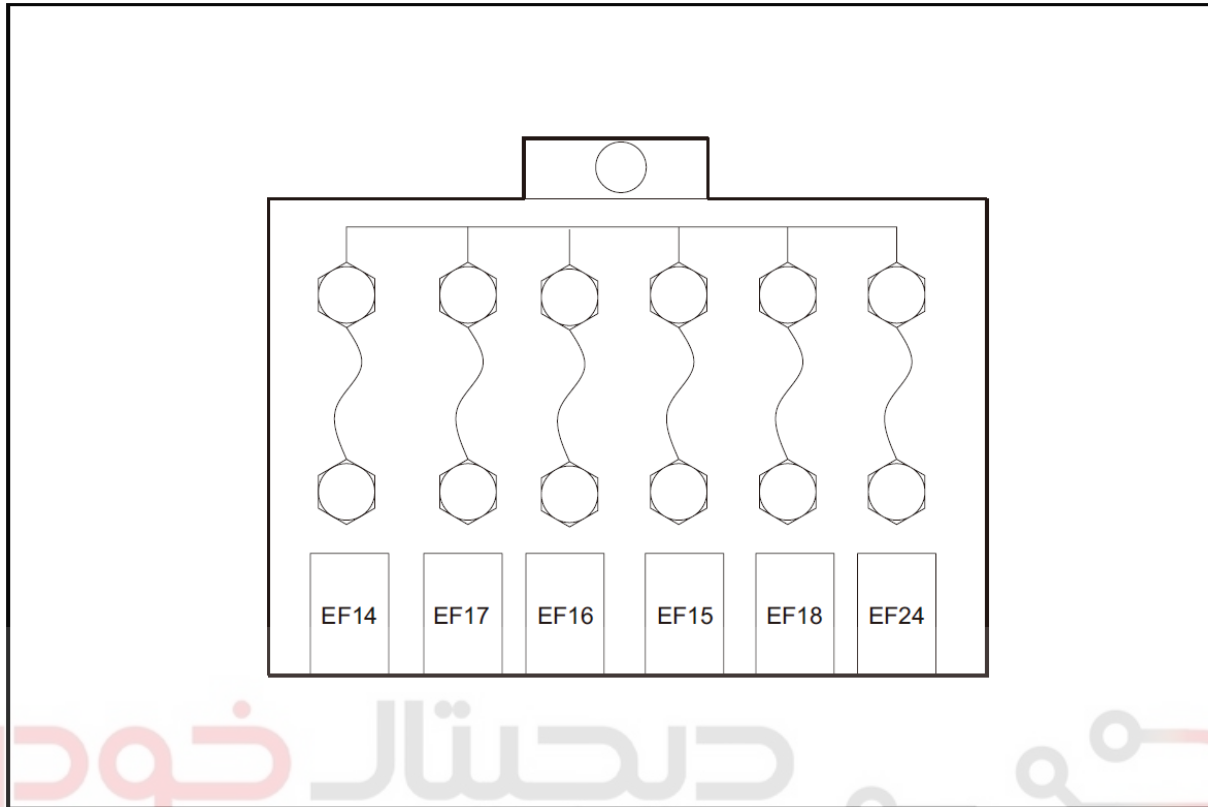


دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران


Internal Circuit Diagram of Engine Compartment Fuse, Relay Box

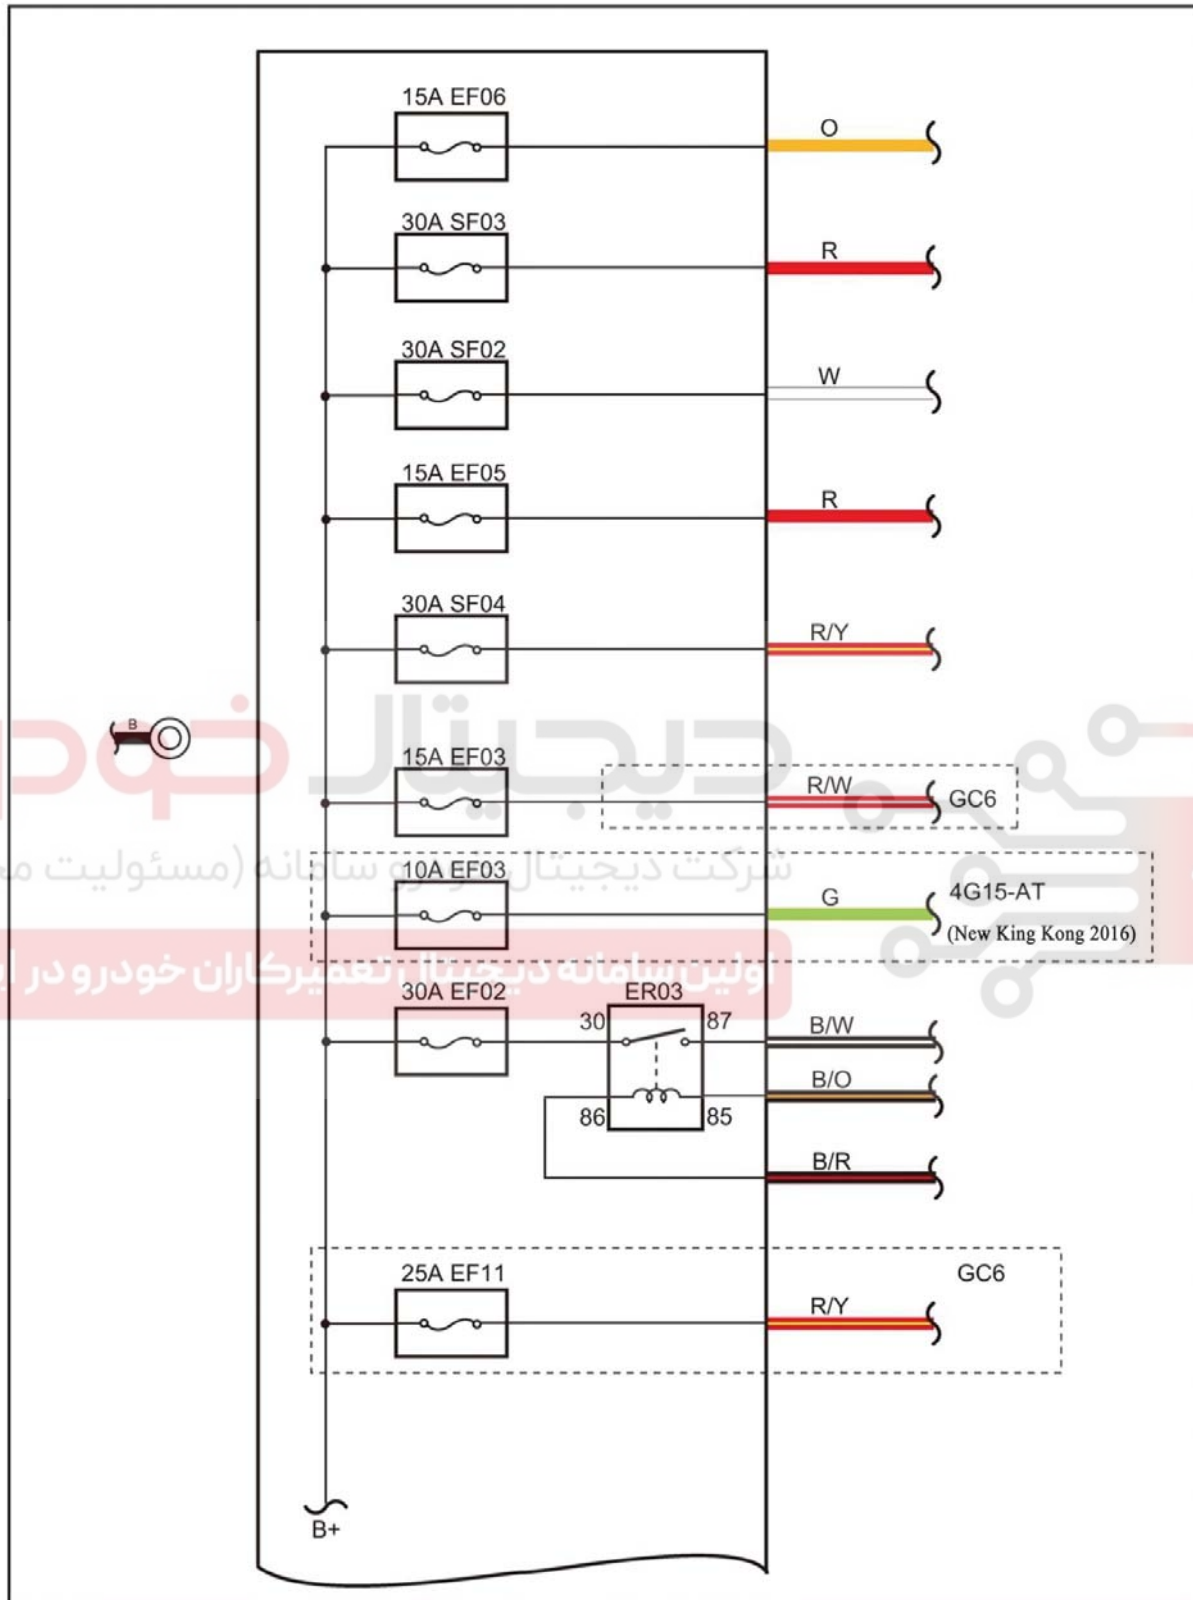

Internal Circuit Diagram of Engine Compartment Fuse, Relay Box (Continued 1)

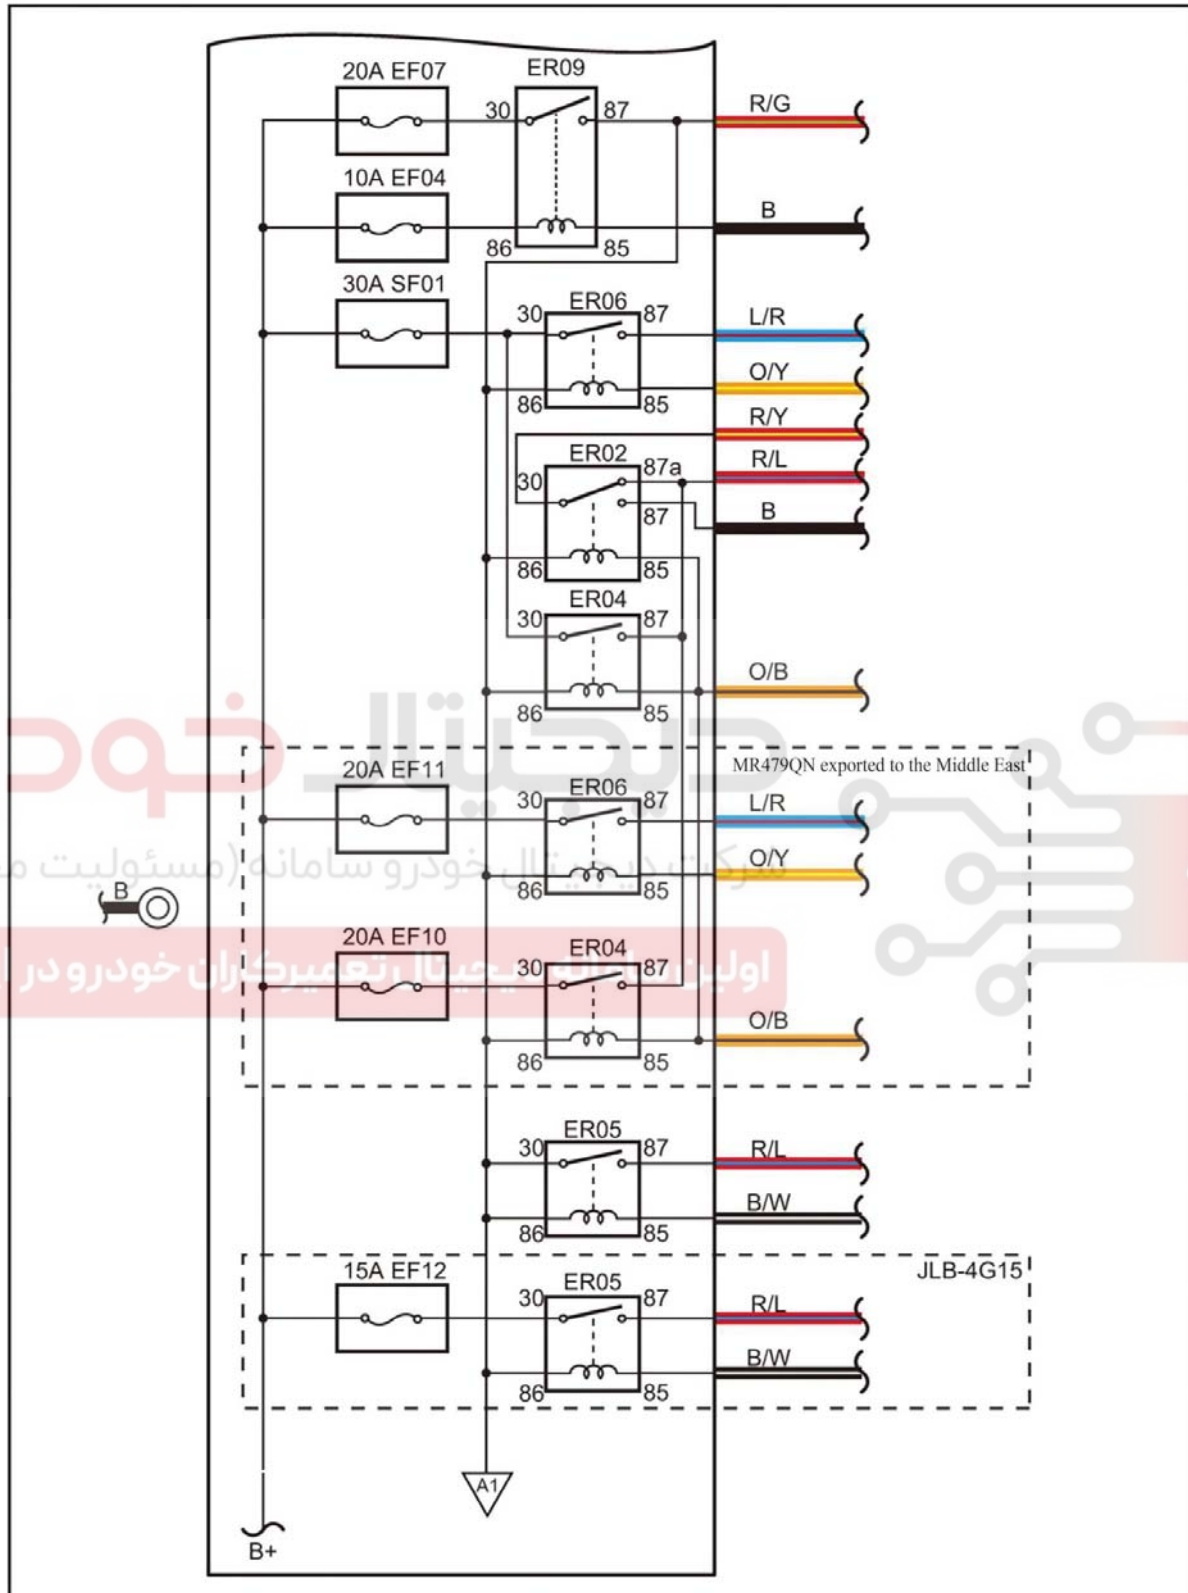

Internal Circuit Diagram of Engine Compartment Fuse, Relay Box (Continued 2)

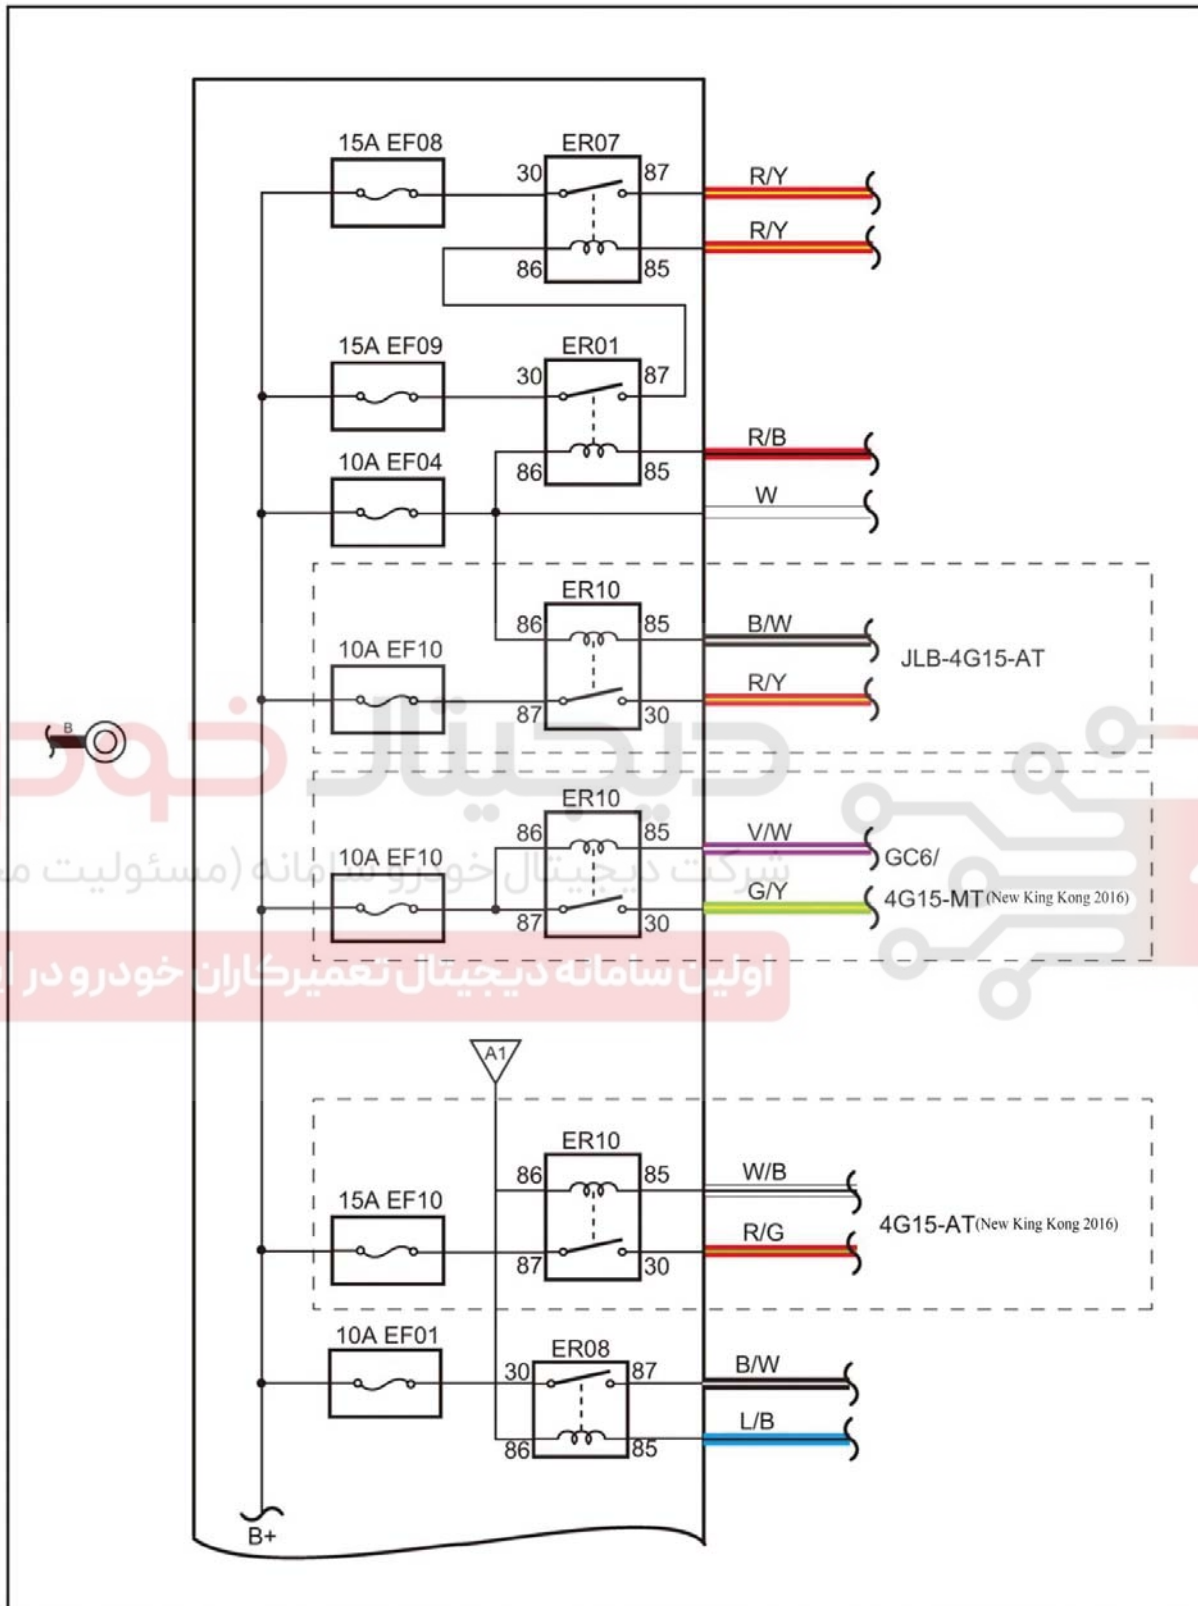

List of Engine Compartment Fuses

No.	Name	Rated current (A)	Description
SF01	Fan	30	
SF02	Ignition switch 1	30	
SF03	Power door and window	30	
SF04	Blower	30	
EF01	Compressor	10	
EF02	Starter	30	
EF03	Front fog lamp	15	
EF03	Daytime running lamp	10	4G15-4AT (New King Kong 2016)
EF04	Alternator	10	
EF05	AM2	15	
EF06	Electric horn	15	
EF07	Main relay	20	
EF08	High beam	15	
EF09	Low beam	15	
EF10	Vacuum pump	15	4G15-4AT
EF10	Right fan	20	MR479QN exported to the Middle East
EF10	Daytime running lamp	10	GC6/4G15-MT (New King Kong 2016)
EF11	Left fan	20	MR479QN exported to the Middle East
EF11	ESC	25	GC6
EF12	Fuel pump	15	JLB-4G15
EF14	Alternator	110A	MR479QN
EF14	Alternator	125A	JLB-4G15
EF15	Main fuse 1 of indoor electrical equipment center	30A	—
EF16	Main fuse 2 of indoor electrical equipment center	30A	—
EF16	ESC	40A	GC6
EF17	ABS	40A	
EF17	MAIN	60A	GC6
EF18	Main fuse of battery	60A	—
EF18	Main fuse of battery	30A	GC6
EF24	EPS fuse	60A	JLB-4G15

List of Engine Compartment Relays

No.	Name	Description
ER01	Low beam relay	—
ER02	Fan relay	—
ER03	Starter relay	—
ER04	Right fan relay	—
ER05	Fuel pump relay	—
ER06	Left fan relay	—
ER07	High beam relay	—
ER08	Compressor relay	—
ER09	Main relay	—
ER10	Vacuum pump relay	—
ER10	Daytime running lamp relay	GC6/4G15-MT (New King Kong 2016)

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

