
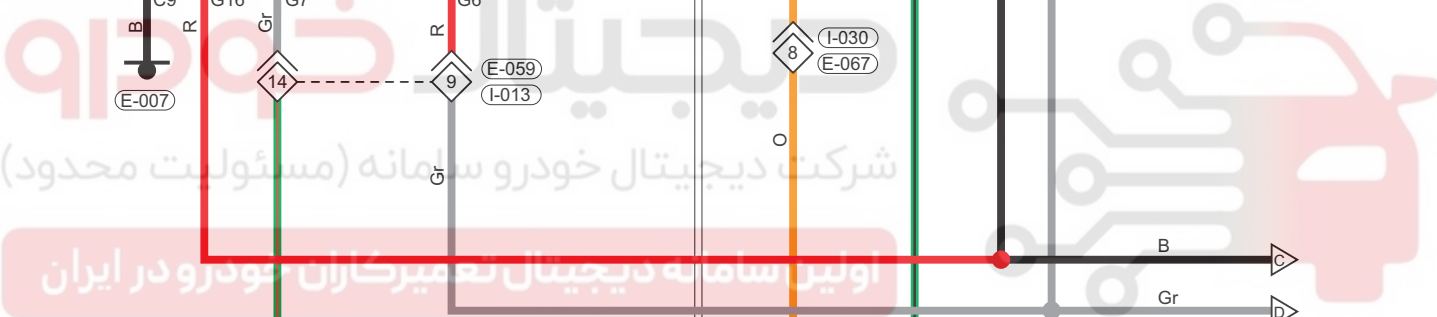


# Air Conditioning

## Electrical A/C System

### Circuit Diagram (Page 1 of 3)

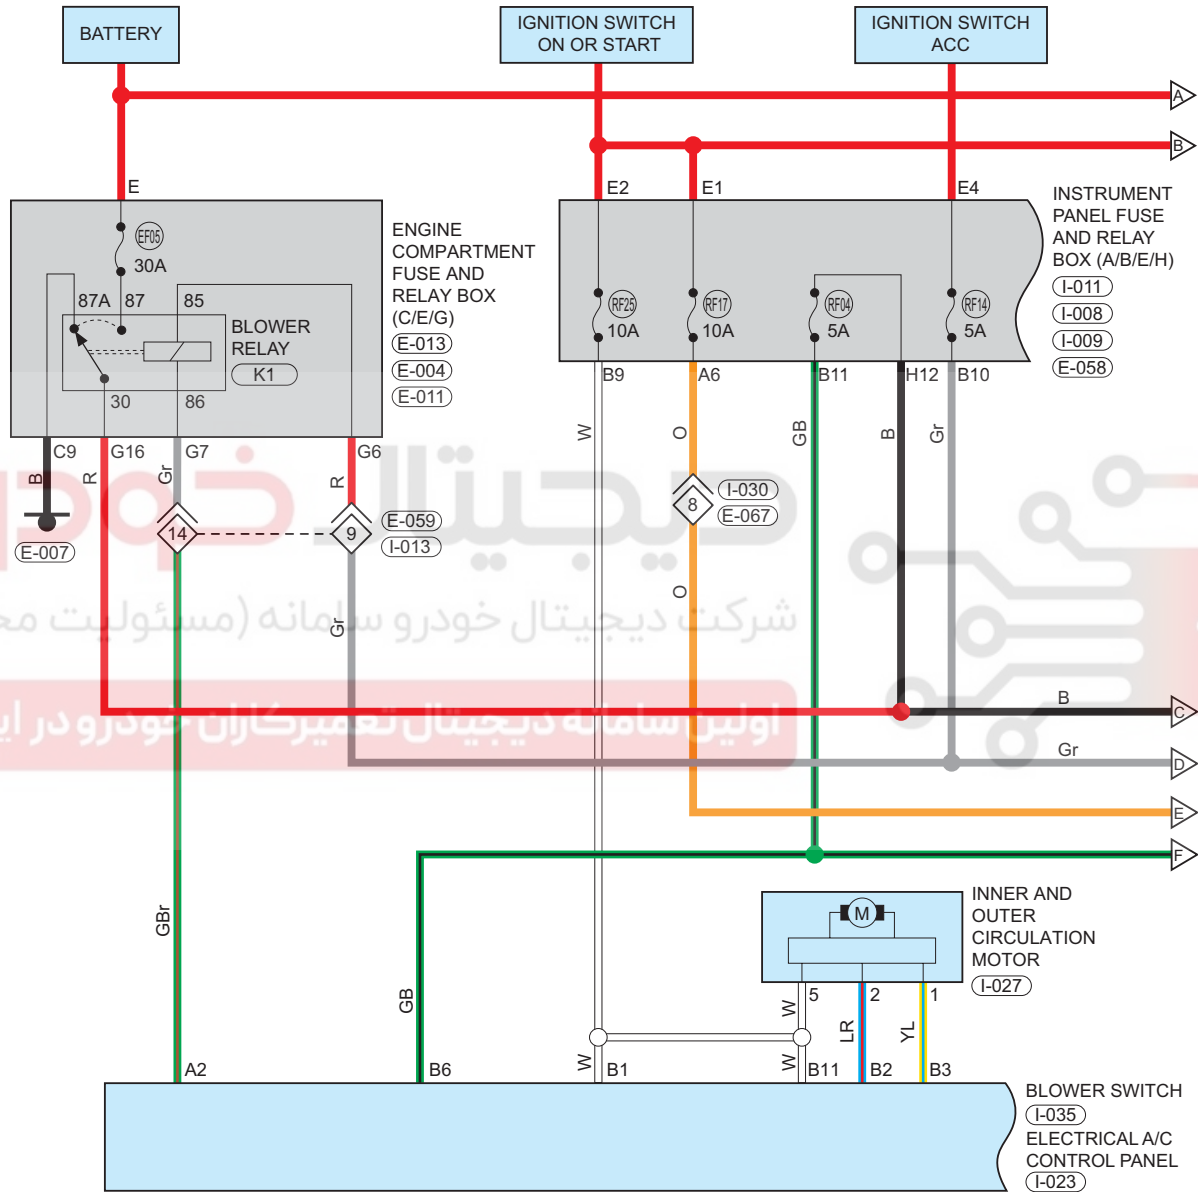

09

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-013	08-4 (MT)	E-004	08-4 (MT)	E-011	08-4 (MT)
	08-7 (CVT)		08-7 (CVT)		08-7 (CVT)
E-007	08-4 (MT)	E-058	08-4 (MT)	I-008	08-14
	08-7 (CVT)		08-7 (CVT)		
I-009	08-14	I-011	08-14	I-027	08-14
I-035	08-14	I-023	08-14		

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF04	06-12	Instrument Panel Fuse and Relay Box
RF14	06-12	Instrument Panel Fuse and Relay Box
RF17	06-12	Instrument Panel Fuse and Relay Box
RF25	06-12	Instrument Panel Fuse and Relay Box
EF05	06-5	Engine Compartment Fuse and Relay Box
Blower Relay	06-5	Engine Compartment Fuse and Relay Box

## Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-059, I-013	08-4, 08-14 (MT)	I-030, E-067	08-14, 08-4 (MT)		
	08-7, 08-14 (CVT)		08-14, 08-7 (CVT)		

09

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-013	12-2	E-004	12-2	E-011	12-2
E-007	12-2	I-011	12-8	I-008	12-8
I-009	12-8	E-058	12-4	I-027	12-9
I-035	12-10	I-023	12-9	E-059, I-013	12-4
I-030, E-067	12-9				

Circuit Diagram (Page 2 of 3)

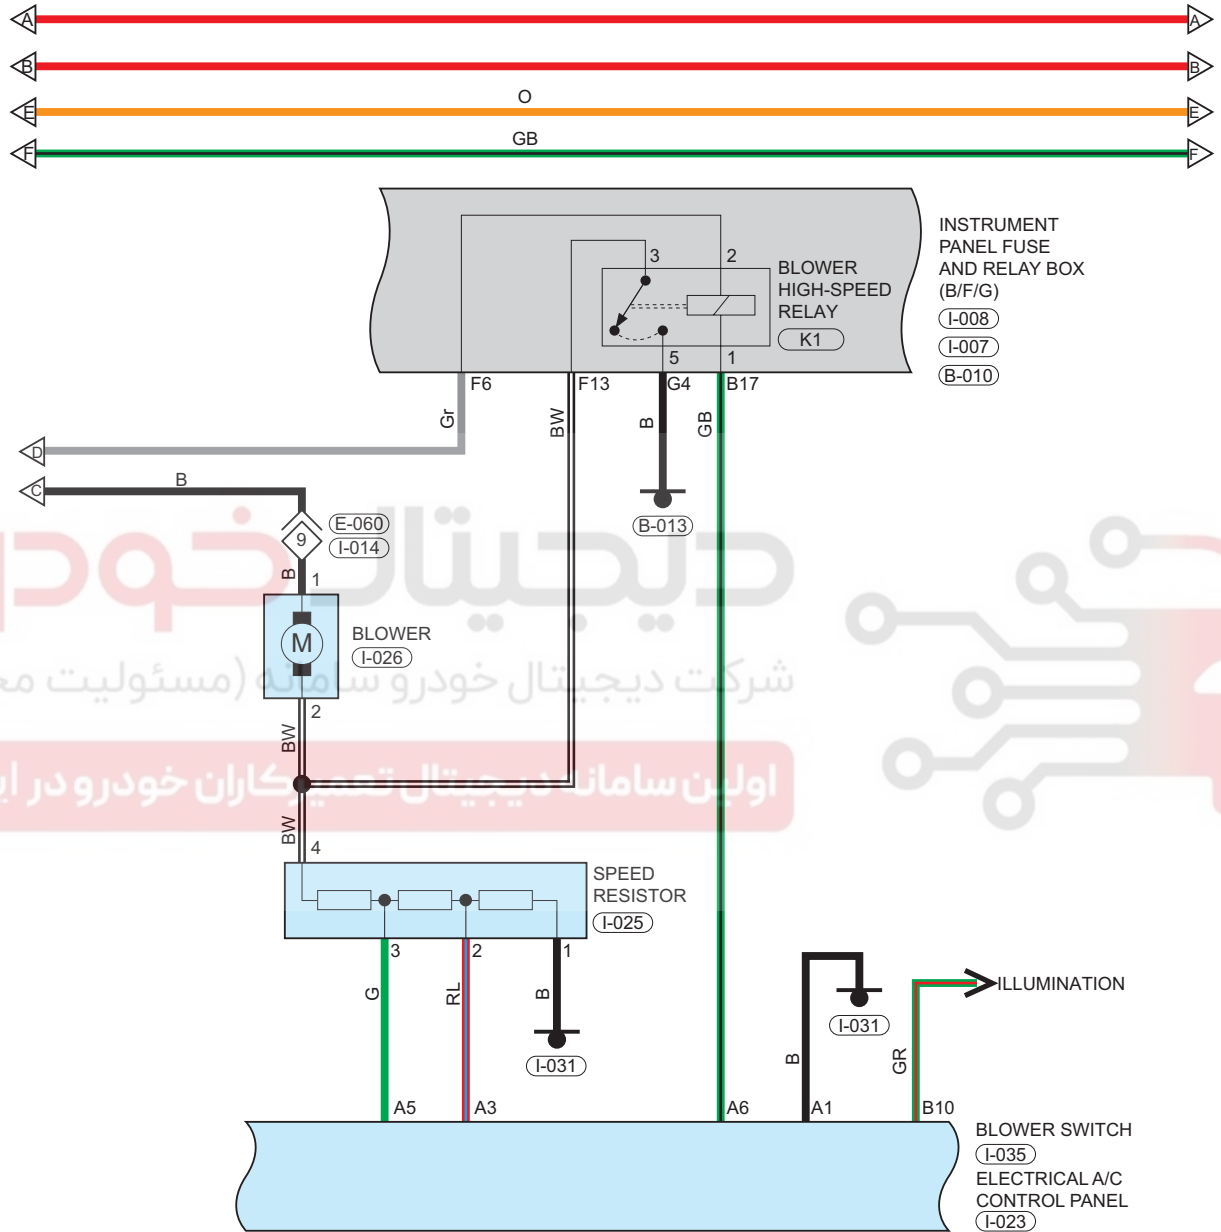

دیجیتال خودرو  
 شرکت دیجیتال خودرو سامان (مسئولیت محدود)  
 اولین سامان دیجیتال تولیدکنندگان خودرو در ایران



09

ET11090300

## Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-008	08-14	I-007	08-14	B-010	08-17
B-013	08-17	I-026	08-14	I-025	08-14
I-031	08-14	I-035	08-14	I-023	08-14

## Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
Blower High-speed Relay	06-12	Instrument Panel Fuse and Relay Box



## Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-060, I-014	08-4, 08-14 (MT)				
	08-7, 08-14 (CVT)				

## Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-008	12-8	I-007	12-8	B-010	12-13
B-013	12-13	I-026	12-9	I-025	12-9
I-031	12-10	I-035	12-10	I-023	12-9
E-060, I-014	12-4				

Circuit Diagram (Page 3 of 3)

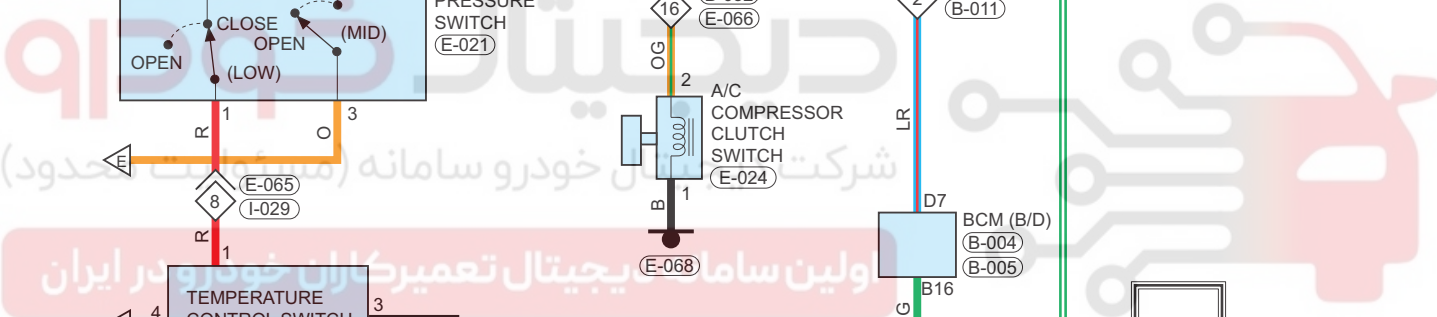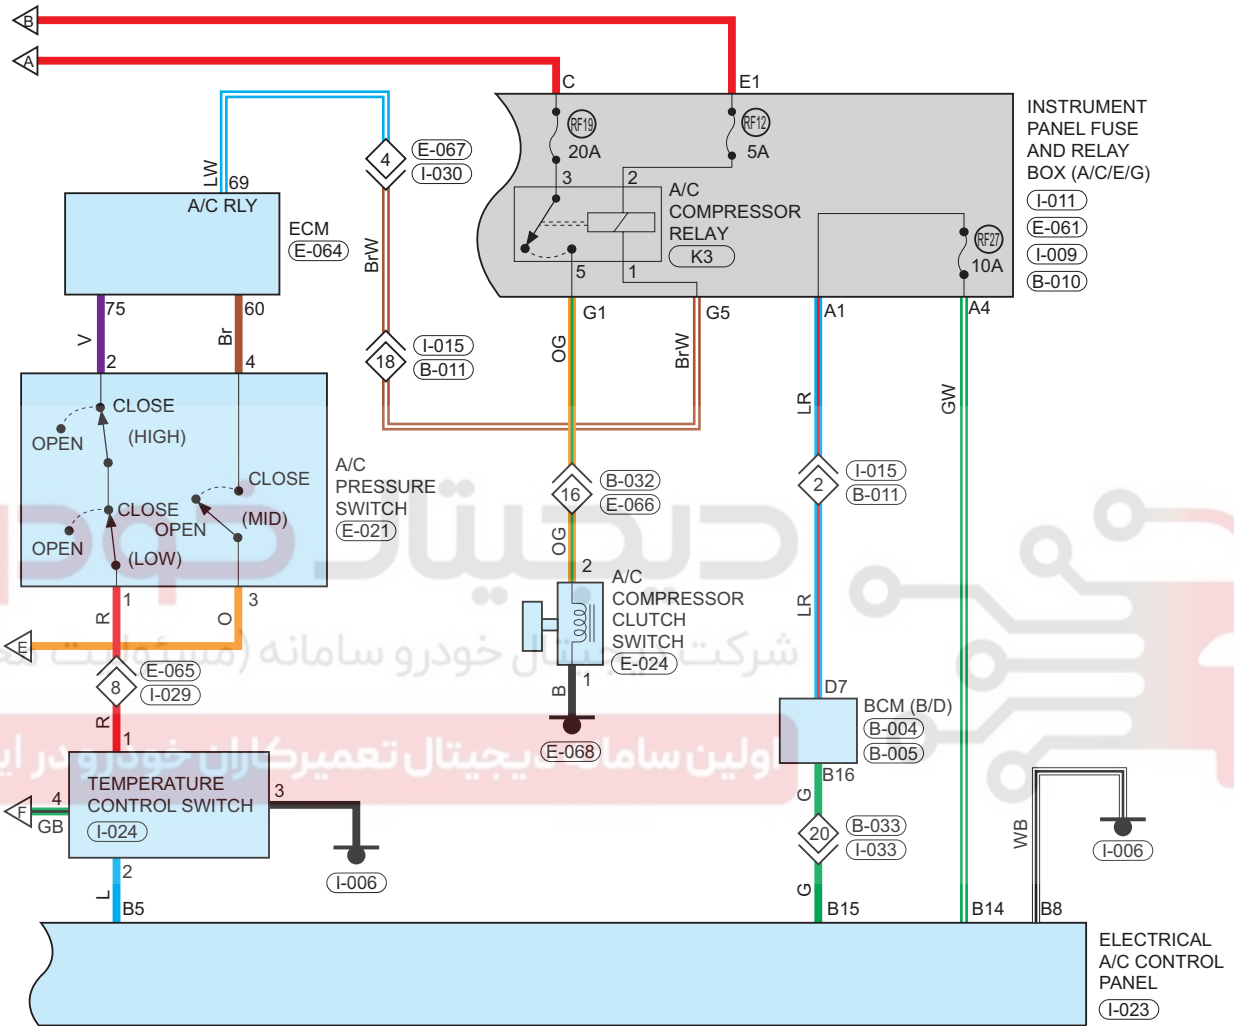

09