


Turn Signal Light

Circuit Diagram (Page 1 of 2)

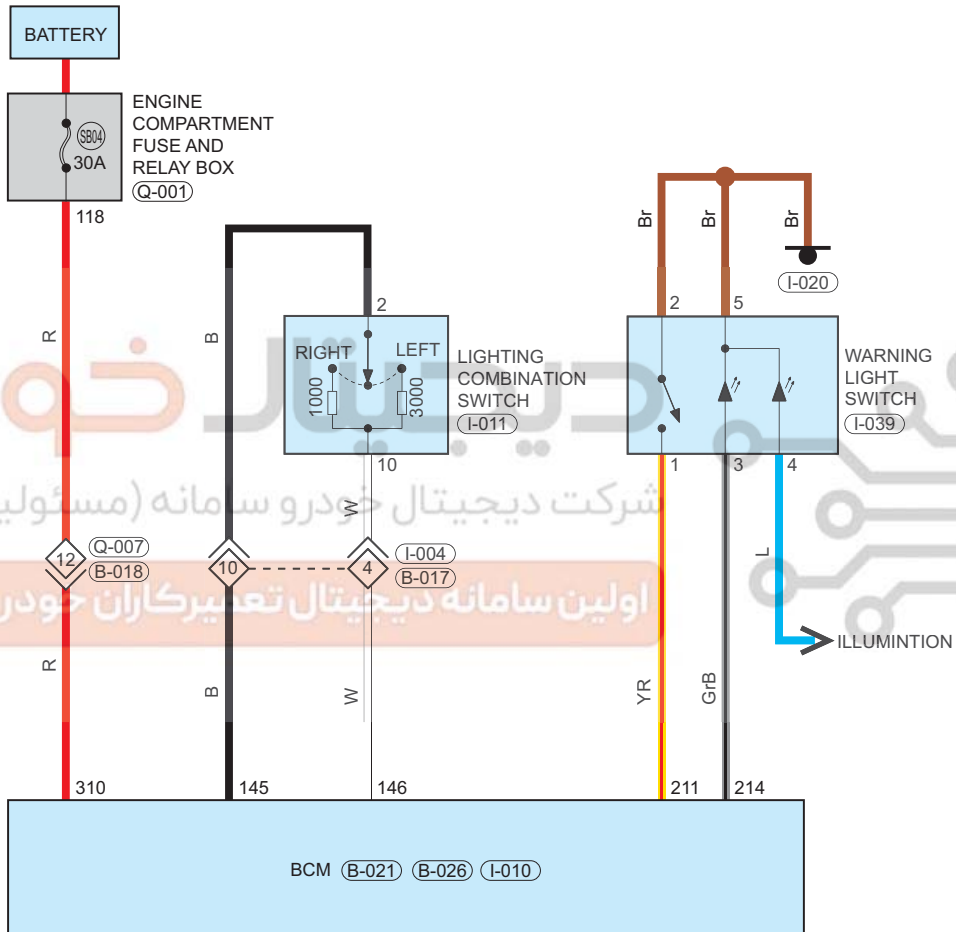

09

LIE011001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-6	I-011	08-12	I-039	08-12
I-020	08-12	I-010	08-12	B-021	08-16
B-026	08-16				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
SB04	06-2	Engine Compartment Fuse and Relay Box

Location of Junction Connector


Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-004, B-017	08-12	Q-007, B-018	08-6		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-16	I-011	12-4	I-039	12-4
I-020	12-4	I-010	12-4	B-021	12-8
B-026	12-8	I-004, B-017	12-4	Q-007, B-018	12-16

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Circuit Diagram (Page 2 of 2)

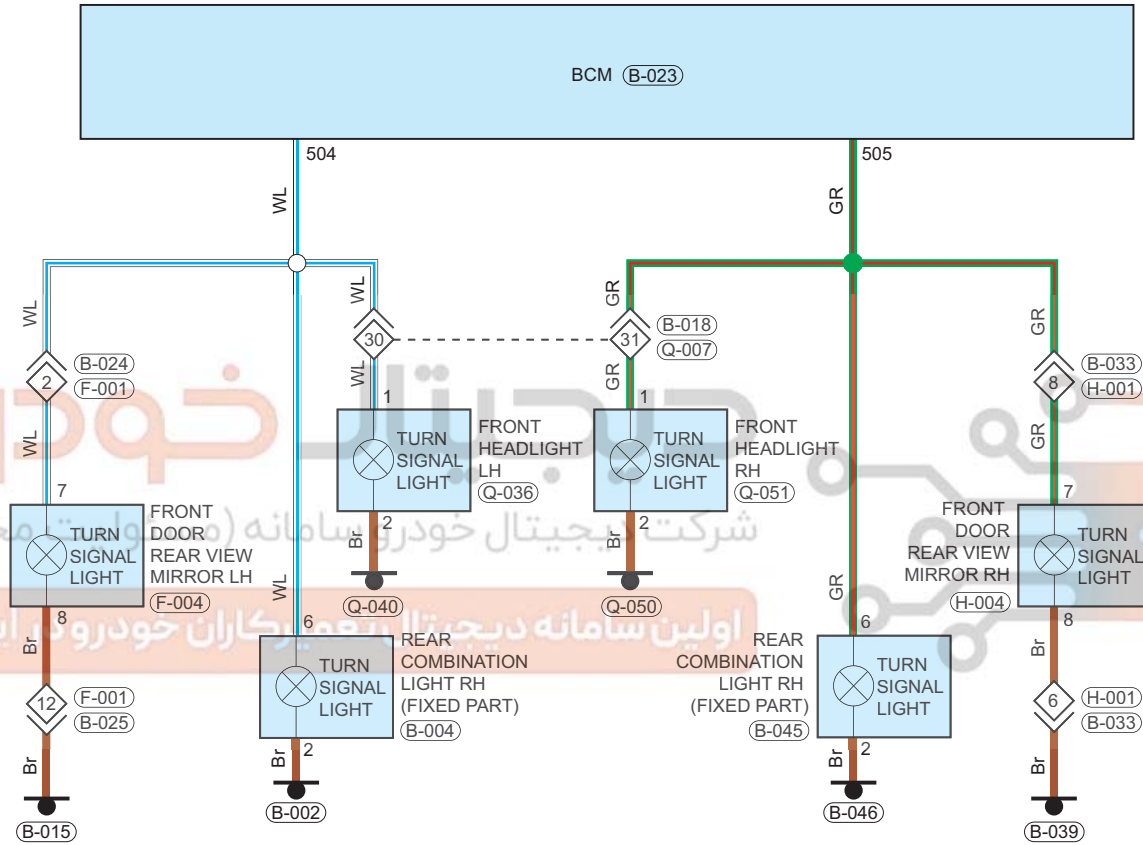

09

LIE012001