




Power Supply, Grounding And Data Line 1 of Body Control Module (BCM)

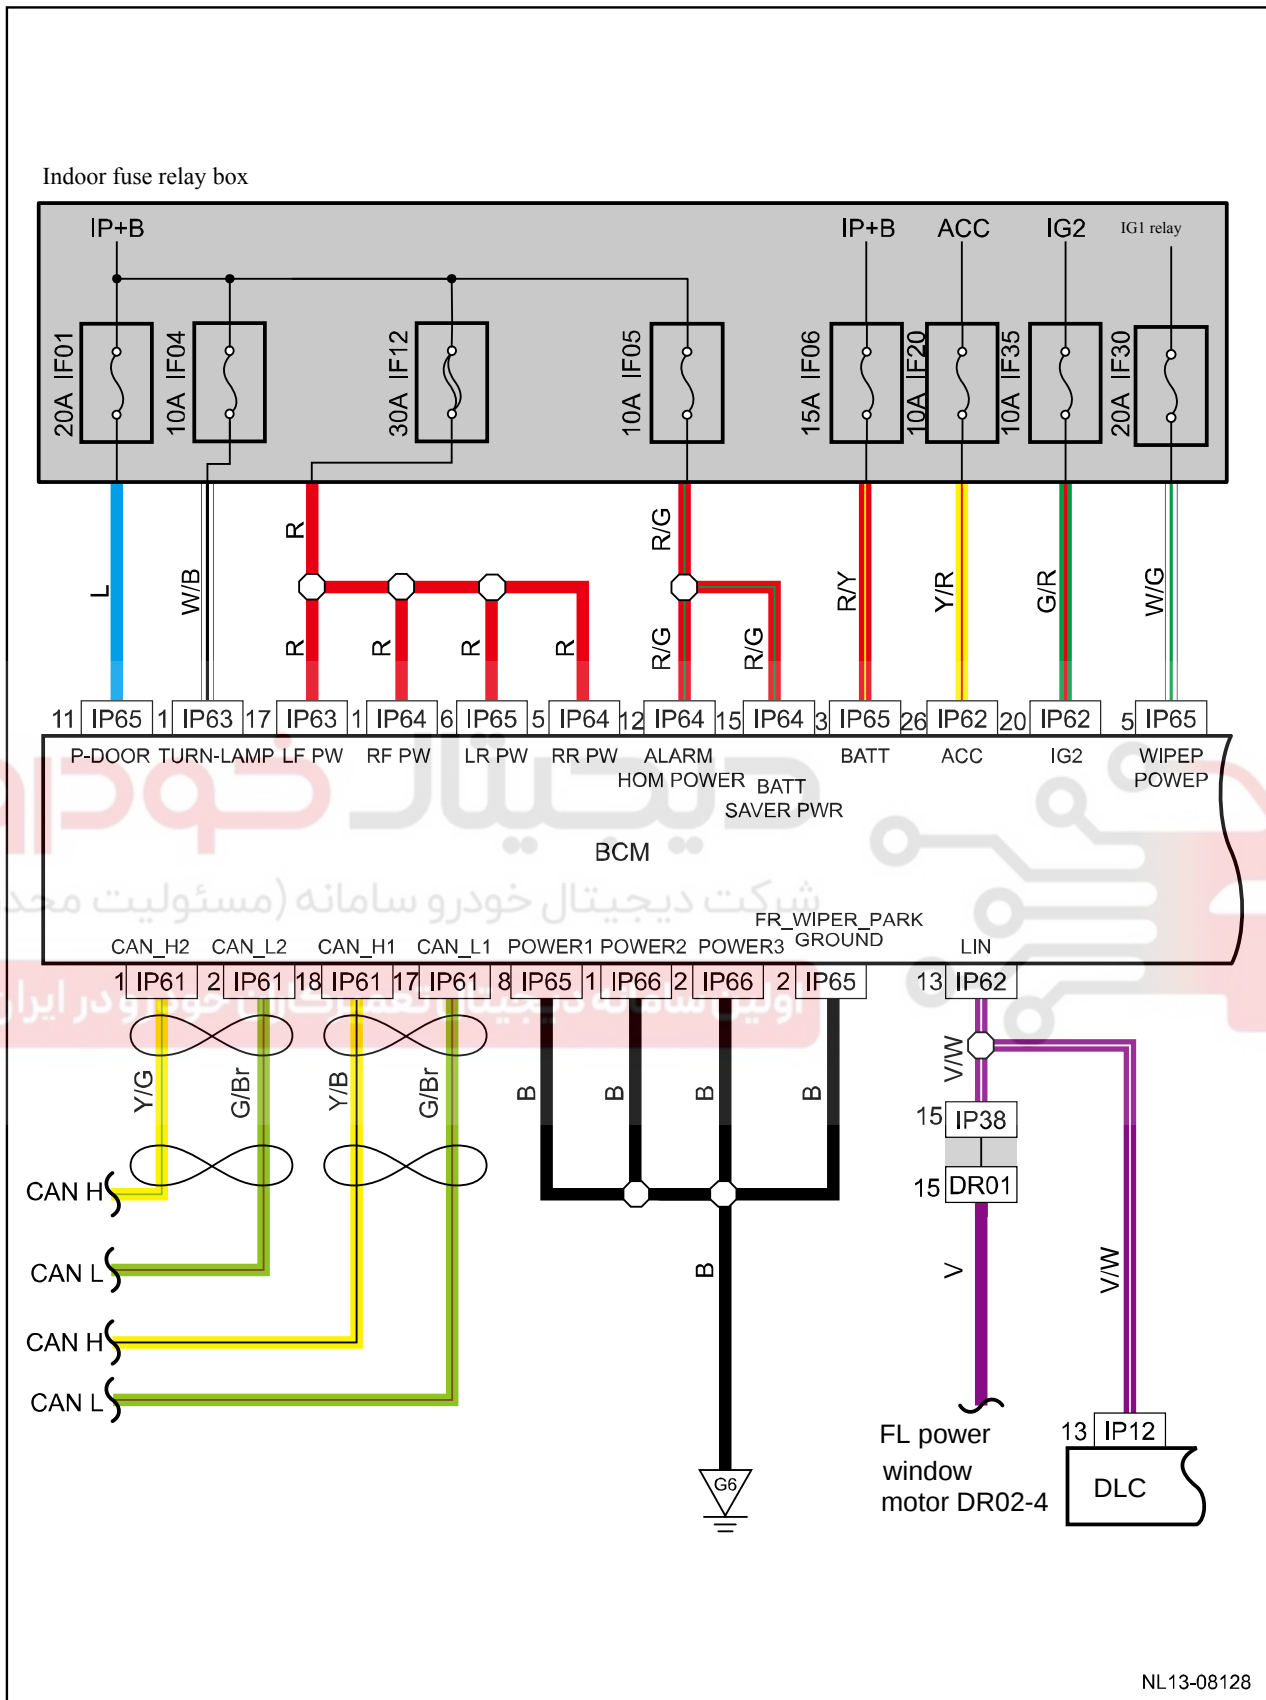


Power Supply, Grounding and Data Line 2 of Body Control Module (BCM)

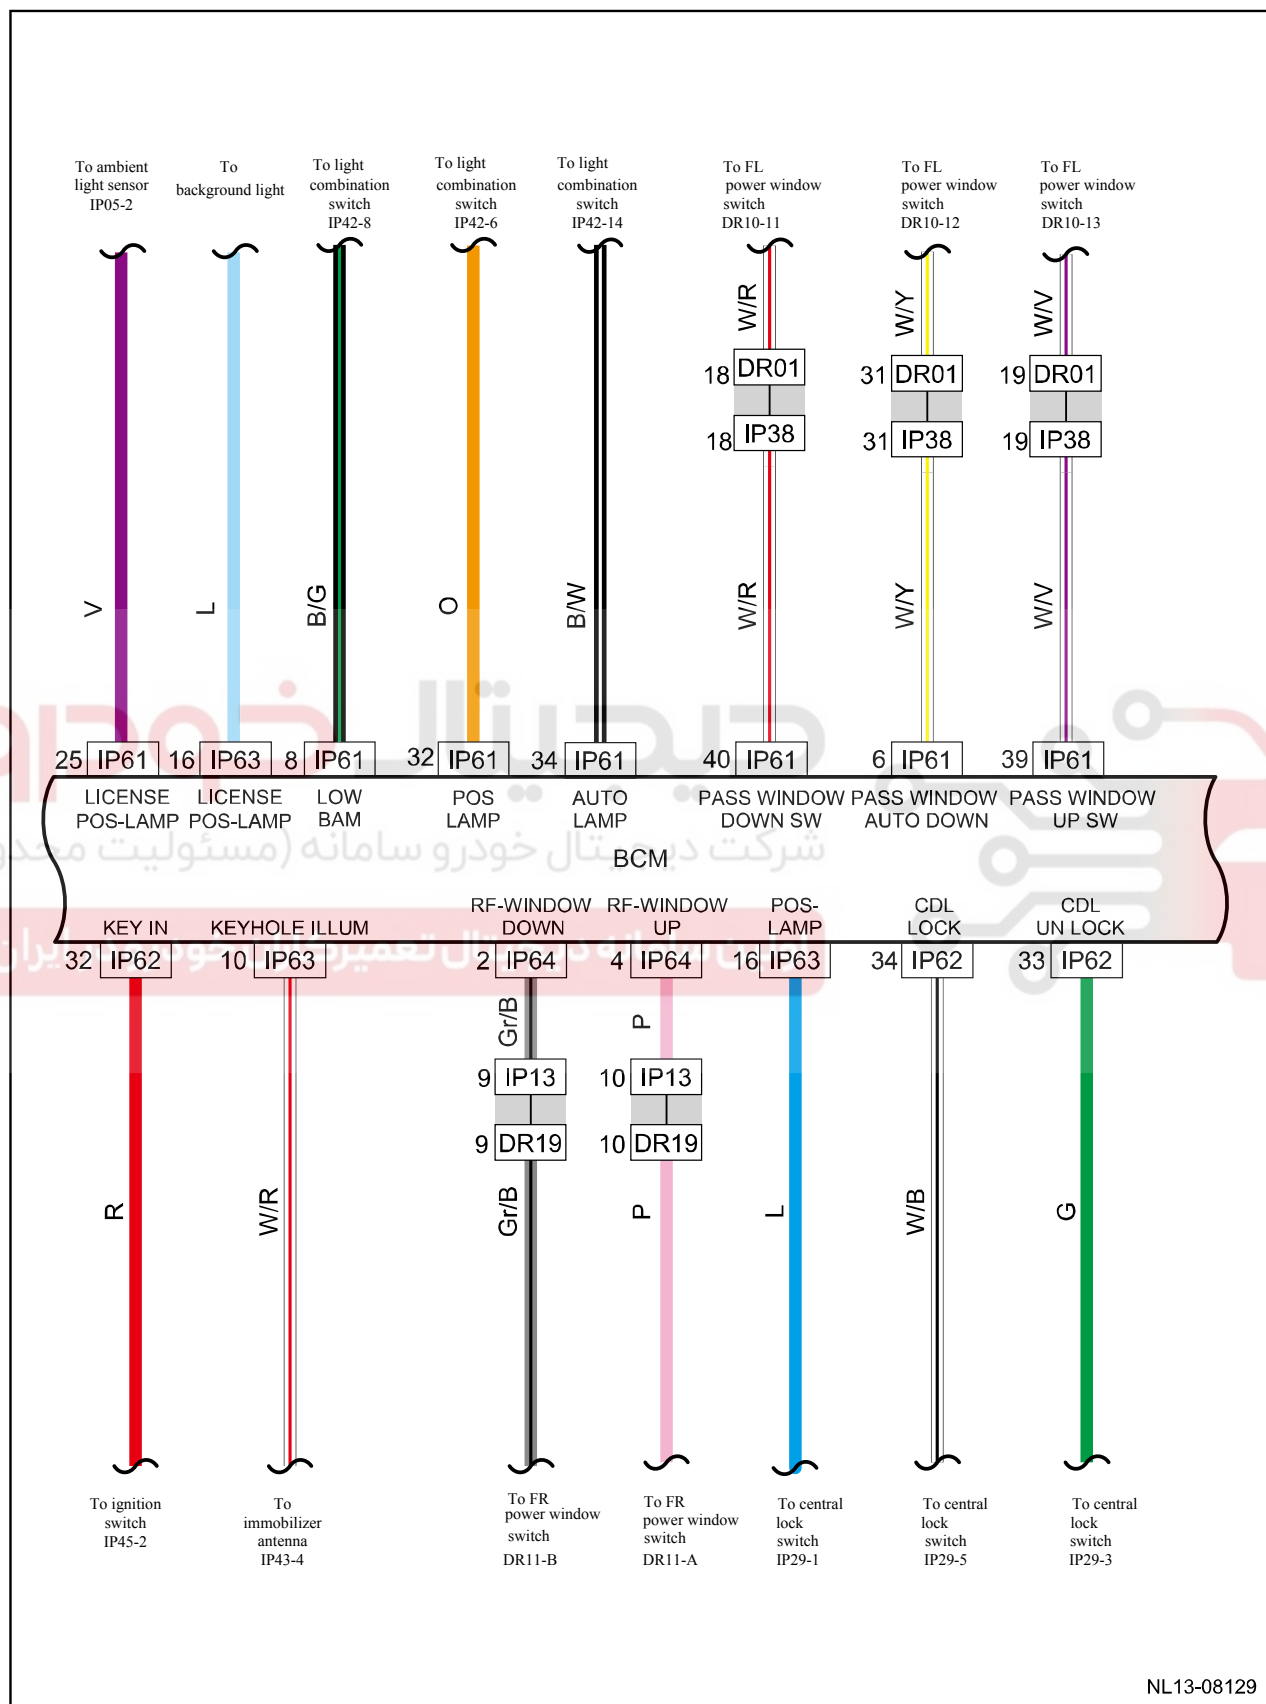

Power Supply, Grounding and Data Line 3 of Body Control Module (BCM)

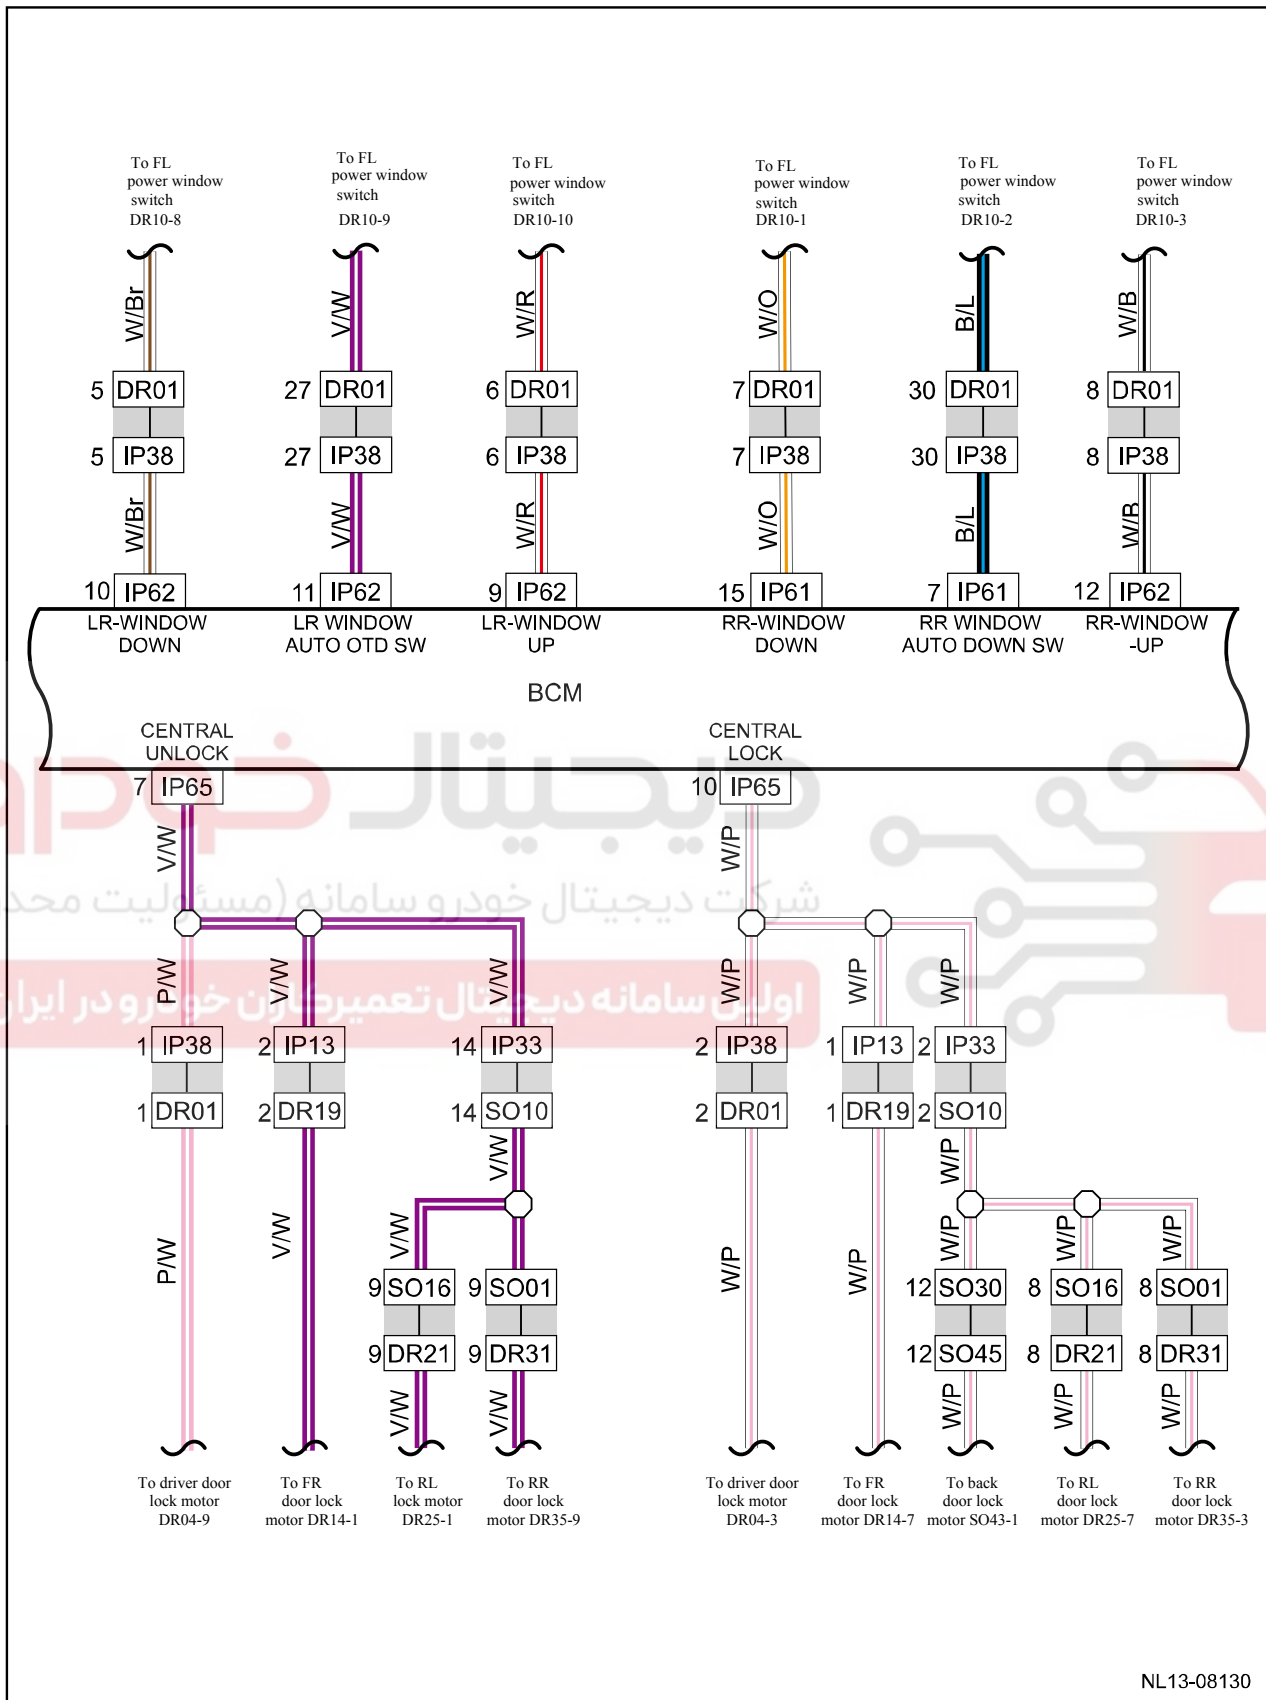


Power Supply, Grounding and Data Line 4 of Body Control Module (BCM)

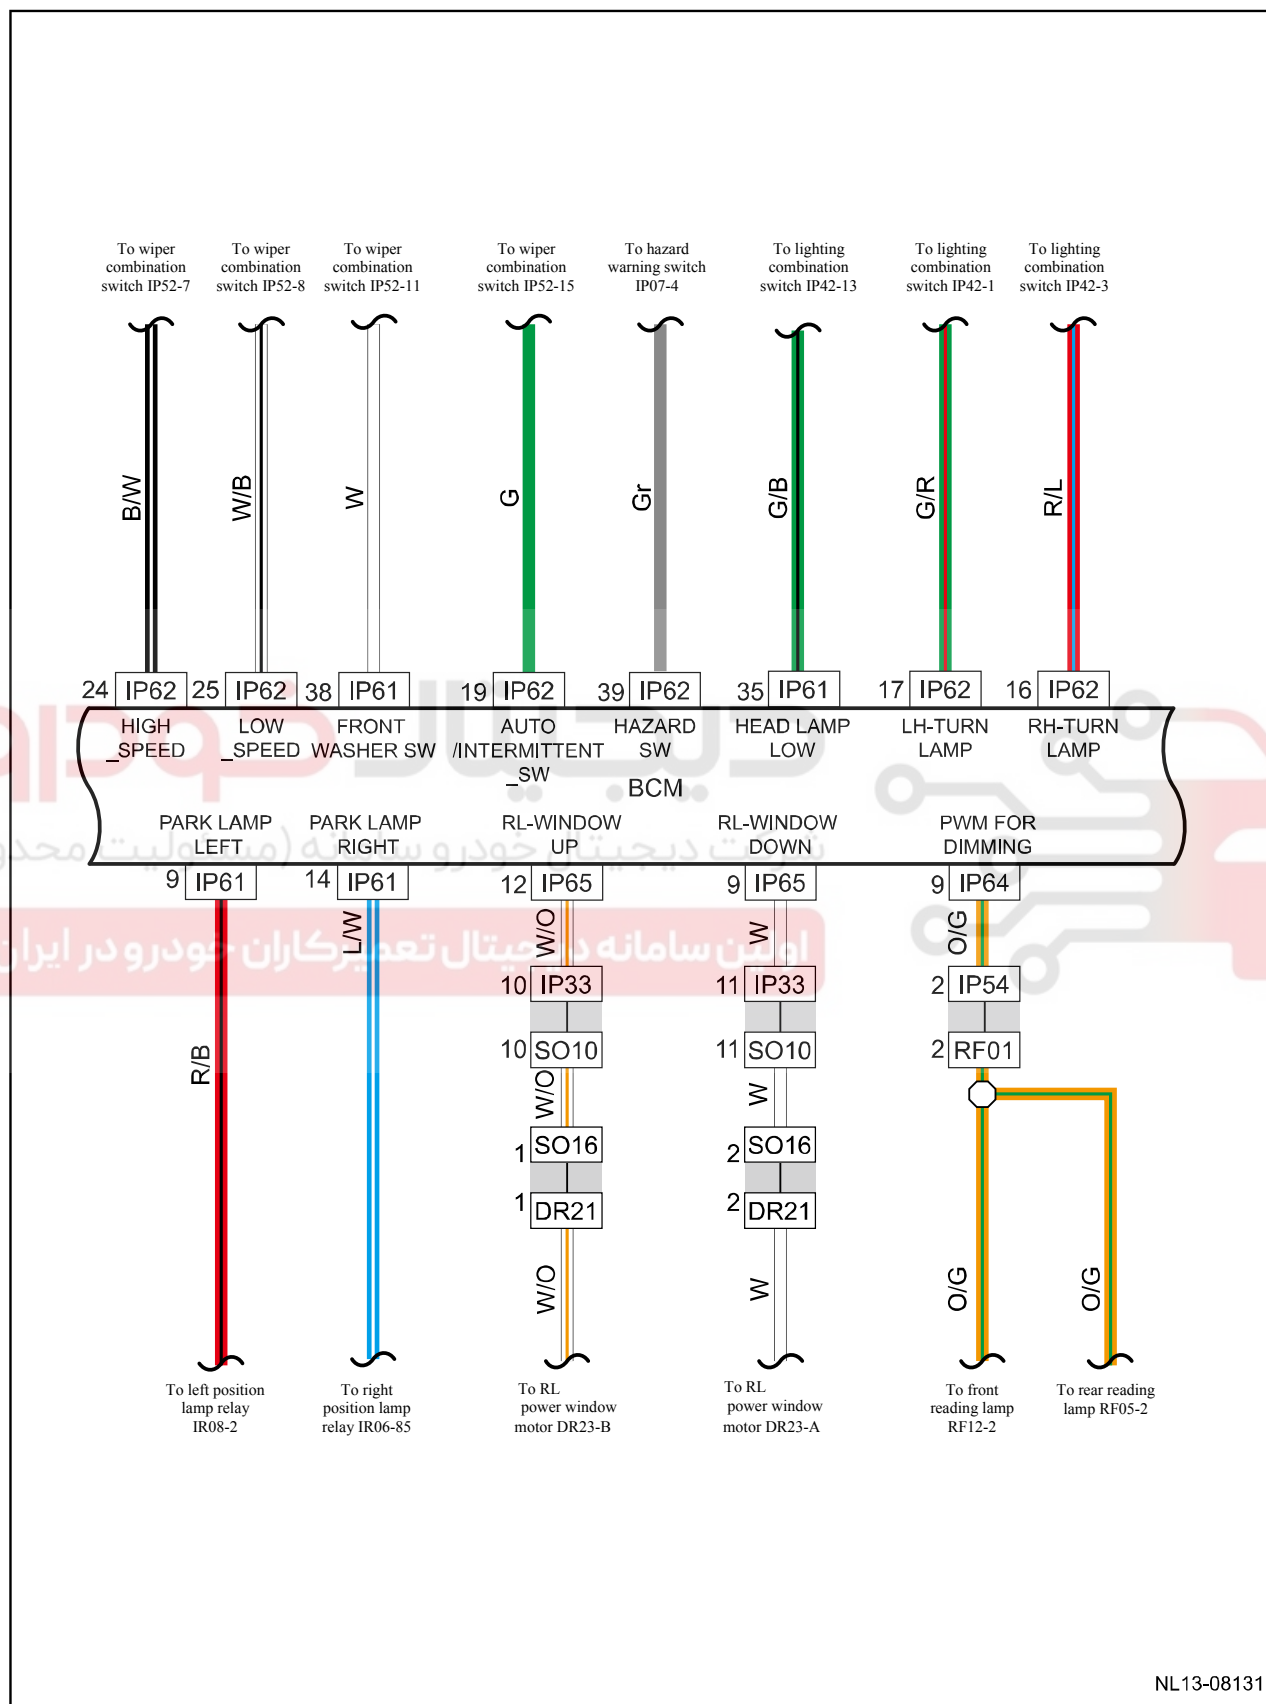

NL13-08131

Power Supply, Grounding and Data Line 5 of Body Control Module (BCM)

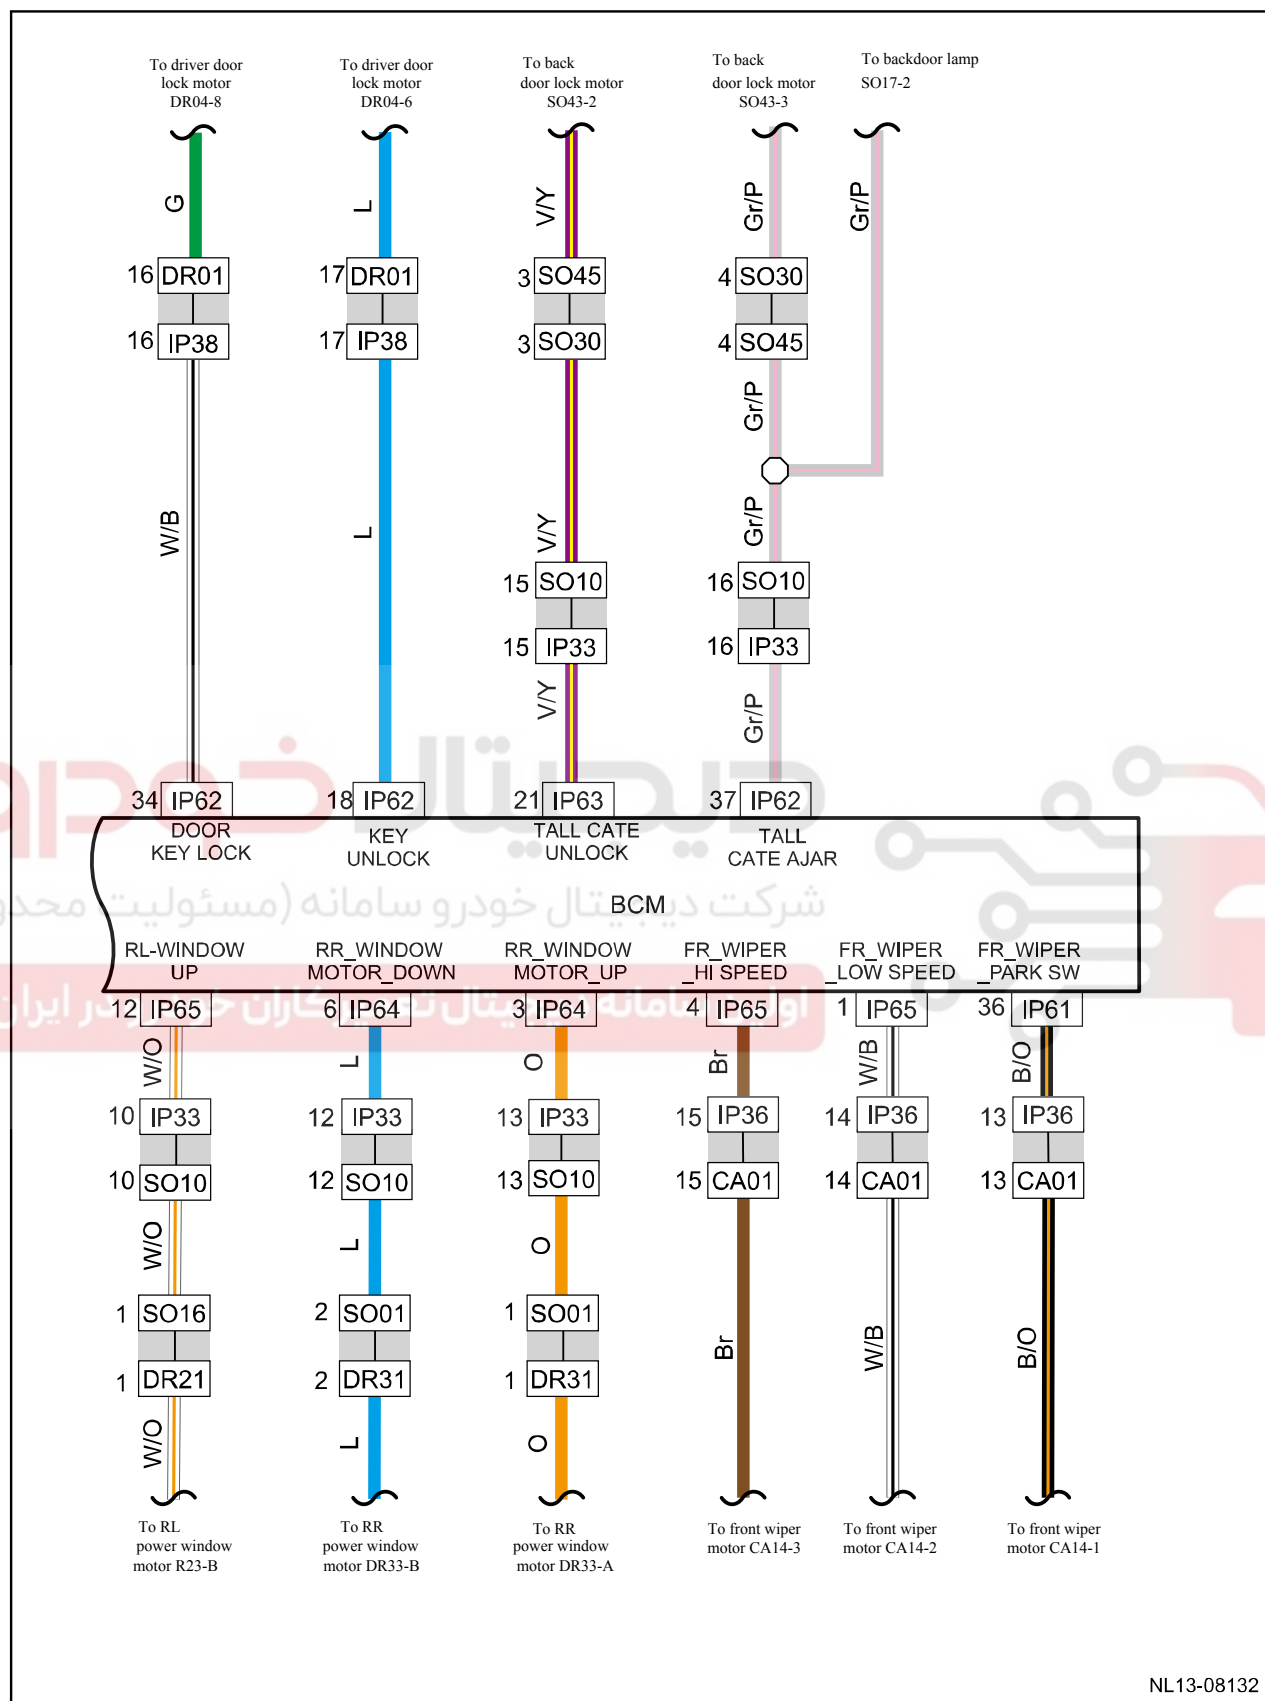

Harness connector	Description	Pages
CA01	To instrument harness connector 1	29
CA02	To instrument harness connector 2	29
DR01	To instrument panel harness connector	58
DR19	Right front door connecting to instrument panel harness connector	60
DR21	RL door connecting to body harness connector	62
DR31	RR door connecting to body harness connector	62
IP12	Harness connector of diagnosis connector	38
IP13	To FR door harness connector	38
IP32	To body harness connector 1	38
IP33	To body harness connector 2	38
IP36	To engine compartment harness connector 2	40
IP37	To engine compartment harness connector 3	40
IP38	To FL door harness connector	40
IP61	Body control module harness connector 1	40
IP62	Body control module harness connector 2	41
IP63	Body control module harness connector 3	40
IP64	Body control module harness connector 4	41
IP65	Body control module harness connector 5	41
IP66	Body control module harness connector 6	41
IP54	To roof harness connector 1	40
RF01	To instrument harness connector 1	47
SO01	To RR door harness connector 1	50
SO09	To instrument panel harness connector 2	50
SO10	To instrument panel harness connector 3	50
SO16	To RL door harness connector	50
SO30	To back door harness connector	50
SO45	To body harness connector	51
G6	Instrument panel grounding	70