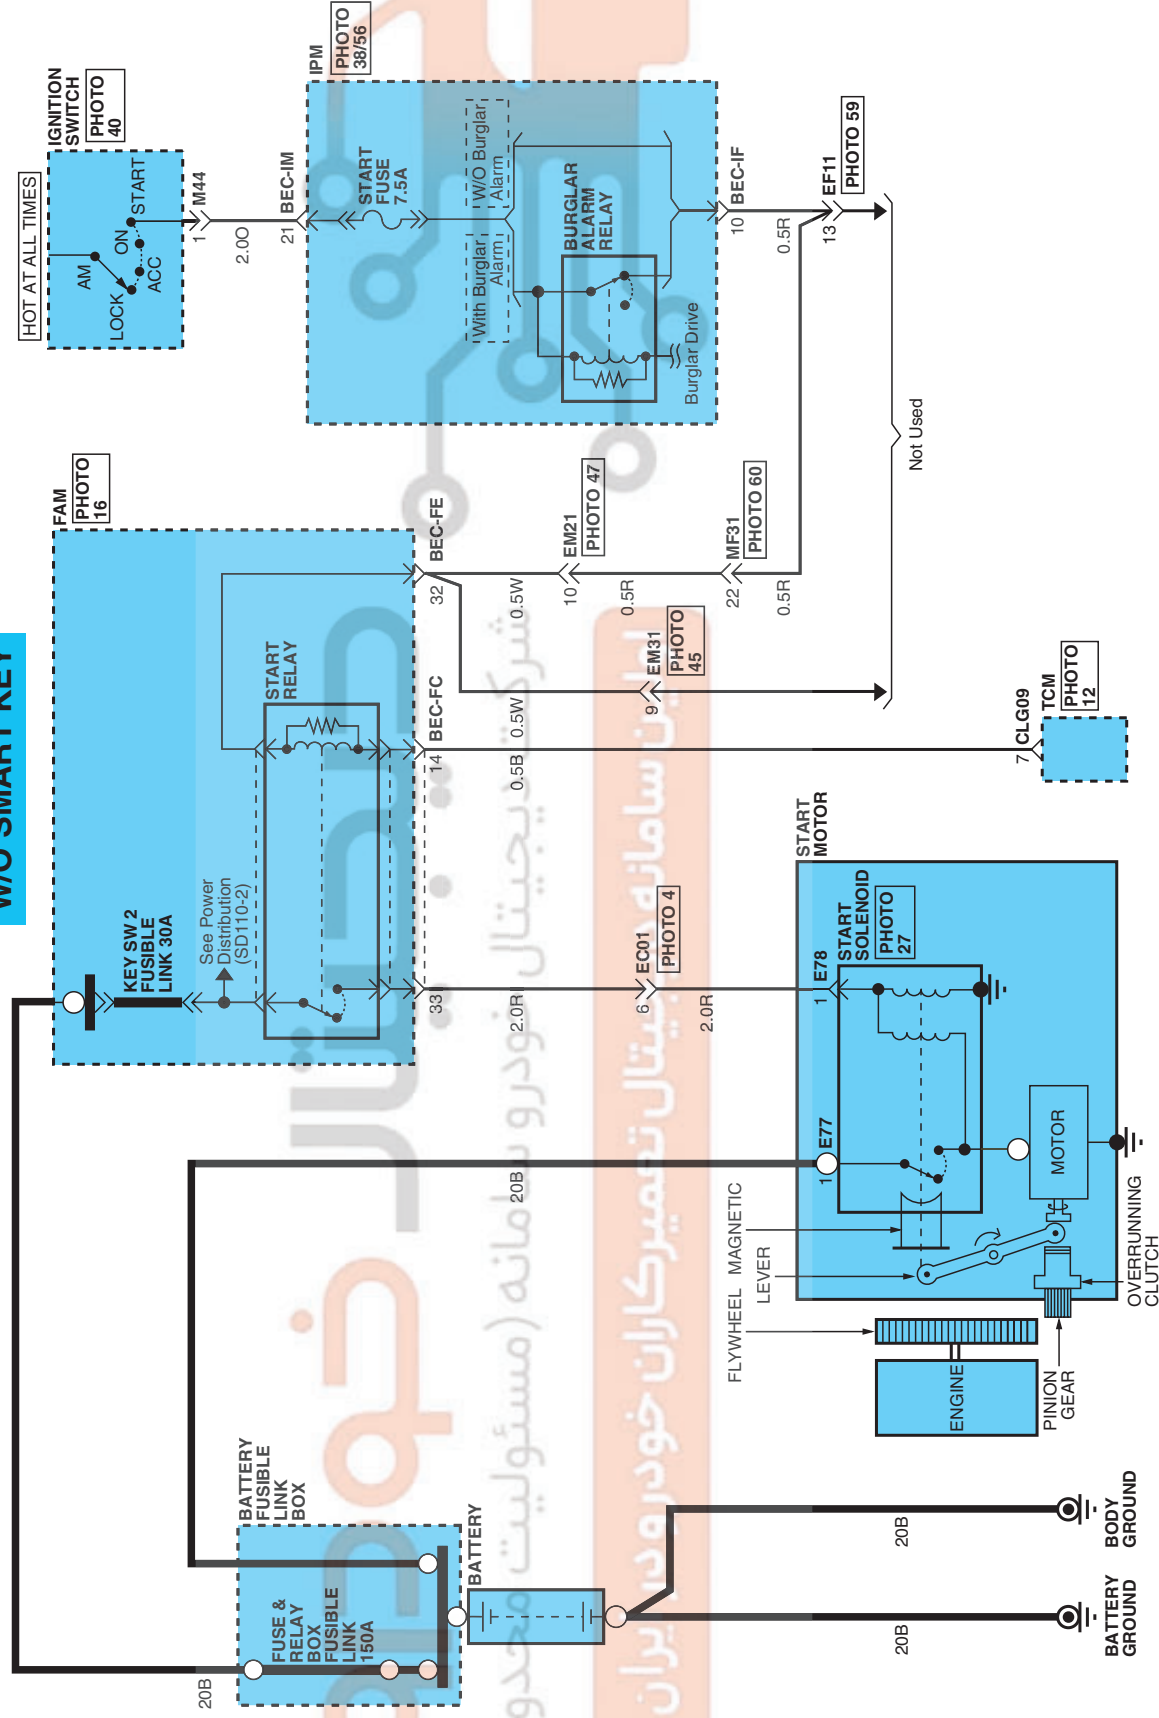


STARTING SYSTEM

Starting System (2)

SD360-2

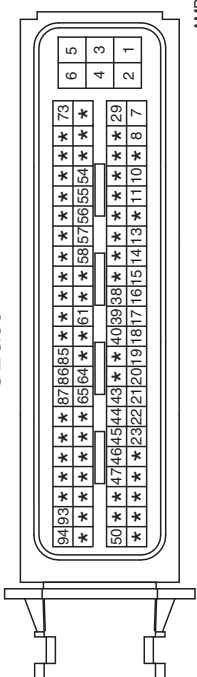

 
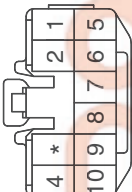
 
 
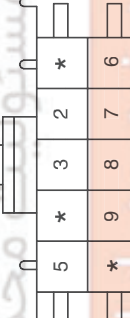
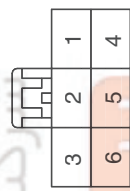
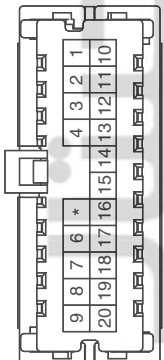

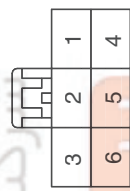
W/O SMART KEY



STARTING SYSTEM

Starting System (3)

SD360-3

<p><b>CLG09</b></p>  <p>AMP_ECU_94F_B</p>	<p><b>E77</b></p>  <p>CHT_BATALT_01F_N</p>	<p><b>E78</b></p>  <p>KET_58X_01F_B</p>
<p><b>M04-A</b></p>  <p>KET_090II_10F_W</p>	<p><b>M08-B</b></p>  <p>AMP_0925_14F_W</p>	<p><b>M11-A</b></p>  <p>AMP_0407_26F_W_HD</p>
<p><b>M15</b></p>  <p>YAZ_SP_10F_W</p>	<p><b>M44</b></p>  <p>KUM_DSD_06F_W</p>	<p><b>BLANK</b></p>
<p><b>M04-B</b></p>  <p>KET_040III_20F_W</p>	<p><b>M22</b></p>  <p>MLX_025_10F_B</p>	<p><b>M44</b></p>  <p>KUM_DSD_06F_W</p>