


Windshield/Window Glass

Circuit Diagram (Page 1 of 4)

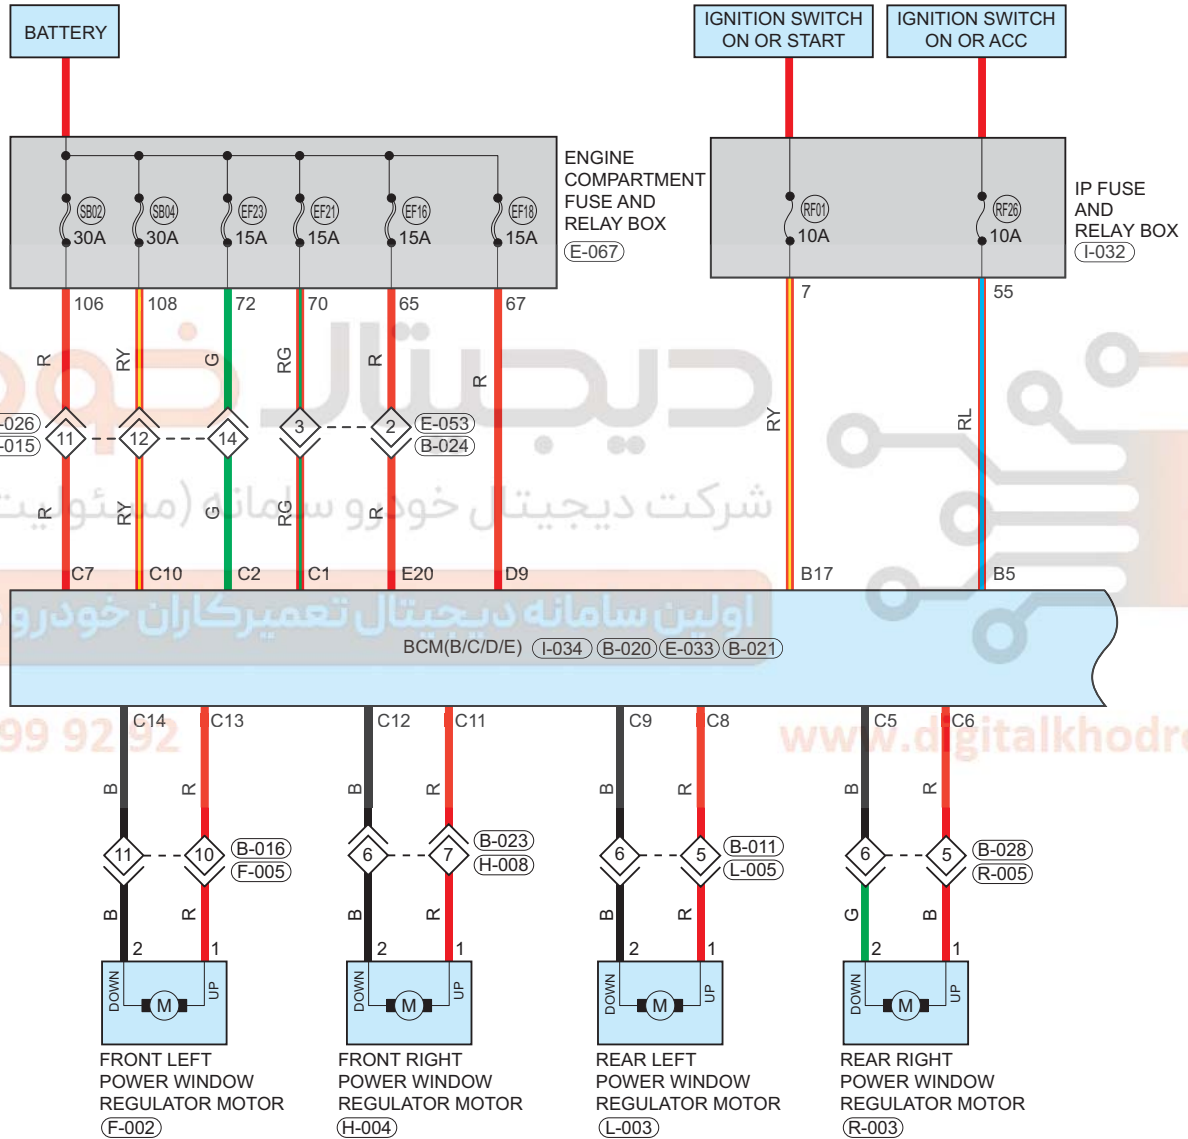

02 09

www.digitalkhodro.com

EA13T090700

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	08-5 (MT) 08-7 (AT)	I-032	08-10	I-034	08-10
B-020	08-12	E-033	08-5 (MT) 08-7 (AT)	B-021	08-12
F-002	08-14	H-004	08-15	L-003	08-16
R-003	08-17				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF01	06-10	IP Fuse and Relay Box
RF26	06-10	IP Fuse and Relay Box
EF16	06-2	Engine Compartment Fuse and Relay Box
EF18	06-2	Engine Compartment Fuse and Relay Box
EF21	06-2	Engine Compartment Fuse and Relay Box
EF23	06-2	Engine Compartment Fuse and Relay Box
SB02	06-2	Engine Compartment Fuse and Relay Box
SB04	06-2	Engine Compartment Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-026, B-015	08-5, 08-12 (MT) 08-7, 08-12 (AT)	E-053, B-024	08-5, 08-12 (MT) 08-7, 08-12 (AT)	B-016, F-005	08-12, 08-14
B-023, H-008	08-12, 08-15	B-011, L-005	08-12, 08-16	B-028, R-005	08-12, 08-17


Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	12-6	I-032	12-9	I-034	12-9
B-020	12-11	E-033	12-3	B-021	12-11
F-002	12-13	H-004	12-13	L-003	12-14
R-003	12-14	E-026, B-015	12-3	E-053, B-024	12-5
B-016, F-005	12-11	B-023, H-008	12-12	B-011, L-005	12-10
B-028, R-005	12-12				

Circuit Diagram (Page 2 of 4)

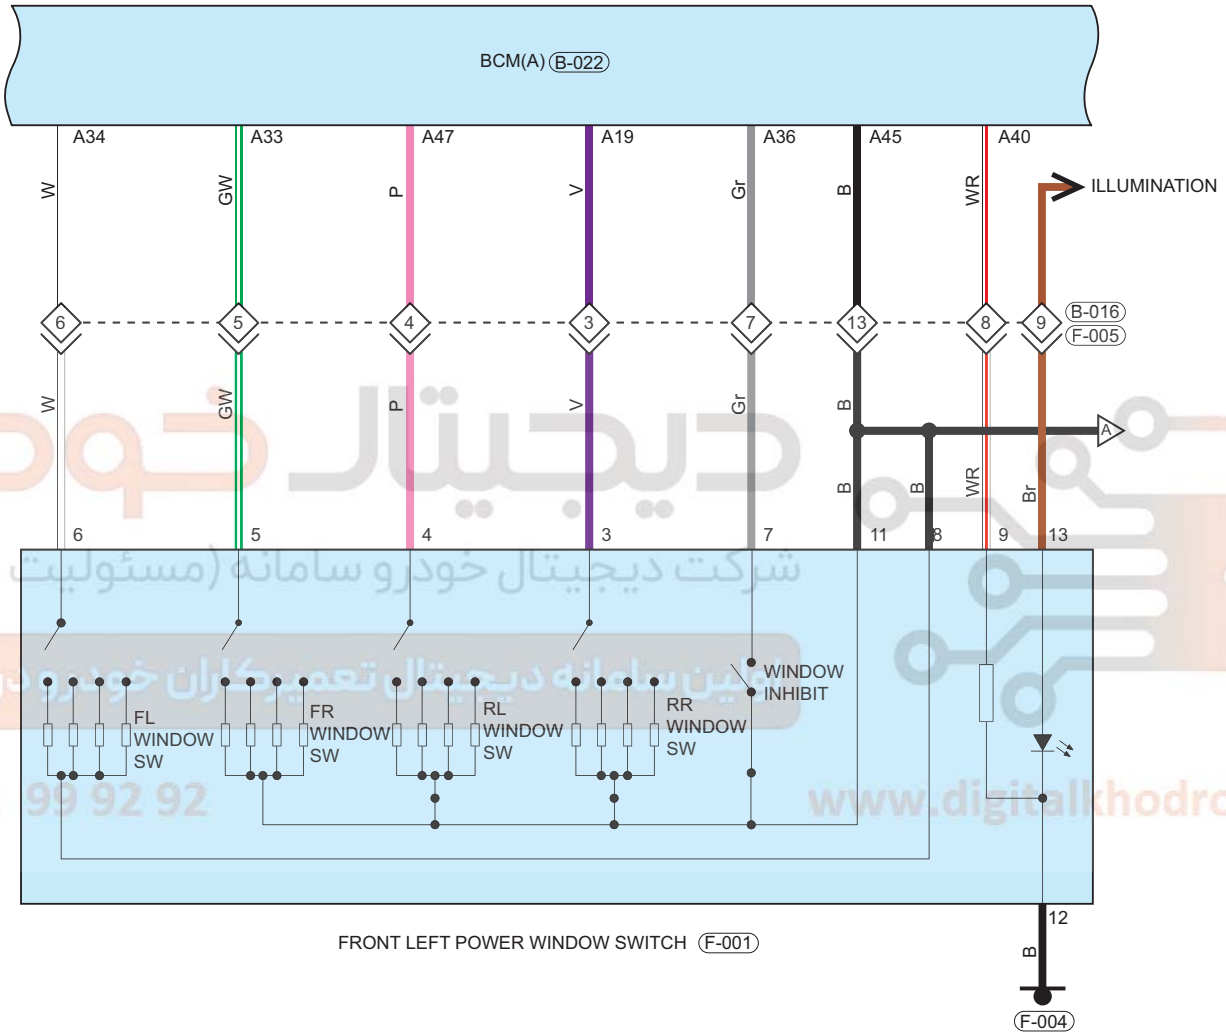

02 09

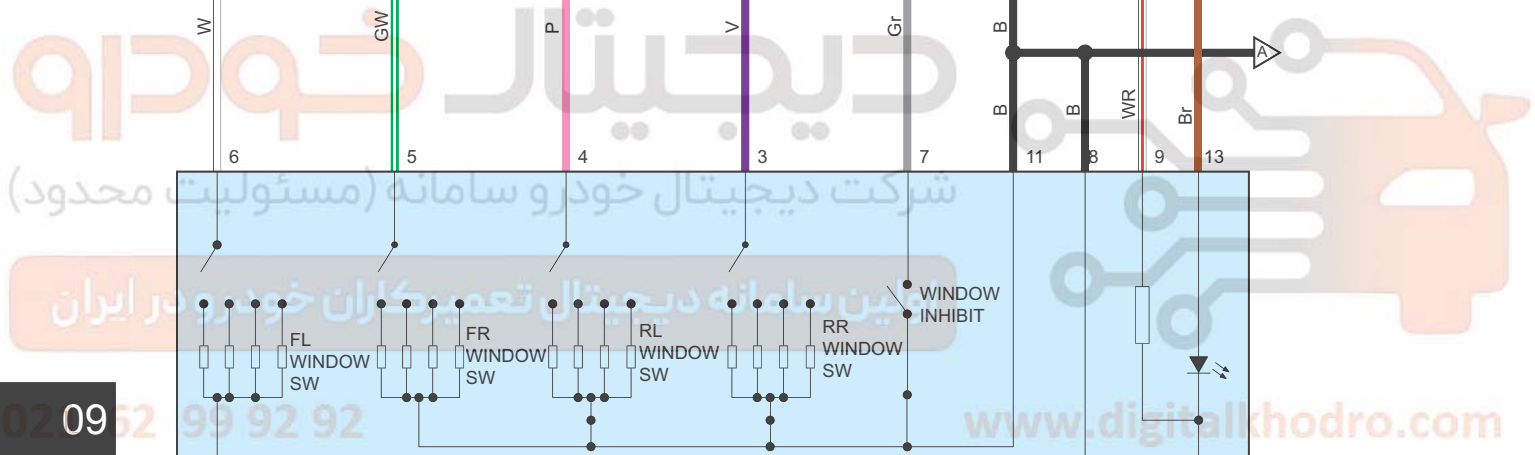

EA13T090710

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-022	08-12	F-001	08-14	F-004	08-14

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-016, F-005	08-12, 08-14				


Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-022	12-11	F-001	12-13	F-004	12-13
B-016, F-005	12-11				

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

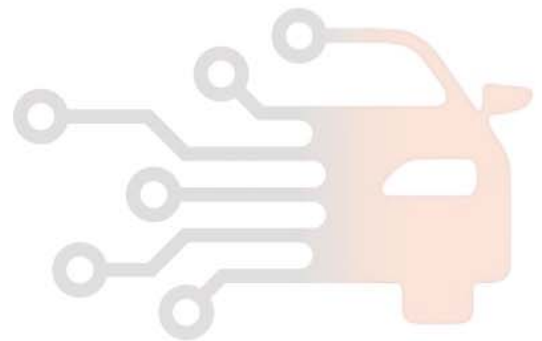

021 62 99 92 92

www.digitalkhodro.com 09m

Circuit Diagram (Page 3 of 4)

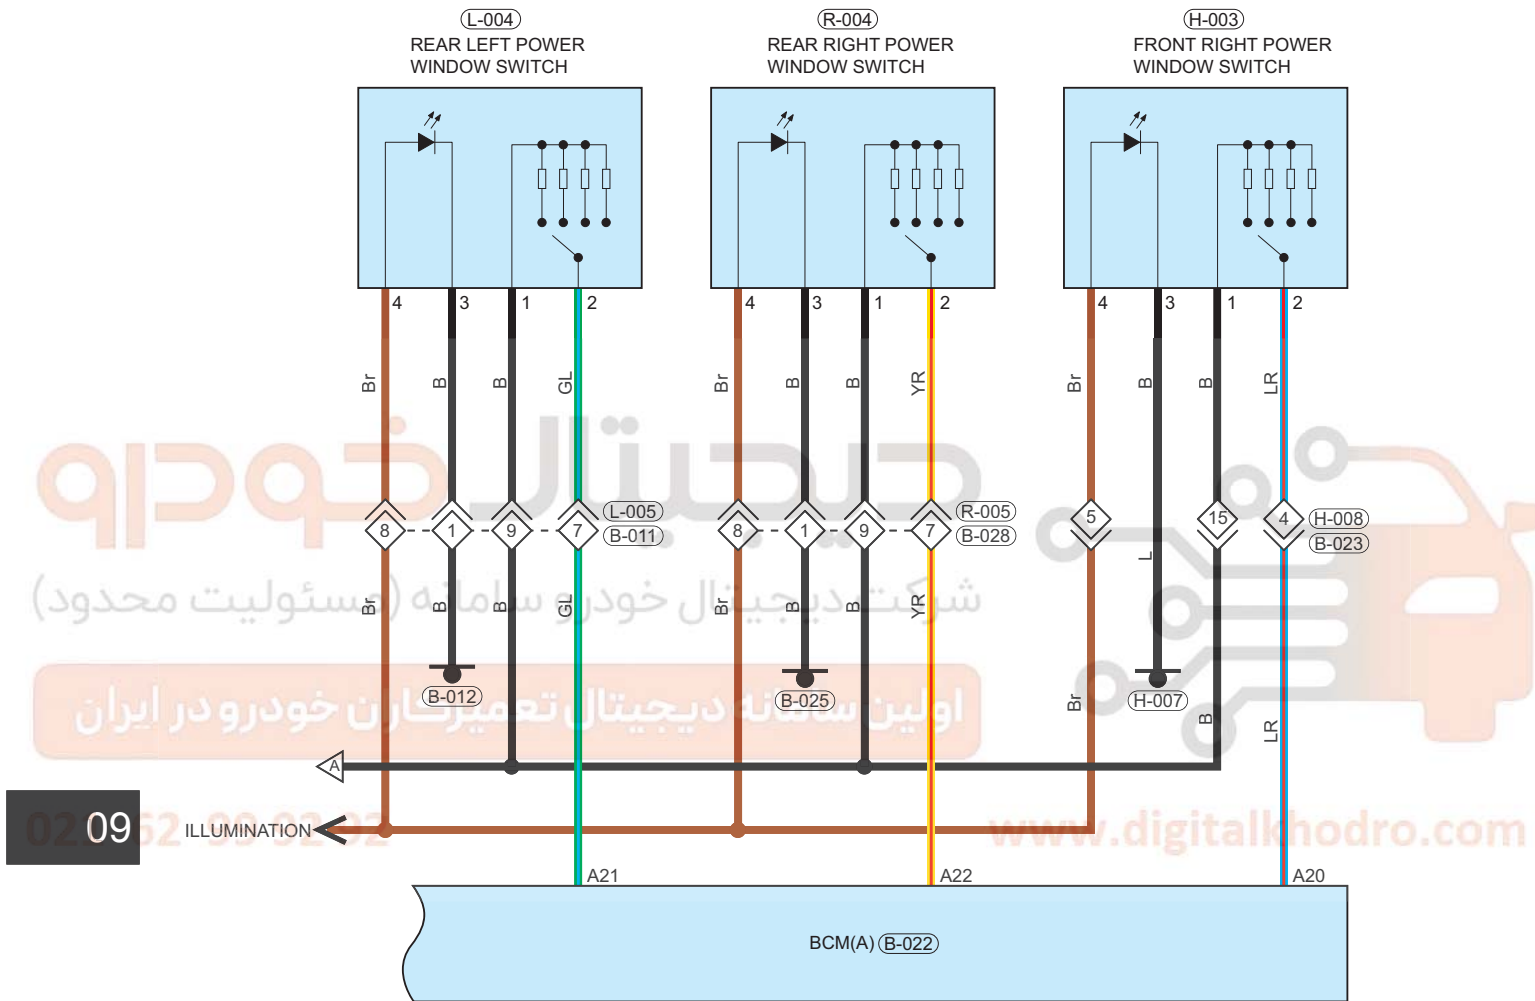

EA13T090720

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
L-004	08-16	R-004	08-17	H-003	08-15
B-012	08-12	B-025	08-12	H-007	08-15
B-022	08-12				

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
L-005, B-011	08-16, 08-12	R-005, B-028	08-17, 08-12	H-008, B-023	08-15, 08-12

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
L-004	12-14	R-004	12-14	H-003	12-13
B-012	12-10	B-025	12-12	H-007	12-13
B-022	12-11	L-005, B-011	12-14	R-005, B-028	12-14
H-008, B-023	12-13				

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

021 62 99 92 92

www.digitalkhodro.com 09

