


Fuse & Relay

Engine Compartment Fuse and Relay Box

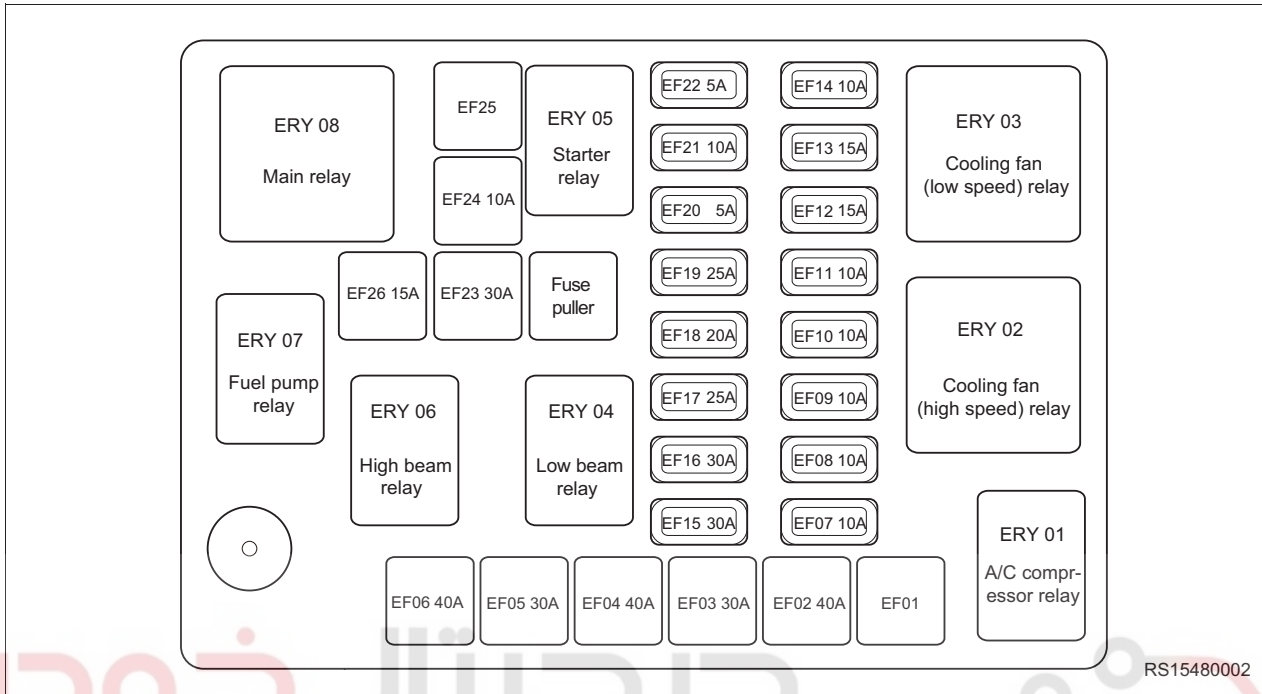

No.	Description	No.	Description
EF01	-	EF14	ECM
EF02	Ignition Switch	EF15	Blower
EF03	BCM	EF16	Starter Motor
EF04	ABS	EF17	ABS
EF05	IP Fuse and Relay Box	EF18	Front Wiper Reset/Instrument Cluster/ Audio
EF06	Cooling Fan (High Speed)	EF19	Rear Defroster Relay
EF07	Right Headlight High Beam	EF20	ABS
EF08	Left Headlight High Beam	EF21	ECM/Blower/Headlight/Combination Switch
EF09	Right Headlight Low Beam	EF22	Back-up Light Switch/Horn Relay
EF10	Left Headlight Low Beam	EF23	Cooling Fan (Low Speed)
EF11	A/C Compressor	EF24	Alternator
EF12	Oxygen Sensor/Ignition Coil/Injector/ Canister Solenoid Valve	EF25	-
EF13	ECM	EF26	Fuel Pump