
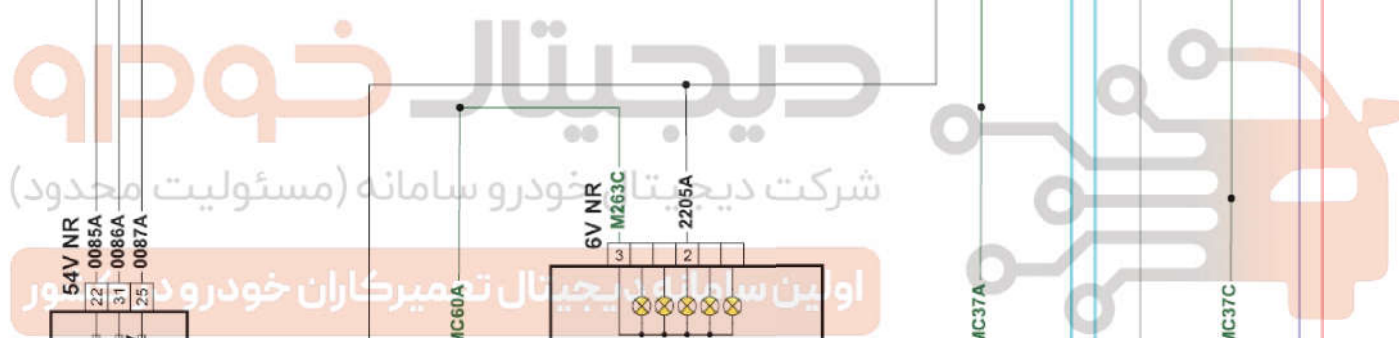


Reversing Lamps

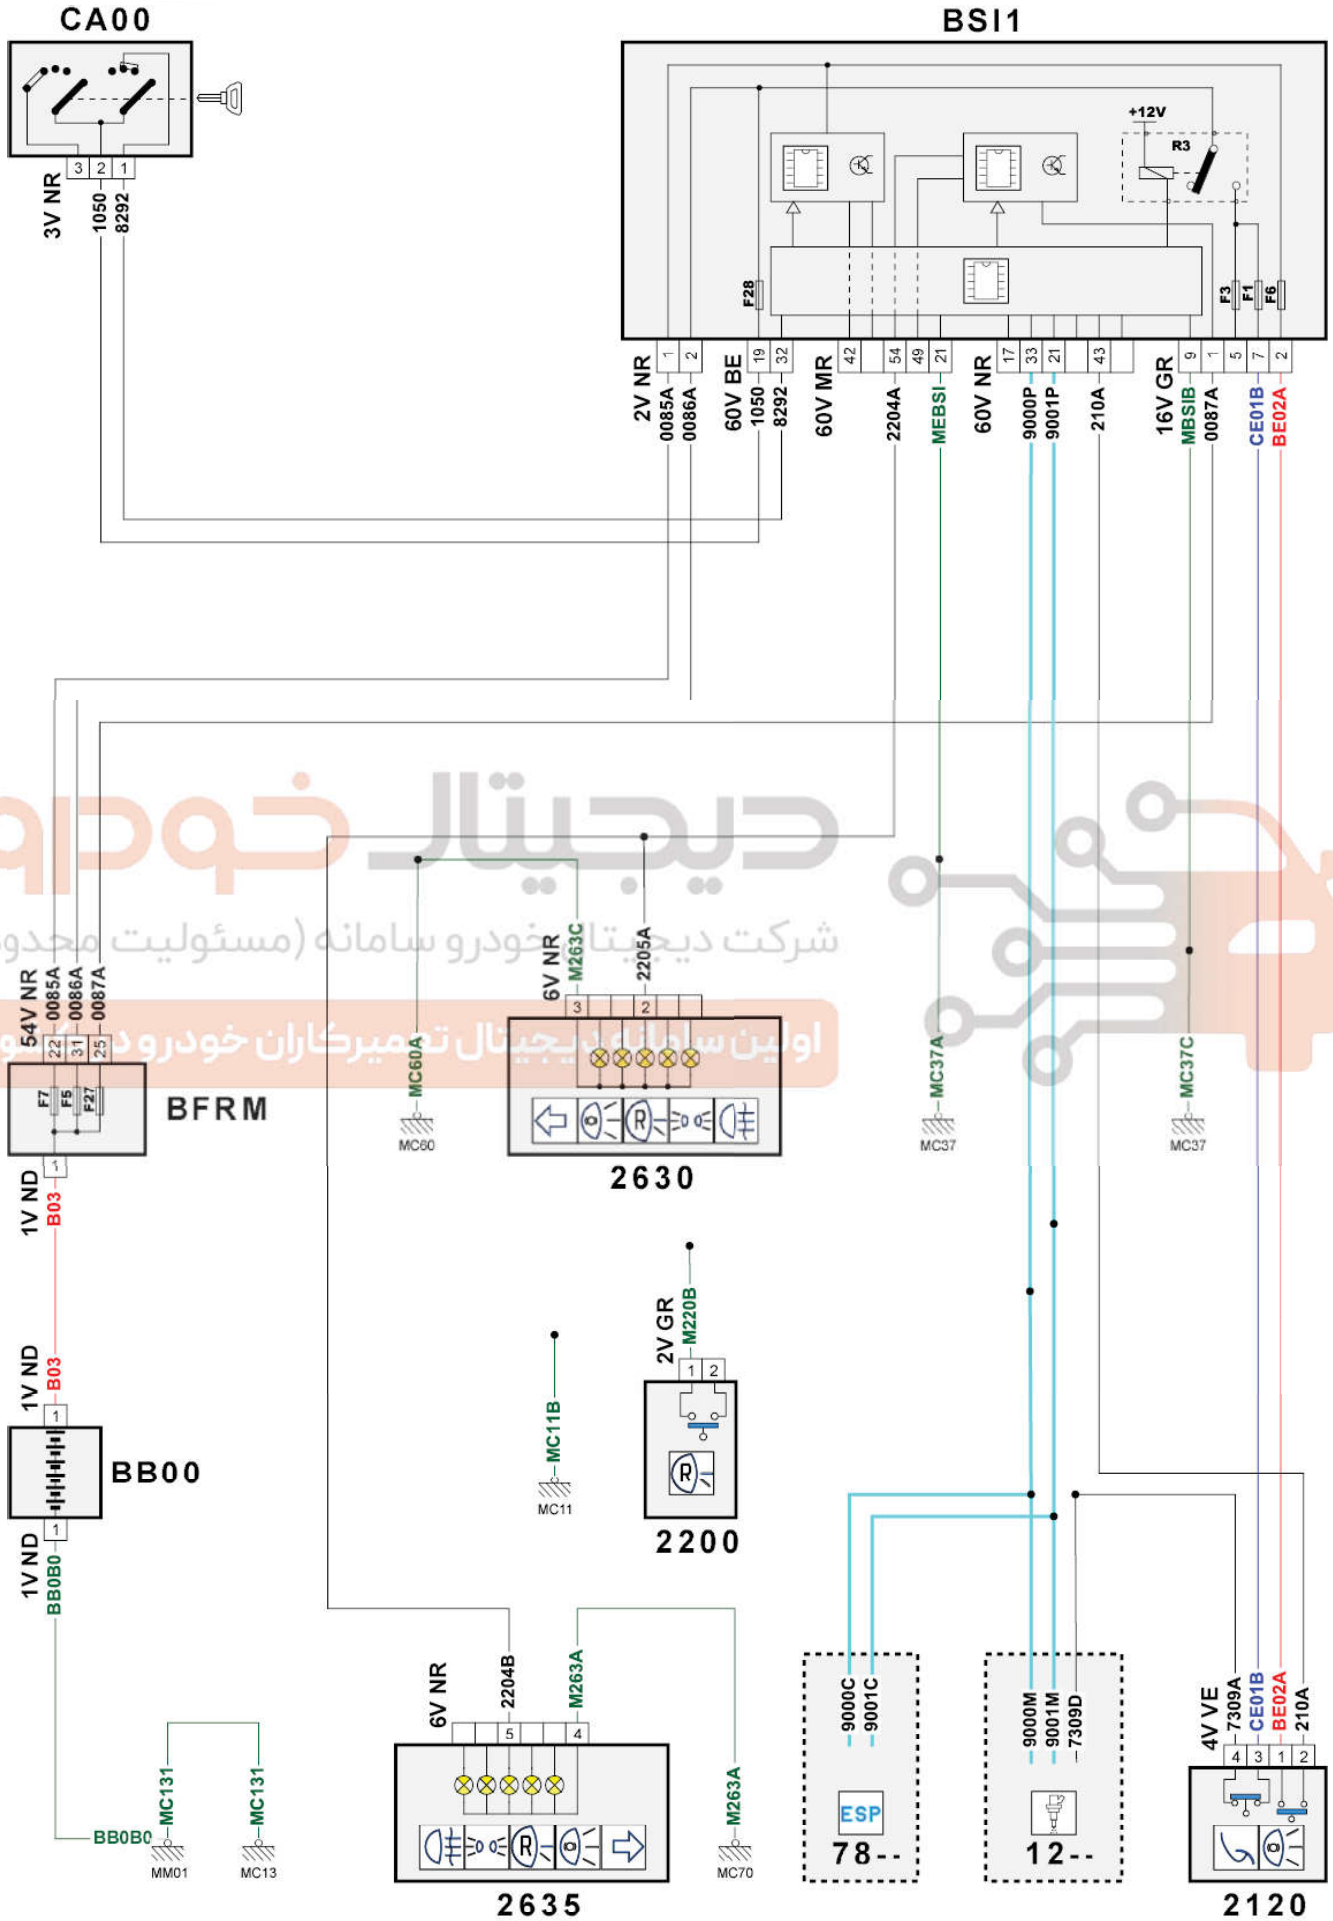

Reversing Lamps

item code	description	information
1320	null	engine ECU /
2120	null	dual function brake switch /
2200	null	reverse lamp switch
2630	null	rear left lamp on body
2635	null	rear right lamp on body
7800	null	calculateur controle de stabilite
BB00	null	ancillaries battery
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E220	null	crimp one information (or equipotential 220) wire
E703A	null	crimp one information (or equipotential 703) wire
E869	null	crimp one information (or equipotential 869) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
EM11A	null	crimp earth (earth point number 11A)
EM37A	null	crimp earth (earth point number 37A)
EM37C	null	crimp earth (earth point number 37C)
EM60A	null	crimp earth (earth point number 60A)
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC37A	null	body earth point number 37A
MC37C	null	body earth point number 37
MC60A	null	body earth point number 60
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01

اولین سامانه دیجیتال تعمیرکاران خودرو در کشور