



## Power rearview mirror control

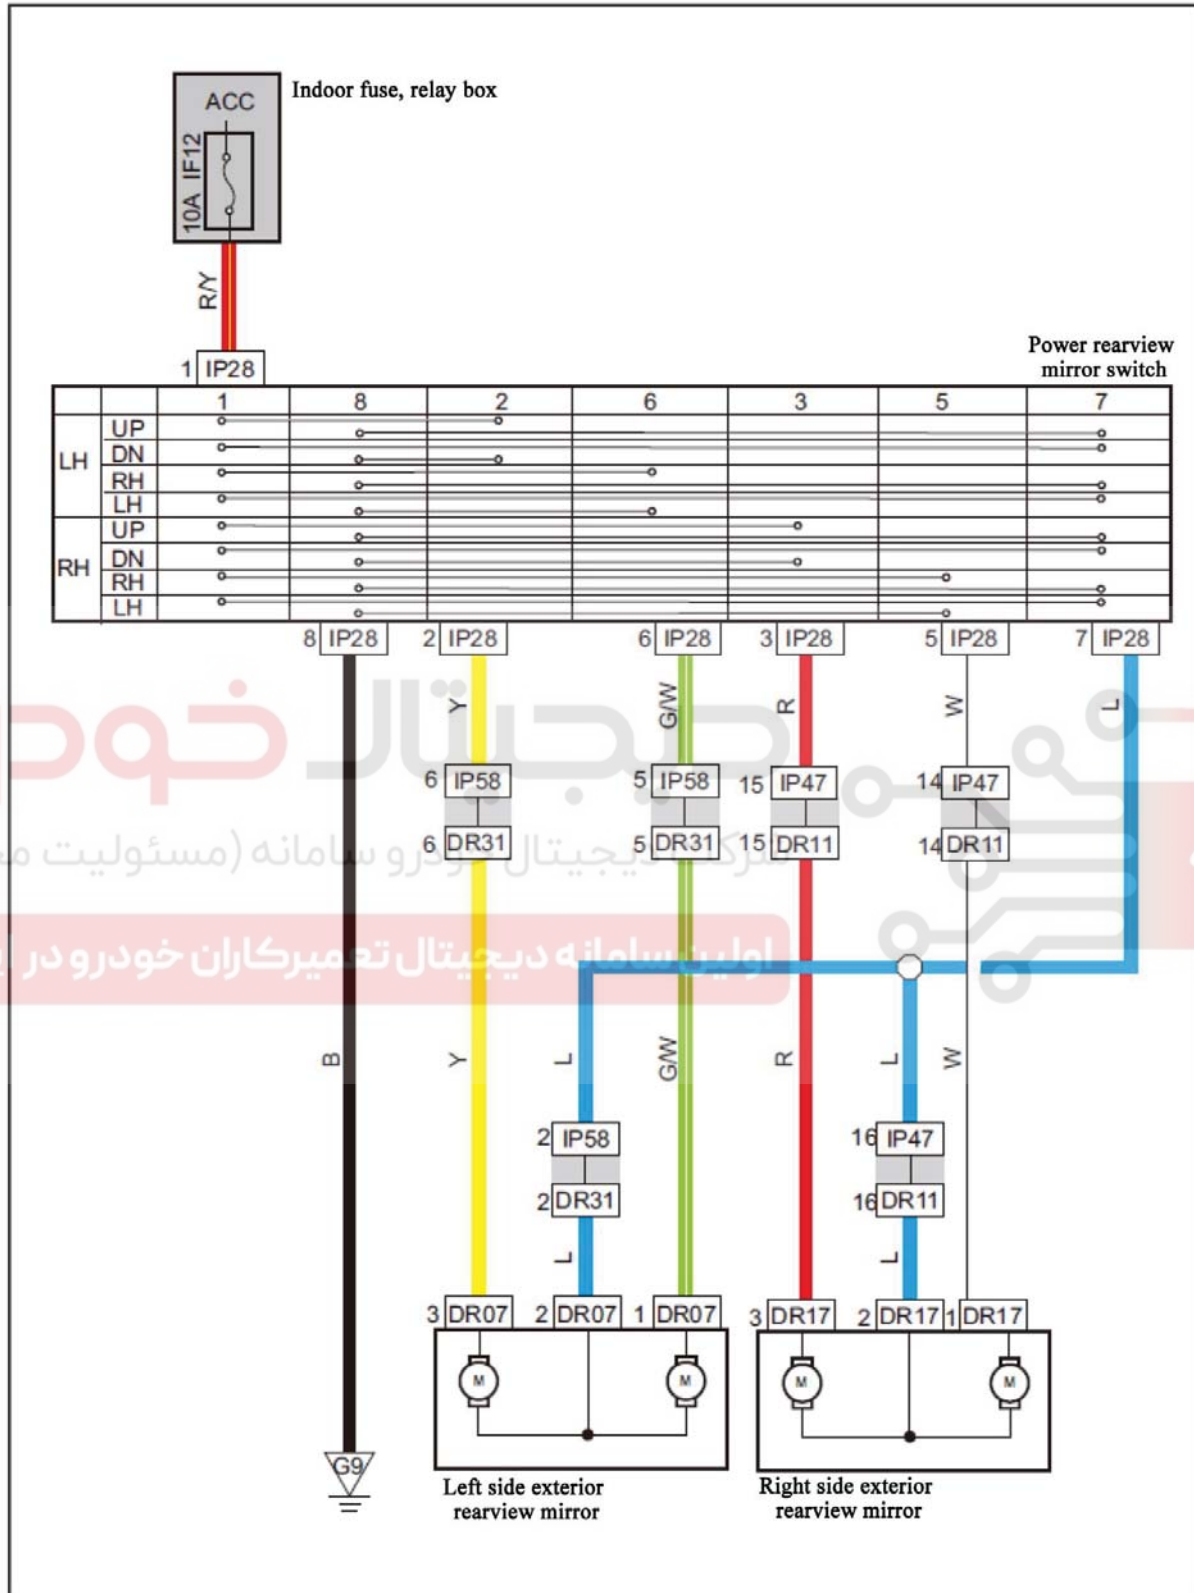

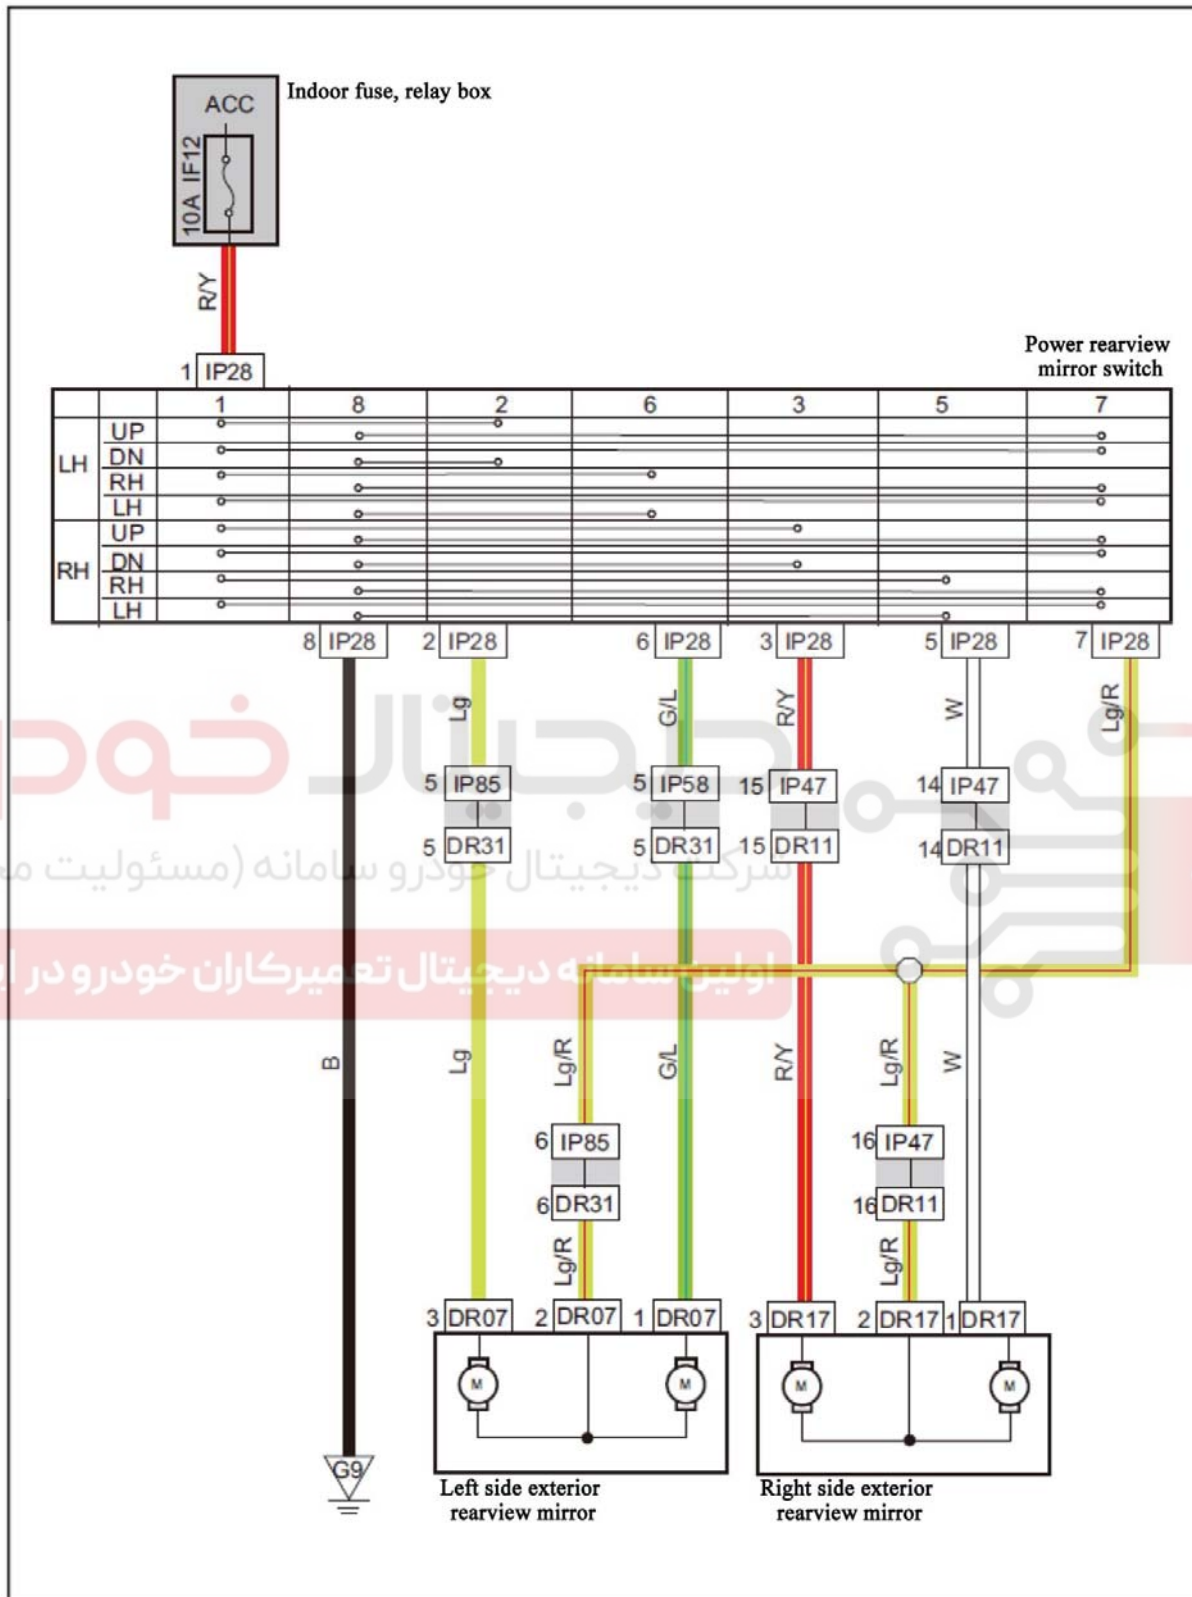

| Harness connector | Name                                                                                 | Page |
|-------------------|--------------------------------------------------------------------------------------|------|
| IP09              | To front left door harness connector A                                               | 54   |
| IP10              | To front left door harness connector B                                               | 54   |
| IP28              | Power rearview mirror switch harness connector                                       | 54   |
| IP47              | To front right door harness connector A                                              | 54   |
| IP85              | To front left door harness connector B (GC6)                                         | 54   |
| IP93              | To front right door harness connector A (New King Kong 2016)                         | 54   |
| DR01              | Driver side door connected to instrument harness connector A                         | 66   |
| DR02              | Driver side door connected to instrument harness connector B                         | 66   |
| DR07              | Left power rearview mirror harness connector                                         | 66   |
| DR11              | Passenger side door connected to instrument harness connector A                      | 71   |
| DR17              | Right power rearview mirror harness connector                                        | 71   |
| DR33              | Driver side door connected to instrument harness B (New King Kong 2016)              | 71   |
| DR37              | Front left power rearview mirror harness connector (New King Kong 2016)              | 71   |
| DR38              | Passenger side door connected to instrument harness connector A (New King Kong 2016) | 71   |
| DR41              | Front right power rearview mirror harness connector (New King Kong 2016)             | 71   |
| G9                | Instrument grounding                                                                 | 84   |

| Connection point | Description    | Page |
|------------------|----------------|------|
| DR37-10          | To BCM IP05-08 | 256  |
| DR37-11          | To BCM IP06-02 | 256  |
| DR41-10          | To BCM IP05-07 | 256  |
| DR47-11          | To BCM IP06-02 | 256  |

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران