


HARNESS CONNECTORS

EC814F14


HARNESS CONNECTORS (1)

CC-1

AA91

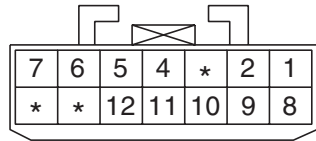

AMP_MQS_14F

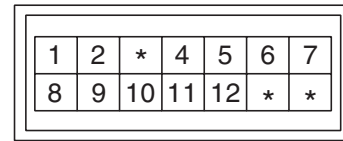


AMP_MQS_14M

CB11




 KUM_NMWP_01F_B




KUM_NMWP_01M_B

 CF91



KET_2507_20F_W

 


KET_2507_20M_W

CGGIG




KUM_NMWP_06F_B

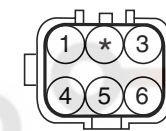


KUM_NMWP_06M_5

CGGMT

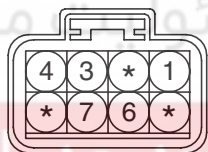


KUM_NMWP_08F_B

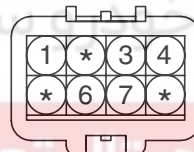


KUM_NMWP_08M_B

CUDMT

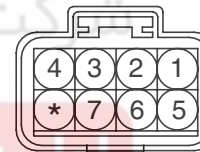


KUM_NMWP_08F_B

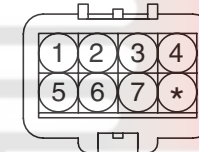


KUM_NMWP_08M_B

CUDPTC

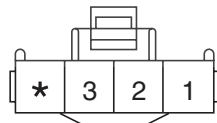

KET_312II_04F

 


KET_MG_641928

EE11




KUM_NMWP_04F_B

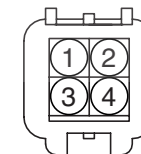


KUM_NMWP_04M_B

FD81

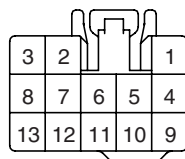


KET_090III_13F

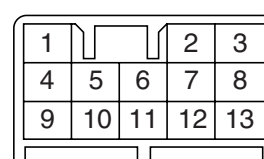


KET_DOOR_13M_W_0509

FD82

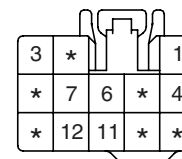

KET_090III_13F

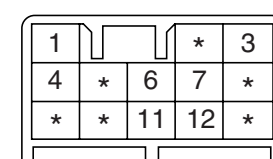


KET_DOOR_13M_W_0509

HARNESS CONNECTORS


HARNESS CONNECTORS (2)

CC-2

FD91

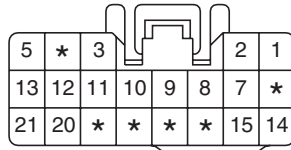


KET_050_21F_B

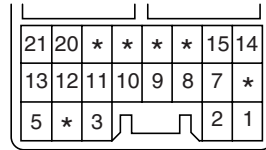


KET_DOOR_21M_W_0509

FD92

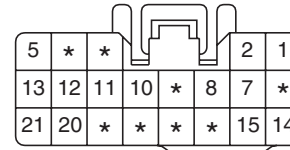


KET_050_21F_B

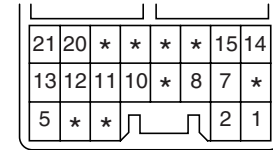


KET_DOOR_21M_W_0509

FD93

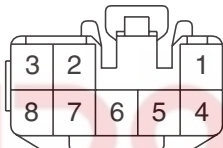


KET_090II_08F

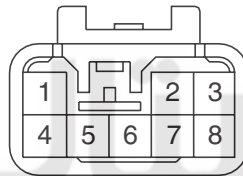


KET_090II_08M

FD94

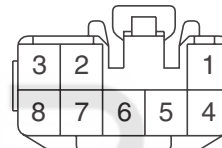


KET_090II_08F

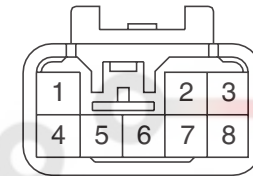


KET_090II_08M

FR91

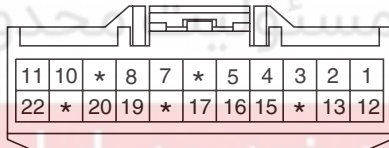


AMP_090III_22F_W

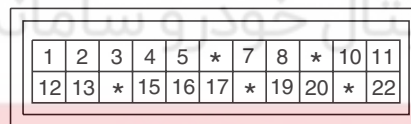

AMP_090III_22M_W

 FR92




AMP_070250_15F




AMP_070250_15M

MA01

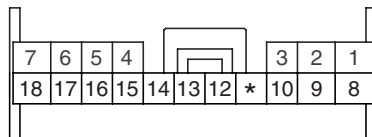


KUM_2505_18F_B

 


KUM_HY031_18027

 MA91




KET_SDL_06F

 


KET_SDL_06M

MC71

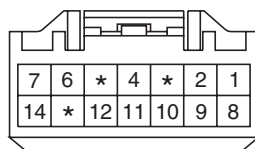


AMP_090III_14F_W

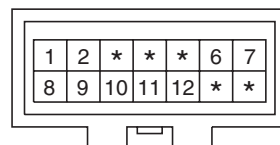


AMP_090III_14M_W

MC81

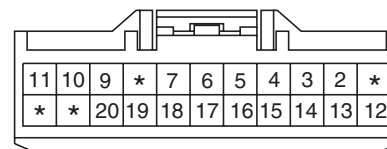

AMP_090III_22F_W

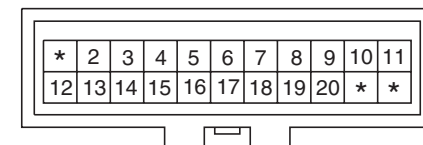


AMP_090III_22M_W

HARNESS CONNECTORS


HARNESS CONNECTORS (3)

CC-3

MC91

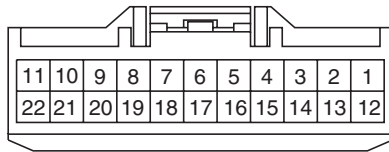


AMP_090III_22F_L

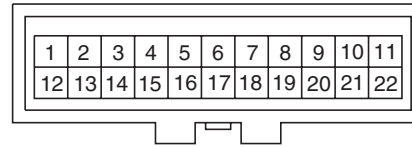


AMP_090III_22M_L

MF52

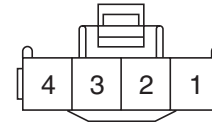


KET_312II_04F_W

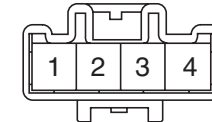


KET_312II_04M_W

MF72

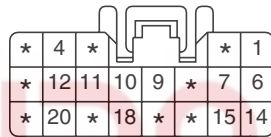


KET_21F_W

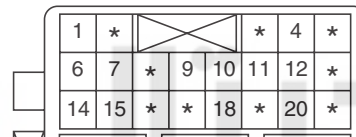


KET_180905_21M_W

MF82

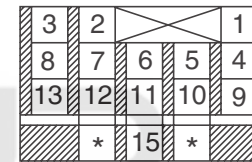


KET_090II+187II

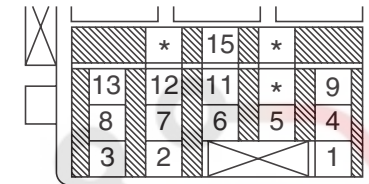


KET_180905_16M_W

MF92

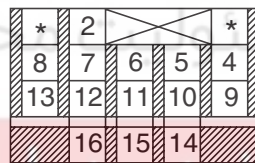


KET_090II+187II

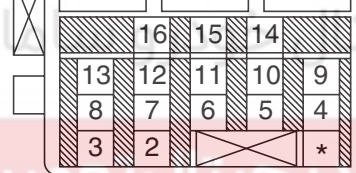

KET_180905_16M_W

MM91

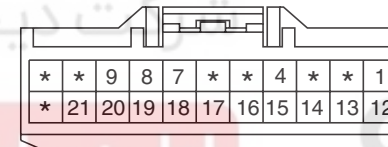


AMP_090III_22F_N




AMP_090III_22M_W

MR92

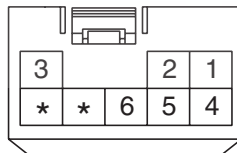

AMP_090III_08F_W

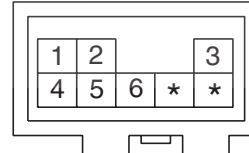

AMP_090III_08M_W

RR12




KET_090IWP_3F_B




CR03M024

RR91

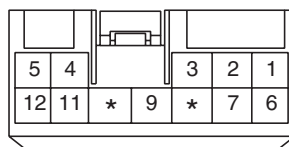

AMP_090III_12F

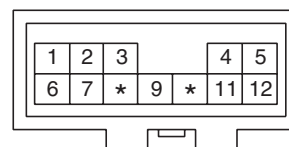

AMP_090III_14M


BLANK

ENGINE COMPARTMENT JUNCTION BOX E0EDD0CB

ENGINE COMPARTMENT JUNCTION BOX (1)


CC-4

E/R-CGG

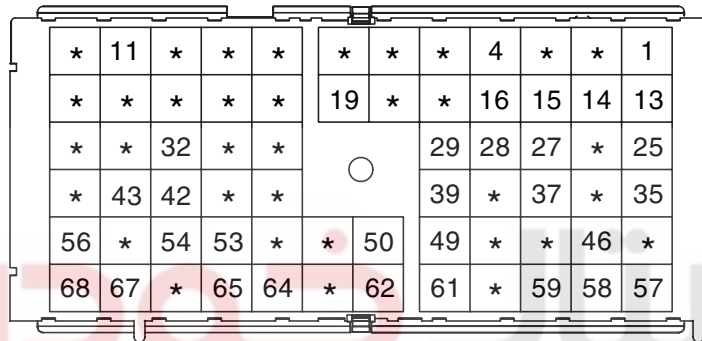


PKD_280_68F_N_104

E/R-CBG

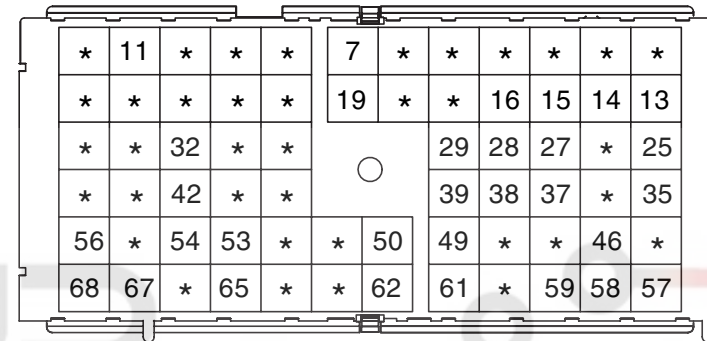


PKD_280_68F_N_104

E/R-CUD

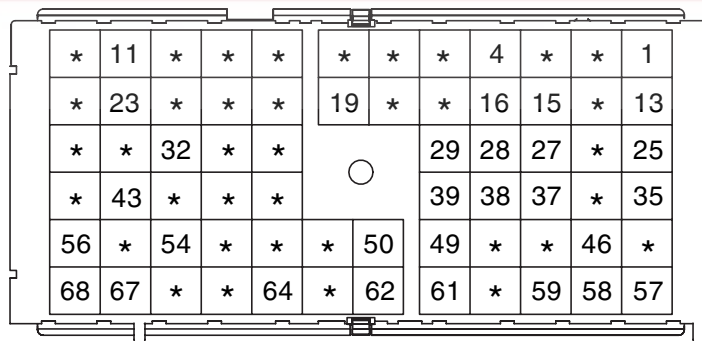

PKD_280_68F_N_104

E/R-FRT

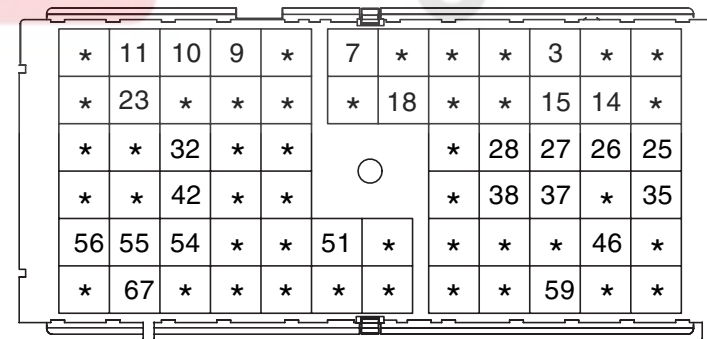

PKD_280_68F_B_102

ENGINE COMPARTMENT JUNCTION BOX

ENGINE COMPARTMENT JUNCTION BOX (2)

CC-5

E/R-FLR1

*	5	4	*	*	*
12	11	10	9	8	7
16	*			14	13
*	*			18	17
*	25	24	23	22	21
32	31	30	29	*	*


PKD_280_32W_N_101

E/R-FLR2

*	5	4	*	2	1
12	11	10	9	*	*
16	*			14	13
20	19			*	17
26	25	24	*	*	21
*	31	30	29	28	*

PKD_280_32W_GR_102

 E/R-FLR3



PKD_280_02F_GR_104

E/R-FLR4




PKD_280_02F_W_102

PASSENGER COMPARTMENT JUNCTION BOX EAD2F04A

PASSENGER COMPARTMENT JUNCTION BOX (1)


CC-6

I/P-F

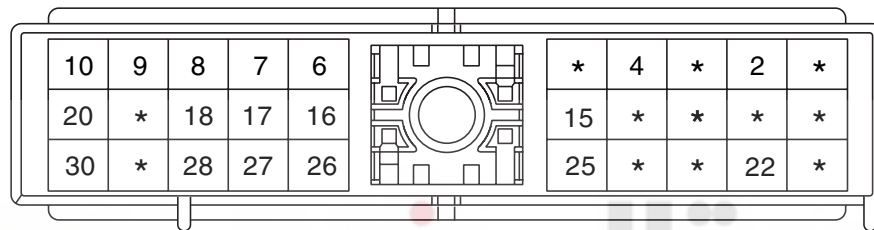


PKD_280_30F

I/P-M1

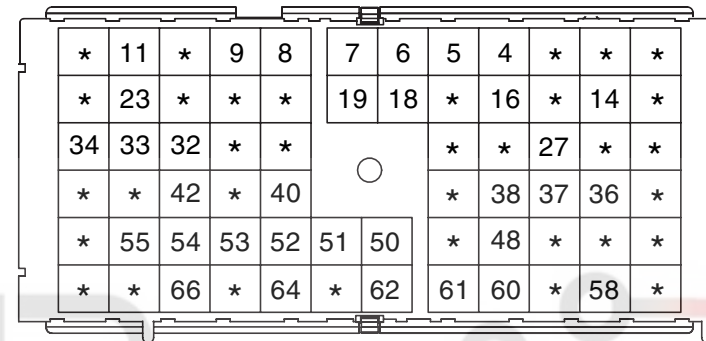

PKD_280_68F_B_102

I/P-M2

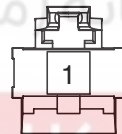

PKD_800_01F_B_BECB


BLANK

JOINT CONNECTORS EBE6DCBF

JOINT CONNECTORS (1)


CC-7

CGGJC1

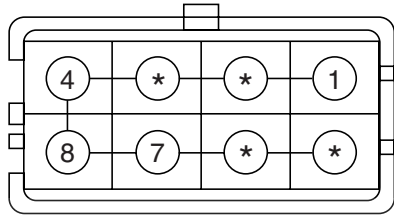


KET_070_8F_B

CGGJC2

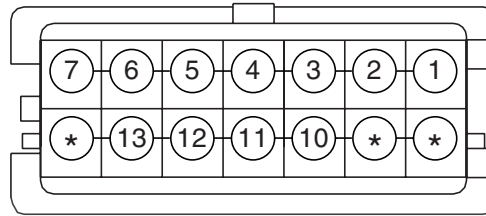


KET_070_14F_Gr

CGGJC3

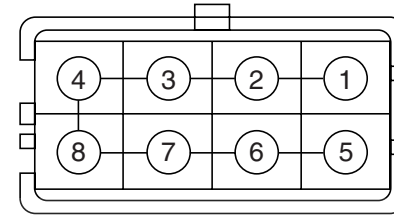


KET_070_8F_B

CGGJC4

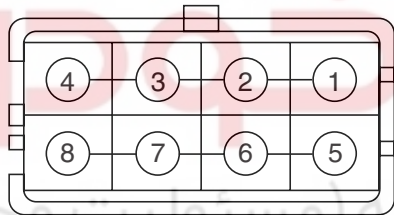


KET_070_8F_B

CBGJC1

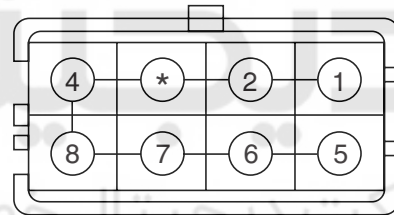


KET_070_8F_B

CBGJC2

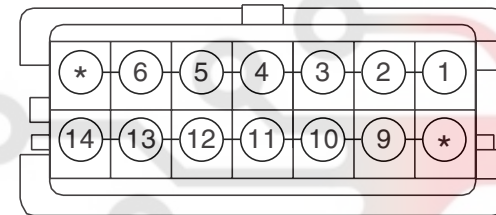


KET_070_14F_W

CBGJC3

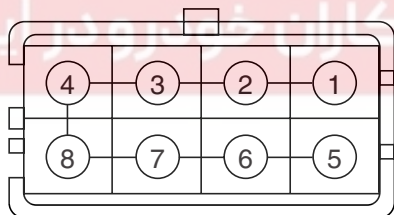


KET_070_8F_B

CBGJC4

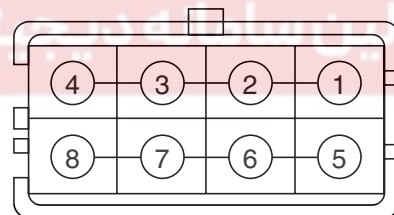


KET_070_8F_B

CUDJC1

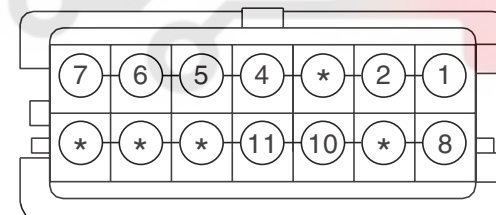


KET_070_14F_W

CUDJC2

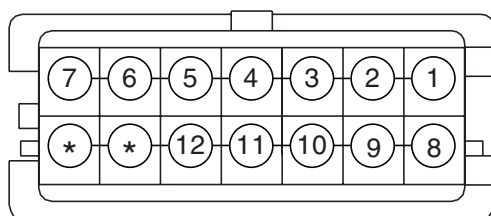


KET_070_14F_Gr

CUDJC3

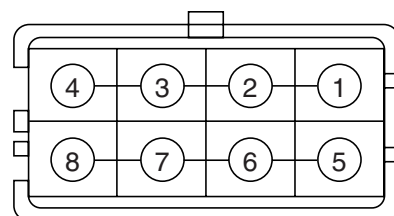

KET_070_8F_B

JA01

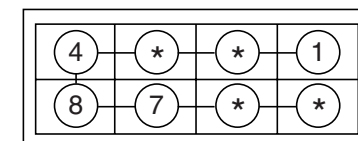

KET


ELDCC7004A1

JOINT CONNECTORS

JOINT CONNECTORS (2)


CC-8

JF01

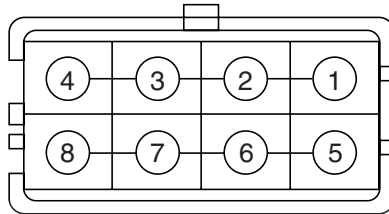


KET_070_08F_JCH_B

JF02

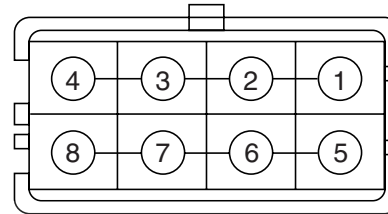


KET_070_08F_JCH_B

JM01

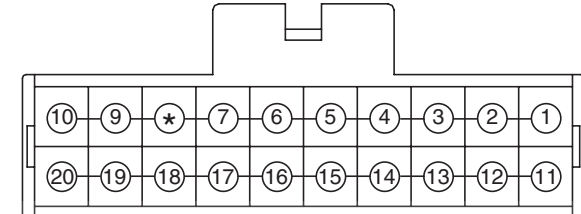


KET_090II_20F_B_JCH

JM02

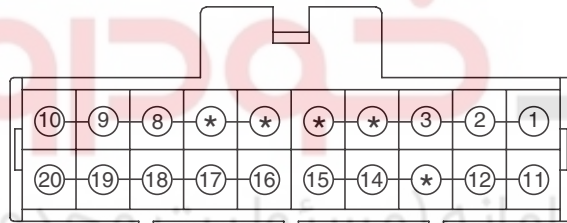


KET_090II_20F_B_JCH

JM03

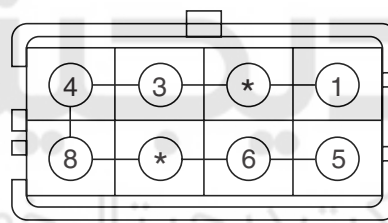

KET_070_08F_B_JCH

JR01

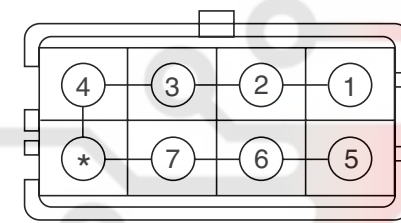


KET_070_08F_JCH_B

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

MAIN HARNESS ECA8146A

MAIN HARNESS (1)

HL-1

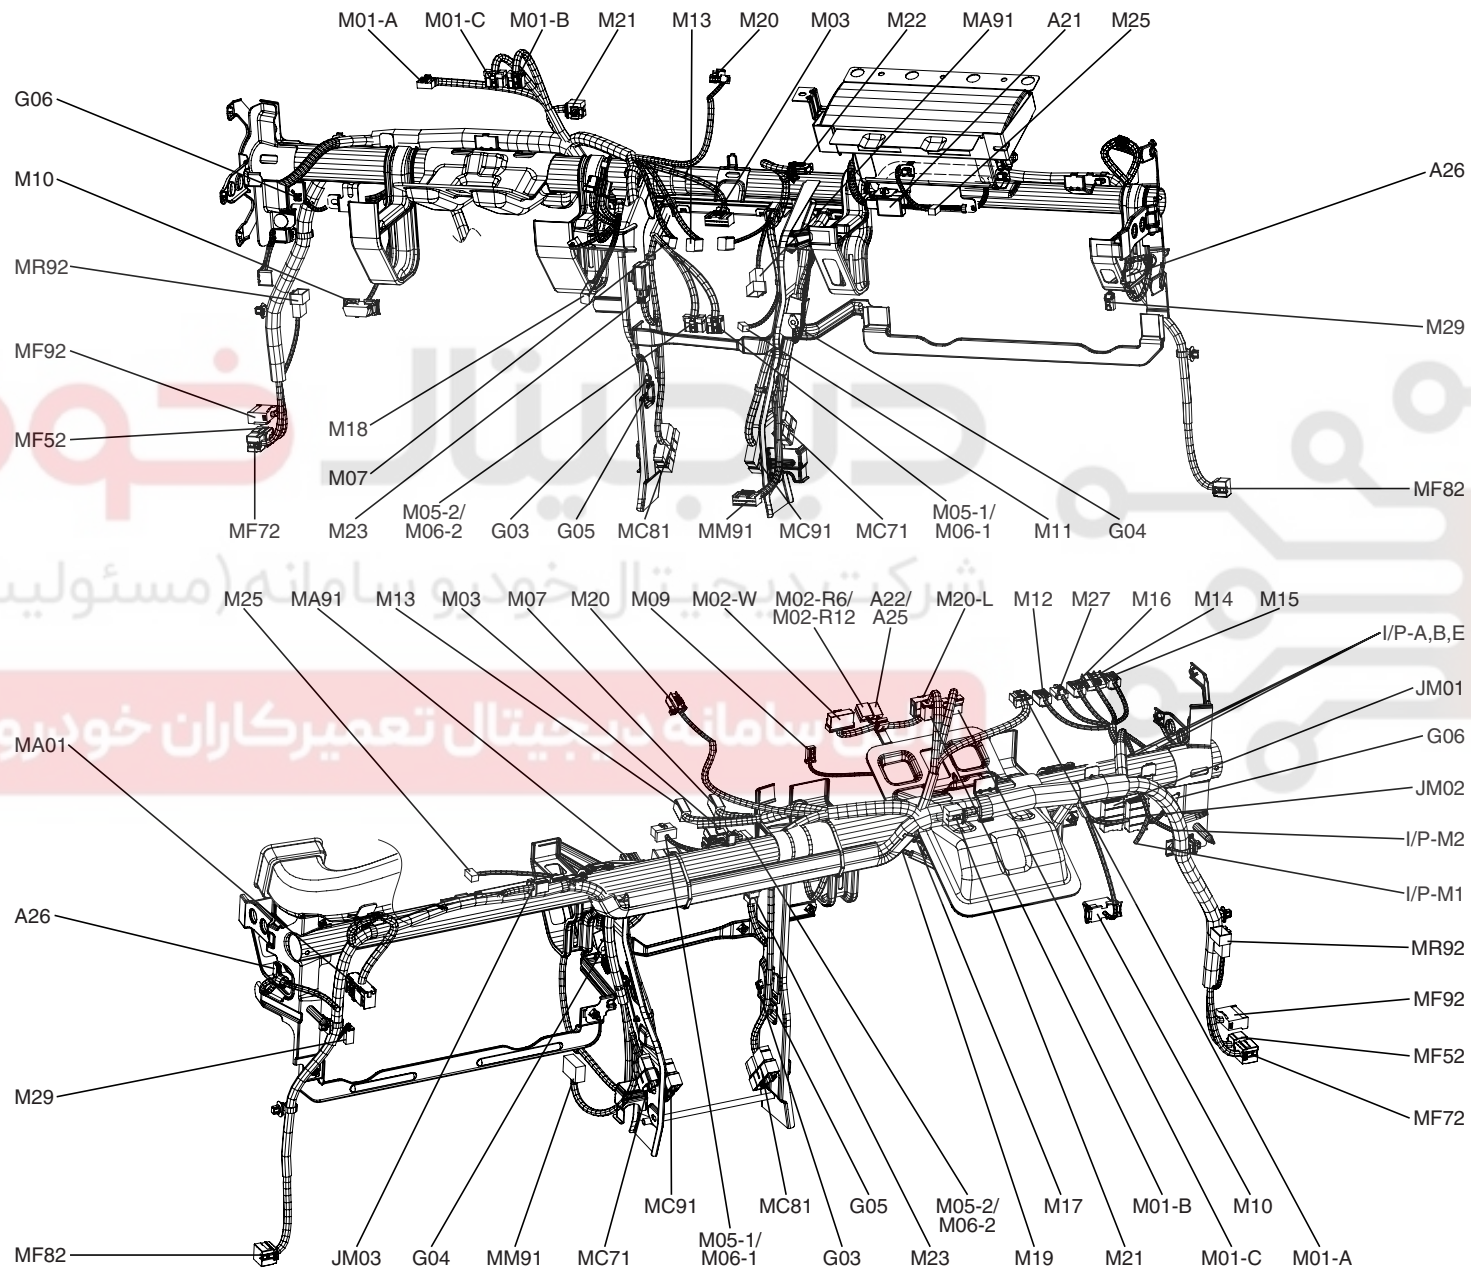

MAIN HARNESS

MAIN HARNESS (2)

HL-2

MAIN HARNESS

M01-A Instrument cluster
 M01-B Instrument cluster
 M01-C Instrument cluster
 M02-L Multifunction switch
 M02-R6 Multifunction switch
 M02-R12 Multifunction switch
 M02-W Multifunction switch
 M03 Audio
 M05-1 A/C control module(Auto)
 M05-2 A/C control module(Auto)
 M06-1 A/C control module(Manual)
 M06-2 A/C control module(Manual)
 M07 Trip switch
 M09 Immobilizer control module
 M10 Data link connector
 M11 Cigarette lighter
 M12 Trunk lid open switch
 M13 Hazard switch
 M14 Head lamp leveling switch
 M15 Rear fog lamp switch
 M16 TCS switch
 M17 Ignition switch
 M18 Active incar & Humidity sensor
 M19 Door warning switch
 M20 Digital clock
 M21 Auto light & Photo sensor
 M23 Auto light control module
 M25 Keyless entry receiver
 M27 Rheostat
 M29 Glove box lamp
 JM01 Joint connector
 JM02 Joint connector
 JM03 Joint connector
 I/P-A Connection with BCM harness
 I/P-B Connection with BCM harness
 I/P-E Connection with BCM harness

I/P-M1 Connection with I/P JUNCTION BOX harness
 I/P-M2 Connection with I/P JUNCTION BOX harness
 MA01 Connection with A/C harness
 MA91 Connection with AIR BAG EXT. harness
 MC71 Connection with CONTROL harness
 MC81 Connection with CONTROL harness
 MC91 Connection with CONTROL harness
 MF52 Connection with FLOOR harness
 MF72 Connection with FLOOR harness
 MF82 Connection with FLOOR harness
 MF92 Connection with FLOOR harness
 MM91 Connection with CONSOLE EXT. harness
 MR92 Connection with ROOF harness
 G03 Ground
 G04 Ground
 G05 Ground
 G06 Ground

CONSOLE EXT. HARNESS

M41 Front seat warmer switch LH
 M42 Front seat warmer switch RH
 M43 Power outlet
 M45 Audio jack
 MM91 Connection with MAIN harness

REMOCON SWITCH HARNESS

M46 Multifunction switch(With cruise)
 M47 Multifunction switch(W/O cruise)

AIR BAG EXT. HARNESS


A21 Passenger air bag
 A22 Driver air bag(W/O cruise)
 A25 Driver air bag(With cruise)
 A26 PAB cut off switch
 AA91 Connection with AIR BAG harness
 MA91 Connection with MAIN harness

FRONT HARNESS E40CA2AF


FRONT HARNESS (1)

HL-3

LH

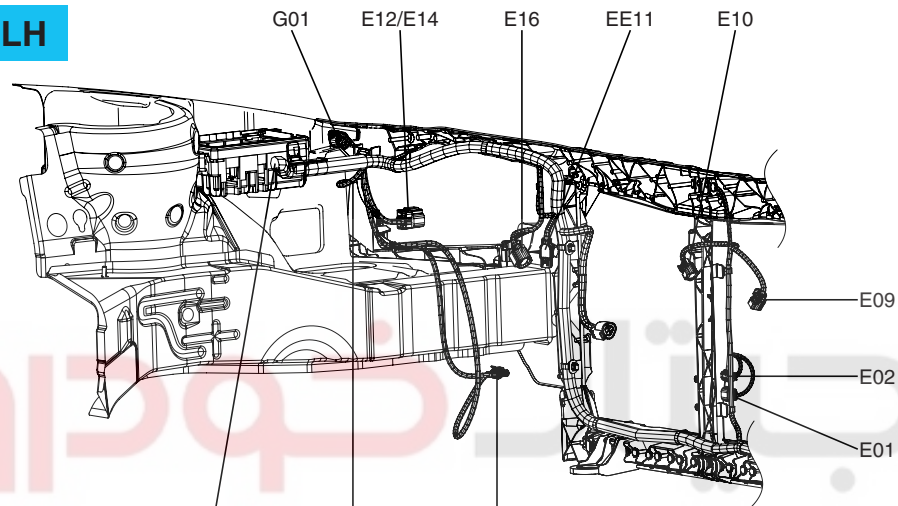

RH

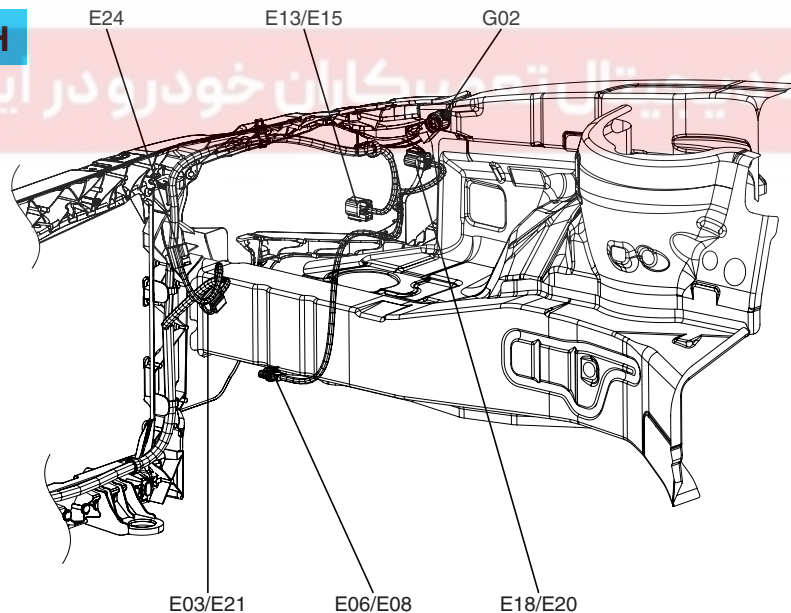

FRONT HARNESS


E01	AQS sensor
E02	Ambient sensor
E03	Condenser fan motor(G4GC)
E05	Front fog lamp LH(MFR)
E06	Front fog lamp RH(MFR)
E07	Front fog lamp LH(PRO)
E08	Front fog lamp RH(PRO)
E09	Center horn
E10	Horn LH
E12	Head lamp LH(W/O HLLD)
E13	Head lamp RH(W/O HLLD)
E14	Head lamp LH(With HLLD)
E15	Head lamp RH(With HLLD)
E16	Radiator fan motor(G4GC)
E17	Front position lamp LH
E18	Front position lamp RH
E19	Front turn signal lamp LH
E20	Front turn signal lamp RH
E21	Cooling fan motor(G4FC/D4FB)
E24	A/C pressure transducer(G4FC/D4FB)
EE11	Connection with BATTERY harness
E/R-FRT	Connection with E/R JUNCTION BOX harness
G01	Ground
G02	Ground

BATTERY HARNESS E92EA7D4


BATTERY HARNESS (1)

HL-4


G4FC

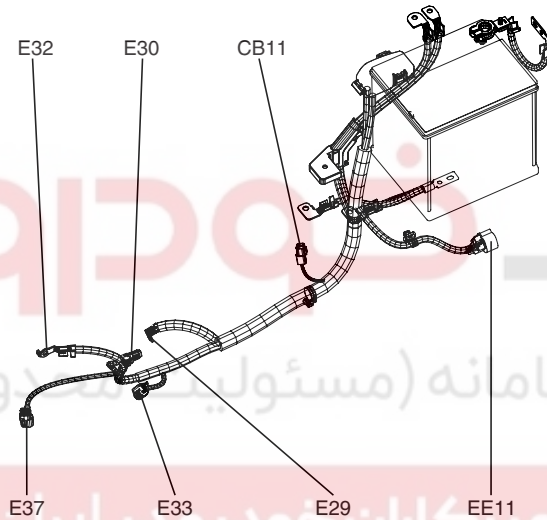

G4GC

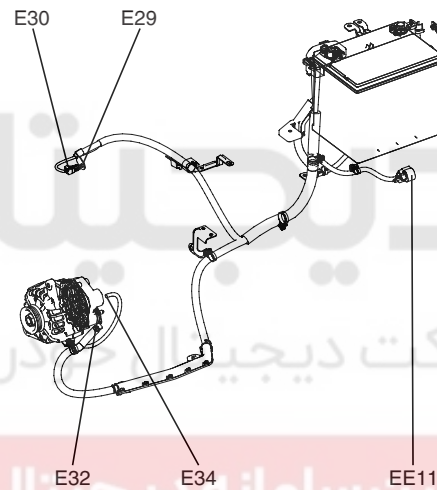

D4FB

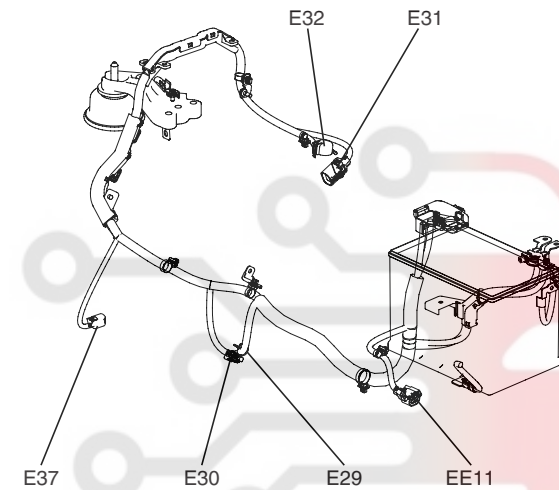

BATTERY HARNESS(G4FC)

E29	Start motor
E30	Start solenoid
E32	Generator
E33	Oil pressure switch
E37	A/C compressor
CB11	Connection with CONTROL harness
EE11	Connection with FRONT harness

BATTERY HARNESS(G4GC)

E29	Start motor
E30	Start solenoid
E32	Generator
E34	Generator
EE11	Connection with FRONT harness

BATTERY HARNESS(D4FB)


E29	Start motor
E30	Start solenoid
E31	Generator
E32	Generator
E37	A/C compressor
EE11	Connection with FRONT harness

FLOOR HARNESS EDAE46D1


FLOOR HARNESS (1)

HL-5


5DR LH

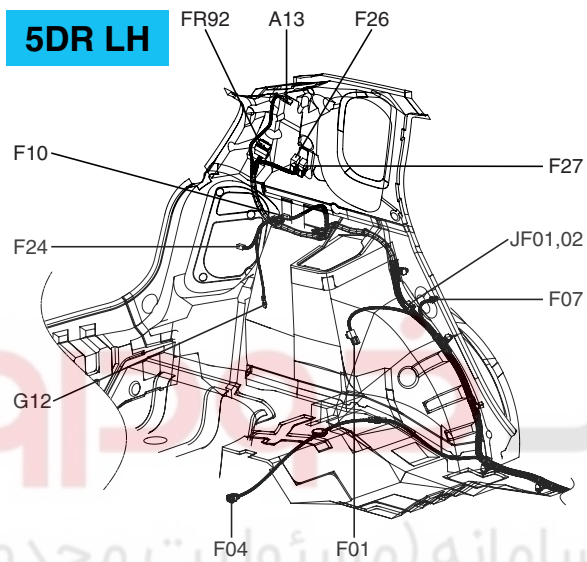

5DR RH

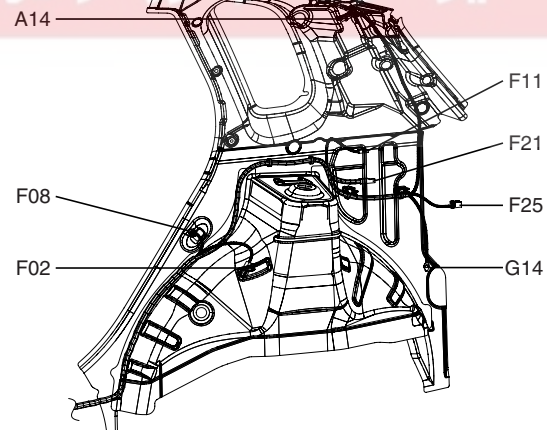

() : RIGHT

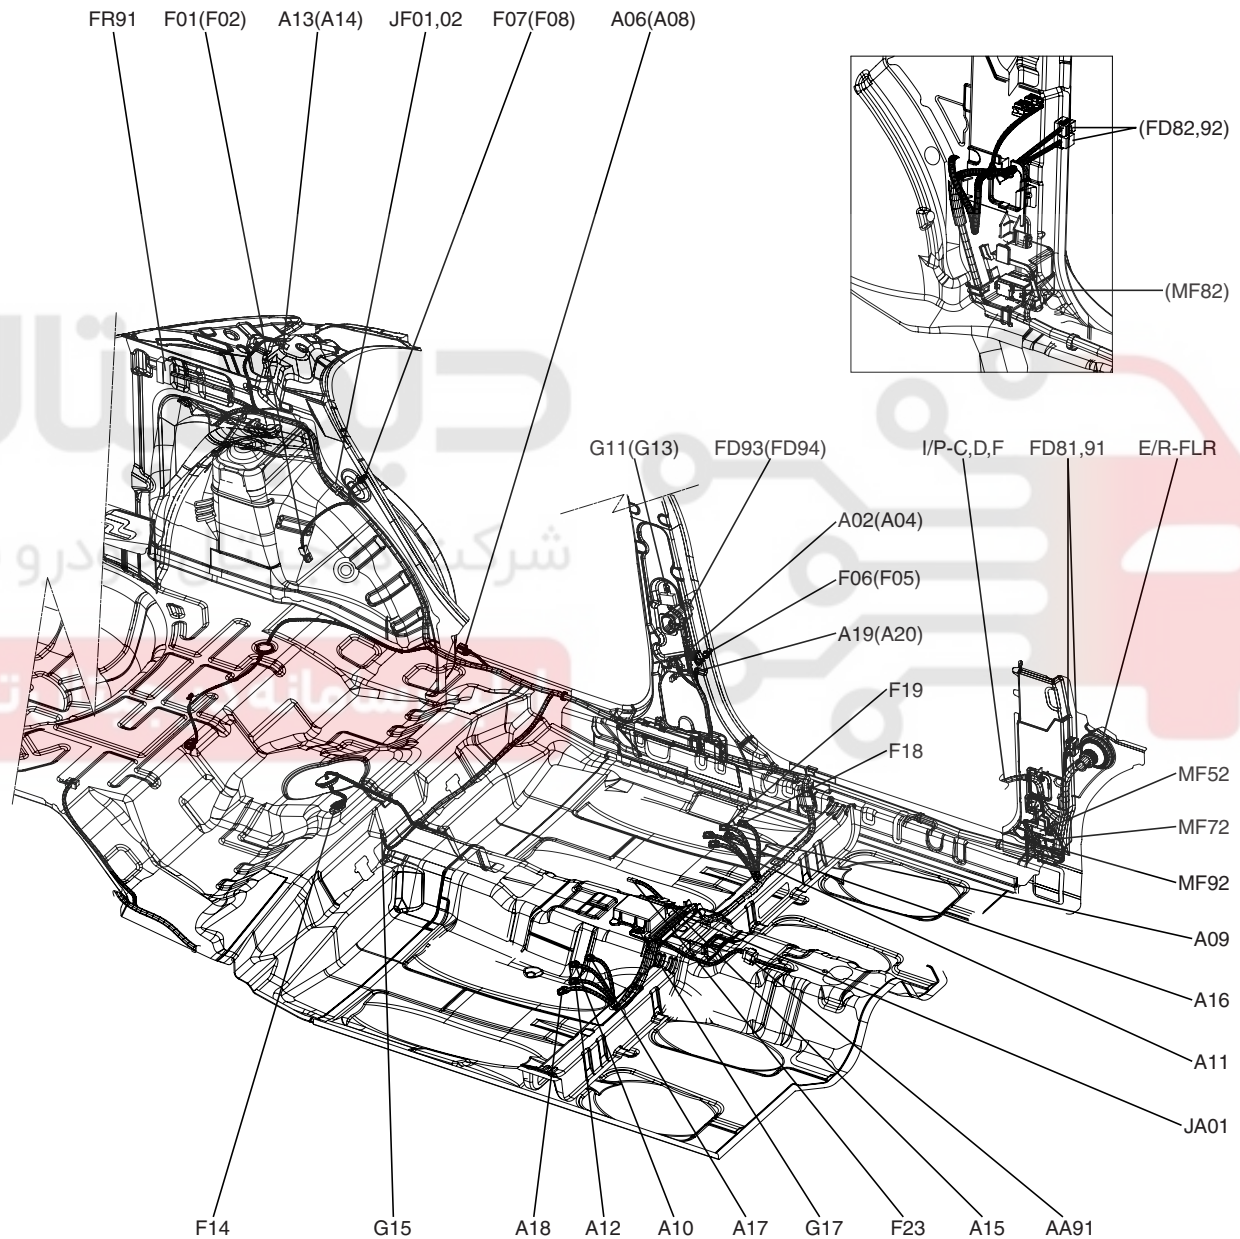

FLOOR HARNESS

FLOOR HARNESS (2)

HL-6

FLOOR HARNESS

F01	Rear wheel sensor LH	FR91	Connection with TRUNK LID harness
F02	Rear wheel sensor RH	FR92	Connection with TAIL GATE EXT. harness
F05	Passenger door switch	I/P-C	Connection with BCM harness
F06	Driver door switch	I/P-D	Connection with BCM harness
F07	Rear door switch LH	I/P-F	Connection with I/P JUNCTION BOX harness(LHD)
F08	Rear door switch RH	MF52	Connection with MAIN harness
F09	Side repeater lamp LH	MF72	Connection with MAIN harness
F10	Rear speaker LH	MF82	Connection with MAIN harness
F11	Rear speaker RH	MF92	Connection with MAIN harness
F14	Fuel sender & Fuel pump motor	G11	Ground
F17	High-mounted stop lamp(4DR)	G12	Ground
F18	Seat belt switch	G13	Ground
F19	Driver seat warmer	G14	Ground
F20	Passenger seat warmer	G15	Ground
F21	Luggage lamp		
F22	Rear defogger(4DR)		
F23	Parking brake switch		
F24	Rear combination lamp LH(5DR)		
F25	Rear combination lamp RH(5DR)		
F26	Rear fog lamp relay(5DR)		
F27	Rear wiper relay		
JF01	Joint connector	A02	Driver side impact sensor
JF02	Joint connector	A04	Passenger side impact sensor
CF91	Connection with CONTROL harness(RHD)	A06	Rear side impact sensor LH
E/R-FLR1	Connection with E/R JUNCTION BOX harness	A08	Rear side impact sensor RH
E/R-FLR2	Connection with E/R JUNCTION BOX harness	A11	Driver side air bag
E/R-FLR3	Connection with E/R JUNCTION BOX harness	A12	Passenger side air bag
E/R-FLR4	Connection with E/R JUNCTION BOX harness	A13	Driver curtain air bag
FD81	Connection with DRIVER DOOR harness	A14	Passenger curtain air bag
FD82	Connection with PASSENGER DOOR harness	A15	SRS control module
FD91	Connection with DRIVER DOOR harness	A19	Driver seat belt pretensioner
FD92	Connection with PASSENGER DOOR harness	A20	Passenger seat belt pretensioner
FD93	Connection with REAR DOOR LH harness	JA01	Joint connector
FD94	Connection with REAR DOOR RH harness	AA91	Connection with AIR BAG EXT. harness
		G17	Ground


AIR BAG HARNESS

CONTROL HARNESS E3FB1954




CONTROL HARNESS (G4FC) (1)

HL-7

LH

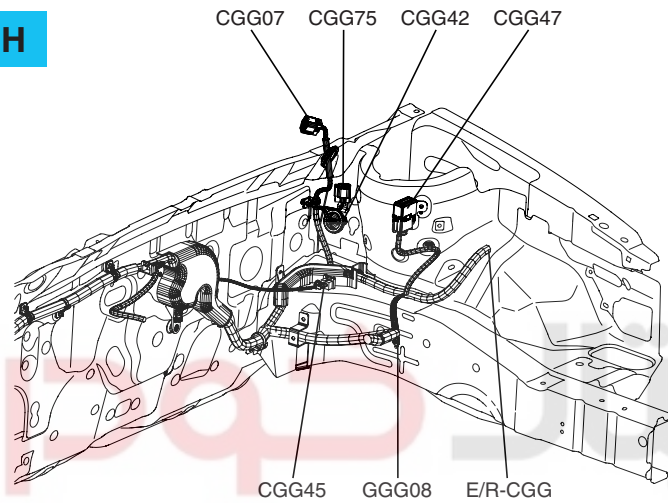

RH

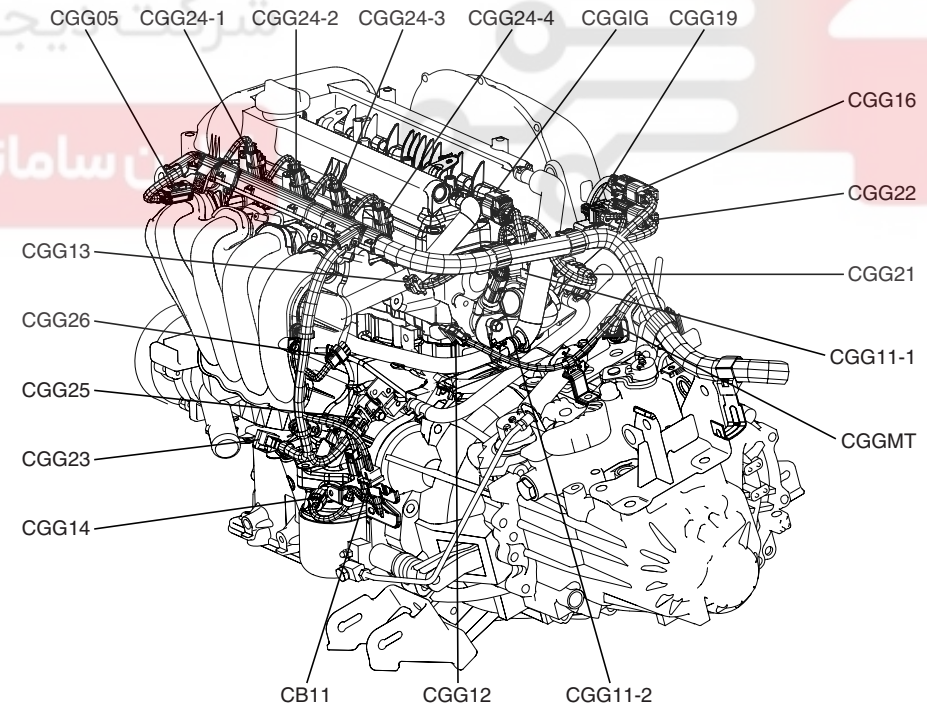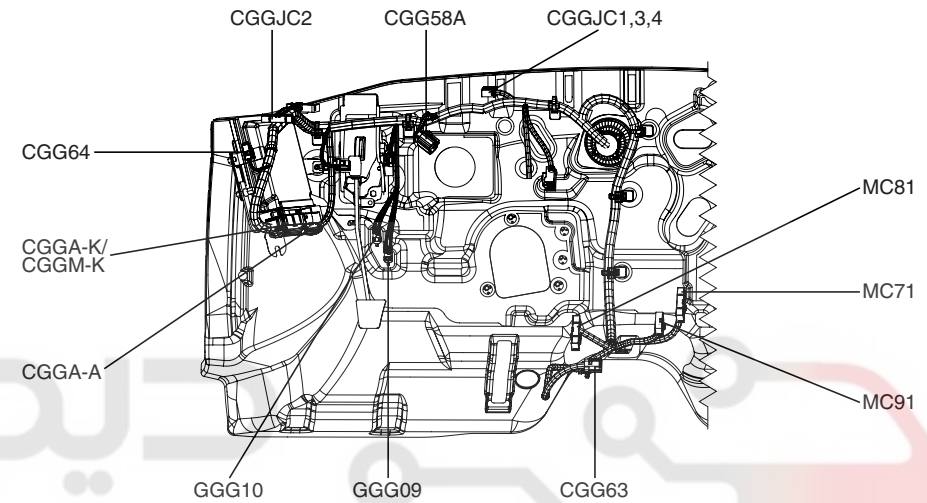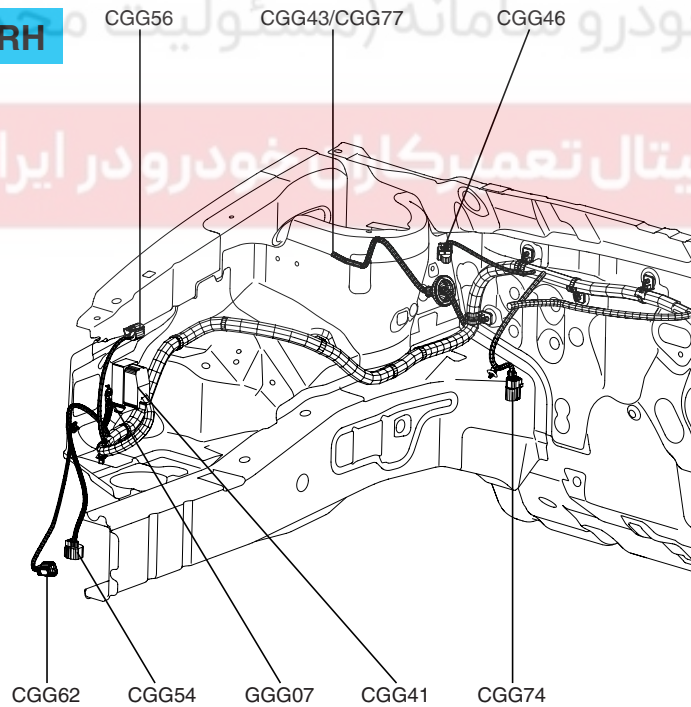

CONTROL HARNESS

CONTROL HARNESS (G4FC) (2)

HL-8

CONTROL HARNESS

CGGA-A	ECM(A/T)	CGG63	ATM lever switch
CGGA-K	ECM(A/T)	CGG64	CAN resistor
CGGM-K	ECM(M/T)	CGG74	Power steering switch
CGG01	Transaxle range switch	CGG75	Fuel cut sensor
CGG02-A	Pulse generator 'A'	CGG77	Wheel sensor(With EURO III/IV & W/O ABS/TCS)
CGG02-B	Pulse generator 'B'	CGGJC1	Joint connector
CGG04	ATM solenoid valve	CGGJC2	Joint connector
CGG05	Oil control valve	CGGJC3	Joint connector
CGG06	Generator	CGGJC4	Joint connector
CGG07	Front wiper motor	CB11	Connection with BATTERY harness
CGG11-1	Engine coolant temperature sensor	CF91	Connection with FLOOR harness(RHD)
CGG11-2	Engine coolant temperature sender	CGGIG	Connection with IGNITION COIL harness
CGG12	Throttle position sensor	CGGMT	Connection with MTM EXT. harness
CGG13	Camshaft position sensor	E/R-CGG	Connection with E/R JUNCTION BOX harness
CGG14	Crankshaft position sensor	I/P-F	Connection with I/P JUNCTION BOX harness(RHD)
CGG16	Oxygen sensor(Upr)	MC71	Connection with MAIN harness
CGG19	Condenser	MC81	Connection with MAIN harness
CGG21	Purge control solenoid valve	MC91	Connection with MAIN harness
CGG22	Oxygen sensor(Down)(Euro III/IV)	GKG07	Ground
CGG23	Knock sensor	GKG08	Ground
CGG24-1	Injector #1	GKG09	Ground
CGG24-2	Injector #2	GKG10	Ground
CGG24-3	Injector #3		
CGG24-4	Injector #4		
CGG25	MAP sensor		
CGG26	Idle speed actuator		
CGG41	ABS control module		
CGG42	Front wheel sensor LH		
CGG43	Front wheel sensor RH		
CGG45	Brake fluid Level sensor		
CGG46	Burglar alarm horn		
CGG47	Multipurpose check connector		
CGG54	Front washer motor		
CGG56	Hood switch		
CGG58A	Stop lamp switch		
CGG59	Side repeater lamp RH		
CGG62	Washer level switch		


IGNITION COIL HARNESS	
CGG18-1	Ignition coil #1
CGG18-2	Ignition coil #2
CGG18-3	Ignition coil #3
CGG18-4	Ignition coil #4
CGGIG	Connection with CONTROL harness

MTM EXT. HARNESS	
CGG50	Back-up lamp switch
CGG52	Vehicle speed sensor
CGGMT	Connection with CONTROL harness

CONTROL HARNESS

CONTROL HARNESS (G4GC) (3)

HL-9

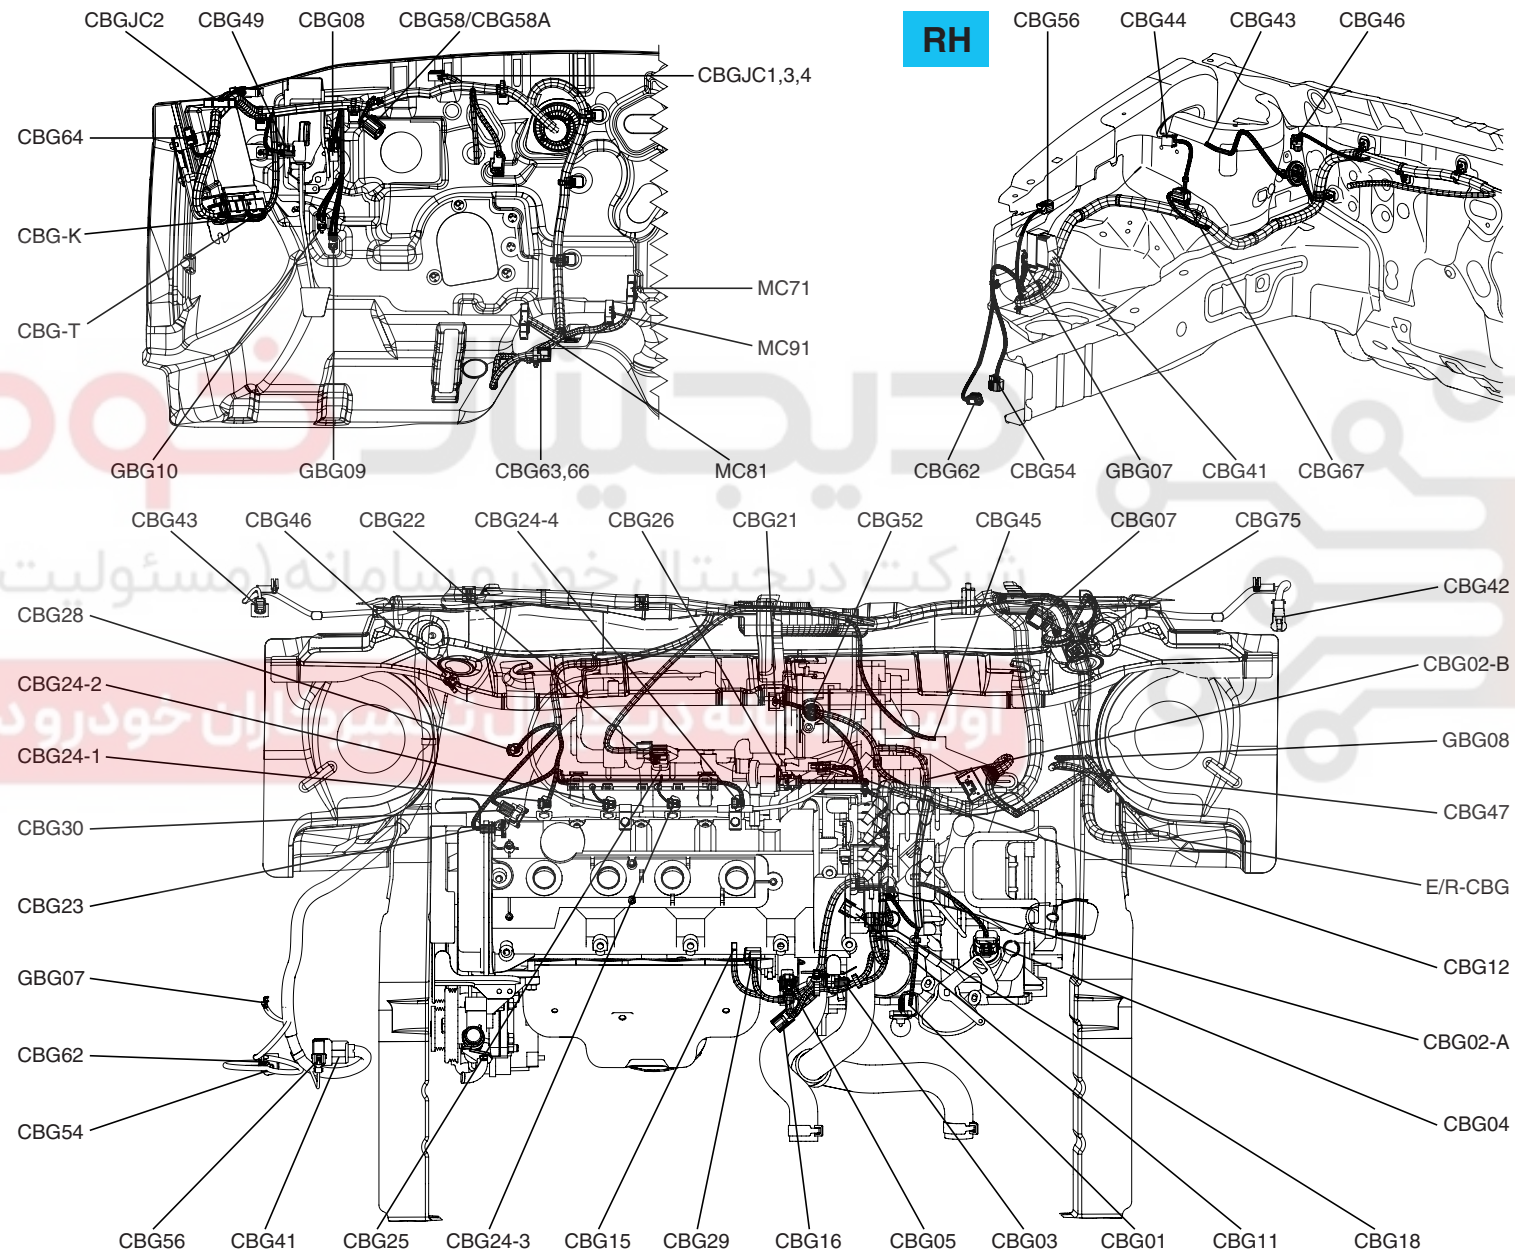

CONTROL HARNESS

CONTROL HARNESS (G4GC) (4)

HL-10

CONTROL HARNESS


CBG-K	ECM	CBG52	Vehicle speed sensor
CBG-T	TCM	CBG54	Front washer motor
CBG01	Transaxle range switch	CBG56	Hood switch
CBG02-A	Pulse generator 'A'	CBG58	Stop lamp switch(With cruise)
CBG02-B	Pulse generator 'B'	CBG58A	Stop lamp switch(W/O cruise)
CBG03	Oil temperature sensor	CBG59	Side repeater lamp RH
CBG04	ATM solenoid valve	CBG62	Washer level switch
CBG05	Oil control valve	CBG63	ATM lever switch
CBG07	Front wiper motor	CBG64	CAN resistor
CBG08	Ignition lock switch	CBG67	A/C pressure transducer
CBG11	Engine coolant temperature sensor & Sender	CBG75	Fuel cut sensor
CBG12	Throttle position sensor	CBGJC1	Joint connector
CBG15	Oil pressure switch	CBGJC2	Joint connector
CBG16	Oxygen sensor(Up)	CBGJC3	Joint connector
CBG18	Ignition coil	CBGJC4	Joint connector
CBG21	Purge control solenoid valve	CF91	Connection with FLOOR harness(RHD)
CBG22	Oxygen sensor(Down)	E/R-CBG	Connection with E/R JUNCTION BOX harness
CBG23	Knock sensor	I/P-F	Connection with I/P JUNCTION BOX harness(RHD)
CBG24-1	Injector #1	MC71	Connection with MAIN harness
CBG24-2	Injector #2	MC81	Connection with MAIN harness
CBG24-3	Injector #3	MC91	Connection with MAIN harness
CBG24-4	Injector #4	GBG07	Ground
CBG25	MAP sensor	GBG08	Ground
CBG26	Idle speed actuator	GBG09	Ground
CBG28	A/C compressor	GBG10	Ground
CBG29	Crankshaft position sensor		
CBG30	Camshaft position sensor		
CBG41	ABS control module		
CBG42	Front wheel sensor LH		
CBG43	Front wheel sensor RH		
CBG44	Cruise control module		
CBG45	Brake fluid level sensor		
CBG46	Burglar alarm horn		
CBG47	Multipurpose check connector		
CBG49	Cruise clutch pedal position switch		
CBG50	Back-up lamp switch		

CONTROL HARNESS




CONTROL HARNESS (D4FB) (5)

HL-11

LH

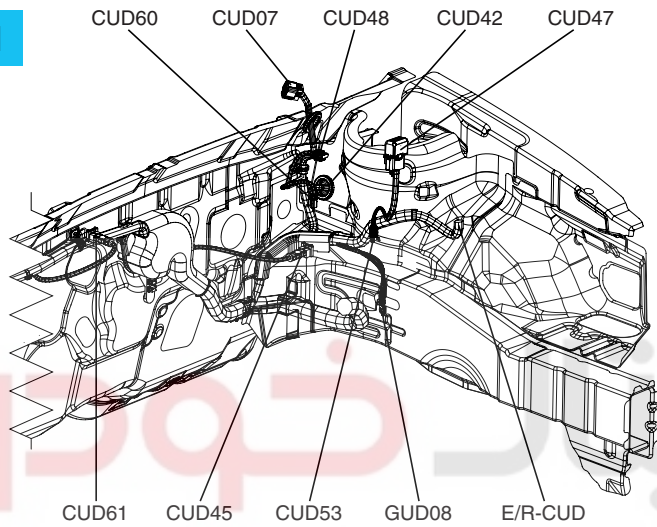

RH

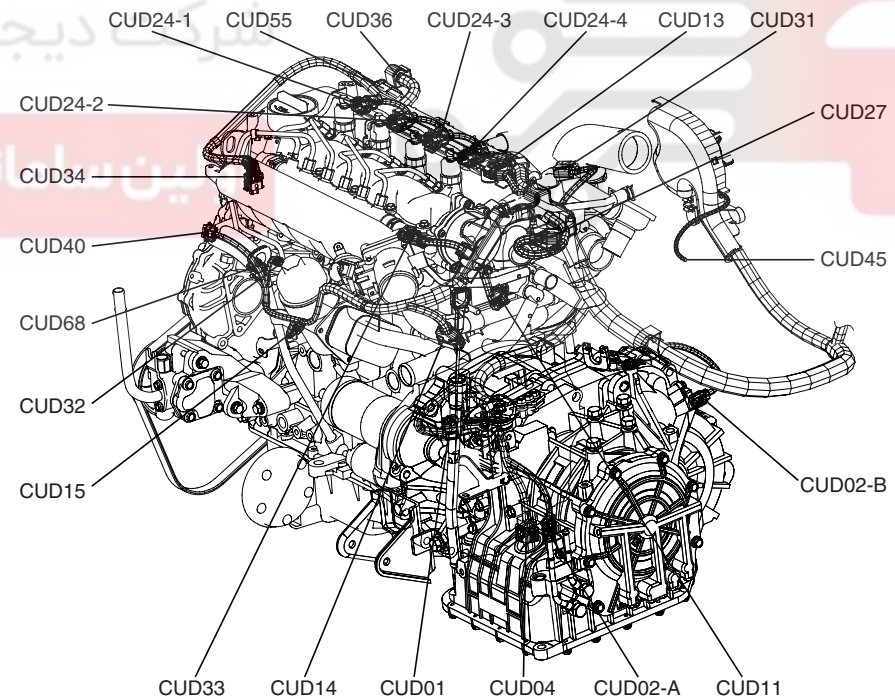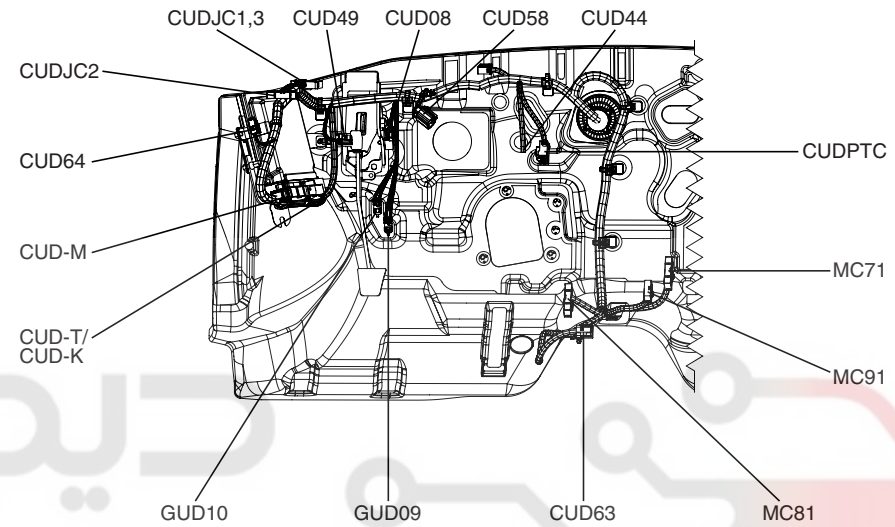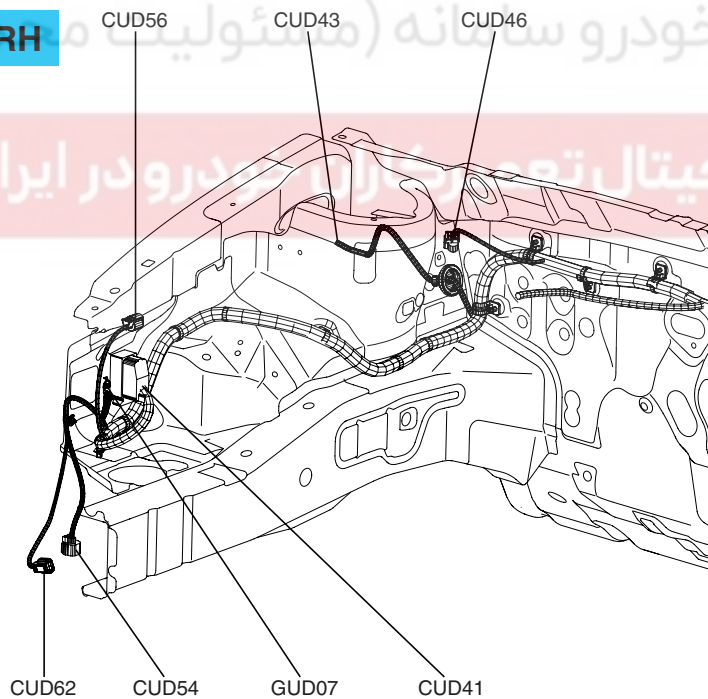

CONTROL HARNESS

CONTROL HARNESS (D4FB) (6)

HL-12

CONTROL HARNESS

CUD-K	ECM	CUD59	Side repeater lamp RH
CUD-M	ECM	CUD60	Thermo switch
CUD-T	TCM	CUD61	VGT actuator
CUD01	Transaxle range switch	CUD62	Washer level switch
CUD02-A	Pulse generator 'A'	CUD63	ATM lever switch
CUD02-B	Pulse generator 'B'	CUD64	CAN resistor
CUD04	ATM solenoid valve	CUD38	Fuel pressure regulating Valve
CUD07	Front wiper motor	CUD69	Fuel filter heater relay
CUD08	Ignition lock switch	CUD70	Glow plug relay
CUD11	Engine coolant temperature sensor & Sender	CUD71	PTC heater relay #1
CUD13	Camshaft position sensor	CUD72	PTC heater relay #2
CUD14	Crankshaft position sensor	CUD73	PTC heater relay #3
CUD15	Oil pressure switch	CUDJC1	Joint connector
CUD24-1	Injector #1	CUDJC2	Joint connector
CUD24-2	Injector #2	CUDJC3	Joint connector
CUD24-3	Injector #3	CF91	Connection with FLOOR harness(RHD)
CUD24-4	Injector #4	CUDMT	Connection with MTM EXT. harness
CUD27	Air flow sensor	CUDPTC	Connection with PTC HEATER harness
CUD31	EGR actuator	E/R-CUD	Connection with E/R JUNCTION BOX harness
CUD32	Fuel temperature sensor	I/P-F	Connection with I/P JUNCTION BOX harness(RHD)
CUD33	Rail pressure sensor	MC71	Connection with MAIN harness
CUD34	Rail pressure regulator	MC81	Connection with MAIN harness
CUD36	Lambda sensor	MC91	Connection with MAIN harness
CUD39	Boost pressure sensor	GUD07	Ground
CUD40	Variable swirl control actuator	GUD08	Ground
CUD41	ABS control module	GUD09	Ground
CUD42	Front wheel sensor LH	GUD10	Ground
CUD43	Front wheel sensor RH		
CUD44	Accelerator pedal sensor		
CUD45	Brake fluid level sensor		
CUD46	Burglar alarm horn		
CUD47	Multipurpose check connector		
CUD48	Fuel filter heater		
CUD49	Clutch switch		
CUD53	Fuel filter warning switch		
CUD54	Front washer motor		
CUD55	Glow plug		
CUD56	Hood switch		
CUD58	Stop lamp switch		


MTM EXT. HARNESS	
CUD50	Back-up lamp switch
CUD51	Neutral switch
CUD52	Vehicle speed sensor
CUDMT	Connection with CONTROL harness

PTC HEATER HARNESS	
CUD57	PTC heater
CUDPTC	Connection with CONTROL harness
GUD11	Ground

DOOR HARNESS EDE013AD

DOOR HARNESS (1)

HL-13

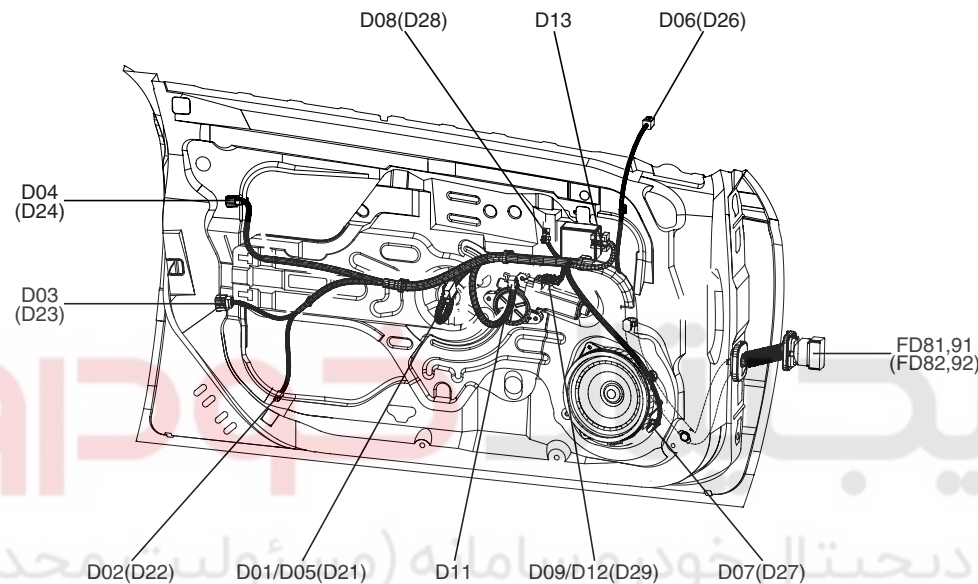


DRIVER DOOR HARNESS

- D01 Power window main switch
- D02 Driver door lamp
- D03 Driver door lock actuator
- D04 Driver door unlock switch
- D05 Safety power window switch
- D06 Driver power outside mirror motor
- D07 Driver door speaker
- D08 Driver tweeter speaker
- D09 Driver power window motor
- D11 Power outside mirror switch
- D12 Safety power window motor
- D13 Safety power window module
- FD81 Connection with FLOOR harness
- FD91 Connection with FLOOR harness

PASSENGER DOOR HARNESS

- D21 Passenger power window switch
- D22 Passenger door lamp
- D23 Passenger door lock actuator
- D24 Passenger door unlock switch
- D26 Passenger power outside mirror motor
- D27 Passenger door speaker
- D28 Passenger tweeter speaker
- D29 Passenger power window motor
- FD82 Connection with FLOOR harness
- FD92 Connection with FLOOR harness

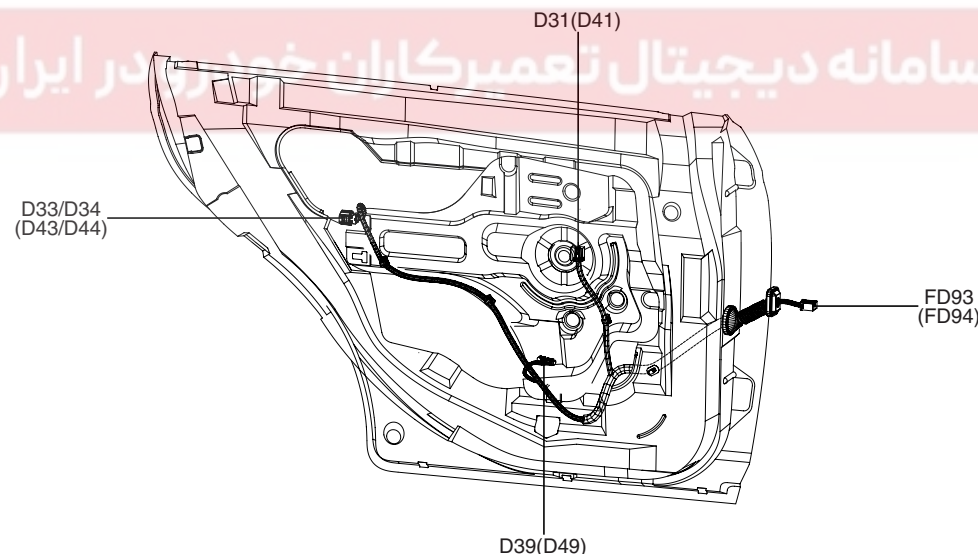

REAR DOOR LH HARNESS

- D31 Rear power window switch LH
- D33 Rear door lock actuator LH(With burglar alarm)
- D34 Rear door lock actuator LH(W/O burglar alarm)
- D39 Rear power window motor LH
- FD93 Connection with FLOOR harness

REAR DOOR RH HARNESS




- D41 Rear power window switch RH
- D43 Rear door lock actuator RH(With burglar alarm)
- D44 Rear door lock actuator RH(W/O burglar alarm)
- D49 Rear power window motor RH
- FD94 Connection with FLOOR harness

() : RIGHT

TRUNK LID HARNESS E3E0DF4

TRUNK LID HARNESS (1)

HL-14

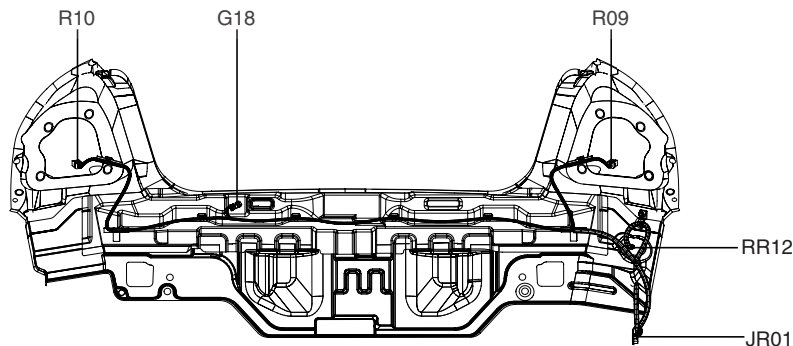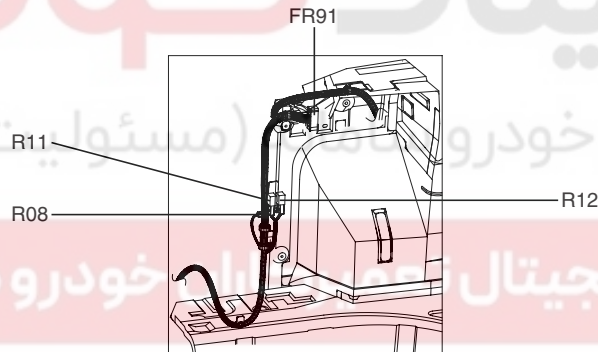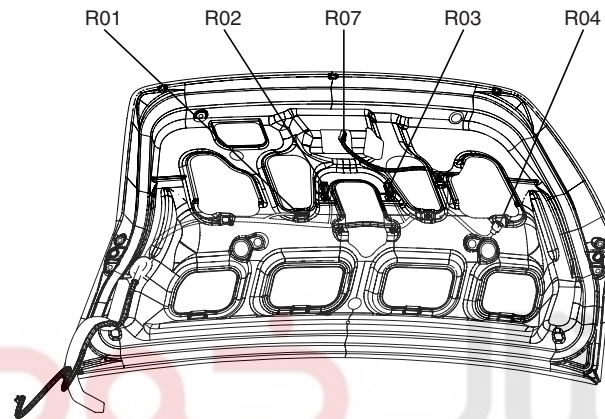

TRUNK LID HARNESS

R01	High-mounted stop lamp(Spoiler)
R02	License lamp LH
R03	License lamp RH
R04	Trunk unlock switch
R07	Trunk lid actuator
R08	Power antenna
R09	Rear combination lamp LH(4DR)
R10	Rear combination lamp RH(4DR)
R11	Rear fog lamp relay(4DR)
R12	Trunk lid open relay
JR01	Joint connector
FR91	Connection with FLOOR harness
RR12	Connection with REAR FOG LAMP EXT. harness
G18	Ground


REAR FOG LAMP EXT. HARNESS

R37	Rear fog lamp RH
RR12	Connection with TRUNK LID harness

TAIL GATE HARNESS E7BF8FF9


TAIL GATE HARNESS (1)

HL-15

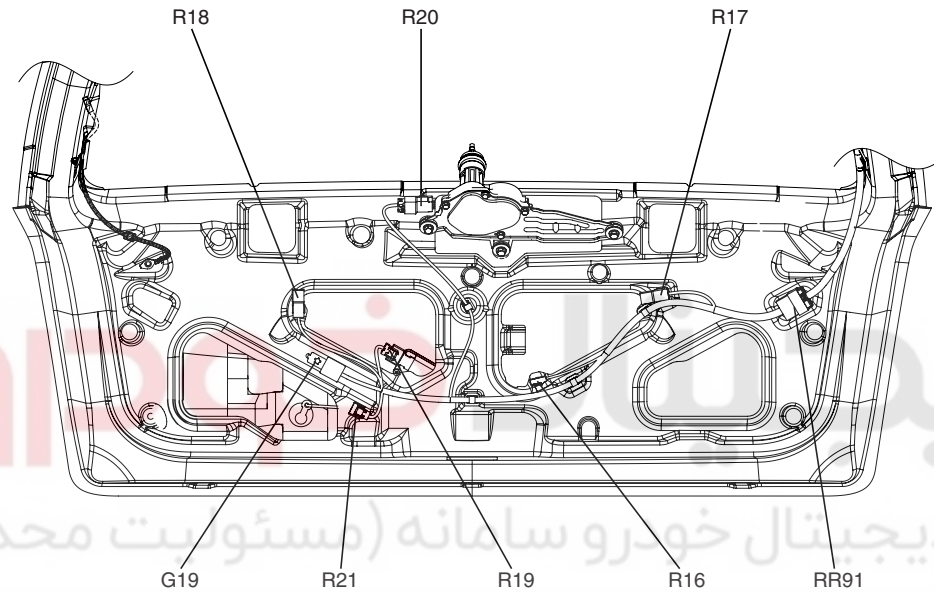

TAIL GATE HARNESS

- R16 Tail gate open switch
- R17 License lamp LH
- R18 License lamp RH
- R19 Tail gate lock actuator
- R20 Rear wiper motor
- R21 Tail gate unlock switch
- RR91 Connection with TAIL GATE EXT. harness
- G19 Ground

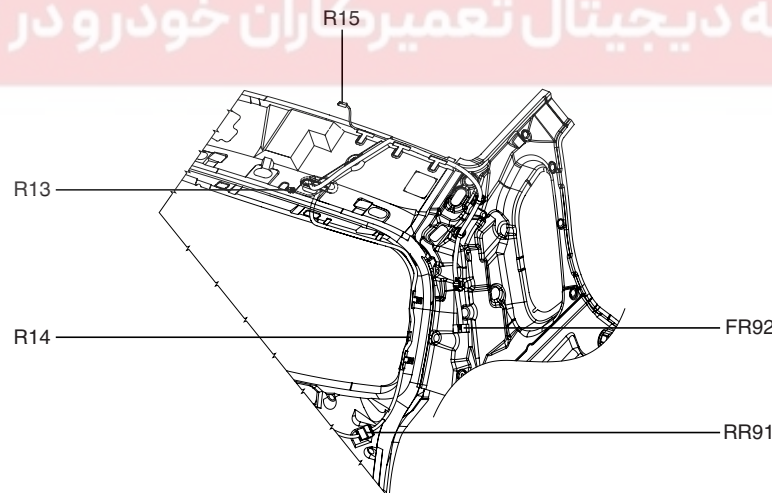

TAIL GATE EXT. HARNESS

- R13 High-mounted stop lamp
- R14 Rear defogger(5DR)
- R15 Roof antenna
- FR92 Connection with FLOOR harness
- RR91 Connection with TAIL GATE harness

ROOF HARNESS EA2794E9

ROOF HARNESS (1)
HL-16


ROOF HARNESS

- R31 Electro chromic mirror
- R32 Map lamp(W/O overhead console)
- R33 Room lamp
- R34 Sunroof motor(With overhead console)
- R35 Sunroof switch(With overhead console)
- MR92 Connection with MAIN harness

A/C HARNESS EBA86E9E

A/C HARNESS (1)

HL-17

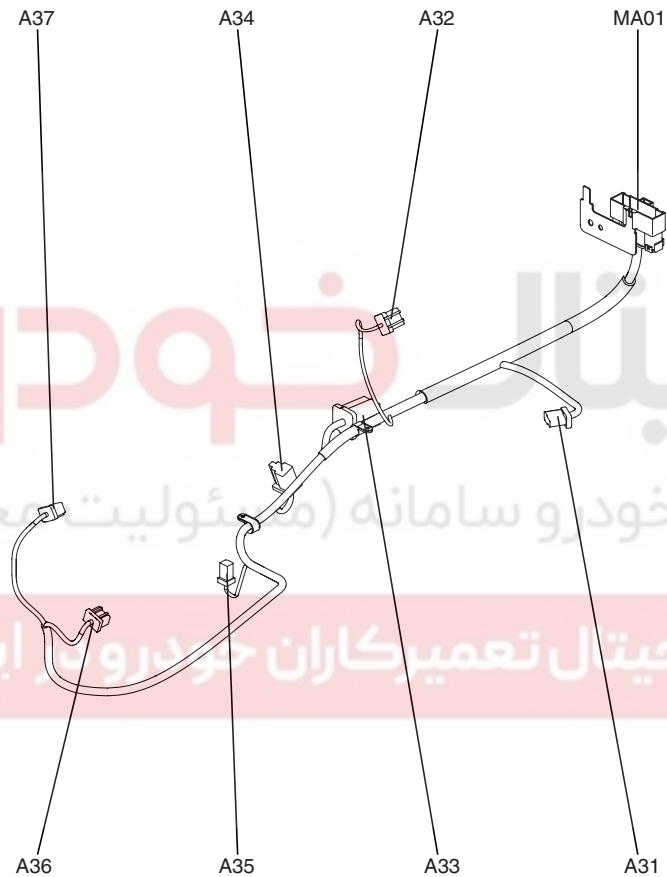

A/C HARNESS

A31	Blower motor
A32	Intake actuator
A33	Blower relay
A34	FET(Field-effect transistor)
A35	Evaporator sensor
A36	Temperature actuator
A37	Mode actuator
MA01	Connection with MAIN harness