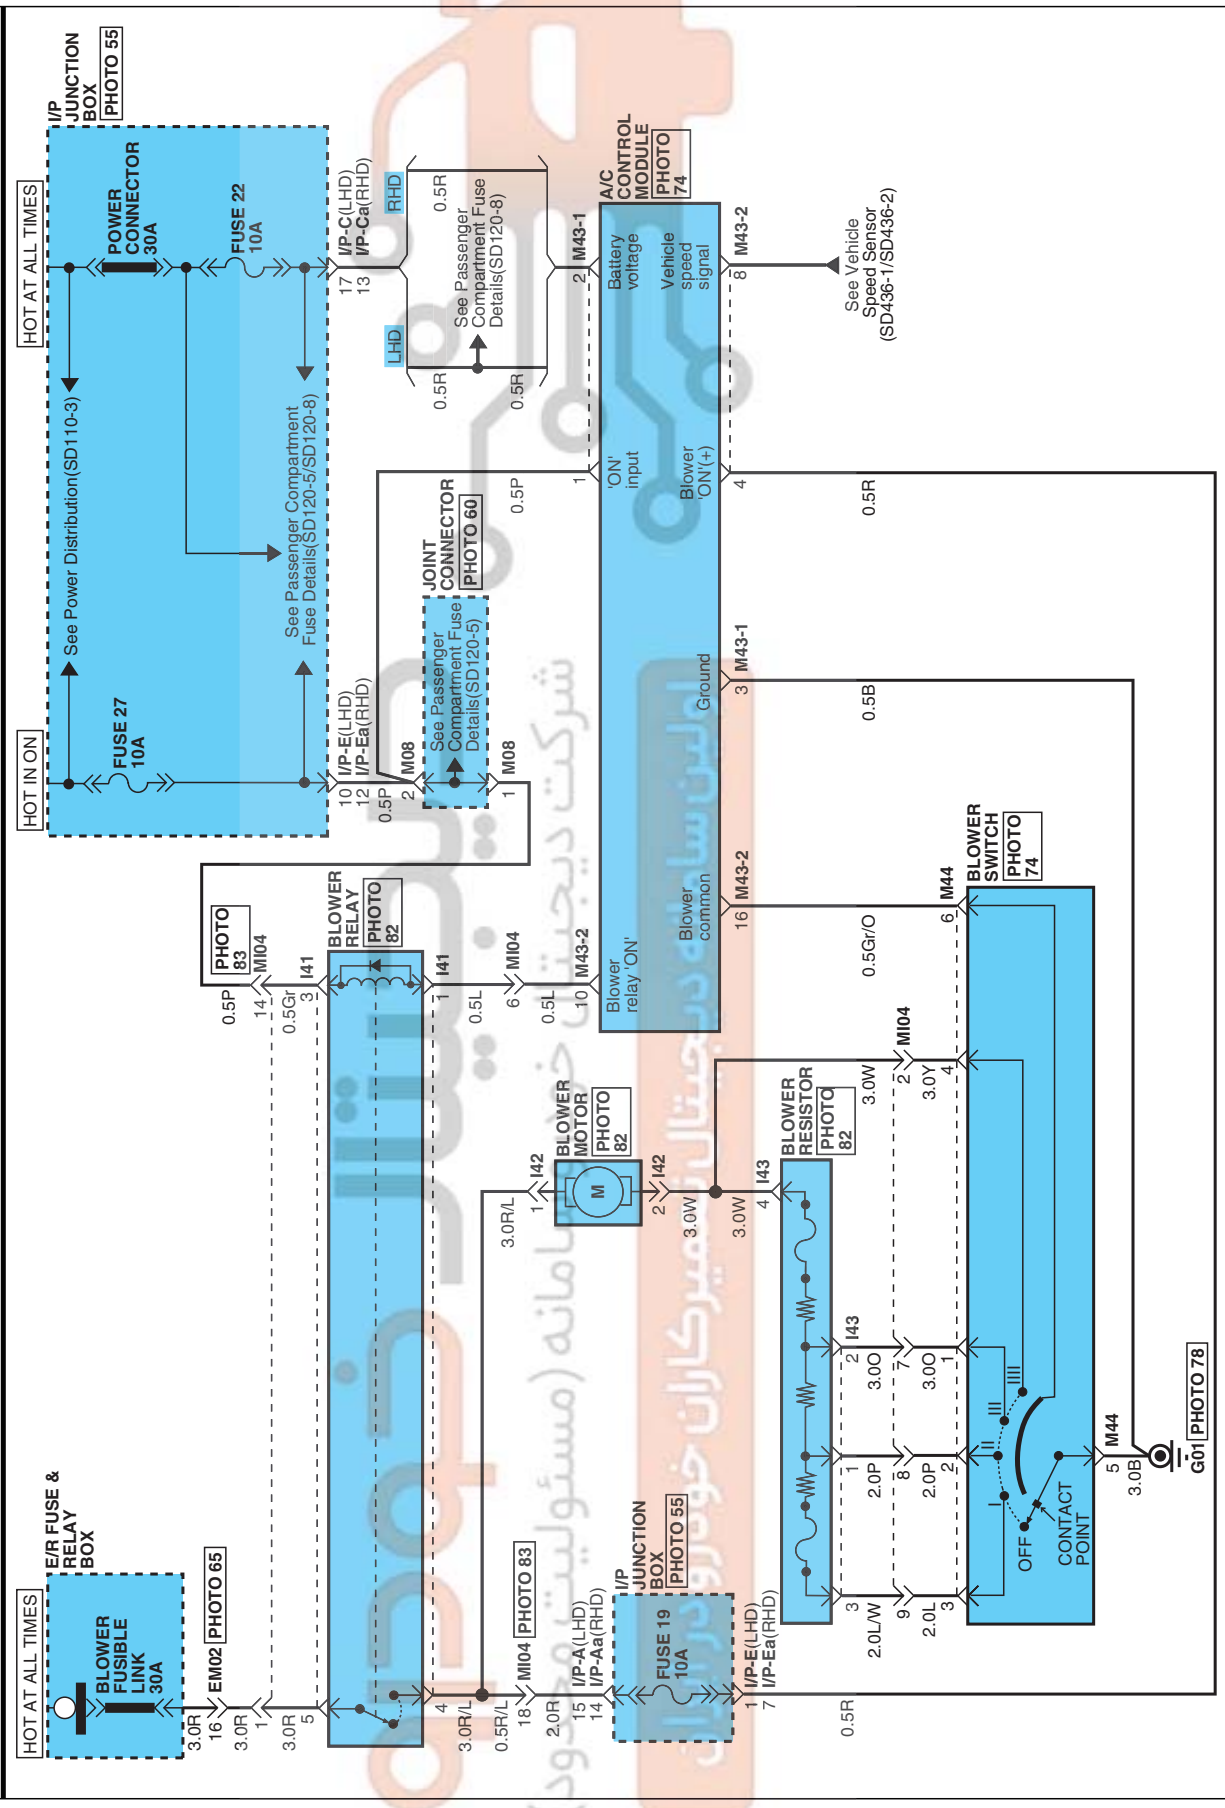


BLOWER & A/C CONTROLS (MANUAL) EF79A6D5

BLOWER & A/C CONTROLS (MANUAL) (1)

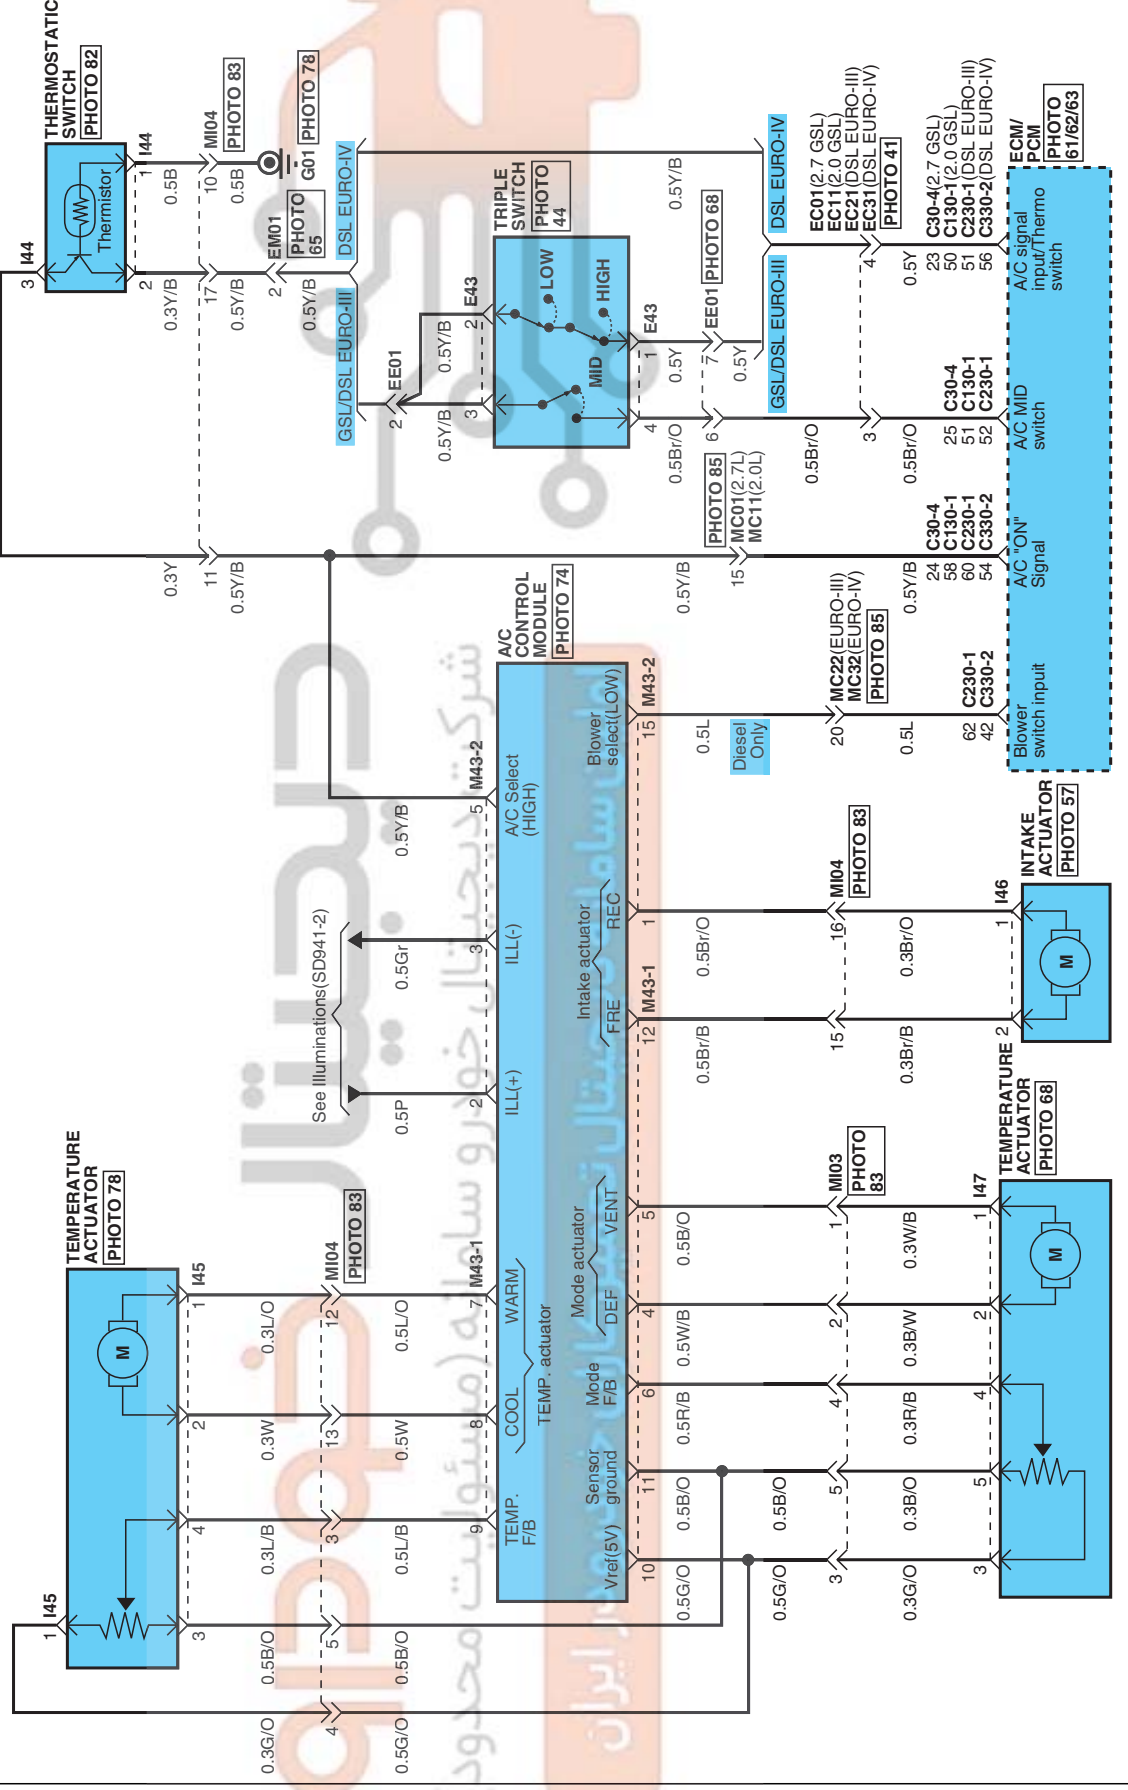
SD971-5



BLOWER & A/C CONTROLS (MANUAL)

BLOWER & A/C CONTROLS (MANUAL) (2)

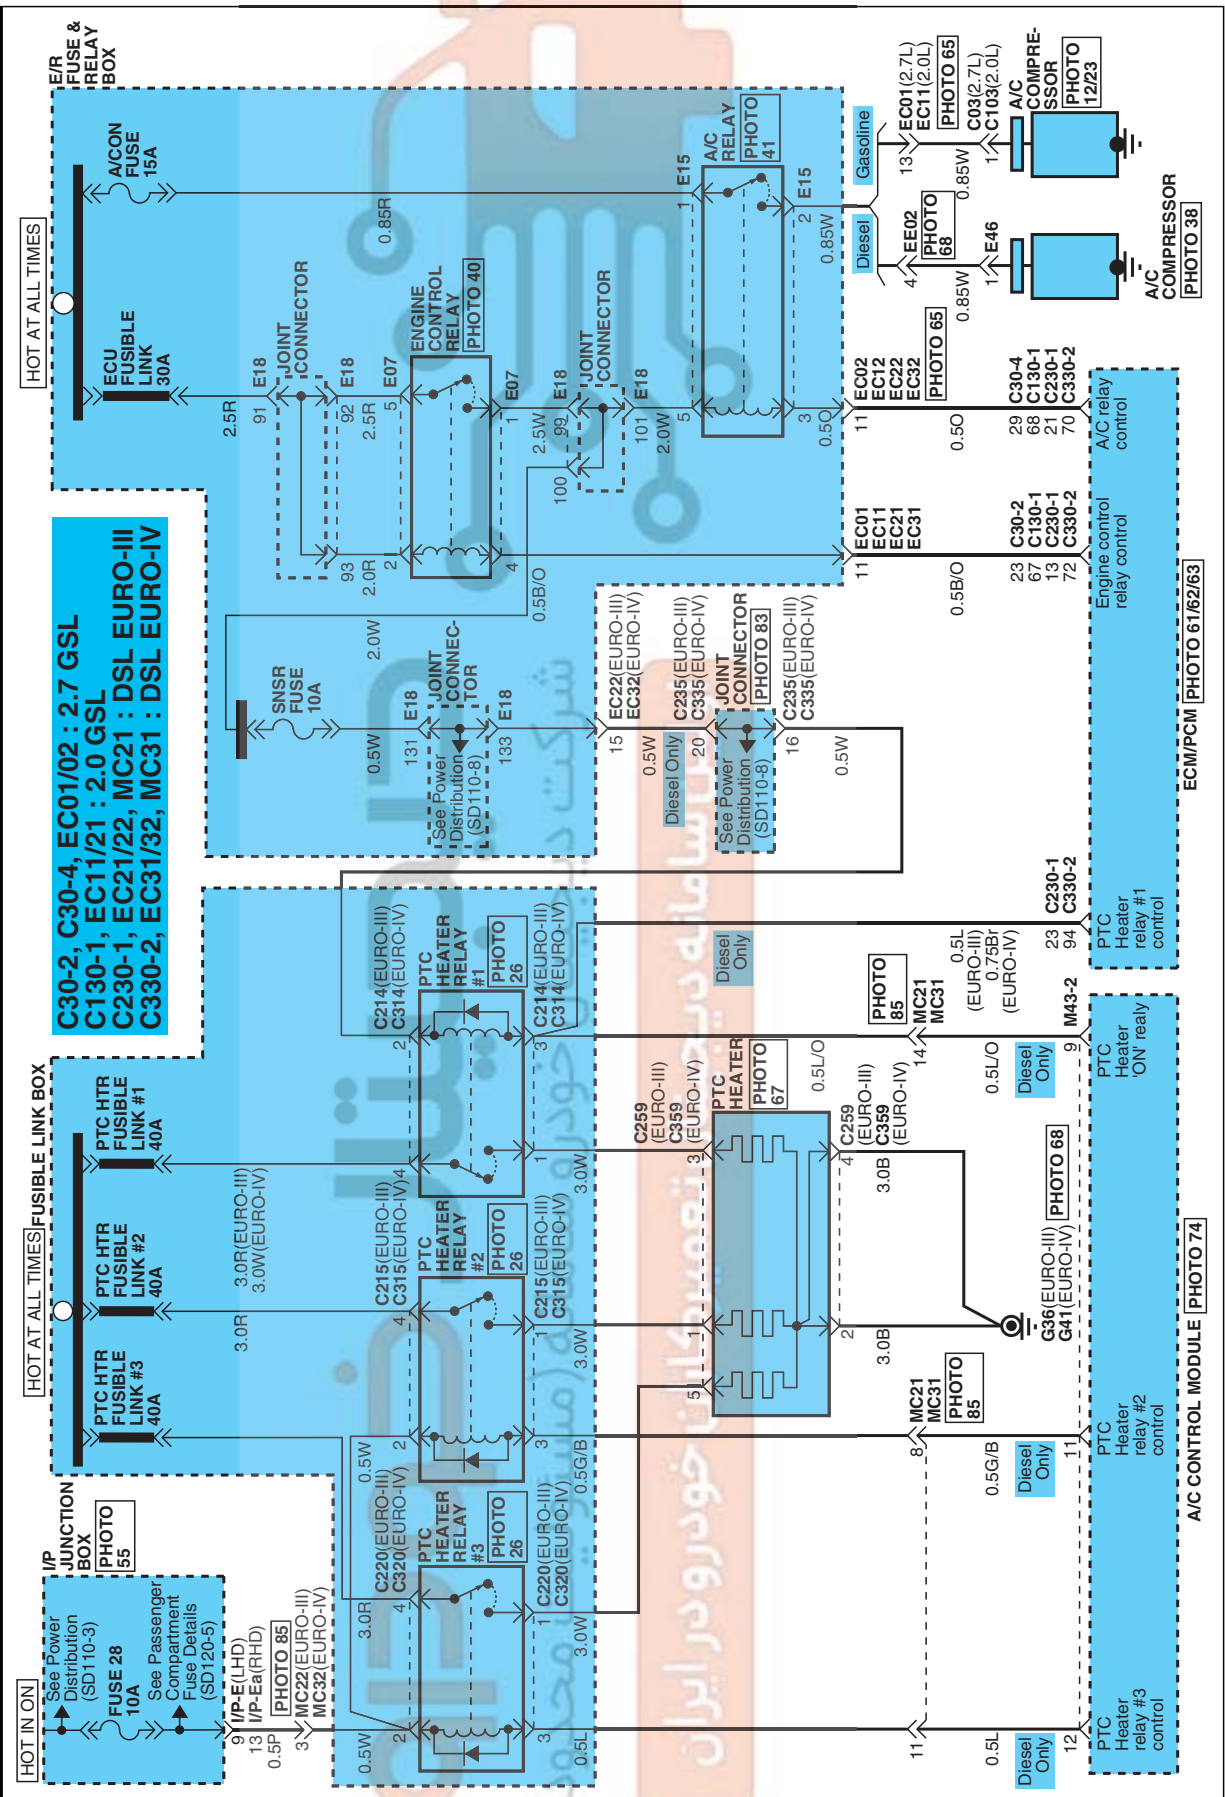
SD971-6



 
 
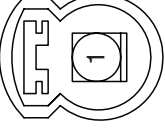
 
 
 
 
 
 

 
 

 
 
 
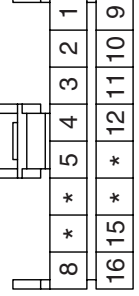
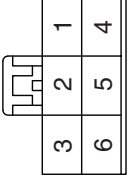
 
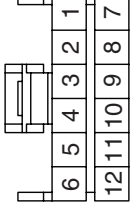
BLOWER & A/C CONTROLS (MANUAL)

BLOWER & A/C CONTROLS (MANUAL) (3)

SD971-7



BLOWER & A/C CONTROLS (MANUAL)

BLOWER & A/C CONTROLS (MANUAL) (4)		SD971-8	
<p><b>C03</b></p>  <p><b>C220C320</b></p>  <p>KET_SWP_01F_B</p> <p>CR04F040</p>	<p><b>C103</b></p>  <p><b>C259/C359</b></p>  <p>KUM_NMWP_01F_B</p> <p>AMP</p> <p>CR05F019</p>	<p><b>C214/C314</b></p>  <p><b>E07</b></p>  <p>CR04F040</p>	<p><b>C215/C315</b></p>  <p><b>E15</b></p>  <p>CR04F040</p>
<p><b>E43</b></p>  <p>AMP_EIMP_04F_B</p> <p>CR04F040</p>	<p><b>E46</b></p>  <p>KUM_NMWP_01F_B</p> <p>AMP</p> <p>CR05F014</p>	<p><b>I41</b></p>  <p><b>I45</b></p>  <p>CR05F014</p>	<p><b>I42</b></p>  <p><b>I46</b></p>  <p>CR02F012</p>
<p><b>I43</b></p>  <p>CR04F001</p>	<p><b>I44</b></p>  <p>CR03F040</p>	<p><b>M43-2</b></p>  <p>AMP_040M1_16F_B</p>	<p><b>M44</b></p>  <p>CR07F011</p>
<p><b>I47</b></p>  <p>CR07F011</p>	<p><b>M43-1</b></p>  <p>AMP_040M1_12F_B</p>	<p><b>KUM_DSD_08F_W</b></p>	<p><b>E.M.S.06974H</b></p>